

ACMS Initial GYR+CRS Bias Calibration in SCM
 File: H_COP_AOC_0620.xls
 Author: dsalt-hp



Procedure Summary

Objectives

The objective of this Herschel ACMS commissioning procedure is to perform the ACMS initial GYR+CRS calibration in SCM.

The procedure involves the following activities:

- define/enable the necessary DTM packets
(calls H_FCP_AOC_D3FD)
- slew to pointing attitude to enable initial calibration
(calls H_FCP_AOC_3S01)
- disable/delete DTM
(calls H_FCP_AOC_D3FD)

Summary of Constraints

To be executed in accordance with the Herschel commissioning plan and associated timeline

Spacecraft Configuration

Start of Procedure

S/C in SCM

End of Procedure

S/C in SCM

Reference File(s)

Input Command Sequences

Output Command Sequences

Referenced Displays

ANDs GRDs SLDs


Configuration Control Information

DATE	FOP ISSUE	VERSION	MODIFICATION DESCRIPTION	AUTHOR	SPR REF
22/04/09	2.3	1	Created	dsalt-hp	
04/05/09	2.4	2	Procedure reference in Step 2 corrected	dsalt-hp	


ACMS Initial GYR+CRS Bias Calibration in SCM
File: H_COP_AOC_0620.xls
Author: dsalt-hp



Procedure Flowchart Overview

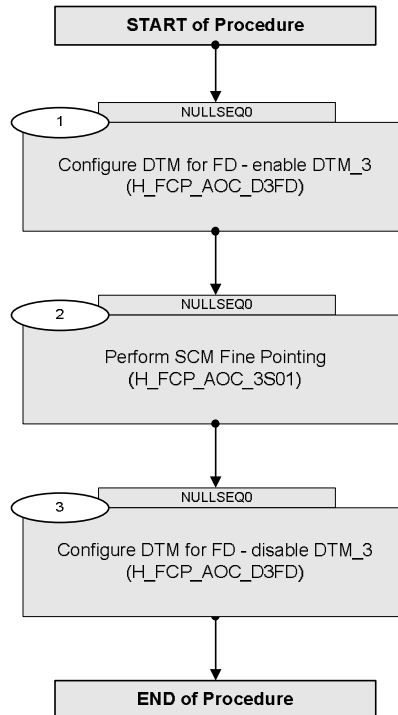

 ACMS Initial GYR+CRS Bias Calibration in SCM
 File: H_COP_AOC_0620.xls
 Author: dsalt-hp

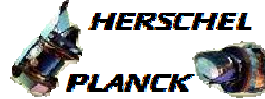

Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch
Beginning of Procedure				
TC Seq. Name : NULLSEQ0 () TimeTag Type: Sub Schedule ID: <input type="checkbox"/>				
1		Configure DTM for FD - enable DTM_3 (H_FCP_AOC_D3FD)		Next Step: 2
		Execute procedure H_FCP_AOC_D3FD (Configure DTM for FD) to define and enable selected DTM packets, as necessary Use DTM_3 (Step 6) to define and enable diagnostic CRS calibration packet for STR1 (SPID=240007990)		
		Execute Procedure: H_FCP_AOC_D3FD Configure DTM for FD		
		NOTE: FD will use the DTM to calculate new values of the relevant OBDB parameters to update GYR biases		
2		Perform SCM Fine Pointing (H_FCP_AOC_3S01)		Next Step: 3
		Execute procedure H_FCP_AOC_3S01 (Perform SCM Fine Pointing) using the specific instance of TPF=SFP generated by FD to command the following slew to: - roll angle = 0, SAA between 85 and 95 deg with sufficient stars to enable interlacing		
		Execute Procedure: H_FCP_AOC_3S01 Perform SCM Fine Pointing		
3		Configure DTM for FD - disable DTM_3 (H_FCP_AOC_D3FD)		Next Step: END
		Execute procedure H_FCP_AOC_D3FD (Configure DTM for FD) to disable and delete selected DTM packets, as necessary Use DTM_3 (Step 7) to disable and delete diagnostic CRS calibration packet for STR1 (SPID=240007990)		

ACMS Initial GYR+CRS Bias Calibration in SCM
 File: H_COP_AOC_0620.xls
 Author: dsalt-hp



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch
		Execute Procedure: H_FCP_AOC_D3FD Configure DTM for FD		
		<i>NOTE:</i> <i>This step may be skipped if the full calibration activities will follow immediately after this one</i>		
End of Procedure				