European Space Agency Research and Science Support Department Planetary Missions Division

Venus Express – ASPERA-4

To Planetary Science Archive Interface Control Document

VEX_ASP_CESR_EAICD_V1_5

Issue 1 revision 5

18 March 2011

Prepared by: T. Moreau, GFI

Approved by: E. Penou, Archiving manager, CESR

Approved by: S. Barabash, Principal Investigator, IRF





Distribution List

Name	Organisation	Email
Stas Barabash	ASPERA-4 PI, IRF	stas@irf.se
Jean-André Sauvaud	ASPERA-4 Co-PI, CESR/CNRS	Jean-Andre.Sauvaud@cesr.fr
Andrew Coats	ASPERA-4 Co-I / ELS, MSSL	ajc@mssl.ucl.ac.uk
Futaana Yoshifumi	ASPERA-4 Operation Manager, IRF	futaana@irf.se
Leif Kalla	ASPERA-4 Operations and data engineer, IRF	leif@irf.se
Mats Holmström	ASPERA-4 Co-I / NPI, IRF	matsh@irf.se
Herman Anderson	ASPERA-4 Experiment Manager, IRF	herman.andersson@irf.se
David Winningham	ASPERA-4 US PI, SwRI [®]	dwinningham@swri.org
Rudy Frahm	ASPERA-4 Co-I, SwRI [®]	rfrahm@swri.org
L. Håkan Svedhem	Venus Express Project Scientist, ESTEC	Hakan.Svedhem@esa.int
Joe Zender	Venus Express PSA, ESTEC	joe.zender@rssd.esa.int
David Heather	Venus Express PSA, ESTEC	dheather@rssd.esa.int
Maud Barthelemy	Venus Express PSA, ESTEC	Maud.Barthelemy@sciops.esa.int
Ray Walker	NASA PDS-PPI	rwalker@igpp.ucla.edu
Steve Joy	NASA PDS-PPI	sjoy@igpp.ucla.edu
Andrei Fedorov	CESR/CNRS	Andrei.Fedorov@cesr.fr
Emmanuel Penou	CESR/CNRS	Emmanuel.Penou@cesr.fr
Evelyne Orsal	CNES Contract Manager	evelyne.orsal@cnes.fr



Change Log

Date	Sections Changed	Reasons for Change
15 December 2006	Creation of Issue 0 Revision 0 (V0.0)	First Issue
17 January 2007	Version 0.1 – All sections modified	Draft, internally circulated
24 January 2007	Version 0.2 - § 2.2	Input from E. Penou on data handling process
08 March 2007	Version 0.3 – HK data converted to physical units	After checking consistency with
	Data objects renamed to a reduced length of character string	requirements specification
28 May 2007	Version 0.4 – All sections revised with minor corrections	Based on feedback from PSA
14 June 2007	Version 0.5 – Format corrected where applicable	Based on validation and conformance tests of the generating PDS data software
26 September 2007	Version 0.6 – Correct index page	Based on internal meeting with CNES
07 February 2008	Version 1.0 – All sections revised with major corrections	Data format disapproved by the PSA
25 February 2008	Version 1.1 – All sections revised with minor corrections	Based on feedback from PSA and internal lecture
25 April 2008	Version 1.2 – All sections revised with minor corrections	Based on feedback from the PI and after the PSA's analyse of dataset sample
07 December 2009	Version 1.3 – Al sections revised with minor corrections	Corrections resulting from RID review
05 February 2010	Version 1.4 – A major feature is added to the document: all sections are updated to reflect the latest changes	Data must be delivered in several datasets in accordance with the extended mission operations plan
18 March 2011	Version 1.5 – Dataset name of extended mission is modified where applicable	A generic naming is used for dataset names related to extended mission phases



TBD ITEMS

Section	Description



Table Of Contents

1	Int	roduction	3
	1.1	Purpose and Scope	3
	1.2	Archiving Authorities	3
	1.3	3 Contents	
	1.4	Intended Readership	3
	1.5	Scientific Objectives	4
	1.6	Applicable Documents	
	1.7	Relationships to Other Interfaces	
	1.8	Acronyms and Abbreviations	
	1.9	Contact Names and Addresses	
2	Ove	erview of Instrument Design, Data Handling Process and Product Generation	
	2.1	Scientific Objectives	20
	2.2	Data Handling Process	
	2.3	Overview of Data Products	
	2.3	3.1 Pre-Flight Data Products	25
	2.3	3.2 Sub-System Tests	25
	2.3	3.3 Instrument Calibrations	25
	2.3	3.4 Other Files written during Calibration	25
	2.3	3.5 In-Flight Data Products	25
	2.3	3.6 Software	27
	2.3	3.7 Documentation	27
	2.3	3.8 Derived and other Data Products	28
	2.3	3.9 Ancilary Data Usage	28
3	Arc	chive Format and Content	29
	3.1		29
		1.1 Deliveries and Archive Volume Format	29
		1.2 Data Set ID Formation 1.3 Data Directory Naming Convention	31
		1.3 Data Directory Naming Convention	31
	3.1	1.4 Filenaming Convention	32
	3.2	Standards Used in Data Product Generation	33
	3.2	2.1 PDS Standards	33
		2.2 Time Standards	
	3.2	2.3 Reference Systems	35
	3.2	2.4 Other Applicable Standards	36
	3.3	Data Validation	36
	3.4	Content	36



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 2

	3.4.1	Volume Set	36
	3.4.2	Data Set	37
	3.4.3	Directories	38
4	Detaile	d Interface Specifications	43
4	4.1 Str	ucture and Organization Overview	43
	4.1.1	ELS Data Directory Structure	44
	4.1.2	IMA Data Directory Structure	45
	4.1.3	NPI Data Directory Structure	45
	4.1.4	NPD Data Directory Structure	46
4	4.2 Da	ta Sets, Definition and Content	47
4	4.3 Da	ta Product Design	47
	4.3.1	Electron Spectrometer Science Edited Data Product Design (Level 2)	48
	4.3.2	ELS Housekeeping Calibrated Data Product Design (Level 3)	61
	4.3.3	Ion Mass Analyzer Science Edited Data Product Design (Level 2)	72
	4.3.4	IMA Housekeeping Calibrated Data Product Design (Level 3)	99
	4.3.5	Neutral Particle Detector Science Edited Data Product Design (Level 2)	113
	4.3.6	NPD Housekeeping Calibrated Data Product Design (Level 3)	137
	4.3.7	Neutral Particle Imager Science Edited Data Product Design (Level 2)	165
	4.3.8	NPI Housekeeping Calibrated Data Product Design (Level 3)	177
5	Append	lix A: Available Software to read PDS files	189
6	Append	lix B: Example of Data Set Directory Listing	190
7	7 Appendix C: Example of PDS detached label for an ASPERA-4 ELS level-2 data product 193		
8	8 Appendix D: Example of PDS detached label for an ASPERA-4 IMA level-2 data product 196		
9	9 Appendix E: Example of PDS detached label for an ASPERA-4 NPI level-2 data product 199		
10	10 Appendix F: Example of PDS detached label for an ASPERA-4 NPD level-2 data product 202		



Document No. Date Page

1 Introduction

1.1 Purpose and Scope

The purpose of this EAICD (Experimenter to (Science) Archive Interface Control Document) is two fold. First it provides users of the ASPERA-4 instrument with detailed description of the product and a description of how it was generated, including data sources and destinations. Secondly, it is the official interface between ASPERA-4 and Planetary Science Archive (PSA) of ESA.

1.2 Archiving Authorities

The *Planetary Data System* Standard is used as archiving standard by:

- NASA for U.S. planetary missions, implemented by PDS
- ESA for European planetary missions, implemented by the Research and Scientific Support Department (RSSD) of ESA

ESA's Planetary Science Archive (PSA)

ESA implements an online science archive, the PSA

- to support and ease data ingestion
- to offer additional services to the scientific user community and science operations teams as e.g.:
 - search queries that allow searches across instruments, missions and scientific disciplines
 several data delivery options as:
 - direct download of data products, linked files and data sets
 - ftp download of data products, linked files and data sets

The PSA aims for online ingestion of logical archive volumes and will offer the creation of physical archive volumes on request.

1.3 Contents

This document describes the data flow of the ASPERA-4 instrument on Venus Express from the data acquisition until the insertion into the PSA for ESA. It includes information on how data were processed, formatted, labeled and uniquely identified. The document discusses general naming schemes for data volumes, data sets, data and label files. Standards used to generate the product are explained. Software that may be used to access the product is explained further on.

The design of the data set structure and the data product is given. Examples of these are given in the appendix.

1.4 Intended Readership

The staff of the archiving authority (Planetary Science Archive, ESA, RSSD, design team) and any potential user of the ASPERA-4 data.



1.5 Scientific Objectives

Main scientific goals of ASPERA-4 experiment are to study the solar wind – atmosphere interaction and characterize the plasma and neutral gas environment in the near-Venus space through energetic neutral atom (ENA) imaging and *in situ* charged particle measurements. The studies would be extremely important to determine the impact of plasma processes on the atmosphere evolution, and to quantify in particular the induced atmospheric escape processes which would explain the dehydration of the Venusian atmosphere.

The ASPERA-4 experiment comprises four sensors: two ENA sensors, an electron spectrometer, and an ion spectrometer. Each of which will contribute, both alone or in combination, to achieve the following science goals of ASPERA-4:

- 1. Remote sensing of energetic neutral atoms (ENA):
 - a. For remote mapping of the global solar wind interaction with the Venusian atmosphere,
 - b. To characterize quantitatively the effects of plasma interacting with the atmosphere,
 - c. To determine the morphology of the global plasma and neutral gas outflow at Venus.
- 2. Provide *in situ* measurements of ions and electrons:
 - a. To better understand the transfer of energy, mass and momentum of solar wind plasma to the Venusian ionosphere and upper atmosphere,
 - b. To provide adequate measurements of the plasma acceleration/outflow from the Venusian ionosphere, part of the outflow charge-exchanging to ENAs,
 - c. To provide undisturbed solar wind parameters required for interpretation of ENA images

1.6 Applicable Documents

- AD 1. Planetary Data System Standards Reference, August 1, 2003, Version 3.6, JPL, D-7669, Part 2, http://pds.jpl.nasa.gov/documents/sr/stdref2003/index.hml
- AD 2. Venus Express Archive Generation, Validation and Transfer Plan, June 7, 2004, Issue 1, Rev. 1, VEX-RSSD-PL-001
- AD 3. VEX / ASPERA-4 Instrument Manual, June 17, 2006, Issue 1, Rev. 1, VE-ASP-TN-060402
- AD 4. VEX Archive Conventions, May 30, 2008, Issue 2, Rev. 2, VEX_EST-TN-036
- AD 5. Description of L1 VEX data files, E. Penou, CESR, 16/10/2006, Edit. 4, Rev. 0, ASPPERA4-L1-061016
- AD 6. Rosetta/MEX/VEX Mission Control System DDID Appendix H ESA/ESOC, July 1, 2006, Issue 3, Rev. 2, RO-ESC-IF-5003/MEX-ESC-IF-5003/VEX-ESC-IF-5003
- AD 7. Planetary Science Archive. Experiment Data Release Concept. Technical proposal, May 12, 2005, Issue 1, Rev. 16, SOP-RSSD-TN-015
- AD 8. Rosetta Time Handling, February 28, 2006, RO-EST-TN-3165, Issue 1, Rev. 1
- AD 9. Planetary Science Data Archive Technical Note. Geometry and Position Information, April 2, 2007, Issue 4, Rev. 1, SOP-RSSD-TN-010
- AD 10. VEX science cases and operations, October 2004, Issue 1, Rev. A, VEX-RSSD-TN-001_1_A_VEX_Science_Cases_2004Oct06
- AD 11. VEX science operation theme summary, June 7, 2004, Issue 2, VEX-RSSD-LI-004, http://www.rssd.esa.int/open/?4c2BoNV6I5
- AD 12. VEX mission subphases index table, VEX-RSSD-LI-009.TAB
- AD 13. Venus Express ELS Data Analysis Summary, N. Shane, D. Kataria and A. Coates, February 9, 2009, Issue 2, Rev. 0.
- AD 14. Minutes of the 10th DAWG telecon, November 6, 2009, Issue 1, Rev. 0, VEX-SCIOPS-MN-433_1_0_DAWG_Telecon_10_2009Nov06.pdf



1.7 Relationships to Other Interfaces

No products, software and documents would be affected by a change in this EAICD.

1.8 Acronyms and Abbreviations

amu ASPERA CESR CNES CNRS CODMAC Co-I Co-PI DDS DPU EAICD EDR EEPROM ELS EME ENA	atomic mass unit Analyzer of Space Plasmas and Energetic Atoms Centre d'Etude Spatiale des Rayonnements Centre National d'Etudes Spatiales Centre National de Recherche Scientifique Committee on Data Management, Archiving, and Computing Co-Investigator Co-Principal Investigator Data Delivery System (ESOC server) Digital Processing Unit (of the ASPERA-4 instrument package) Experiment Archive Interface Control Document Experiment Data Record Electrically Erasable Programmable Read Only Memory Electron Spectrometer (of the ASPERA-4 instrument package) Earth Mean Equator
ENA	Energetic Neutral Atom
ESA	European Space Agency
ESOC	European Space Operation Center
ESTEC EXT	European Space Research and Technology Center Mission phase: Extended mission
HK	Housekeeping
IRF	Swedish Institute of Space Physics (Institutet för Rymdfysik - Kiruna)
IMA	Ion Mass Analyzer (of the ASPERA-4 instrument package)
keV	kilo electron Volt
MCP	Microchannel plate
MU	Main Unit (of the ASPERA-4 instrument package)
NPD	Neutral Particle Detector (of the ASPERA-4 instrument package)
NPI	Neutral Particle Imager (of the ASPERA-4 instrument package)
PROM	Programmable Read Only Memory
OASW	Orbit and Attitude data access SoftWare
OBT	On Board Time
PDS	Planetary Data System (NASA/JPL)
PHD (or PH)	Pulse Height Distribution (which is the variation of the magnitude of the output
PI	pulses from a detector at a constant applied voltage)
PSA	Principal Investigator Planetary Science Archive (ESA)
PVO	Pioneer Venus Orbiter
PVV	PSA Validation and Verification tool
RSSD	Research and Scientific Support Department (ESA)
S/C	Spacecraft
SwRI	Southwest Research Institute
TBC	To Be Confirmed
TBD	To Be Defined
TC	Telecommand
TDC	Time to Digital Converter
TM	Telemetry
UTC	Coordinated Universal Time
VEX	VEnus eXpress



Date Page

1.9 Contact Names and Addresses

Contact names and addresses are given below, preceding a sketch with the concerned organisations.

Thomas Moreau, GFI Toulouse, France data processing software engineer tmoreau@gfi.fr +56 175 2454

Daniel Popescu, GFI Toulouse, France data processing software responsible dpopescu@gfi.fr +56 175 0023

Marie Imhof-Boutet, ATOS Origin, France data processing software engineer marie.imhof-boutet@atosorigin.com +56 139 2430

Emmanuel Penou, CESR/CNRS Toulouse, France data processing software engineer / Archiving manager Emmanuel.Penou@cesr.fr +56 155 6661

Stas Barabash, IRF Kiruna, Sweden **ASPERA-4 PI** stas@irf.se +46 9807 9122

Jean André Sauvaud, CESR/CNRS Toulouse, France **ASPERA-4 CoPI** Jean-Andre.Sauvaud@cesr.fr +56 155 6676

Andrei Fedorov, CESR/CNRS Toulouse, France data processing software engineer Andrei.Fedorov@cesr.fr +56 155 6482


Evelyne Orsal, CNES Toulouse, France **Contract Manager** evelyne.orsal@cnes.fr +56 127 4020

Futaana Yoshifumi, IRF Kiruna, Sweden **ASPERA-4** Operation Manager futaana@irf.se +46 980 79025

Leif Kalla, IRF Kiruna, Sweden ASPERA-4 Operations and data engineer leif@irf.se +46 980 79016



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 7

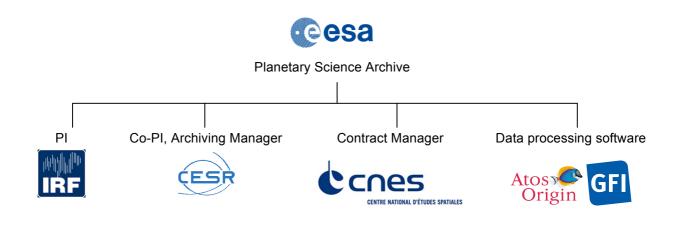



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 8

2 Overview of Instrument Design, Data Handling Process and Product Generation

The general scientific objectives of the Analyzer of Space Plasma and Energetic Atoms experiment, 4th version (ASPERA-4), on board the Venus Express spacecraft are to study the solar wind – atmosphere interaction and characterize the plasma and neutral gas environment in the near-Venus space through energetic neutral atom (ENA) imaging and *in situ* charged particle measurements. The ASPERA-4 experiment (shown in Figure 1) is an instrument comprised of four different sensors (or detectors): the Electron Spectrometer (ELS), the Ion Mass Analyzer (IMA), the Neutral Particle Detector (NPD), and the Neutral Particle Imager (NPI).

Overall configuration

The ASPERA-4 experiment is a comprehensive plasma diagnostic package to measure ENAs, electrons, and ions with a wide angular coverage from a three axis stabilised platform [AD 3]. Mechanically ASPERA-4 consists of two units, the Main Unit (MU) and the Ion Mass Analyzer (IMA), mounted separately (see Figure 1). The Main Unit comprises three sensors: the Neutral Particle Imager (NPI), the Neutral Particle Detector (NPD), the Electron Spectrometer (ELS), and a digital processing unit (DPU), which all are located on a rotating platform: the mechanical scanner. The combination of the 360° sensor field of view (180° for the NPD) and the scans from 0° to 180° give, ideally, the required 4π maximum coverage, but part of the field of view is blocked by the spacecraft body. The real coverage depends on the instrument location on the spacecraft.

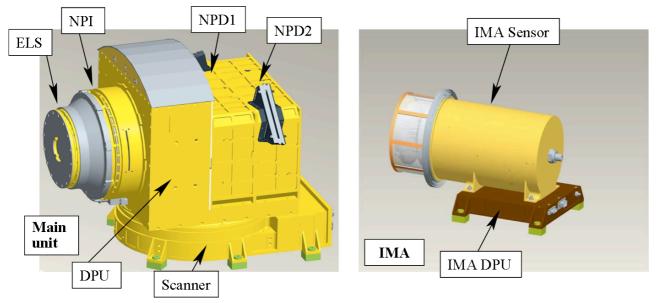


Figure 1. ASPERA-4 instrument contains two units: Main Unit (left panel) and IMA (right panel). Main Unit contains four sensors ELS, NPI, NPD1 and NPD2. The sensors and DPU are mounted on the scanner. IMA comprises IMA DPU and the IMA sensor.

All electrical interfaces of the instrument with the spacecraft are made through the scanner. Electrically IMA interfaces only MU. The total mass of the instrument is 9.00 kg; the main unit flight model mass without thermal hardware is 6.63 kg; and the mass of the IMA flight model is 2.37 kg without thermal hardware. The maximum power consumption is 18 W. The Main unit envelope is 350×263×288 mm3 and for the IMA 287×187×165 mm3.

The ASPERA-4 two ENA sensors complement each other. The Neutral Particle Imager (NPI) provides measurements of the integral ENA flux in the energy range 0.1 - 60 keV with no mass and energy resolution but comparatively high angular resolution 4.6 deg. x 11.5 deg. The Neutral Particle Detector (NPD) provides



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 9

measurements of the ENA flux in the energy range 0.1 - 10 keV, resolving velocity and mass (H and O) with a coarse angular resolution. The Electron Spectrometer (ELS) is a standard top-hat electrostatic analyzer in a very compact design with the high 8% energy resolution to perform photoelectron spectroscopy. These three sensors are located on a scanning platform covering ideally the full sphere. The instrument also contains an ion mass composition sensor, IMA (Ion Mass Analyzer). Mechanically, IMA is a separate unit connected by a cable to the ASPERA-4 main unit. IMA provides ion measurements in the energy range 0.01 – 36 keV/q for the main ion components H⁺, H₂⁺, He⁺⁺, He⁺, O₂⁺, O⁺ and the group of molecular ions (20 - 80 amu/q). The instantaneous field of view is 4.6 deg x 360 deg. Electrostatic sweeping performs the elevation (90 deg.) coverage. The baseline performance of the ASPERA instrument is presented in the Table 1.

The Neutral Particle Detector (NPD)

The Neutral Particle detector (NPD) instrument provides measurements of the ENA flux, resolving velocity and mass (H and O) with a coarse angular resolution. It consists of two identical pinhole detector cameras, each with a 90° of Field of View (FoV) in the instrument azimuth plane and arranged to cover a FoV of 180° (see Figure 2). Within each detector near the entrance, charged particles with energies up to 70 keV (electrons and ions) are removed by the deflection system, while neutrals proceed into the camera. The deflection system consists of two 90° sectors separated by a 4.5 mm gap. Apart from being ON or OFF, the deflection system can be operated in an alternating mode.

Entering particles not swept away by the deflection plates are ENA particles. The ENA beam emerging from the 4.5 x 4.5-mm pin-hole hits the START surface under the grazing angle 15° and causes secondary electron emission. Using a system of collecting grids, the secondary electrons are transported to one of two microchannel plates (MCP) assemblies giving the START signal for NPD's time-of-flight (TOF) electronics.

Depending on the azimuth angle, the collection efficiency varies from 80% to 95%. The incident ENAs are reflected from the START surface near-specularly. Since the charge state equilibrium is established during the interaction with the surface, the emerging beam contains both the neutral and ionized (positive and negative) components. To increase the total efficiency, no further separation by the charge is made. As proven by the ion tracing, there is very little disturbance to the reflected atomic ions leaving the START surface with an energy above 80 eV, introduced by the START electron optics. Therefore particles of all charge states - negative, neutral, and positive - will impact the second surface, the STOP surface, and again produce secondary electrons which are detected by one of the three MCP assemblies giving the STOP signal for NPD's TOF electronics.

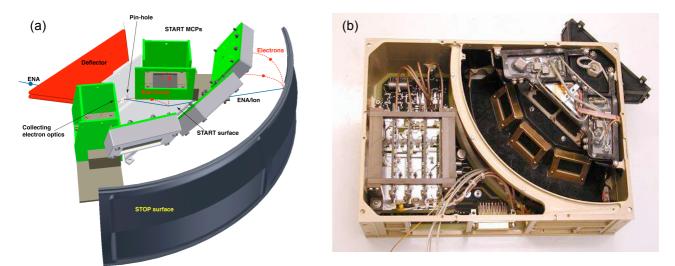


Figure 2. NPD in theory and practice. The theoretical design of the NPD is shown in (a). This design was implemented to produce a NPD flight unit shown in (b).

Origin GFT ASFERA 4 EAIOD	Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 10
---------------------------	--


The TOF over the fixed NPD distance of 8 cm defines the particle velocity. The STOP MCPs also give the azimuthal direction. Since the secondary electron yield emitted from the START surface for the same velocity ENA depends on the ENA mass, the pulse height distribution analysis of the START signals and independent analysis of the STOP signals provide the estimation of ENA mass. Each event is stored in the array START MCP charge x STOP MCP charge x time-of-flight x direction.

The UV suppression in NPD is based on the coincidence of START/STOP signals. To increase the particle reflectivity, we will use very smooth (roughness is of the order of 5 - 10 A) metal surfaces. On the other hand the STOP surface is proposed to be made of graphite (roughness around 100 nm) covered by MgO. This combination has a very high secondary electron yield, low photoelectron yield and high UV absorption. Both proposed surfaces are stable and do not require special maintaining.

Two separate NPD units are required to produce a complete NPD instrument. One unit was available as the spare from Mars Express ASPERA-3. IRF produced a second NPD unit and a flight spare.

The Neutral Particle Imager (NPI)

The Neutral Particle Imager (NPI) head is a replica of the NPI-MCP sensor developed for the ASPERA-C experiment on the Mars-96 mission and successfully, flown on the Swedish micro-satellite Astrid-1 launched in 1995 (see Figure 3). NPI provides measurements of the integral ENA flux with no mass and energy resolution, but comparatively high angular resolution.

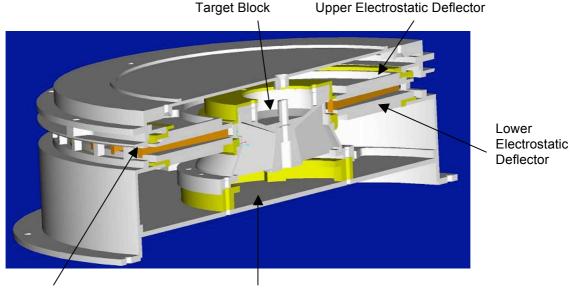

Sector Separator Walls

MCP Sensor Area

Figure 3. Internal View of the ASPERA-4 NPI. Shown is a cut through the NPI. Major components are identified. The Electrostatic Deflector sweeps away charged particles leaving an input beam of neutral particles.

In the NPI, incoming particles pass between two 150 mm diameter discs, which are separated by 3 mm gap and have a 5 kV potential between them. Charged particles with energies up to 60 keV are deflected by the electric field and captured, but neutral particles pass between the discs. The disks also collimate the incoming beam in the elevation angle. Apart from being ON or OFF the deflection system can be operated in an alternating mode. The deflection system also collimates the beam into 32 sectors.

Atos GFI As	PERA 4 EAICD	Document No. Date Page	: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 11
-------------	--------------	------------------------------	--

Neutrals passing through the deflection system hit a 32 sided cone target with a grazing (20°) angle of incidence. A MCP stack in the chevron configuration detects the particles leaving the target block with 32 anodes. The signal from the MCP gives the direction of the primary incoming neutral. The MCP operates in ion mode with a negative bias of -2.4 kV and thus detects (a) sputtered ions of the target material, (b) ions resulting from stripping of the primary neutrals, and (c) neutrals reflected from the target surface. In order to improve the angular resolution and collimate the particles leaving the interaction surface, 32 separating walls are attached to the target forming a star-like structure. NPI covers 4π in one instrument scan and produces an image of the ENA distribution in the form of an azimuth x elevation matrix. To suppress the UV flux the NPI target uses the same coating as in the PIPPI and ASPERA-C experiments, namely, DAG 213, a resinbased graphite dispersion.


The VEX NPI flight unit was built from MEX NPI spare parts. Electronics was modified to cope with higher radiation requirements.

 
The Electron Spectrometer (ELS)

The Electron Spectrometer (ELS) instrument determines the energy spectrum of incoming electrons in each of sixteen 22.5 sectors. It represents a new generation of ultra-light (300 g), low-power (650 mW), electron sensors flight-proven on Astrid-2 and Munin (see Figure 4).

The ELS is formed by a 17° spherical electrostatic analyzer in a top hat configuration. The electrostatic analyser consists of two concentric hemispherical electrodes, the outer of which has a central hole, through which electrons are admitted, covered by the 'top hat' and a single collimator system. Particles arriving within the elevation field of view of the collimator enter the aperture at any angle in the plane of incidence. Electrons are then deflected into the top hat spectrometer by applying a positive potential on the inner hemisphere These energy band filtered electrons exit the annular gap between the hemispheres and hit a MCP detector. Electrons with energies outside the selected range will be captured.

The plates are stepped in voltage to achieve an energy spectrum. Electrons with energies up to 20 keV/q are measured, with a maximum time resolution of one energy sweep (128 values) per four seconds. There are 16 anodes behind the MCP, which provide simultaneous measurement, each anode defining a 22.5° sector and each connected to a preamplifier. As the ELS sensor is moved through 180 by the mechanical scanner, a complete 4π steradian (whole sphere) angular distribution of electrons is measured.

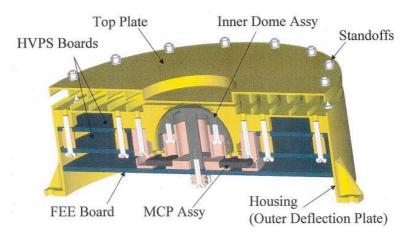



The ELS energy resolution is 8% and its geometric factor is 7x10⁻⁵ cm² sr. ELS was designed to resolve the major photoelectron peaks from Venus measurements. Identification of these major peaks aids in identification of major atmospheric species which have been ionized. Its capabilities will be an important diagnostic tool used at Venus to identify atmospheric escape.

Atos GFI Origin	ASPERA 4 EAICD	Document No. Date Page	: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 12
--------------------	----------------	------------------------------	--

The ELS was designed to be solar blind so that it may operate in exposure to direct sunlight. This has been achieved using two UV reducing mechanisms and one secondary electron suppression technique. UV is minimized through the use of a series of light baffles in the ELS collimator and a series of UV light traps at the entrance to the spherical deflection plates. Secondary electrons are reduced by the addition of a special coating, based on a modified Ebanol-C process, which is included through out the deflection surface, light trap, and collimator system (*Johnstone et al.*, 1997).

By varying the electrostatic potential between the hemispheres of the electrostatic analyzer, the energy of the electrons selected by the filter can be changed. The voltage applied to the inner hemisphere is swept once every four seconds and the number of anode hits per sample interval is recorded to give an energy spectrum for the incoming electrons in each sector. The ELS unit has a self contained, dual range, linear high voltage power supply. The first power supply range is from 0 to about 20 volts (about 150 eV) and has 4096 possible settings. The second power supply range is from 0 to 2800 volts (about 20 keV) and also has 4096 possible settings. The ELS sweep is fully programmable within the constraint of the maximum decay rate of 32 steps/s. On any given step, the deflection plate voltage is held constant during a minimum of 28.125 ms used to accumulate electrons. There is a minimum of 3.125 ms of data latency between energy steps for transition.

SwRI provided the ELS unit. The ELS Flight Spare from the Mars Express program has been modified and calibrated by MSSL, to become the Flight Unit for Venus Express. SwRI upgraded, modified, and calibrated the Mars Express ELS engineering unit so that it became a space qualified Flight Spare for Venus Express.

The Ion Mass Analyzer (IMA)

The Ion Mass Analyzer (IMA) is an improved version of the ion mass spectrographs TICS (Freja, 1992), IMIS (part of ASPERA-C, Mars-96, 1996), and IMI (Planet-B, 1998). It is an exact copy of the ICA instrument on board the Rosetta spacecraft. IMA is a mass resolving instrument providing ion measurements in a selectable energy range 0.01 - 30 keV/q for the main ion components (1, 2, 4, 16 amu/q) and the group of molecular ions (20 - 80 amu/q) (See Figure 5).

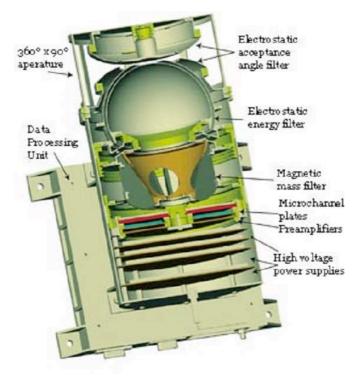


Figure 5. Internal view of the ASPERA-4 IMA. Shown is a slice through the IMA to reveal the internal IMA deflection. The electrical acceptance filter, electrostatic energy filter, and magnetic mass filter are arranged to analyze entering ions.



Document No.: VEX_ASPDate: 18 Mar 2Page: 13

: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 13

lons arriving at the IMA pass through the external grounded grid and enter the deflection system. The deflection system comprises two curved, charged plates that deflect ions arriving in the instrument elevation range from 45 above to 45 below instrument azimuth plane (plane perpendicular to the symmetry axis) and from any azimuth angle into the entrance of the electrostatic analyzer. Then ions pass through the electrostatic analyzer.

The top hat electrostatic analyzer consists of two concentric hemispherical shaped electrodes with a variable electric field between them. Ions that lie within the energy pass band of the analyzer travel between the hemispheres without being stopped by hitting a wall, exit the annular space separating them and travel on towards the magnetic mass analyzer. The electrostatic potential between the hemispheres determines the energy range of the ions that pass through the analyzer.

The geometry of the designed top hat electrostatic analyzer allows incoming parallel ion beam to focus to a small spot size in the vicinity of the endings of the analyzer. Since the top hat analyzer has a full 360° cylindrical symmetry, the azimuthal range of the instrument is 360°. After passing the electrostatic analyzer the ions are deflected from its path in a static, cylindrical magnetic field set up by permanent magnets. Sixteen gaps between the magnets correspond to 16 azimuthal sectors of the instrument of 22.5° each. As the ions leave the magnetic mass analyzer they finally hit a 10 cm diameter MCP and are detected by an anode system with digital position determination electronics. The radial deviation of the ion trajectories at the bottom of the magnetic field region corresponds to particle velocity per charge, with lighter ions deflected towards the centre of the cylinder more than heavy ones. Since particles exiting the top hat electrostatic analyzer have the same energy per charge value, ion position codes their masses.

The anode system resolves 32 bins in the radial position and 16 azimuthal sectors: 32 concentric rings dedicated to measure the radial impact position (discriminating ion mass) and 16 sector anodes to measure the azimuthal impact position (representing ion entrance angle). The magnet assembly can be biased with respect to the electrostatic analyzer to post-accelerate ions and optimize the mass range and mass resolution.

Besides the ion analyser and position sensitive detector the IMA sensor includes a high voltage unit that provides the sweep voltage for all electrodes and MCP bias, and an IMA DPU. The IMA DPU, which is built around the 16-bit MA31750 processor from Dynex, controls analyser voltages, reads out and accumulates the position information for each detector event, and forms telemetry packets. The hardware operation mode is fixed. The fastest changing parameter is the particle energy. It sweeps from 30 keV down to 10 eV over 96 logarithmically equidistant steps. The exposure time on each energy step is 125 ms. During this time interval 16 radial position spectra (32 points) corresponding to 16 azimuthal sectors are accumulated. After each complete energy sweep the instrument changes the polar angle of the field of view. The polar angle is scanned from -45° up to $+45^{\circ}$ over 16 steps. The total time to complete a full 3D spectrum is 192 s. This spectrum consists of 32 radial (mass) points × 16 azimuthal sectors × 96 energy steps × 16 polar angles. The data processing includes 3 stages: 1) logarithmic compression of the count values; 2) integration (if necessary) over polar angles, and/or azimuthal angles; and 3) Rice compression of the final spectrum. The processing mode is set by TC or chosen automatically according to the TM rate limitations. The acceleration level is also commendable. Only 3 values of acceleration are available: 0 V, -2150 V, and -3650 V.

A specific Data Processing Unit (DPU) for IMA controls IMA data compression and IMA data formats. The IMA DPU works with the main DPU to control the ASPERA telemetry resources. All ASPERA commands are sent to the main DPU. The main DPU passes IMA related commands on to the IMA DPU.

The flight spare IMA sensor head from the Mars Express mission are provided by IRF. The IMA sensor head has been modified by CESR/CNRS and calibrated by CESR/CNRS. IRF rebuilt a new set of IMA DPU electronics for Venus Express.



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 14

parameter	NPI	NPD	ELS	IMA
particles to be measured	ENA	ENA	electrons	ions
energy, keV per charge	~0.1 – 60	0.1 - 10	0.01 – 20	0.01 - 36
energy resolution, $\Delta E/E$	N/A	0,5	0.08	0.07
mass resolution	N/A	Distinguish H, O	N/A	m/q=1,2,4,8,16,32,>40
intrinsic field of view	9° x 344°	9° x 180°	4° x 360°	90° x 360°
angular resolution, FWHM	4.6° x 11.5°	5° x 30°	2° x 22.5°	4.5° x 22.5°
G-factor / pixel, cm ² sr	2.7 x 10 ⁻³	6.2 x 10 ⁻³	7 x 10⁻⁵	3.5 x 10 ⁻⁴
efficiency, %	~1	0.5 - 15	included in G-factor	included in G-factor
Time resolution (full 3D), s	32	32	32	196 / energy –
Three resolution (full 5D), s	52	52	52	elevation sweep
mass, kg	0.7	0.65 each	0.3	2.2

The Digital Processing Unit (DPU)

The Digital Processing Unit's main task is to control the sensors and the mechanical scanner. The DPU processes, compresses and stores the sensor data and forwards it (together with housekeeping data) to the satellite telemetry system. It also receives and implements commands sent to the ASPERA-4 instrument.

The ASPERA-4 DPU mechanically includes two boards: the DPU board itself, and a Housekeeping (HK) board. These are connected together with the sensor control electronics and the power supply via a common bus system with 8 address and 16 data lines besides control, analog and power supply lines.

The DPU is built around the 16-bit processor MA31750 from Dynex with 12 MHz system clock frequency and an Actel Field Programmable Gate Array (FPGA) RT54SX32S, which implements memory management, watchdog functions and the serial spacecraft interface protocol. The software runs inside a 128 kByte RAM, organised in 2 banks of two 32kByte static memory chips each. On power-up, a two times 16 kByte bipolar PROM (HARRIS) is activated with a boot loader, which transfers the complete PROM contents into the RAM, changes then the program control to the RAM area and switches the power to the PROMs off via transistor switches to conserve power. It then starts monitoring the telecommand (TC) interface for possible boot instructions. This allows the configuration of the instrument in a flexible, but safe manner: If a start configuration is defined via TC, the software continues accordingly. Otherwise the default start configuration inside the EEPROM is used. If this is corrupted, the original default configuration from PROM will be used.

A 512 kByte radiation hardened EEPROM (Maxwell) contains additional program code and configuration information, which can be modified from ground. 2 MByte mass memory RAM is used to store measurement data and buffer telemetry packets.

An Actel FPGA RT1280 implements the serial data transfer protocol to the IMA detector with an interface identical to the corresponding hardware used on the Rosetta mission. All interface lines are buffered via special circuits to protect the instrument from external noise effects.

The DPU board is controlled by a 24 MHz crystal which is divided down to 12 MHz and 42 buffered inside an FPGA before it is used for FPGA and processor operations and also on the HK board. As the main FPGA needs 2.5 V operations voltage, this is generated by dedicated regulators directly on the DPU and on the HK board. The watchdog circuit inside the FPGA can be enabled by software. Then it has to be reset regularly by software access. Otherwise it issues a hardware reset to the whole DPU board after 16 seconds. Except for a special error message, the behaviour is identical to a boot sequence after power-up. The DPU board controls most detector voltages with direct access to the power supply board.

The HK board is controlled by a separate RT54SX32S FPGA, which maps all input and output functions into standard bus address space. It also implements the needed counters for detector pulses from the NPI and ELS.

Atos GFI Origin	ASPERA 4 EAICD	Document No. Date Page	: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 15
---------------------------	----------------	------------------------------	--

Four eight-channel analog multiplexers select one out of 32 analog voltages to be monitored. They are digitalised by one 14-bit Analog-to-Digital-Converter (ADC, LTC1419). Another 14-bit ADC monitors the ELS deflection voltage. Two 8-bit Digital-to-Analog-Converters generate via 8 latching buffers the control voltages for NPD, NPI, ELS and the scanner. Also the sun-sensor electronics is implemented on the HK board.

The software is built around a real-time system with scheduler and interrupt handler. All executable routines are defined inside a routing table, which resides in EEPROM and can be modified during flight. In this way new or modified software routines can be stored inside a free area of the EEPROM, verified and added to the operating software by including their start address into this routing table. A macro feature of the TC handler offers the possibility to generate sequences of standard TCs automatically according to a predefined list, reducing the need for complex TC groups to be up-linked over and over again. Besides detector activation and parameter control, compression and averaging of measurement data allow the reduction of the amount of telemetry generated.

The primary design drivers for the Digital Processing Unit (DPU) are optimum use of the allocated telemetry rate and correct handling of TCs. The ASPERA-4 instrument makes extensive use of sophisticated lossless data compression to enhance the scientific data yield. The principal compression method used is based on the Rice algorithm, an adaptive compression technique that remains efficient over a wide range of input data entropy conditions. This is achieved by employing multiple encoders, each of which is optimized to compress data in a particular entropy range. The structure of the algorithm also permits a simple interface to data packetisation schemes, such as those used for space data communications, without the need to carry auxiliary information across packet boundaries.

The Scanner

The mechanical scanner sweeps the three sensors mounted on it (ELS, NPD, and NPI) through 180 degrees to give the ASPERA-4 instrument 4π steradian (unit sphere) coverage when the spacecraft is 3-axis stabilized. This occurs in 32, 64, or 128 seconds depending on the scanner operational mode. The scanner is equipped with one stepping motor, which turns a worm screw. The screw drives a worm wheel, which is attached to the moving part of the scanner. The scanner payload can be turned to any arbitrary angle within the range 0-180 degrees or perform continuous scanning. The operational rotation rates are 1.5, 3.0 and 6.0 degrees per second. The system offers an angular positioning accuracy of 0.2 degrees.

Table 2. Mechanical scanner platform technical data

technical data	value	unit
maximum angle of rotation	±100	[deg.]
angular movement per step, fs. Mode	0.0190	[deg.]
angular movement per step, hs. Mode	0.0095	[deg.]
angular position feedback resolution	0.05	[deg.]
angular positionning accuracy	0.2	[deg.]
operationnal rotation rate	1.5/3.0/6.0	[deg/s]
maximum rotation rate	~25.0	[deg/s]
power dissipation	0.5-2.0	[W]
platform load	3.7	[kg]
maximum platform load	~12	[kg]
dimensions	60 × 254 × 232	[mm]
mass	1.42	[kg]
operationnal lifetime in vacuum	~3	[years]
Gear ratio	1:188	-



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	:18 Mar 2011
Page	: 16

ASPERA-4 sensors orientation

The following pictures show the ASPERA-4 sensors location and orientation in the spacecraft system [AD 3].

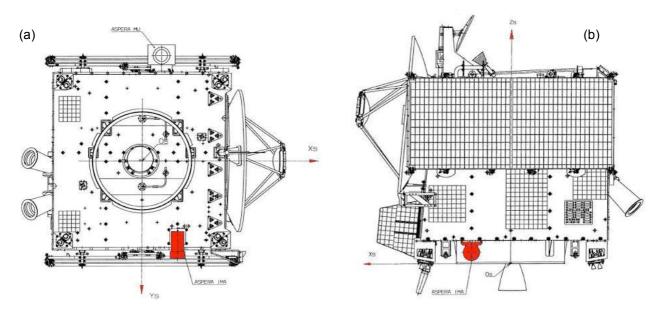


Figure 6. IMA location in (a) X_SY_S plane and (b) X_SZ_S plane, where $X_SY_SZ_S$ defined the satellite reference frame.

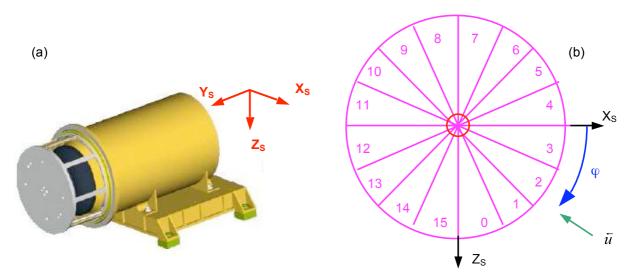


Figure 7. (a) IMA orientation in $X_SY_SZ_S$ plane. (b) Sketch showing the DPU sensor numbering and the corresponding sector looking direction in the X_SZ_S plane. \bar{u} is the velocity vector of a particle entering in the middle of each sector and φ the associated azimuthal angle. The complementary angle θ is the elevation angle counted from X_SZ_S plane and directed towards +Y_S. It is noted that the view doesn't correspond to the physical sectors position. For example, an ion entering the sensor with an incident velocity vector \bar{u} will be registered in the azimuthal sector 2.



Table 3. φ and \overline{u}_{XsZs} values of each IMA sector.

sector	begin	middle	end	\tilde{u}_{XsZs} in the middle
0	90,00	78.75	67.50	(-0.195,-0.981)
1	67.50	56.25	45.00	(-0.556,-0.831)
2	45.00	33.75	22.50	(-0.831,-0.556)
3	22.50	11.25	0.00	(-0.981,-0.195)
4	0.00	348.75	337.50	(-0.981, 0.195)
5	337.50	326.25	315.00	(-0.831, 0.556)
6	315.00	303.75	292.50	(-0.556, 0.831)
7	292.50	281.25	270.00	(-0.195,0.981)
8	270.00	258.75	247.50	(0.195,0.981)
9	247.50	236.25	225.00	(0.556,0.831)
10	225.00	213.75	202.50	(0.831,0.556)
11	202.50	191.25	180.00	(0.981 , 0.195)
12	180.00	168.75	157.50	(0.981 , -0.195)
13	157.50	146.25	135.00	(0.831 , -0.556)
14	135.00	123.75	112.50	(0.556 , -0.831)
15	112.50	101.25	90.00	(0.195,-0.981)

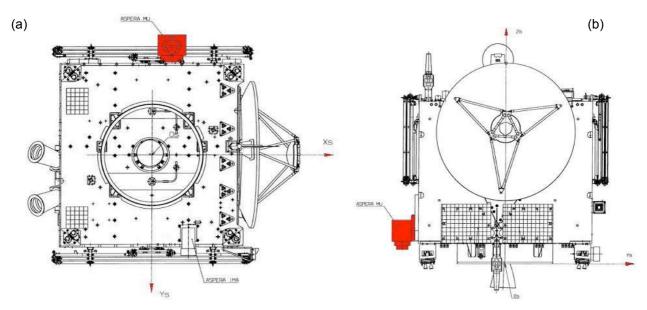


Figure 8. MU location in (a) X_SY_S plane and (b) Y_SZ_S plane onto the spacecraft.

Atos GFI Origin	ASPERA 4 EAICD	Document No. Date Page	: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 18
---------------------------	----------------	------------------------------	--

Main Unit can turn around Y_S axis. To describe the instance attitudes of each sensor mounted on the rotating platform, we have to introduce a new reference frame $X_{mu}Y_{mu}Z_{mu}$ attached to MU. $X_{mu}Y_{mu}Z_{mu}$ is defined as a system equivalent to $X_SY_SZ_S$ when MU is in a parking position as shown in Figure 9.

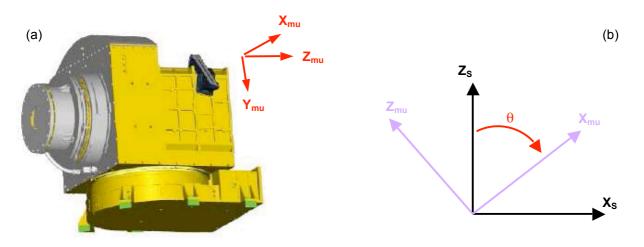


Figure 9. (a) Representation of the $X_{mu}Y_{mu}Z_{mu}$ reference frame attached to MU while MU is in a parking position. (b) Picture showing the X_{mu} and Z_{mu} vectors in the X_SZ_S plane. The change of coordinates from the MU system to the satellite system is accomplished by a rotation of θ angle. θ is the scanner angle in the X_SZ_S plane of the satellite system. The complementary angle ϕ is the azimuthal angle counted from the + X_{mu} axe and contained in the 2D plane $X_{mu}Y_{mu}$.

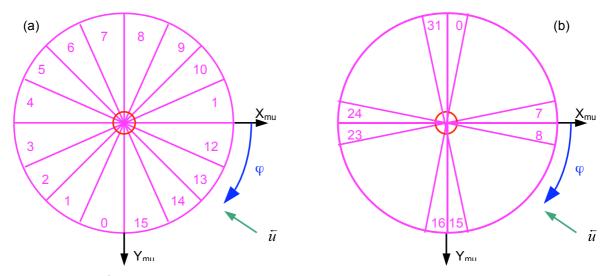


Figure 10. (a) ELS and (b) NPI sketches showing the DPU sensors numbering and the corresponding sector looking direction in the $X_{mu}Y_{mu}$ plane. \bar{u} is the direction of the velocity vector of incidence particle entering in the middle of each sector. φ is the associated azimuthal angle as defined above. It is noted that the views don't correspond to the physical sectors position. For example, a particle entering ELS sensor with an incident velocity vector \bar{u} will be registered by sector 13.



Table 4. φ and $\dot{u}_{X_{mu}Y_{mu}}$ values of each ELS sector.

sector	begin	Middle	end	$\dot{\tilde{u}}_{X_{mu}Y_{mu}}$ in the middle
0	90.00	101.25	112.50	(0.195, -0.981)
1	112.50	123.75	135.00	(0.556,-0.831)
2	135.00	146.25	157.50	(0.831,-0.556)
3	157.50	168.75	180.00	(0.981, -0.195)
4	180.00	191.25	202.50	(0.981 , 0.195)
5	202.50	213.75	225.00	(0.831,0.556)
6	225.00	236.25	247.50	(0.556,0.831)
7	247.50	258.75	270.00	(0.195,0.981)
8	270.00	281.25	292.50	(-0.195, 0.981)
9	292.50	303.75	315.00	(-0.556, 0.831)
10	315.00	326.25	337.50	(-0.831, 0.556)
11	337.50	348.75	0.00	(-0.981, 0.195)
12	0.00	11.25	22.50	(-0.981,-0.195)
13	22.50	33.75	45.00	(-0.831,-0.556)
14	45.00	56.25	67.50	(-0.556,-0.831)
15	67.50	78.75	90	(-0.195,-0.981)

Table 5. φ and $\overleftarrow{u}_{X_{mu}Y_{mu}}$ values of each NPI sector.

sector	begin	Middle	end	$\overline{u}_{X_{mu}Y_{mu}}$ in the middle
0	270.00	275.62	281.25	(-0.098, 0.995)
1	281.25	286.88	292.50	(-0.290, 0.957)
2	292.50	298.12	303.75	(-0.471, 0.882)
3	303.75	309.38	315.00	(-0.634, 0.773)
4	315.00	320.62	326.25	(-0.773, 0.634)
5	326.25	331.88	337.50	(-0.882, 0.471)
6	337.50	343.12	348.75	(-0.957, 0.290)
7	348.75	354.38	0.00	(-0.995, 0.098)
8	0.00	5.62	11.25	(-0.995,-0.098)
9	11.25	16.88	22.50	(-0.957,-0.290)
10	22.50	28.12	33.75	(-0.882,-0.471)
11	33.75	39.38	45.00	(-0.773,-0.634)
12	45.00	50.62	56.25	(-0.634,-0.773)
13	56.25	61.88	67.50	(-0.471,-0.882)
14	67.50	73.12	78.75	(-0.290,-0.957)
15	78.75	84.38	90.00	(-0.098, -0.995)
16	90.00	95.62	101.25	(0.098, -0.995)
17	101.25	106.88	112.50	(0.290, -0.957)
18	112.50	118.12	123.75	(0.471,-0.882)
19	123.75	129.38	135.00	(0.634,-0.773)
20	135.00	140.62	146.25	(0.773,-0.634)
21	146.25	151.88	157.50	(0.882,-0.471)
22	157.50	163.12	168.75	(0.957,-0.290)
23	168.75	174.38	180.00	(0.995, -0.098)
24	180.00	185.62	191.25	(0.995,0.098)
25	191.25	196.88	202.50	(0.957,0.290)
26	202.50	208.12	213.75	(0.882,0.471)
27	213.75	219.38	225.00	(0.773,0.634)
28	225.00	230.62	236.25	(0.634,0.773)
29	236.25	241.88	247.50	(0.471,0.882)
30	247.50	253.12	258.75	(0.290, 0.957)
31	258.75	264.38	270.00	(0.098, 0.995)

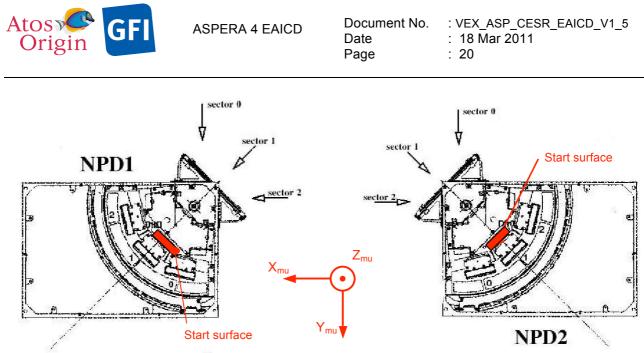


Figure 11. NPD sectors looking position in the $X_{mu}Y_{mu}$ plane. The NPD bore sight plane is inclined on the angle 15 degrees to -Zmu (NPD1) and to Zmu (NPD2) relative to the plane $X_{mu}Y_{mu}$.

Table 6. φ and $\bar{u}_{X_{m},Y_{m}}$ values of each NPD1 sector.

sector	begin	middle	end	$\tilde{u}_{X_{mu}Y_{mu}}$ in the middle
0	270.00	255.00	240.00	(0.259,0.966)
1	240.00	225.00	210.00	(0.707,0.707)
2	210.00	195.00	180.00	(0.966, 0.259)

Table 7. φ and $\bar{u}_{X_{mu}Y_{mu}}$ values of each NPD2 sector.

sector	begin	middle	end	$\tilde{u}_{X_{mu}Y_{mu}}$ in the middle
0	270.00	285.00	300.00	(-0.259,0.966)
1	300.00	315.00	330.00	(-0.707,0.707)
2	330.00	345.00	0.00	(-0.966, 0.259)

2.1 Scientific Objectives

The ASPERA-4 experiment comprises a comprehensive set of instruments devoted to study the solar wind – Venusian atmosphere interaction and characterize the plasma / atmospheric escape through energetic neutral atom (ENA) imaging and local charged particle measurements. Ultimately, the studies would lead to a better understanding of the origin and evolution of the planet, and particularly of induced escape mechanisms responsible, among others, to the Venusian atmosphere dehydration process.

The absence of a planetary magnetic field exhibits important differences between Venus' and Earth's atmospheric escape and energy deposition processes. The upper atmosphere of Venus is not protected by magnetic field from direct interaction with the solar wind. As a result, Venus is subject to comet-like atmosphere erosion processes and solar-wind induced current systems that have no terrestrial counterparts. Figure 12 shows an overview of the known plasma environment of Venus.

There are two main reasons why we need to understand the solar wind interaction with the Venusian atmosphere: First, it is needed to fulfill the objective of the entire VEX mission. Second, atmospheric escape into space is the ultimate atmospheric loss process, which plays an important role in the water escape, most likely escaping to space in the form of water-derived constituents such as neutral and ionized hydrogen and oxygen. It is known that losing light hydrogen is relatively easy, but the oxygen created by the implied loss of so much water-derived hydrogen presents a major unresolved problem. ASPERA-4 will clearly make progress in our understanding of atmospheric oxygen escape from Venus.



Document No.	: VEX_ASP_CESR_EAICD_V
Date	: 18 Mar 2011
Page	: 21

15

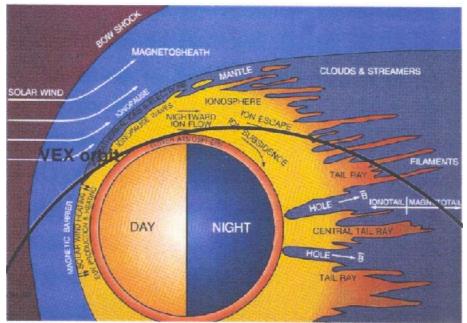


Figure 12. The Near Planet Structure Around Venus. Shown is an artist conception of the structure of the Venus ionosphere induced by the solar wind interactions. The black line shows the Venus Express orbit. ASPERA-4 operations occur through out the solar wind interaction region.

Contemporary escape processes at Venus include mechanisms affecting both neutral and ionized constituents. There are four basic escape mechanism known to date: (1) pick-up ion processes; (2) thermal "Jeans" escape; (3) sputtering from particle precipitation; and (4) polar wind outflow.

The first atmospheric escape process of a non-magnetized planet is the pick-up process. Solar radiation is the source for ionizing the atmospheric neutrals which forms an ionosphere. A thermal ion from the ionosphere is gradually accelerated by the convective electric field from the solar wind. The pick-up ion can reach energies greater than the escape energy and thus be lost from the ionospheric and atmospheric system and be carried away by the solar wind (mass loading). This process should be effective for H+ through O+ and even molecular ions.

A second escape process is the thermal escape due to heating of atmospheric species. The upper atmosphere can be heated by particle precipitation to energies above the gravitational escape energy (~10 km/s or an energy of ~ 9 eV for oxygen and a fraction of eV for hydrogen). In the case of Venus, the dominating heat source is solar EUV and penetration of solar wind ions. The second most important heat source is precipitating ENAs produced in the solar wind and by charge exchange of pick-up ions. The third source is precipitating pick-up O+ and protons. Although solar radiation and solar wind ion precipitation is the dominating heating process, the second and third source may be important for the long-term evolution of the atmosphere. Generally, the more massive a particle is, the lower its average speed at a given temperature is, meaning it is less likely to escape.

A third escape process is backscattering of atmospheric constituents of the continuous bombardment of precipitating particles. In addition to heating the neutral thermosphere, precipitating ions give up some of their energy to a backscattered component of atmospheric particles. Those backscattered particles with energies above that required for escape contribute to the loss of oxygen and other constituents from Venus.

In contrast to hydrogen, the proposed physics of the oxygen loss involves a chain of processes starting with the ionization of the upper atmospheric particles present above the Venus ionopause. Following pickup by the solar wind electric field, these atmospheric ions can escape directly, or they may charge exchange in the oxygen or hydrogen exosphere to become fast atmospheric neutrals (leaving behind a new slow exospheric ion to be picked up), or avoid escaping but reimpact the exobase where they effectively sputter oxygen atoms away.



Date Page : 22

Document No. : VEX ASP CESR EAICD V1 5 : 18 Mar 2011

Each escape process has specific observable signatures that can be used to sort out their contributions: sputtering and charge exchange produce distinctive ENA populations, pickup ion distributions can be identified using an ion spectrometer and a magnetometer to determine the particle pitch angles, and bulk ion removal can be diagnosed at the terminator and in the low altitude wake with an ion spectrometer and magnetometer data.

In order to study the escape of the present day Venus atmosphere one must measure the incident solar wind flux, and the escaping ions whose thermal and bulk velocities will range from about 10 to 1000 km s-1, depending on the mechanism at work. To investigate and estimate the global atmospheric escape rates one must also measure the neutral components which contribute to the escaping population. In particular, the ENA imager must be able to separate planetary ENAs from solar wind ENAs. Almost all oxygen ENAs are planetary in origin, but hydrogen ENAs could originate from the atmosphere (pick-up ions) or the direct charge exchange between the solar wind protons and the neutral exosphere. Solar wind hydrogen ENAs have a spectrum that peaks around 1 keV (around the incident solar wind energy), whereas the planetary hydrogen ENAs display an almost flat continuum down to about 10-100 eV.

To date, none of the previous missions was suitably instrumented to address these objectives. Only the Pioneer Venus Orbiter (PVO) contributed significally to develop a comprehensive ideas of the Venus solar wind interaction physics and the consequences for the planet, but crucial holes in knowledge are left due to the limitations of the instruments carried by PVO when it was launched in 1978. The plasma analyzer on PVO, designed primarily for solar wind monitoring, did not have the possibility for mass discrimination and covered only a small solid angle and insufficient energy range. In addition the electron instrument on PVO was restricted to the 0.5 keV energy and limited in coverage. Thus it made difficult to guantify the details of the escape scenario.

The IMA will put a definitive composition label on the atmospheric pickup ions produced at Venus and will detect them over a much greater (up to 36 keV as opposed to PVO's 8 keV) energy range. The ELS will measure both low energy escaping plasma and high energy electrons that contribute to the ion production through electron impact ionization. The NPD will provide a measure of the fluxes and composition of the ENAs, while imaging these particles with NPI will show the spots or regions of the most intense ENA precipitation, and give information on their variation with solar wind conditions. The ASPERA-4 IMA, with the added magnetometer MAG, on Venus Express should finally allow the evaluation of escape rates for oxygen ions as well as other species, their variation with interplanetary conditions, and their implications for related sputtering losses.

The ASPERA-4 experiment opens up the possibility to perform for the first time comprehensive plasma measurements at Venus in unprecedented detail and accuracy. In particular, the ASPERA-4 experiment will (1) investigate the interaction between the solar wind and Venus atmosphere, (2) characterize quantitatively the impact of plasma processes on the atmosphere, (3) determine the global plasma and neutral gas distribution, (4) identify the mass composition and quantitatively characterize the flux of the out flowing atmospheric materials. (5) investigate the plasma domains of the near-Venus environment, and (6) provide undisturbed solar wind parameters.

The specific science measurements to carry out these goals are:

- 1. Integral ENA fluxes in the energy range of 0.1 to 60 keV.
- 2. Mass/energy resolved neutral hydrogen and oxygen atom spectra in the energy range of 0.1 to 10 keV.
- 3. Ion energy/mass/angle resolved spectra in the energy range of 0.01 to 36 keV; from 1 to high atomic mass units per unit charge (amu/q); with 4π steradian coverage.
- 4. Electron spectra in energy range of 0.01 to 15 keV, with up to 4π steradian coverage. However, due to spacecraft blockage, 4π steradian coverage is never really achieved.

The ASPERA-4 data measurements will be conveniently archived into data sets conforming to the Planetary Data System (PDS) format-like standard that facilitates the ease of storage and long-term maintenance, and enables as well future scientists who are unfamiliar with the original experiments to analyze the data, using a variety of computer platforms, with no additional support (see [AD 1]). Basically, the ASPERA-4 archived data sets consists of primary data product files, together with information files defining the contents and format of the data, and accompanied by supportive documentation and ancillary files describing the mission, spacecraft, instrument, geometry, calibration, software and additional elements which assist in



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	:18 Mar 2011
Page	: 23

understanding and using the data products. Both are necessary to satisfy comprehensible data analysis of the scientific return. Typically the ASPERA-4 data archive will be divided into four data sets, each one containing sensor data (ELS, IMA, NPI, NPD) annotated with instrument state and geometric data. The data sets are given an unique alphanumeric identifier (data set ID) constructed according to PDS naming conventions (described in section 3.1.2), and each one includes a generic tree-like hierarchical structure containing subdirectories such as the DATA subdirectory for the labeled data products storage, and the required and optional ancillary sub-directories (e.g. INDEX, LABEL, DOCUMENT, CATALOG, GAZETTER, SOFTWARE, CALIB, GEOMETRY and EXTRAS). Each data product (file) has a unique data product ID (file name without extension) and is associated to a product label, which describes, identifies and defines the structure of the data. The file naming convention for data products are given in section 3.1.4.

2.2 Data Handling Process

ASPERA-4 data handling process is the primary responsibility of the ASPERA-4 Co-PI institution, Centre d'Etude Spatiale des Rayonnements (CESR). The CESR is furthermore responsible for the production of the PDS-labeled data products and for their ingestion into the Planetary Science Archive (PSA) database for long-term ESA archival. The Centre National d'Etudes Spatiales (CNES) provides support to the CESR for developing a software tool that will generate the raw PDS-compliant data and label files, and for any possible reprocessing data that will impact the archive products. Besides the particular domain of the data production in which the CESR is actively involved, the PI and ASPERA-4 Co-I team are responsible for the scientific evaluation of the data being delivered to the long-term archive. Since Swedish Institute of Space Physics (IRF) is the ASPERA-4 leading PI institution, it is their responsibility, together with the Co-I team, to ensure that proper information is disseminated for the development and operation of the data system, and the ASPERA-4 PI has the final say on what data are included in the archive. The relevant contact information is provided in section 1.9. Figure 13 shows a simplified scheme for the handling and archiving of technical and scientific ASPERA-4 data. The mechanism of the data flow is the following:

The ASPERA-4 data collected on board the Venus Express spacecraft will be transferred to the European Space Operation Center (ESOC) and stored at ESOC on the Data Delivery System (DDS) in Darmstadt (Germany). It will be then transferred via FTP from the DDS to IRF.

(1) All ASPERA-4 telemetry data files are collected at IRF and distributed to the Col team. Following the operations plan the CESR retrieves archived packets (science and HK) and the time correlation log file by direct request to the web IRF server via wget utility at http://aspera-4.irf.se/archive/raw and stores them into a suited CESR database. The CESR also handles ancillary data (attitude/orbit files) provided by ESOC via ftp://ssols01.esac.esa.int/pub/data/ESOC/VEX that might be appropriate to correctly interpret science data.

(2) As soon as they are received, the science and HK data raw packets are passed through data processing software for disassembling packets into a collection of data set records, sorted by object type (ELS, IMA, NPI, NPD1, NPD2 and HK) and written in a telemetry-like format that contains uncalibrated data (science and HK) tagged with timing information. This process preserves the raw high-resolution data in an organized way that requires no reprocessing. The CESR will archive the level-1 (uncalibrated data) instrument data file products in ASCII format, and make sure that they are immediately accessible to the PI and the authorized remainder ASPERA-4 Co-I team through W3-CESR server http://interball2.cesr.fr:8001/. The format of the data level 1 is described in [AD 5].


(3) Meanwhile the executed commands for stepping the in-flight IMA post-acceleration high voltage are extracted from the telecommand packets and stored in the CESR database as PAHLR.ASC ASCII files. These information are useful for interpreting the IMA scientific data.

(4) The final step of the product generation is the conversion from the CESR telemetry-like format to PDS format and the generation of the complete data sets. This step is also performed at CESR in Toulouse about two months before final delivery to PSA. A software tool which is currently under CNES construction will process as input the level-1 instrument data file sets prepared by the CESR to produce ASPERA-4 data products following the PSA standard (equivalent to the PDS standard from NASA). Each execution of the software tool will generate an individual data file and the associated detached PDS label for the time range specified and for the object type selected. The PDS-labeled data product files will be ASCII files containing

uncalibrated data of the science type, level-stamped as level CODMAC 2. It is also planed to generate PDSlabeled data product files of calibrated HK type, level-stamped as level CODMAC 3.

(5) PDS data files, labels and all ancillary information PDS-formatted and documented files (e.g. geometry information, indexes, etc.) are collected onto a sensor-type data set (e.g., ELS, IMA, NPI, NPD), and all of the PDS required files (AAREADME, INDEX, ERRATA, etc.) are generated. A single ASPERA-4 data set is organized as a single archive volume. Each archive volume (data set) contains all ASPERA-4 data available for the time interval covered by the archive volume, between the dates given for the Mission Phase, i.e. Nominal Mission or Extended Mission. Once the data and files are generated and organized for a data set, the CESR staff runs the PSA provided validation software tool (PVV) to ensure that all files are present and conform to PDS standards. Any errors are corrected. The final ASPERA-4 data archives will be submitted first to the PI who is in charge, together with the Co-I team, for the scientific evaluation of the data. Approved archives will then be delivered to PSA for ingestion to the official public archive after the proprietary period.

(6) For the archival of any subsequent ASPERA-4 in-flight data, the CESR will use the software tool in an automated fashion. CESR will submit each new PDS-labeled data product (release) to IRF. Upon receipt, the IRF team and the remainder ASPERA-4 Co-I team will confirm the structure of the files and labels checking as well the compliance with the PDS standards. Once the data is scientifically evaluated and approved, the release is delivered to PSA.

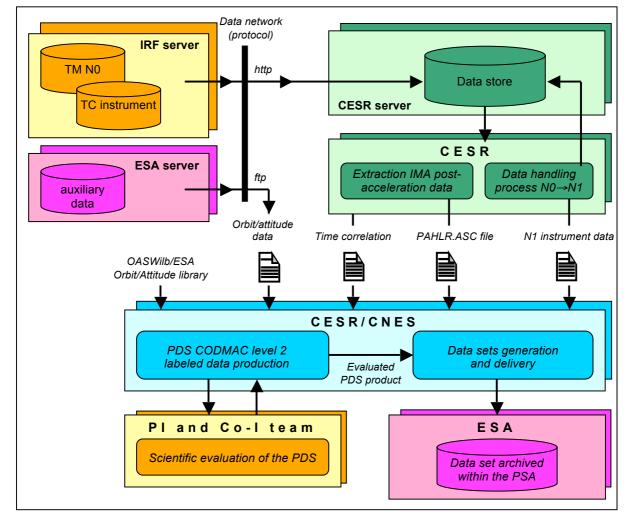

The delivery format is described in this document (see section 3.1.1).

Figure 13. ASPERA-4 rough data flow and archiving process are illustrated in the figure above.



Document No. : VE> Date : 18 Page : 25

2.3 Overview of Data Products

2.3.1 Pre-Flight Data Products

No pre-flight data products will be provided.

2.3.2 Sub-System Tests

No sub-system test data will be provided.

2.3.3 Instrument Calibrations

The calibration from instrument counts to physical values is performed using the coefficients derived from the ground calibration tests. These raw ground calibration data are not archived, but the coefficients derived from these tests are included as a set of tables. The structure and content of the calibration tables are described in section 3.4.3.2. The calibration reports and any other calibration documentation are given in the DOCUMENT directory.

2.3.4 Other Files written during Calibration

No other calibration information is available for archive.

2.3.5 In-Flight Data Products

The ASPERA-4 in-flight data products correspond to all the on board data. They are produced during the following mission sub-phases:

Table 8. Standard values for MISSION_PHASE_NAME with starting date and orbit number. An updated version of this table may be found within the latest version of both [AD 4] and [AD 12] documents.

MISSION_PHASE_NAME	ORBIT_NUMBER	Start Date (dd-mm-yyyy)
"CRUISE"	-1	09-11-2005
"VOI"	0	11-04-2006
"PHASE 0"	23	14-05-2006
"PHASE 1"	44	04-06-2006
"PHASE 2"	82	11-07-2006
"PHASE 3"	146	14-09-2006
"PHASE 4"	209	16-11-2006
"PHASE 5"	286	01-02-2007
"PHASE 6"	330	16-03-2007
"PHASE 7"	370	25-04-2007
"PHASE 8"	436	30-06-2007
"PHASE 9"	488	21-08-2007
"PHASE 10"	531	04-10-2007
"PHASE 11"	554	27-10-2007
"PHASE 12"	623	04-01-2008
"PHASE 13"	711	01-04-2008
"PHASE 14"	776	05-06-2008
"PHASE 15"	833	01-08-2008
"PHASE 16"	886	23-09-2008
"PHASE 17"	985	31-12-2008
"PHASE 18"	1046	02-03-2009



"PHASE 19"	1110	05-05-2009
"PHASE 20"	1160	24-06-2009
"PHASE 21"	1248	20-09-2009
"PHASE 22"	1276	18-10-2009
"PHASE 23"	1336	17-12-2009
"PHASE 24"	1383	02-02-2010
"PHASE 25"	1447	07-04-2010
"PHASE 26"	1500	30-05-2010
"PHASE 27"	1543	12-07-2010

The CRUISE sub-phase corresponds to data collected before the VOI (VENUS Orbit Injection), including the Near Earth Verification (NEV) and Interplanetary Cruise (IC) sub-phases. After the VOI, the nominal mission is divided into different VENUS mission sub-phases defined by the VENUS EXPRESS mission planning (see Table 8). Along the S/C orbit, two targets of observation are identified, leading to two main divisions of the ASPERA-4 in flight data products. The TARGET_NAME element attempts to describe the item that was being observed at the time the data was acquired.

- 1. Near Earth Verification (NEV) and Interplanetary Cruise (IC) data
 - a. TARGET_NAME = "SOLAR WIND"
 - b. TARGET_TYPE = "N/A"
- 2. Venus orbit data
 - a. TARGET_NAME = "VENUS"
 - b. TARGET_TYPE = "PLANET"

There were originally 12 PSA Level 1b (CODMAC Level 2) data sets for storing data products through the entire mission duration: one per sensor and, per phase of the mission (NOMINAL, EXTENDED 1, EXTENDED 2) conforming to the schedule outlined in the minutes of the November DAWG telecon [AD 14]:

Data set	Mission phase abbreviation	<i>Start date</i> (dd-mm-yyyy)	<i>End date</i> (dd-mm-yyyy)
NOMINAL MISSION	blank field	Launch	02-10-2007
EXTENDED MISSION 1	EXT1	03-10-2007	31-05-2009
EXTENDED MISSION 2	EXT2	01-06-2009	?

Based on its overwhelming successes, the operations of ESA's Venus Express have been granted additional extended mission phases. A PSA Level 1b data set will be generated for each new phase of the mission and for each sensor.

For both nominal and extended mission phases, the Experiment Data Record (EDR) data sets contents are:

- 1. VEX-V/SW-ASPERA-2-<mission phase abbreviation>-ELS Electron Spectrometer data (counts/accumulation) with up to 128 energy steps (center eV) ranging from 0.01 to 15 keV.
- VEX-V/SW-ASPERA-2-<mission phase abbreviation>-IMA Ion Mass Analyzer data (counts/accumulation) in the energy range 0.01 to 36 keV for all mass channels and azimuth anodes.
- 3. VEX-V/SW-ASPERA-2-<mission phase abbreviation>-NPI Neutral Particle Imager data (counts/accumulation) of integral ENA fluxes in the energy range 0.1 to 60 keV.
- 4. VEX-V/SW-ASPERA-2-<mission phase abbreviation>-NPD Neutral Particle Detector data (counts/accumulation) of atom spectra in the energy range 0.1 to 10 keV.

Each data set will be organized as a logical volume with ancillary data (geometry and calibration tables) included to the data set where applicable.



However, the data products included may differ depending on the sensor (ELS, IMA, NPI, and NPD) modes and operations during the interplanetary cruise and Venus orbit. The data, both scientific and housekeeping, are listed in documents [AD 3] and [AD 5]. See Table 10 for scientific measurements of the data sets.

sensor	Data Set ID	Science Raw/Edited Data Description	Number of modes
ELS (electron spectrometer)	VEX-V/SW-ASPERA-2-ELS-V1.0 VEX-V/SW-ASPERA-2-EXTI-ELS-V1.0 ⁽¹⁾ PSA Level 1b CODMAC Level 2	Electron spectra containing a maximum of 128 steps × 16 sectors raw data	4
IMA (ion mass spectrometer)	VEX-V/SW-ASPERA-2-IMA-V1.0 VEX-V/SW-ASPERA-2-EXTi-IMA-V1.0 ⁽¹⁾ PSA Level 1b CODMAC Level 2	Full 3D ion spectrum consisting of a maximum of 16 polar angle steps × 96 energy steps × 16 azimuthal sectors × 32 mass channel data in raw counts 3 values of post-acceleration are available	32
NPI (neutral particle imager – flux)	VEX-V/SW-ASPERA-2-NPI-V1.0 VEX-V/SW-ASPERA-2-EXTi-NPI-V1.0 ⁽¹⁾ PSA Level 1b CODMAC Level 2	Integral ENA fluxes containing 32 azimuthal sectors raw data	2
NPD (mass/energy resolved neutral particle detector)	VEX-V/SW-ASPERA-2-NPD-V1.0 VEX-V/SW-ASPERA-2-EXTi-NPD-V1.0 ⁽¹⁾ PSA Level 1b CODMAC Level 2	Each event is stored in the array: time-of- flight (velocity measurement) × stop pulse height (for mass identification) × azimuthal direction (possible of 3)	4 / sensor identical structure files for both detectors

Table 10. ASPERA-4 sensors Data Sets and the scientific measurements a	ssociated.
--	------------

⁽¹⁾ where i is the occurrence number of the extended mission phase (starting from 1)

<u>Note</u>: HK are also archived in PDS-labeled data product files and must be contained within the sensor data set to which they belong. Mainly, there are 2 types of HK data. The MU provides status information and housekeeping data for ELS, NPI and NPDs sensors whereas the IMA engineering data are monitored and prepared by the IMA Data Processing Unit. Raw HK data incoming from both systems are converted into physical values when calibration is applied.

2.3.6 Software

No software is provided within the ASPERA-4 data sets.

2.3.7 Documentation

Most of the documentation provided in the archive volumes is either in the form of PDS catalog (.CAT) files in the CATALOG directory or are in the DOCUMENT directory. The documents provided in the DOCUMENT directory are:

- 1. VEX / ASPERA-4 Instrument Manual, June 17, 2006, Issue &, Rev. 1, VE-ASP-TN-060402
- 2. Description des fichiers N1 VEX, E. Penou, CESR, 16/10/2006, Edit. 4, Rev. 0
- 3. EAICD (this document)

This EAICD document is the only document that is considered critical documentation for the understanding of the contents and usage of the ASPERA-4 archived data sets.



Document No. : VEX_ASP_CESR_EAICD_V1_5 Date : 18 Mar 2011 Page : 28

2.3.8 Derived and other Data Products

We do not intend to provide any other derived data or data products that result from co-operation with other instrument teams.

2.3.9 Ancilary Data Usage

It is important for ASPERA-4 science studies to know where in space and time the Venus Express spacecraft and ASPERA-4 instruments are located and what objects (Sun, Venus, Earth) are in the fields of views.

ESOC will provide via the IRF server the Venus Express spacecraft general orbit data related to the Earth Mean Equator (EME) of J2000 coordinates for use in conjunction with the ASPERA-4 data (see [AD 6] 4.2). The attitude data files will be provided apart by ESOC via IRF. The following orbit and attitude files from ESOC are used for the generation of ASPERA-4 data products:

ORHV_FDLVMA_DA_____vvvvv.VEX (covers the cruise phase from launch to Venus orbit insertion, orbital data are provided as Heliocentric states in the EMEJ2000 reference frame)

ORVV_FDLVMA_DA_YYMMDDhhmmss_vvvvv.VEX

ORVV MERGED vvvvv.ORB

(covers the operational orbit around Venus after orbit insertion, orbital data are provided as Venus centric states in the EMEJ2000 reference frame)

(Contains Venus Express orbit pericenter and apocenter times, orbital elements, and additional geometry parameters)

ATNV_FDLVMA_DAPYYMMDDhhmmss_vvvvv.VEX (S/C attitude, EMEJ2000, several days / segment)

ATPV_FDLVMA_DAPnnnnn_YYMMDD_vvvvv.VEX

(S/C attitude, EMEJ2000, medium term planning predicted attitude information covering the time span starting at the date YYMMDD)

Deliveries require the software OASW to access and process orbit and attitude data, and the use of the SPICE kernel data file containing JPL's Planetary Ephemerides (DE) 405 together with the SPICE toolkit for computing coordinates change from the EMEJ2000 frame into the VSO (Venus-Sun-Orbit) coordinates system.

All SPICE files will be included in a VEX data set. SPICE files are also available at the ESAC FTP Server : <u>ftp://ssols01.esac.esa.int/pub/data/SPICE/VEX</u>, or can be downloaded from the ftp mirror NAIF website: <u>ftp://naif.jpl.nasa.gov/pub/naif/VEX</u>.

Additional ancillary data files are required for our processing data chain: at higher levels, the raw data are converted into more useful paramaters and formats, in physical units. For the understanding of IMA data scientific analysis, the IMA post-acceleration high voltage values recorded within TC packets are retrieved from IRF server and stored at CESR as PAHLR.ASC ASCII files together with telemetry data packets.

A useful 3D visualization tool which allows users to represent the predicted and re-constructed orbit and attitude of the VEX probe all along the mission is accessible at the GFI server: <u>http://mm3dview.gfi-toulouse.fr</u>.



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 29

Archive Format and Content 3

This chapter contains general rules and constraints for the ASPERA-4 data sets. The schemes or conventions used for naming the directories and files is specified below.

Specific and detailed information are provided in subchapters of chapter 4.3.

3.1 Format and Conventions

3.1.1 Deliveries and Archive Volume Format

Deliveries to the PSA will be made by the CESR archive team. First ASPERA-4 data will be delivered once the archive volume generation and submission process are successfully passed, as scheduled in Table 11. Subsequent data will be delivered in the long term every 3 months till the end of the VEX operational mission, and stored into the appropriate archive volume. Date for deliveries should be at least 2 months after the last data of the archive volume. An approximate ASPERA-4 data delivery schedule is shown below:

Mission phase	Release number	Data collection period	Delivery to PSA	Public distribution
	0001	Launch-Cruise-Commissioning 09 Nov 2005 (launch date) to August 2006	Sep 2008	
Naminal mission	0002	Sep/Oct/Nov 2006	Sep 2008	
Nominal mission	0003	Dec 2006 / Jan/Feb 2007	Sep 2008	
	0004	Mar/Apr/May 2007	Sep 2008	
	0005	Jun/Jul/Aug 2007	Sep 2008	
	0006	Sep 2007 / 2Oct 2007	Sep 2008	After the PSA approval,
	0001	3 Oct 2007 / Nov/Dec 2007	Sep 2008	individual releases older
	0002	Jan/Feb/Mar 2008	Sep 2008	than 6 months will be delivered to the public with respect to the
	0003	Apr/May/Jun 2008	Oct 2008	
Extended mission 1	0004	Jul/Aug/Sep 2008	Jan 2009	
	0005	Oct/Nov/Dec 2008	Apr 2009	proprietary period of 6
	0006	Jan/Feb/Mar 2009	Jul 2009	months.
	0007	Apr/May 2009	Sep 2009	
	0001	Jun/Jul/Aug 2009	Dec 2009	
	0002	Sep/Oct/Nov 2009	Mar 2010	
Extended mission 2	0003	Dec 2009 / Jan/Feb 2010	Jun 2010	
	0004	Mar/Apr/May 2010	Sep 2010	
]
Extended mission i ⁽¹⁾				

Table 11. List of the dataset release number with the associated data coverage period and deliveries.

⁽¹⁾ where i is the occurrence number of the extended mission phase (starting from 1)

Tens of logical archive volumes will be delivered for the whole mission where each volume contains a single dataset. For the purposes of the PSA, a volume is equivalent to a dataset, so volume identifiers are typically not applicable. A dataset consists of science and HK data, together with documents (see chapter 3.4.3.10). Within a dataset, data are split up into several releases, that together form a complete PSA compatible dataset. A release will concern a well-defined period of time, and may cover several orbit numbers.

Deliveries are based on the concept of a release and a revision of a well-defined period of time [AD 7]. Data are delivered to PSA as units (releases), which can be updated (revision). The list of the ongoing dataset releases arranged by numbering is given in Table 11. Foreseen schedule for deliveries to PSA and public distribution are also displayed. The delivery will be performed only via file transfer, no storage media like CD or DVD will be used.



PSA implemented this concept to allow the delivery of experiment data without the delivery of all supplementary information, that has already been delivered at the first initial delivery of a fully PDS compatible archive volume, containing the VOLDESC.CAT file and all necessary CATALOG, DOCUMENT, INDEX, DATA, etc directories and their content. Two specific data elements (keywords) are included to handle the release concept:

RELEASE_ID

REVISION ID

RELEASE ID defines the release number and REVISION ID defines the revision number. All labels within the first delivery must contain RELEASE ID = 0001 and REVISION ID = 0000.

Each PDS data set must have a unique name (DATA_SET_NAME) and a unique identifier (DATA_SET_ID), both formed from up to seven components. The components are listed here:

Instrument host	VENUS EXPRESS (VEX)
Target	VENUS (V) / SOLARWIND (SW)
Instrument	ASPERA
Data processing level number	see below
Mission phase	see below
Description (optional)	see below
Version number	V1.0

<u>Data processing level number</u> used in ASPERA-4 naming scheme conforms to the Committee on Data Management and Computation (CODMAC) norm:

Level	Туре	Data Processing Level Description
1	Raw Data	Telemetry data with data embedded.
2	Edited Data	Corrected for telemetry errors and split or decommutated into a data set for a given instrument. Sometimes called Experimental Data Record (EDR). Data are also tagged with time and location of acquisition.
3	Calibrated Data	Edited data that are still in units produced by instrument, but that have been corrected so that values are expressed in or are proportional to some physical unit such as radiance. No resampling, so edited data can be reconstructed.
4	Resampled Data	Data that have been resampled in the time or space domains in such a way that the original edited data cannot be reconstructed. Could be calibrated in addition to being resampled.
5	Derived Data	Derived results, as maps, reports, graphics, etc.
6	Ancillary Data	Nonscience data needed to generate calibrated or resampled data sets. Consists of instrument gains, offsets, pointing information for scan platforms, etc.
7	Correlative Data	Other science data needed to interpret space-based data sets.
8	User Description	Description of why the data were required, any peculiarities associated with the data sets, and enough documentation to allow secondary user to extract information from the data.
Ν	Ν	Not Applicable

For our concern, the ASPERA-4 data sets are level-stamped as level 2 (CODMAC level 2).

Mission phase

This field is used to refer to the mission phase ID. The mission phase is displayed only for the extended mission phases data. It would be: EXTENSION i, where i assigns the occurrence number of the extended mission phase (starting from 1). A blank field is assigned for the nominal mission phase.

Description

The description field is used to distinguish the ASPERA-4 sensor datasets themselves. The description would be: ELS, IMA, NPD or NPI.



Thus, the archive volumes (data sets) have the following naming convention (see [AD 4] 3.1.1):

DATA_SET_NAME = <INSTRUMENT_HOST_NAME> <target name> <INSTRUMENT_ID> <data processing level number> <mission phase> <description> V<version>

Examples:

data set for the nominal mission phase data:

DATA_SET_NAME = "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 IMA V1.0"

data set containing data from the first extended mission phase:

DATA_SET_NAME = "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 IMA V1.0"

<u>Note</u>: The DATA_SET_NAME must be changed whenever it will become necessary to deliver different versions. It is expected that the file version number will remain 1.0 during all the mission. If any extreme cases occur where changes are made to the products or the data set itself, the reprocessed files replace the older ones and have the version number incremented.

3.1.2 Data Set ID Formation

PDS data set identifiers (DATA_SET_ID) conform to the following format (see [AD 4] 3.1.2):

DATA_SET_ID = <INSTRUMENT_HOST_ID>-<target id>-<INSTRUMENT_ID>-<data processing level number>-<mission phase abbreviation>-<description>-V<version>

Examples: DATA_SET_ID = "VEX-V/SW-ASPERA-2-IMA-V1.0 DATA_SET_ID = "VEX-V/SW-ASPERA-2-EXT1-IMA-V1.0"

3.1.3 Data Directory Naming Convention

Below the DATA directory, data are organized into several subdirectories, sorted by release. The Figure 14 shows the dataset directory structure used for each sensor of the ASPERA-4 experiment and for each mission phase defined in the operations plan.

|-CALIB-|-CATALOG-| |- DATA ----|- release 1 |- DATA ----|- release 2 |- root directory -----| |- release 3 | |- etc |-DOCUMENT-|-GEOMETRY-|-INDEX-|-LABEL-

Figure 14. Data Set Directory Structure.

The *release X* subdirectory names will be replaced by the corresponding time period (see Table 11). The naming convention will be as following:

<begin of observation>_<end of observation>

```
Where <br/>
```

For example, the NPD RELEASE1 raw data of the nominal mission phase will be in the DATA subdirectory 20051109_20070430.



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 32

If a revision is delivered for the same NPD raw data, it will be in the same DATA subdirectory, but the data labels will have updated REVISION_ID keyword values.

All data sets are delivered separately through the release ID values. For a mission phase, a given release ID corresponds to the same specific time period, and this time period is the same for all the data sets (ELS, IMA, NPI, and NPD).

3.1.4 Filenaming Convention

Within a "release" subdirectory, data are grouped and stored into individual and separate sequence files (namely data products) according to operational mode or sub-mode of equal number of sampling steps, keeping same data pattern in a file.

Data products provided by ASPERA-4 team will have names of the following form:

<exp>_<data type>_<begin of observation>_<index of occurrence><number of occurrences>.<ext>

where **<exp>** (3 characters) = {ELS, IMA, NPI, NP1 or NP2} with last ones for NPD1 and NPD2 respectively

<data type > (7 characters) = There are several possible data type namings that depict data files regarding their content for science and housekeeping.

- 2 housekeeping data types may exist: {HK3MUXX} and {HK3IMAX} for discriminating calibrated data (processing level 3) coming from the Main Unit processor and the IMA digital processor unit respectively.

- Several science data type namings, each of which describing the flight sampling mode of operation that is used in the measurements (see §4).

-

 - yy = year
 - mm = month
 - dd = day
 - hh = hour
 - mm = minute
 - ss = second

<index of occurrence> (1 character) = part of the fragmented file in the sequence.

<number of occurrences> (1 character) = total number of parts after splitting file bigger than 500Mb into any consecutive pieces of small size (<500Mb).

<ext> = extension of file depending on the type of the file. For ASPERA-4 the possible extension
are:

- TAB for tabular raw data containing science or HK data (CODMAC level 2 or 3)
- LBL for the associated label file

Character X is provided in names where significant characters are not applicable.

Examples :

NP1_RAWXXXX_070501144149_11.TAB

Data included in this non-fragmented file are ASPERA-4 NPD1 Science RAW data recorded on flight on 01 May 2007 beginning at 14:41:49 (UTC). They are edited data, in NPD coordinates.

NP1_HK3MUXX_060903121000_11.TAB

Data included in this non-fragmented file are calibrated HK flight data recorded on-board by the Main Unit processor on 03 Sep 2006 beginning at 12:10:00 (UTC). Extracted data are related to the NPD1 sensor or common housekeeping data information.



Document No. Date Page

3.2 Standards Used in Data Product Generation

3.2.1 PDS Standards

The archive structure given in this document complies with PDS standard version 3.6. Each PDS archived product is described using label objects that provide information about the data types of stored values.

In order to identify and describe the organization, content, and format of each data product, PDS requires a distinct data product label for each individual data product file. This data product label can be attached or detached from the data. The ASPERA-4 PDS data product label is detached from the data and resides in a separate file which contains a pointer to the data product file. There is one detached label file for every data product file and for each sensor (ELS, IMA, NPI, NPD). The label file should have the same base name as its associated data file, but the extension is .LBL.

Each PDS label must begin with the PDS_VERSION_ID data element. This element identifies the published version of the standards to which the label adheres. For labels adhering to the standards version 3.6 the appropriate value is PDS3:

PDS_VERSION_ID = PDS3

3.2.2 Time Standards

On board the S/C all telemetry, i.e. experiment science and housekeeping data, are time-tagged with an On-Board Time (OBT) obtained from the VEX on board running high frequency clock, to which sensor clocks are synchronized. This time-stamp is contained in the header of each telemetry source packet for referring to the data acquisition start time of each observation. Although ideally the spacecraft clock is a very convenient quantity for a time scale and easy for software to manipulate, it may be subject to discontinuous jumps or resets, and therefore it cannot be used where it is necessary to label data with a unique time, or where a uniformly increasing time is required. Experience with other missions has shown the necessary use of the Coordinated Universal Time (UTC) for labelling instrument telemetry records with a continuously increasing time scale, and, in addition, facilitating comparison of data from a particular spacecraft or groundbased facility with data from other sources (see [AD 8]).

Both OBT and UTC time scales are related with each other. The OBT is converted to the UTC by using time correlation/correction coefficients provided within the time correlation packets, for the time range they are valid. Those packets are automatically retrieved by IRF from the DDS, and regularly distributed via its server, together with the reconstituted experiment telemetry packets.

Finally two time standards are used in the ASPERA-4 data products:

- OBT: seconds and fractions of seconds since last switch-on of the spacecraft, on March 1st 2005 00:00:00.
- UTC: year, month, day, hour, minute, second, millisecond when the data were measured by the sensor on board the S/C.

These time values are provided in the data product labels, which provide a start and stop time for the measurement, and a corresponding clock count from the spacecraft. Below, the standards used to define these values are described, and the method by which the OBT is converted to UTC.



3.2.2.1 Date and Time Formats

The dates and times used within ASPERA-4 data files are the times when the data are sampled in UTC. The START_TIME and STOP_TIME values in the data product labels and catalog templates are also in UTC and in the same format as the dates and times within the data files:

yyyy-mm-ddThh:mm:ss.sss

where yyyy is the 4-digit year, mm is a 2-digit month, dd is the 2-digit day of the month, hh is the 2-digit hour of the day (00-23), mm is the 2-digit minute of the hour (00-59), and ss.sss indicates the seconds (including fraction) of the minute.

The PRODUCT_CREATION_TIME is also in UTC and indicates the date/time that the data files and labels are generated as taken from the local computer. The dates/times of the PRODUCT_CREATION_TIME have format:

yyyy-mm-ddThh:mm:ss

where yyyy is the 4-digit year, mm is a 2-digit month, dd is the 2-digit day of the month, hh is the 2-digit hour of the day, mm is a 2-digit minute of the hour, and ss indicates the seconds of the minute.

3.2.2.2 Spacecraft Clock Formats

The spacecraft clock count provides the only time information available to the instrument for a space-based observation during operation. It allows direct comparison of measurements on the same spacecraft with high accuracy, before additional errors are introduced by the OBT-to-UTC conversion.

The PDS keywords SPACECRAFT_CLOCK_START_COUNT and SPACECRAFT_CLOCK_STOP_COUNT represent the OBT counters of the spacecraft and instrument computers. These elements are required in labels for describing space-based data. The associated values are formatted as a string to preserve precision, as it is explained below.

The OBT counter is given in the headers of the experiment telemetry source packets. It contains the data acquisition start time as 32 bits of unit seconds followed by 16 bits of fractional seconds. The time resolution of the fractional part is $2^{-16} = 1.53 \times 10^{-5}$ seconds.

The OBT is represented as a decimal real number in floating point notation with 10 digits before the decimal point and 5 digits after the decimal point as the following format:

The unit seconds and the fractional seconds are separated by a full stop character. The fractional seconds are expressed as multiples of $2^{-16} = 1.53 \times 10^{-5}$ seconds and count from 0 to $2^{16} - 1 = 65535$. Thus the OBT is indicated with a maximum of 10 digits after the slash and 5 digits after the full stop character. E.g. in SPACECRAFT_CLOCK_START_COUNT = "1/21983325.392" the 392 fractional seconds correspond to $392 \times 2^{-16} = 0.00598$ decimal seconds.

An integer number followed by a slash represents a reset of the spacecraft clock (e.g., "1/" or "2/"). If any change occurs, it would imply a change of the OBT zero point.

3.2.2.3 OBT to UTC Time Conversion

UTC time is a function of the time correlation packets and the on-board time. The file named *time-corrLATEST* contains linear segments that map the OBT time to UTC time since the 1st March 2005, well before the beginning of the mission (03:33:00 UTC on 9th November 2005). The linear segments are represented by time correlation coefficients, mainly the time offset and the time gradient.



The time correlation packet as described in [AD 5] has the following structure:

Table 12. Time correlation packet structure.

	Time correlation Packet Data Field				
DDS Packet Header	Gradient	offset	standard deviation	generation time	
	64 bits	64 bits	64 bits	48 bits	
144 bits (18 bytes)		240 bits	(30 bytes)		

Within the time correlation packets, the DDS header contains the time at which the contained time correlation became valid. The time correlation packet is expected to be valid while no update file occurs in the meantime.

3.2.2.3.1 Time processing for HKxxxx, ELS, NPI, NPDx files

The conversion function is:

Time in UTC = Offset + OBT(seconds) × gradient

- where OBT is the on-board time in seconds,
 - Time in UTC is the computed UTC time containing the number of seconds past since 00:00:00 on January 1st 1970.

3.2.2.3.2 Time processing for IMA file

Particularly, the IMA time information is composed of an internal timer which scales down the accuracy to 31.25 msec. The on-board timer of IMA returns to 0 when it exceeds the value 0x7FFFF. This happens approximately every six days (see [AD 3] appendix 9).

```
The conversion function is:
```

```
Time in UTC = Offset + (IT(seconds) + nox(0x80000)) x gradient
```

- where IT is the on-board timer of IMA in seconds,
 - no the number of time the IMA on-board time is returned to 0 (timer swapping around about once per 6 days),
 - Time in UTC is the computed UTC time containing the number of seconds past since 00:00:00 on January 1st 1970.

<u>Note</u>: To determine no, it is recommended to increment the variable no inside a loop (starting from 0) until Time in UTC corresponds to the day that we are processing.

The on-board time is then derived as follows:

OBT(seconds) = IT(seconds) + nox(0x80000)

where no is the computed number of time for which the IMA on-board time is returned to 0.

3.2.3 Reference Systems

The ASPERA-4 data are always in the instrument reference frame since data are sampled *in situ*. The other reference systems used for ASPERA-4 data products are:

- Venus Express spacecraft coordinates system (see "ASPERA-4 sensors orientation" in section 2)
- EMEJ2000 (Earth Mean Equator and equinox at epoch J2000) The standard inertial reference frame is defined as follows: Earth centered, where the X axis points from the Earth towards the first point of



Aries (the position of the Sun at the vernal equinox). This direction is the intersection of the Earth's equatorial plane and the ecliptic plane --- thus the X axis lies in both planes. The Z axis is parallel to the rotation axis of the Earth and the Y axis completes a right-handed orthogonal coordinate system. As mentioned above, the X axis is the direction of the mean vernal equinox of J2000. The Z axis is also defined as being normal to the mean Earth equator of J2000.

VSO frame (Venus Solar Orbital) - A cartesian coordinate system centered on Venus. The components of this coordinate system are as follows: The X axis direction points from the center of Venus to the Sun, taken positive towards the Sun, the Z axis is parallel to the northward pole of the Venus orbital plane, the Y axis completes the right-handed set and points towards dusk. Locations of bodies (spacecraft) given in VSO coordinates are usually represented in units of Venus radii where Rv = 6052 km.

The GEOMETRY directory will contain the S/C orbital position and attitude relative to the EMEJ2000 and VSO reference frames, with data sampled according to the time cadence of the instrument observations. To derive the ASPERA-4 looking directions for each sensor and in both reference frames, the change of frame matrix as defined in section 2 is applied.

Other Applicable Standards 3.2.4

No other standards are used .

3.3 **Data Validation**

In summary, once the ASPERA-4 science and HK data product archives are generated by CESR, the PDS files will be first scientifically evaluated by the ASPERA-4 PI and Co-I team (e.g., by visual inspection with the readPDS IDL tool) to be then delivered to the Planetary Science Archive for archival purposes.

Prior to the data being ingested into the online PSA (http://www.rssd.esa.int/PSA), the CESR team fully test the data sets for compliancy using the PVV tool (PSA Validation and Verification Tool developed by ESTEC). This software checks the syntax of all keywords and labels within the data sets, and crosschecks values for keywords that should be identical. If the PVV tool successfully verifies a data set, then the data set is PDS compliant and will be ingested into the online PSA.

In addition, before the ASPERA-4 data are archived and released to the scientific community, the data sets and documentation undergo a thorough peer review. This is completed in several stages by independent external reviewers who validate the usefulness of the archive and provide constructive input to improve the data sets in the same way as a professional paper may be reviewed.

3.4 Content

This section describes the contents of the ASPERA-4 standard product archive collection volumes (datasets), including the file names, file contents, file types, and organizations responsible for providing the files. The complete directory structures are shown in Appendix C, D, E and F. All directories and ancillary files described herein appear on each ASPERA-4 archive volume (dataset), except where noted.

3.4.1 Volume Set

For Venus Express ASPERA-4 data set deliveries to PSA, a volume set is equivalent to a data set.

Despite the fact that there is no physical volume, a value must have been assigned for every applicable keywords within the VOLUME object, as required for PDS compliance (see [AD 3] § 2.2).

DATA_SET_ID	= see section 3.1.2
DESCRIPTION	= "This volume contains"



MEDIUM TYPE	=	"ONL	INE'	•		
PUBLICATION DATE	=	YYYY	-MM-	-DD		
VOLUME FORMAT	=	"ISC	-966	60"		
VOLUME_ID	=	see	[AD	3]	Table	14
VOLUME NAME	=	see	[AD	3]	Table	11
VOLUME_SERIES_NAME	=	"MIS	SION	N TO	O VENUS	3"
VOLUME_SERIES_NAME VOLUME SET NAME					O VENUS Table	
	=	see	[AD	3]		11
VOLUME_SET_NAME	=	see	[AD [AD	3] 3]	Table Table	11
VOLUME_SET_NAME VOLUME_SET_ID	= = =	see see	[AD [AD	3] 3]	Table Table	11

3.4.2 Data Set

The ASPERA-4 data will be archived in as many data sets as individual sensor contained within the ASPERA-4 experiment, level data processing in use and possible mission phases.

Each data set will contain the data products of one sensor (ELS, IMA, NPI, NPD) and of one data level (CODMAC Level 2) in the time interval of the given mission phase, accompanied by ancilliary data, software, and documentation, needed to understand and use the observations. Files in a data set share a unique data set name, a unique data set identifier, and are described by a single DATASET.CAT catalog object. The data set name and identifier, as previously defined in section 3.1.2., are built from the following parts:

Table 13.	Elements for the DATA	SET	ID and DATA	SET	NAME formation.
			-		-

Name element	Data Set ID	Data Set Name	
INSTRUMENT_HOST_ID / INSTRUMENT_HOST_NAME	VEX	VENUS EXPRESS	
target id / target name	V/SW	VENUS/SOLARWIND	
INSTRUMENT_ID	ASPERA		
Data processing level number	Level 2 contains level 2 SC (and level 3 HK)		
mission phase	EXTi ⁽¹⁾ (the nominal mission phase is displayed as a blank field)	EXTENSION i ⁽¹⁾	
description	ELS, IMA, NPD or NPI		
version	The first version of a data set is V1.0		

⁽¹⁾ where i assigns the occurrence number of the extended mission phase (starting from 1)

Different types of dataset will be delivered:

DATA SET ID = "VEX-V/SW-ASPERA-2-ELS-Vx.x" DATA SET ID = "VEX-V/SW-ASPERA-2-EXTI-ELS-Vx.x" DATA_SET_ID = "VEX-V/SW-ASPERA-2-IMA-Vx.x" DATA_SET_ID = "VEX-V/SW-ASPERA-2-EXTi-IMA-Vx.x" DATA_SET_ID = "VEX-V/SW-ASPERA-2-NPI-Vx.x" DATA_SET_ID = "VEX-V/SW-ASPERA-2-EXTi-NPI-Vx.x" DATA_SET_ID = "VEX-V/SW-ASPERA-2-NPD-Vx.x" DATA SET ID = "VEX-V/SW-ASPERA-2-EXTi-NPD-Vx.x"

⁽¹⁾ where i is the occurrence number of the extended mission phase (starting from 1)



3.4.3 Directories

Each ASPERA-4 archive volume/dataset (VEX-V/SW-ASPERA-2-ELS-V1.0, VEX-V/SW-ASPERA-2-EXTi-ELS-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-IMA-V1.0, VEX-V/SW-ASPERA-2-EXTI-IMA-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-NPI-V1.0, VEX-V/SW-ASPERA-2-EXTI-NPI-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-NPD-V1.0, VEX-V/SW-ASPERA-2-EXTi-NPD-V1.0⁽¹⁾) is a PDS compatible archive volume, containing the VOLDESC.CAT and AAREADME.TXT files and all necessary CATALOG, DOCUMENT, INDEX, DATA, etc.. directories and their content.

The corresponding VEX-V_SW-ASPERA-2-ELS-V1.0, VEX-V_SW-ASPERA-2-EXTi-ELS-V1.0⁽¹⁾, VEX-V_SW-ASPERA-2-IMA-V1.0, VEX-V_SW-ASPERA-2-EXTi-IMA-V1.0⁽¹⁾, VEX-V_SW-ASPERA-2-NPI-V1.0, VEX-V_SW-ASPERA-2-EXTi-NPI-V1.0⁽¹⁾, VEX-V_SW-ASPERA-2-NPD-V1.0, VEX-V_SW-ASPERA-2-EXTi-NPD- $V1.0^{(1)}$, directories are root directories following the organization scheme outlined in Figure 14.

⁽¹⁾ where i is the occurrence number of the extended mission phase (starting from 1)

3.4.3.1 Root Directory

The root directory contains the following standard PDS files:

File Name	File Contents
AAREADME.TXT	This file completely describes the volume contents and format information
ERRATA.TXT	A cumulative listing of all known errors, omissions, and areas of non- conformance with PDS standards in the current volume and in previous volumes of a set.
VOLDESC.CAT	A description of the contents of this volume in PDS format readable by both humans and computers

Table 14. Root directory contents.

The name of the root directory is the DATA_SET_ID.

3.4.3.2 Calibration Directory

The CALIBration directory contains the calibration tables (.TAB files) and associated labels (.LBL files) necessary to convert or process the raw data in counts (PSA Level 1b) to calibrated physical units (PSA Level 2). The CALINFO.TXT file describes the contents of the directory and how to use the calibration tables in the directory.

Table 15.	Calibration	directory co	ntents.
-----------	-------------	--------------	---------

File Name	File Contents
CALINFO.TXT	A description of the contents of the CALIB directory
<exp>_<data type>_CAL<_Type>.TAB</data </exp>	A calibration data table for data products beginning with <exp>_<data type> as described in section 3.1.4. If more than one table is needed, then a table type <_Type> is appended to the name. For example, if ELS data products need only one table, then the name is ELSX_CAL.TAB, but if separate tables are needed, then the name for geometry factors could be something like ELSX_CAL_GF.TAB</data </exp>
<exp>_<data< td=""><td>A PDS detached label that describes</td></data<></exp>	A PDS detached label that describes
type>_CAL<_Type>.LBL	<exp>_<data type="">_CAL<_Type>.TAB</data></exp>



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	:18 Mar 2011
Page	: 39

3.4.3.3 Catalog Directory

The CATALOG directory provides a top level understanding of the mission, spacecraft, instruments and data sets. The catalog directory contains the following standard PDS files:

Table 16.	Catalog	directory	contents.
	- alaiog	an 00.01 y	

File Name	Contents
CATINFO.TXT	A description of the contents of the catalog directory
DATASET.CAT	Data set information
INSTHOST.CAT	Instrument host (spacecraft) information
INST.CAT	Instrument information
MISSION.CAT	Mission information
PERSON.CAT	PDS personnel catalog information about the instrument team responsible for generating the data products. There will be one file for each instrument team providing data to this data set.
REF.CAT	Full citations for references mentioned in any and all of the catalog files, or in any associated label files.
RELEASE.CAT	For each data set, there is one release catalog file which defines, through release objects, a data products delivery to the PSA
TARGET.CAT	A listing of key physical properties of Venus, Solar Wind, some of which are the object of research based on data in this archival volume.

3.4.3.4 Index Directory


Files in the INDEX directory are dedicated to help the user to locate and identify data products of interest on an archive volume/dataset. As the typical index file is used to describe only the data contained within the data products, PSA requires to create an index file for providing geometry and position information about the data as well. Thereby, within the PSA, the geometry index files will enable the ingestion of additional searching parameters into the database. For a detailed description of this file and of its associated label file, please refer to [AD 9].

The index files are generated using the PSA PVV tool and the geometry files are generated using appropriate software linked with the PSA geolib library. Both files are included in the INDEX directory:

File Name	Contents
INDXINFO.TXT	A description of the contents of the index directory
INDEX.LBL	PDS detached label for the volume index file, INDEX.TAB
INDEX.TAB	A table listing all data products on this volume
GEO_VENUS.LBL	PDS detached label describing corresponding *.TAB file
GEO_VENUS.TAB	Geometry index file providing geometry and position information about all data product listed in INDEX.TAB.

 Table 17. Index directory contents.

 Each index table contains a number of columns describing a data product on a dataset release. The table is formatted so that it can be read directly into many data management systems. All fields are separated by commas and character fields are enclosed in double quotation marks ("). Character fields are left justified and numeric fields are right justified. Each record (row) ends with ASCII carriage return <CR><LF> (ASCII 13 and 10). All fields in the tables are fixed width. This allows the table to be treated as a fixed length record file.



3.4.3.4.1 Dataset Index File, index.lbl and index.tab

The INDEX directory contains the required PDS index files which are generated by PVV. In the data index table (INDEX.TAB) a set of parameters are referenced such as the file specification name, the product ID, the time at which the data file was created, an identifier unique for the dataset, the release ID, the revision ID, and others.

3.4.3.4.2 Geometric Index File, geoindex.lbl and geoindex.tab

The INDEX directory also contains the geometry index file as defined in [AD 9]. Within the geometry index table (GEOMETRY_INDEX.TAB) each data product is described by a set of parameters providing geometry and position information about the data. These information parameters are related to the sun in terms of longitude and latitude, to the state of the S/C with respect of the target body and the sun, in terms of position and velocity, and to the instruments viewing. Non-geometrical parameters are also required and included in the geometry index table.

3.4.3.4.3 Other Index Files

No additional index files are used.

3.4.3.5 Browse Directory and Browse Files

ASPERA-4 data sets do not have browse products.

3.4.3.6 Geometry Directory

Some basic cruise (orbit/attitude) information is tabulated for the user and included in ASCII files within the GEOMETRY directory. These files are needed to understand observation geometry. The parameters included in the orbit files are: the UTC time, the S/C position vector and the 9 attitude parameters expressed in both EMEJ2000 and VSO coordinates system. With respect to the EMEJ2000 reference frame, the orbital data are provided during cruise as heliocentric states, in the operational orbit as Venus centric states. In addition to the geometry data and associated label files there is an include file (ORB.FMT) referenced by a pointer within each geometry label file that describes the common columns of all PDS table objects. The following files are contained in the GEOMETRY directory.

File Name	Contents
GEOMINFO.TXT	A description of the contents of this directory
ORB_ <begin of<br="">observation>_<length of<br="">observation>.TAB</length></begin>	ASCII table with orbit summary data recorded at high rate, defined as 192s and 60s sampling for ELS / IMA and NPI / NPD respectively. Each ASCII file covers a time period corresponding to the associated data product time interval. Field names are described in section 3.1.4.
ORB_ <begin of<br="">observation>_<length of<br="">observation>.LBL</length></begin>	A PDS detached label that describes ORB_ <begin observation="" of="">_<length observation="" of="">.TAB</length></begin>
ORB.FMT	Spacecraft orbit/attitude information

3.4.3.7 Software Directory

There will be no SOFTWARE directory.



3.4.3.8 **Gazetter Directory**

There is no GAZETTER directory for ASPERA-4 dataset deliveries.

3.4.3.9 Label Directory

The LABEL directory contains include files (.FMT files with label definitions) referenced by a pointer within each PDS label file in the corresponding dataset directory of the label file. This prevents the needless repetition of information that is not changing within the PDS label files.

The following files are included in the corresponding instrumental label directory where it is applicable :

Table 19. Label directory contents.

File Name	Contents
LABINFO.TXT	A description of the contents of this directory (.FMT files)
ELS_SPECTRUM_HEAD.FMT	Edited (raw) header science data for ELS
ELS_SPECTRUM_HEAD_ENG.FMT	Edited (raw) header engineering data for ELS
ELS_SPECTRUM_HKELS.FMT	Calibrated HK data for ELS
IMA_SPECTRUM_HEAD.FMT	Edited (raw) header data for IMA
IMA_SPECTRUM_HKMU.FMT	Calibrated HK data for IMA/MU
IMA_SPECTRUM_HKIMA.FMT	Calibrated HK data for IMA/IMA DPU
NPD_RAWHEAD.FMT	Edited (raw) header data for NPD1 and NPD2 in RAW mode
NPD_BINHEAD.FMT	Edited (raw) header data for NPD1 and NPD2 in BIN mode
NPD_TOFHEAD.FMT	Edited (raw) header data for NPD1 and NPD2 in TOF mode
NPD1_HKNPD1.FMT	Calibrated HK data for NPD1
NPD2_HKNPD2.FMT	Calibrated HK data for NPD2
NPI_NRMHEAD.FMT	Edited (raw) header data for NPI in NORMAL mode
NPI_STPHEAD.FMT	Edited (raw) header data for NPI in STEP mode
NPI_HKNPI.FMT	Calibrated HK data for NPI

3.4.3.10 **Document Directory**

This directory contains documentation to help the user to understand and use the archive data. The following files are contained in the document directory:

Table 20. Document directory contents.

File Name	Contents
DOCINFO.TXT	A description of the contents of this directory
ASPERA4_DESC.TXT	This file describes the ASPERA-4 instruments flying onboard the VEX S/C
ASPERA4_DESC.LBL	PDS label for file ASPERA4_DESC.TXT
VE-ASP-TN-060402.PDF	ASPERA-4 Instrument Manual [AD 3]
VE-ASP-TN-060402.LBL	PDS label for file VE-ASP-TN-060402.PDF
BARABASHP3.PDF	ASPERA-4 scientific objectives and instrument description
BARABASHP3.LBL	PDS label for file BARABASHP3.PDF
ASPERA4-L1-061016.PDF	ASPERA-4 N1 data file description [AD 5]
ASPERA4-L1-061016.LBL	PDS label for file ASPERA4-L1-061016.PDF
VEX_ASP_CESR_EAICD_V1_4.PDF	This document
VEX_ASP_CESR_EAICD_V1_4.LBL	PDS label for file VEX_ASP_CESR_EAICD_V1_4.PDF
VEX_SCIENCE_CASE_ID_DESC.TXT	VEX science case definition document [AD 10]
VEX_SCIENCE_CASE_ID_DESC.LBL	PDS label for file VEX_SCIENCE_CASE_ID_DESC.TXT
OBSERVATION_TYPE_DESC.TXT	The document defines the values of the OBSERVATION_TYPE keyword, as refered in [AD 11]
OBSERVATION_TYPE_DESC.LBL	PDS label for file OBSERVATION_TYPE_DESC.TXT
VEX_ORIENTATION_DESC.TXT	This file describes the convention used to describe the spacecraft orentation



VEX_ORIENTATION_DESC.LBL	PDS label for file VEX_ORIENTATION_DESC.TXT
VEX_POINTING_MODE_DESC.TXT	Spacecraft pointing mode definitions, as refered in [AD 4]
VEX_POINTING_MODE_DESC.LBL	PDS label for file VEX_POINTING_MODE_DESC.TXT
VEX_RSSD_LI_009.TAB	VEX mission subphases index table
VEX_RSSD_LI_009.LBL	PDS label for file VEX_RSSD_LI_009.TAB
VEX-SCIOPS-TN-050.LBL	The document provides information about the mission, its phases and some
	of the environmental conditions
VEX-SCIOPS-TN-050.PDF	PDS label for file VEX-SCIOPS-TN-050.PDF

The ASPERA-4 EAICD document will be provided in PDF (Adobe Portable Document Format). All helpful technical ASPERA-4 documentation provided by the ASPERA-4 team will be provided in the DOCUMENT directory in PDF format.

Note: The latest NPD calibrations reports are archived in the DOCUMENT directory of the NPD dataset. The document is named GRIGORIEV NPD REPORT.PDF and is accompanied by its associated label file GRIGORIEV_NPD_REPORT.LBL. The calibration reports concerning the ELS sensor are archived in the DOCUMENT directory of the ELS dataset. The document is ELS DATA ANALYSIS SUMMARY.PDF and its associated label file ELS DATA ANALYSIS SUMMARY.LBL.

3.4.3.11 Extras Directory

There is no EXTRAS directory.

3.4.3.12 Data Directory

The DATA directory contains a separate subdirectory for each release in which the VEX ASPERA-4 data products are stored. Within each subdirectory, the data products are organized as ASCII tables, a description of which is given in the corresponding PDS detached label.

Table 21.	Data	director	y contents.
		an 00.01	,

File Name	Contents
<pre><exp>_<data type="">_<begin observation="" of="">_<index occurrence="" of=""><number occurrences="" of="">.TAB</number></index></begin></data></exp></pre>	Science or HK data file with <exp>, <data type="">, <begin observation="" of="">, <index occurrence="" of=""> and <number occurrences="" of=""> fields as described in section 3.1.4</number></index></begin></data></exp>
<pre><exp>_<data type="">_<begin observation="" of="">_<index occurrence="" of=""><number occurrences="" of="">.LBL</number></index></begin></data></exp></pre>	PDS label for data files of same base name

The naming scheme of the data subdirectory is described in chapter 3.1.3. Details of the products to be provided in the DATA directory and their structure and labelling can be found in Section 4.3 and its subsections.



Document No.: VEXDate: 18Page: 43

4 Detailed Interface Specifications

This section describes in detail the contents of the ASPERA-4 data sets, describing the structure of the data sets themselves and the design of the individual data products provided. Appendix A contains information about the PDS software to read and validate the data products. The following Appendices provide examples of PDS labels and the complete directory structure of an example data set.

4.1 Structure and Organization Overview

The ASPERA-4 data sets are structured as illustrated in Section 3.4.3. The ASPERA-4 ELS, IMA, NPI and NPD raw data will be archived in separate data sets and organized for each dataset into DATA subdirectories, separating observations into releases. Within a subdirectory, pattern matching is used to filter and group data of a certain structure into one data product. The filtering depends essentially on what mode flags are set in the description data fields and the in-flight sampling processes that are in use while measuring particles. Data are also filtered and grouped together for those that are contained in the same time interval. The time sequence that is used for grouping data coincides mostly with a daily-like time division. Besides the time and mode criterions, data product files may be additionally divided when their size is exceeding the upper limit of 500Mb beyond what most workstation resources need and, as a result, must incorporate relatively expensive technologies for processing such files. Those files are split into pieces of suitable size (below the restricted size) regardless of how or where they are fragmented.

All ASPERA-4 data products are stored in .TAB files and distributed along with their associated detached PDS label .LBL files, which have the same names. Each .TAB file contains uncalibrated science, CODMAC Level 2, that are acquired directly from the ASPERA-4 experiment with no modification or validation and archived in the DATA directory of the corresponding dataset. Calibrated HK data, CODMAC Level 3, are also stored into .TAB files and included within DATA directories. During the nominal mission, several products will be provided for every observational time sequence: several files will be present for each sensor, among which 2 files related to the HK (4 for IMA) and others related to the science raw data, as described below. Following data product files are named according to the scheme described in Section 3.1.4.

ELS_ENGXXXX_yymmddhhmmss_wz.TAB ELS_ENGXXXX_yymmddhhmmss_wz.LBL ELS_EeeeAaa_yymmddhhmmss_wz.TAB ELS_EeeeAaa_yymmddhhmmss_wz.LBL ELS_HK3MUXX_yymmddhhmmss_wz.TAB ELS_HK3MUXX_yymmddhhmmss_wz.LBL

where eee is a 3-digits number of energy bins with 3 possible values, 032, 064 and 128, and aa the number of angular sectors which could take any value between 01 and 16.

IMA_MnnSssX_yymmddhhmmss_wz.TAB IMA_MnnSssX_yymmddhhmmss_wz.LBL IMA_MnnXXXX_yymmddhhmmss_wz.TAB IMA_MnnXXXX_yymmddhhmmss_wz.LBL IMA_HK3IMAX_yymmddhhmmss_wz.LBL IMA_HK3IMAX_yymmddhhmmss_wz.TAB IMA_HK3MUXX_yymmddhhmmss_wz.LBL

where nn designates the mode index, and ss the number of sets in records from 01 to 15.



: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 44

NPI_NORMALX_yymmddhhmmss_wz.TAB NPI_NORMALX_yymmddhhmmss_wz.LBL NPI_STEPXXX_yymmddhhmmss_wz.TAB NPI_STEPXXX_yymmddhhmmss_wz.LBL NPI_HK3MUXX_yymmddhhmmss_wz.LBL NP1_RAWXXXX_yymmddhhmmss_wz.LBL NP1_RAWXXXX_yymmddhhmmss_wz.LBL NP1_BINmmDd_yymmddhhmmss_wz.LBL NP1_BINmmDd_yymmddhhmmss_wz.LBL NP1_TOFXXXX_yymmddhhmmss_wz.LBL NP1_TOFXXXX_yymmddhhmmss_wz.LBL NP1_TOFXXXX_yymmddhhmmss_wz.LBL NP1_HK3MUXX_yymmddhhmmss_wz.TAB NP1_HK3MUXX_yymmddhhmmss_wz.TAB

NP2_RAWXXXX_yymmddhhmmss_wz.TAB NP2_RAWXXXX_yymmddhhmmss_wz.LBL NP2_BINmmDd_yymmddhhmmss_wz.TAB NP2_BINmmDd_yymmddhhmmss_wz.LBL NP2_TOFXXXX_yymmddhhmmss_wz.LBL NP2_TOFXXXX_yymmddhhmmss_wz.LBL NP2_HK3MUXX_yymmddhhmmss_wz.LBL

where mm could take any of these 3 possible values, 01, 02 or 16, for indicating the size of the selected PH*TOF matrix, 1×16 , 2×16 and 16×16 respectively, and d represents the number of stop detector (0, 1 or 2) referring to the direction of arrival neutral particles.

The following sections give the structure and contents of the DATA directories for each ASPERA-4 instrument.

4.1.1 ELS Data Directory Structure


The following is the organization and content of the DATA directory for a ELS data set. The first three releases of the nominal mission phase are represented on this organization scheme.

	 20051109_20060831 	· _	ELS Data Release 1
 - - data 	 20060901_20061130 	ELS_ENG*.TAB ELS_ENG*.LBL ELS_E*A*.TAB ELS_E*A*.LBL ELS_HK3*.TAB ELS_HK3*.LBL	
	 20061201_20070228 	ELS_ENG*.TAB ELS_ENG*.LBL ELS_E*A*.TAB ELS_E*A*.LBL ELS_HK3*.TAB ELS_HK3*.LBL	ELS Data Release 3



4.1.2 IMA Data Directory Structure

The following is the organization and content of the DATA directory for a IMA data set. The first three releases of the nominal mission phase are represented on this organization scheme.

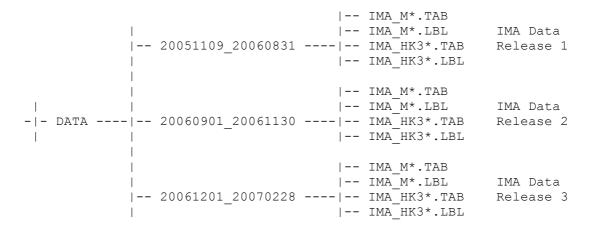

4.1.3 NPI Data Directory Structure

The following is the organization and content of the DATA directory for a NPI data set. The first three releases of the nominal mission phase are represented on this organization scheme.

	 20051109_20060831 	NPI_NOR*.TAB NPI_NOR*.LBL NPI_STE*.TAB NPI_STE*.LBL NPI_HK3*.TAB NPI_HK3*.LBL	NPI Data Release 1
 - - DATA 	- 20060901_20061130	NPI_NOR*.TAB NPI_NOR*.LBL NPI_STE*.TAB NPI_STE*.LBL NPI_HK3*.TAB NPI_HK3*.LBL	NPI Data Release 2
	 20061201_20070228	NPI_NOR*.TAB NPI_NOR*.LBL NPI_STE*.TAB NPI_STE*.LBL NPI_HK3*.TAB NPI_HK3*.LBL	NPI Data Release 3



ASPERA 4 EAICD

4.1.4 NPD Data Directory Structure

The following is the organization and content of the DATA directory for a NPD data set. The first three releases of the nominal mission phase are represented on this organization scheme.

	 20051109_20060831 	NP1_RAW*.TAB NP1_RAW*.LBL NP1_BIN*.LBL NP1_BIN*.LBL NP1_TOF*.LBL NP1_TOF*.LBL NP1_HK3*.TAB NP1_HK3*.LBL NP2_RAW*.LBL NP2_RAW*.LBL NP2_BIN*.TAB NP2_BIN*.LBL NP2_TOF*.LBL NP2_TOF*.LBL NP2_HK3*.TAB NP2_HK3*.LBL	
- DATA	 20060901_20061130 	NP1_RAW*.TAB NP1_RAW*.LBL NP1_BIN*.TAB NP1_BIN*.LBL NP1_TOF*.TAB NP1_TOF*.LBL NP1_TOF*.LBL NP1_HK3*.TAB NP2_RAW*.TAB NP2_RAW*.LBL NP2_BIN*.TAB NP2_BIN*.LBL NP2_TOF*.TAB NP2_TOF*.LBL NP2_HK3*.TAB NP2_HK3*.LBL	
	 20061201_20070228	<pre> NP1_RAW*.TAB NP1_RAW*.LBL NP1_BIN*.TAB NP1_BIN*.LBL NP1_TOF*.LBL NP1_TOF*.LBL NP1_HK3*.TAB NP1_HK3*.LBL NP2_RAW*.LBL NP2_BIN*.TAB NP2_BIN*.TAB NP2_BIN*.LBL NP2_TOF*.TAB NP2_TOF*.LBL NP2_HK3*.TAB NP2_HK3*.LBL</pre>	NPD Data Release 3



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 47

4.2 Data Sets, Definition and Content

ASPERA-4 data sets will be generated and delivered to the PSA as scheduled in Table10. The data sets will follow the identifier conventions outlined in Section 3.1.2, whereby the elements for the DATA_SET_ID formation are given in Table 13.

This gives several datasets ID of the form: VEX-V/SW-ASPERA-2-ELS-V1.0, VEX-V/SW-ASPERA-2-EXTi-ELS-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-IMA-V1.0, VEX-V/SW-ASPERA-2-EXTi-IMA-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-IMA-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-IMA-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-NPD-V1.0, VEX-V/SW-ASPERA-2-EXTi-NPD-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-EXTi-NPD-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-EXTi-NPD-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-EXTi-NPD-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-IMA-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-IMA-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-IMA-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-NPD-V1.0⁽¹⁾, VEX-V/SW-ASPERA-2-IMA-V1.0⁽¹⁾, VEX-V/

⁽¹⁾ where i is the occurrence number of the extended mission phase (starting from 1)

The following delivery schedule is planned for the ASPERA-4 dataset releases to the PSA:

Table 22. Delivery of ASPERA-4 Datasets.

Data Set ID	Data Type	Data Release Delivery Schedule	
VEX-V/SW-ASPERA-2-ELS-V1.0 VEX-V/SW-ASPERA-2-EXTi-ELS-V1.0 ⁽¹⁾	PSA Level 1b - CODMAC Level 2 Raw counts (cnts/accum)	Several dataset releases are to be delivered every three months starting September 2008. The first delivery is a	
VEX-V/SW-ASPERA-2-IMA-V1.0 VEX-V/SW-ASPERA-2-EXTI-IMA-V1.0 ⁽¹⁾	PSA Level 1b - CODMAC Level 2 Raw counts (cnts/accum)	contain three months of data each and the last one contains the remaining data till the end of the VEX operational mission. Dataset releases delivery has to observe a minimum time lag of two months after the last data recorded within the data archive for ensuring	
VEX-V/SW-ASPERA-2-NPI-V1.0 VEX-V/SW-ASPERA-2-EXTi-NPI-V1.0 ⁽¹⁾	PSA Level 1b - CODMAC Level 2 Raw counts (cnts/accum)		
VEX-V/SW-ASPERA-2-NPD-V1.0 VEX-V/SW-ASPERA-2-EXTi-NPD-V1.0 ⁽¹⁾	PSA Level 1b - CODMAC Level 2 Raw counts (cnts/accum)		

⁽¹⁾ where i is the occurrence number of the extended mission phase (starting from 1)

4.3 Data Product Design

The following types of data products are defined for ASPERA-4:

- Electron data products (ELS): edited data (CODMAC level 2).
- Ion data products (IMA): edited data (CODMAC level 2).
- Neutral particle data products (NPI): edited data (CODMAC level 2).
- Mass/energy resolved neutral particle data products (NPD): edited data (CODMAC level 2).
- Housekeeping data related to each individual sensor.

Each ASPERA-4 data product file are designed to contain one or several records with a same data pattern in order to maintain the use of fixed width-table structure which is the most effective way for manipulating and reading data using standard software. This is also more suitable for long term archiving. To meet this requirement, incoming data of a scientific observation sensor are split into separate data product files according to operational mode or sub-mode of equal number of sampling steps, keeping same data pattern in a file.

One record of an edited data product file consists of a one-row science data values preceded by the associated header set of information that are acquired during one sequence of measurement (also named full cycle or spectra). The header refers typically to observational parameters about operation mode, date of observation, accumulation time, etc. that are identified in the time interval of one spectra. Science data are a structured collection of particle count values resulting from an entire scan cycle of measurement. Within the same edited data product file, each of the subsequent records contains both header and science data referring to measurements accomplished in the time ahead. Each of these records spans same number of

Atos GFI Origin	ASPERA 4 EAICD	Document No. Date Page	: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 48
--------------------	----------------	------------------------------	--

columns with the same widths. As a whole, the file is therefore physically structured as a header table followed by a data table with single or multiple rows equal to the number of records. The length of a line is determined by the size of the column headings and the number of channels along axes of resolved parameters such as mass, energy, polar angle or azimuth angle, which are described in the selected sensor mode. The figure below depicts the components used in an edited data product file.

Since the ASPERA-4 data products have known fixed-length records, the PDS TABLE is the chosen format for archival of these data. It is a common format consisting of space separated values in which string fields are enclosed in double quotes. Both housekeeping and edited data product files are using embedded data TABLE objects with ASCII data values stored in columns. A single data TABLE object is in use for containing data housekeeping in a file. Whereas for dealing with parallel header and science data TABLE objects, edited data product files are including the use of the ROW_PREFIX_BYTES and ROW_SUFFIX_BYTES keywords, each of which indicating the header and data table sizes respectively The format and content of each data objects referenced, as shown in the Figure 14.

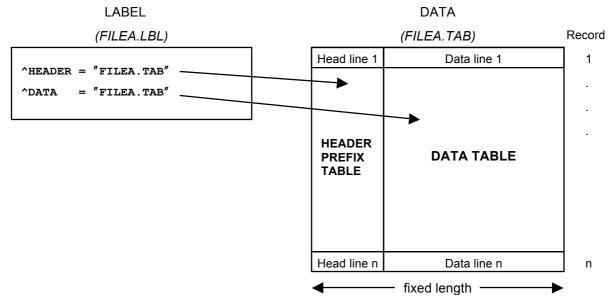


Figure 14. Example file of data object pointer usage for edited data product file with detached label.

4.3.1 Electron Spectrometer Science Edited Data Product Design (Level 2)

The ELS sensor can be operated in 4 modes as described in the document [AD 3], producing 4 different types of formatted block data in telemetry packets, one for each selected operation mode. One of those modes of operation is related to the acquisition of instrumental engineering information. The others deal with the storage of electron counts that are measured in different azimuth directions from the 16 possible sectors, and for any energy sweep pattern as stepped and specified by the instrument operation mode in use. Considering above, 2 types of ELS edited science file may essentially exist: 1) one data product is designed for containing engineering data, 2) while electron counts are split and stored into appropriate electron counting data files according to their number of energy bins and angular sectors. The Table 23 indicates the data contents for each science data file and their PDS representation object. Apart from the engineering mode, the ELS science data are always delivered as a fixed-size azimuth×energy array, stored in a linear row-major order where azimuth (the first) is the fastest varying parameter.

An ELS header, for both engineering and electron counting modes, is added before each data modedependent collection as represented in the Figure 14. It gives the mask of active azimuthal sectors, the software version, the OBT and UTC time at the start of the data matrix, the ELS compression scheme, the scanner direction, speed and position. Specific heading information are added to the ELS header in engineering data files. The ELS headers information and values are shown in the Table 24.



Table 23. ELS science data file contents and structure.

Data type	Mode	Data description	PDS data object
ENGXXXX	Engineering information	First ELS packet within one scan cycle. Contains engineering information needed for analysis of ELS data. No science data included.	Linear storage in a TABLE object of 256 blank-separated data values giving information about the deflection potential sweep pattern
EeeeAaa with eee=032, 064 or 128, and	Complete sweep	Data (in counts/accumulation) obtained from one complete energy sweep and for all unblocked (active) azimuthal sectors.	Linear storage in a TABLE object containing electron counts for a maximum of 128 energy levels and for each unblocked (active) azimuthal sector of detection.
aa a 2-digits value from 01 to 16	Steps number 0-63	Data (in counts/accumulation) obtained from first 64 energy steps in one sweep and for all unblocked (active) azimuthal sectors.	Linear storage in a reconstructed TABLE object containing electron counts for 128
	Steps number 64-127	Data (in counts/accumulation) obtained from latter 64 energy steps in one sweep and for all unblocked (active) azimuthal sectors.	energy level and for each unblocked (active) azimuthal sector of detection.

Table 24. ELS headers content.

Rank	Field / Value		Rank	Fiel	d / Value
	ELS mode electron c	ounting data header			
1	UTC correlated Time at th matrix	e start of the data	7	Log compression	
2	OBT Time at the start of the	ne data matrix	8	Rice compression flag	g status 0 = non valid 1 = vadid
3	SW version		9	Rice compression as	signed value
4	ELS sector mask		10	Scanner direction	0 = 0 - 180 1 = 180 - 0
5	Time compression	1, 2, 4, 8, 16 sweeps or –1 for undefined	11	Scanner speed	0 (standing), 32s scan, 64s scan, or 128s scan
6	Energy compression	1, 2, 4, steps or –1 for undefined	12	Scanner Position	On start of scan (or step) period
	ELS mode engineerir	ng data header			
1	UTC correlated Time at the start of the data matrix		10	Scanner direction	0 = 0 - 180 1 = 180 - 0
2	OBT Time at the start of the data matrix		11	Scanner speed	0 (standing), 32s scan, 64s scan, or 128s scan
3	SW version		12	Scanner Position	On start of scan (or step) period
4	ELS sector mask		13	ELS status	
5	Time compression	1, 2, 4, 8, 16 sweeps or –1 for undefined	14	ELS temperature	
6	Energy compression 1, 2, 4, steps or -1 for undefined		15	ELS MCP reference	
7	Log compression		16	ELS MCP monitor	
8	Rice compression flag status 0 = non valid 1 = vadid		17	ELS screen grid refer	ence
9	Rice compression assigned value		18	ELS screen grid moni	tor

The table objects are detailed in the following paragraphs.



4.3.1.1 File Characteristics Data Elements

The following elements are present in the labels for every ELS science edited data product, and they describe the basic characteristics of the data product in terms of structure and naming:

/* FILE CHARACTERISTIC DATA	ELEMENTS */
PRODUCT ID	= this element defines the current product file name,
_	without extension
RECORD_TYPE	= FIXED_LENGTH
RECORD BYTES	= this element indicates the number of bytes in a data
_	record, including record terminators and separators
FILE_RECORDS	= this element indicates the number of records within
—	the data file

4.3.1.2 Data Object Pointers Identification Data Elements

Pointer statements with the following format are used to indicate the location of data objects in the data product file:

^object = location

where the carat character (^, also called a pointer) is followed by the name of the specific data object. The location is the 1-based starting byte location for the data object within the file. For ELS, 4 pointers are present, identifying the ASCII tables within which the ELS status and engineering and science (electron counting) data are stored. The data object pointers that reference TAB files are:

```
^HEAD_ENG_TABLE
^ENG_TABLE
^HEAD_TABLE
^DATA_SCIENCE_TABLE
```

4.3.1.3 Instrument and Detector Descriptive Data Elements

The following data identification elements provide additional information about the ELS data products for both engineering and electron counting data modes.

```
/* PRODUCER IDENTIFICATION */
PRODUCER_ID
                               = "CESR ASPERA4 GROUP"
PRODUCT_CREATION_TIME = "CENTRE D'ETUDE :

PRODUCT_CREATION_TIME = VVVVV -
                               = "CENTRE D'ETUDE SPATIALE DES RAYONNEMENTS"
                               = YYYY-MM-DDThh:mm:ss[.ff]
/* DATA DESCRIPTION AND IDENTIFICATION */
DATA SET NAME
                                = "
                    VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 ELS V1.0"
                                                                        or
       "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 ELS V1.0"
                                                                        or
       "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 ELS V1.0" or
DATA SET_ID
                                = "VEX-V/SW-ASPERA-2-ELS-V1.0"
                                                                        or
                                  "VEX-V/SW-ASPERA-2-EXT1-ELS-V1.0"
                                                                        or
                                  "VEX-V/SW-ASPERA-2-EXT2-ELS-V1.0"
                                                                        or
RELEASE ID
                                = 0001
REVISION ID
                               = 0000
PRODUCT TYPE
                               = EDR
PROCESSING LEVEL ID
                               = 2
                               = "VENUS EXPRESS"
MISSION NAME
MISSION ID
                               = VEX
                               = "VENUS EXPRESS"
INSTRUMENT HOST NAME
INSTRUMENT HOST ID
                               = VEX
MISSION PHASE NAME
                               = As defined in [AD 4]
```



INSTRUMENT NAME = " ANALYZER OF SPACE PLASMA AND ENERGETIC ATOMS (4TH VERSION)" INSTRUMENT_ID = ASPERA4 INSTRUMENT_TYPE = {"ELECT" = {"ELECTROSTATIC ANALYZER", "MASS SPECTROMETER", "NEUTRAL PARTICLE IMAGER", "NEUTRAL PARTICLE DETECTOR" } DETECTOR ID = VEX ASP4 ELS ^INSTRUMENT DESC = "ASPERA4 DESC.TXT" /* TARGET IDENTIFICATION */ = "PLANET" or "N/A"
= "VENUS" or "SOLAR WIND" TARGET TYPE TARGET NAME = "N/A" RIGHT ASCENSION DECLINATION = "N/A" /* SCIENCE OPERATIONS INFORMATION */ OBSERVATION_TYPE = {"AC003B", "PE001A", "PE004A"} or "N/A" ^OBSERVATION_TYPE_DESC = "OBSERVATION_TYPE_DESC.TXT" /* TIME RELATED INFORMATION */ = YYYY-MM-DDThh:mm:ss.fff START TIME STOP TIME = YYYY-MM-DDThh:mm:ss.fff SPACECRAFT_CLOCK_STOP_COUNT = "01/xxxxxxxxx.xxxxx" /* ORBITAL INFORMATION */ ORBIT NUMBER = UNK ORBITAL_ECCENTRICITY = UNK ORBITAL_INCLINATION = UNK ORBITAL_INCLINATION ORBITAL_SEMIMAJOR_AXIS = UNK PERIAPSIS ALTITUDE = UNK PERIAPSIS ARGUMENT ANGLE = UNK PERIAPSIS_TIME = "UNK" SPACECRAFT_ORIENTATION = UNK ^SPACECRAFT_ORIENTATION_DESC = "VEX_ORIENTATION_DESC.TXT"
SPACECRAFT_POINTING_MODE = "ALL" ^SPACECRAFT POINTING MODE DESC = "VEX POINTING MODE DESC.TXT"

4.3.1.4 Structure Definition of Instrument Parameter Objects

N/A

4.3.1.5 Data Object Definition

This section of the label defines the structure and content of the ELS science edited data products. As specified in §4.3, each data file (TAB) contains typically 2 objects: a header TABLE and a science data TABLE object stored in parallel. The number of rows within the tables is variable and depends roughly on the number of records contained in the processed level-1 data file. The data objects are ASCII tables for handling the engineering data and science data. There is also a specific ASCII table data object containing the header information for engineering and science data blocks. The columns within the TABLE object corresponding to the heading tags are first described in the section below. The science data objects are defined in the following separate sections.

4.3.1.5.1 The description of the ELS science data header table:

It is common to all ELS science (electron counting) edited data products.

OBJECT	=	HEAD	TABLE	
NAME	=	"ELS	SPECTRUM_HEAD"	



ROW SUFFIX BYTES = Number of bytes that are accounted in the subsequent table, including record terminators and separators INTERCHANGE_FORMAT = ASCII = Number of rows within the data file ROWS COLUMNS = 12 ROW BYTES = 94 ^STRUCTURE = "ELS SPECTRUM HEAD.FMT" END OBJECT = HEAD TABLE The structure of the TABLE object is described in the file ELS_SPECTRUM_HEAD.FMT as follows: /* Contents of format file "ELS SPECTRUM HEAD.FMT" */ = COLUMN OBJECT = 1 COLUMN NUMBER = "UTC" NAME DATA TYPE = TIME START BYTE = 1 BYTES = 23 = "N/A" UNIT DESCRIPTION = "This column represents the UTC at the start of the data matrix in PDS standard format YYYY-MM-DDThh:mm:ss.sss" END OBJECT = COLUMN OBJECT = COLUMN COLUMN NUMBER = 2 = "OBT" NAME DATA TYPE = CHARACTER START BYTE = 26 BYTES = 19 UNIT = "N/A" = "On board Time (OBT) is represented as : DESCRIPTION <Reset number>/<unit seconds>.<fractional seconds> with <Reset number>: integer starting at 1 Reset number 1 starts at 2005-03-01T00:00:00 UTC <unit seconds>: 10 digits number of unit seconds <fractional seconds>: 5 digits number of fractional seconds expressed as multiples of 2^-16 seconds" END OBJECT = COLUMN = COLUMN OBJECT COLUMN NUMBER = 3 = "SW VERSION" NAME DATA TYPE = ASCII INTEGER START_BYTE = 47 = 5 BYTES UNIT = "N/A" = "I5" FORMAT DESCRIPTION = "Software version" END OBJECT = COLUMN OBJECT = COLUMN COLUMN NUMBER = 4 = "SECTOR MASK" NAME DATA TYPE = CHARACTER START BYTE = 54 BYTES = 16 = "N/A" UNIT = "ELS Sector mask defines the active sectors that are DESCRIPTION set for the measurement. The Binary format is used. One bit (or character) represents the status of one



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 53

END_OBJECT	<pre>ELS sector and may take one of the following values bit 0 (sector 0): 1 (enable), 0 (disable) bit 1 (sector 1): 1 (enable), 0 (disable) bit 2 (sector 2): 1 (enable), 0 (disable) bit 3 (sector 3): 1 (enable), 0 (disable) bit 4 (sector 4): 1 (enable), 0 (disable) bit 5 (sector 5): 1 (enable), 0 (disable) bit 6 (sector 6): 1 (enable), 0 (disable) bit 7 (sector 7): 1 (enable), 0 (disable) bit 8 (sector 8): 1 (enable), 0 (disable) bit 9 (sector 9): 1 (enable), 0 (disable) bit 10 (sector 10): 1 (enable), 0 (disable) bit 11 (sector 11): 1 (enable), 0 (disable) bit 12 (sector 12): 1 (enable), 0 (disable) bit 13 (sector 13): 1 (enable), 0 (disable) bit 14 (sector 14): 1 (enable), 0 (disable) bit 15 (sector 15): 1 (enable), 0 (disable)</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 5 = "TIME_COMPRESSION" = ASCII_INTEGER = 72 = 2 = "N/A" = "I2" = "Time compression. The field takes one of the following values: 1 (sweep) 2 (sweeps) 4 (sweeps) 8 (sweeps) 16 (sweeps) -1 (for undefined)"</pre>
END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = COLUMN = 6 = "ENERGY_COMPRESSION" = ASCII_INTEGER = 75 = 2 = "N/A" = "I2" = "Energy compression value indicates how many energy steps have been summed over. 128 divided by this value gives the number of energy steps. The field takes one of the following values: 1 (step) 2 (steps) 4 (steps) -1 (for undefined)"</pre>
END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= COLUMN = COLUMN = 7 = "LOG_COMPRESSION" = ASCII_INTEGER = 78 = 1 = "N/A"</pre>



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 54

FORMAT DESCRIPTION END_OBJECT	<pre>= "I1" = "Log compression" = COLUMN</pre>
START_BYTE BYTES	<pre>= COLUMN = 8 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 80 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = non valid 1 = valid"</pre>
END_OBJECT	= COLUMN
START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 9 = "RICE_COMPRESSION_VALUE" = ASCII_INTEGER = 82 = 1 = "N/A" = "I1" = "Rice compression" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= "SCANNER_DIRECTION" = ASCII_INTEGER = 84 = 1 = "N/A" = "I1"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 11 = "SCANNER_SPEED" = ASCII_INTEGER = 86 = 3 = SECOND = "I3" = "Scanner speed. This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command is sent to move it. The field takes one of the following values: 0 (standing) 32 (seconds scan) 64 (seconds scan) 128 (seconds scan)"</pre>
END_OBJECT	= COLUMN



	- COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 12
NAME	= "SCANNER_POSITION"
DATA TYPE	= ASCII REAL
START_BYTE	= 90
BYTES	= 5
UNIT	= "DEGREE"
FORMAT	= "F5.1"
DESCRIPTION	= "Scanner position in degrees"
END_OBJECT	= COLUMN

Detailed description of those parameters is provided in documents [AD 3].

4.3.1.5.2 The description of the ELS engineering header table:

The raw engineering values are converted into physical values when calibration is applied.

OBJECT NAME		HEAD_ENG_TABLE "ELS_SPECTRUM_HEAD_ENG"
ROW_SUFFIX_BYTES	=	Number of bytes that are accounted in the subsequent table, including record terminators and separators
INTERCHANGE_FORMAT	=	ASCII
ROWS	=	Number of rows within the data file
COLUMNS	=	18
ROW BYTES	=	129
^STRUCTURE	=	"ELS SPECTRUM HEAD ENG.FMT"
END_OBJECT	=	HEAD_ENG_TABLE

The structure of the TABLE object is described in the file ELS_SPECTRUM_HEAD_ENG.FMT as follows:

OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	= TIME = 1 = 23 = "N/A"
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT DESCRIPTION	= "OBT" = CHARACTER
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE	= "SW_VERSION"



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 56

START_BYTE	= 47
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "I5"
DESCRIPTION	= "Software version"
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT DESCRIPTION	<pre>= COLUMN = 4 = "SECTOR_MASK" = CHARACTER = 54 = 16 = "N/A" = "ELS Sector mask defines the active sectors that are set for the measurement. The Binary format is used. One bit (or character) represents the status of one ELS sector and may take one of the following values bit 0 (sector 0): 1 (enable), 0 (disable) bit 1 (sector 1): 1 (enable), 0 (disable) bit 2 (sector 2): 1 (enable), 0 (disable) bit 3 (sector 3): 1 (enable), 0 (disable) bit 4 (sector 4): 1 (enable), 0 (disable) bit 5 (sector 5): 1 (enable), 0 (disable) bit 6 (sector 6): 1 (enable), 0 (disable) bit 7 (sector 7): 1 (enable), 0 (disable) bit 8 (sector 8): 1 (enable), 0 (disable) bit 9 (sector 9): 1 (enable), 0 (disable) bit 10 (sector 10): 1 (enable), 0 (disable) bit 11 (sector 11): 1 (enable), 0 (disable) bit 12 (sector 12): 1 (enable), 0 (disable) bit 13 (sector 13): 1 (enable), 0 (disable) bit 14 (sector 14): 1 (enable), 0 (disable) bit 13 (sector 14): 1 (enable), 0 (disable) bit 14 (sector 14): 1 (enable), 0 (disable)</pre>
END_OBJECT	<pre>bit 15 (sector 15): 1 (enable), 0 (disable)" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 5 = "TIME_COMPRESSION" = ASCII_INTEGER = 72 = 2 = "N/A" = "I2" = "Time compression. The field takes one of the following values: 1 (sweep) 2 (sweeps) 4 (sweeps) 8 (sweeps) 16 (sweeps) -1 (for undefined)"</pre>
end_object	= COLUMN
object	= COLUMN
COLUMN_NUMBER	= 6
NAME	= "ENERGY_COMPRESSION"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 75
BYTES	= 2
UNIT	= "N/A"
FORMAT	= "I2"



DESCRIPTION = "Energy compression value indicates how many energy steps have been summed over. 128 divided by this value gives the number of energy steps. The field takes one of the following values: 1 (step) 2 (steps) 4 (steps) -1 (for undefined)" END OBJECT = COLUMN OBJECT = COLUMN COLUMN NUMBER = 7 NAME = "LOG COMPRESSION" DATA TYPE = ASCII INTEGER = 78 START BYTE = 1 BYTES = "N/A" UNIT FORMAT = "I1" = "Log compression" DESCRIPTION = COLUMN END OBJECT OBJECT = COLUMN = 8
= "RICE_COMPRESSION_FLAG"
= ASCII_INTEGER
= 80 COLUMN NUMBER = 8 NAME DATA TYPE START BYTE BYTES = 1 = "N/A" UNIT = "I1" FORMAT = "Rice compression flag status. DESCRIPTION The field takes one of the following values: 0 = non valid 1 = valid"END OBJECT = COLUMN = COLUMN OBJECT COLUMN NUMBER = 9 = 9 = "RICE_COMPRESSION_VALUE" = ASCII_INTEGER = 82 NAME DATA_TYPE START BYTE = 1 BYTES UNIT = "N/A" FORMAT = "I1" = "Rice compression" DESCRIPTION END OBJECT = COLUMN = COLUMN OBJECT COLUMN_NUMBER = 10 NAME = "SCANNER DIRECTION" = ASCII INTEGER DATA TYPE START_BYTE = 84 = 1 BYTES = "N/A" UNIT = "I1" FORMAT = "Scanner direction. DESCRIPTION The field takes one of the following values: 0: 0 - 180 1: 180 - 0" END_OBJECT = COLUMN = COLUMN OBJECT COLUMN_NUMBER = 11



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 58

	<pre>= "SCANNER_SPEED" = ASCII_INTEGER = 86 = 3 = SECOND = "I3" = "Scanner speed. This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command is sent to move it. The field takes one of the following values: 0 (standing) 32 (seconds scan) 64 (seconds scan) 128 (seconds scan)"</pre>
END_OBJECT	= COLUMN
UNIT FORMAT DESCRIPTION END OBJECT	<pre>= COLUMN = 12 = "SCANNER_POSITION" = ASCII_REAL = 90 = 5 = "DEGREE" = "F5.1" = "Scanner position in degrees" = COLUMN</pre>
- OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 13 = "ELS_STATUS" = ASCII_INTEGER = 96 = 3 = "N/A" = "I3" = "ELS_Status" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 14 = "ELS_TEMPERATURE" = ASCII_REAL = 100 = 7 = "CELSIUS" = "F7.2" = "ELS temperature in degree Celsius " = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 15 = "ELS_MCP_REFERENCE" = ASCII_INTEGER = 108 = 3 = "ADC_UNITS" = "I3" = "Uncalibrated ELS MCP reference" = COLUMN</pre>



: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 59

OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	
DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 17 = "ELS_SCREEN_GRID_REFERENCE" = ASCII_INTEGER = 120 = 3 = "ADC_UNITS" = "I3" = "Uncalibrated ELS screen grid reference" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 18 = "ELS_SCREEN_GRID_MONITOR" = ASCII_REAL = 124 = 6 = "VOLT" = "F6.3" = "ELS screen grid bias monitor in Volts" = COLUMN</pre>

Detailed description of those parameters is provided in documents [AD 3].

4.3.1.5.3 The description of the ELS science table:

An ELS data packet can contain a maximum of 128 energy-steps × 16 azimuthal-sectors values. However, data for all sectors may not always be returned. The field sector mask indicates which of the sixteen possible anode sectors are being returned in the data matrix. Depending upon the number of sectors that operate and process for measuring electrons within a cycle time interval, the electron counting table may have to be dimensioned with an azimuthal number lower than the 16 possible sectors. This number may vary between records from a same processed level-1 data file, making necessary the use of separate data products for storing those data using fewer azimuthal sectors in a fixed width table structure. On the other hands, this makes useless the external files (FMT) referenced by include pointers since a number of different TABLE objects use different definitions.

The sector mask is meant to block unwanted instrument data from entering the telemetry stream. The blocked data is from that sector which has data determined to be obstructed or not scientifically useful. The aim here is not to use TM space by not bringing down data which is of questionable use or not as important; TM may be freed for other data or higher resolution data (fewer compression techniques applied). One of the ways to get down more of the useful data from sectors is to block data from those ELS sectors which do not yield the effect that the scientists wish to study. When a bit within the sector mask is turned on, then data from that sector is allowed to pass to the telemetry stream and accumulates in the science matrix. At the start of the mission, all sectors should pass their data to be accumulated within the science data matrix.

In addition to the variable number of active sectors, the number of energy steps could be variable as well, depending on the energy compression scheme that is applied within a ELS complete sweep. The Energy Compression field, as specified in the header content associated to science data, informs the way in which energy steps have been summed over for each value returned. The energy-steps total number is derived by the division of two quantities: the maximal 128 energy-steps (corresponding to a complete sweep with no



energy compression) and the energy compression parameter value that could take any of the following values: 1, 2 or 4. In order to maintain fixed width table structure within each data product, data of different energy compression parameter value will be split and stored in different data product files as well.

For the ELS science data storage, it exists a total of 48 possible data products for containing block of data of each combination of numbers of azimuthal sectors and energy steps. Only one science data TABLE object is defined per data product label file wherein a ROW_PREFIX_BYTES keyword value is indicating the size in bytes that are accounted in the preceding and parallel heading table, as shown in the following object description.

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	<pre>= "ELS_COUNTS" = ASCII_INTEGER = 1</pre>
UNIT	<pre>= Number of bytes that are accounted in this table, including record terminators and separators = "ADC_UNITS" = "15"</pre>
FORMAT DESCRIPTION	<pre>= "15" = "Electrons (counts/accumulation) counted in the current energy step number and azimuthal sector."</pre>
ITEMS	= Number equal to the product of the number of energy bins by the number of valid angular sectors
ITEM_BYTES	= 6
END_OBJECT	= COLUMN
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.1.5.4 The description of the ELS engineering table:

The following TABLE object description is applicable to those label files that are associated to science data of engineering mode. The object storage format is well-known since only one data pattern exists for this mode.

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	<pre>= ENG_TABLE = "ELS_SPECTRUM_ENGINEER" = 129 = ASCII = Number of rows within the data file = 2 = 1538</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION ITEMS	<pre>= COLUMN = 1 = "ELS_DEFLECTION_REF_VALUE" = ASCII_INTEGER = 1 = 768 = "N/A" = "I5" = "Uncalibrated ELS deflection reference in the current potential sweep step" = 128</pre>



ITEM_BYTES END_OBJECT	= 6 = COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 2
NAME —	= "ELS DEFLECTION MON VALUE"
DATA TYPE	= ASCII INTEGER
START BYTE	= 769
BYTES	= 770
UNIT	= "N/A"
FORMAT	= "15"
DESCRIPTION	<pre>= "Uncalibrated ELS deflection monitor</pre>
ITEMS	= 128
ITEM BYTES	= 6
END_OBJECT	= COLUMN
END_OBJECT	= ENG_TABLE

Detailed description of those parameters is provided in documents [AD 3]. Energy tables are provided in [AD 13] in order to help users to convert raw values (uncalibrated deflection voltage) into physical units (energy in Volt).

4.3.1.6 Description of Instrument

The description of the instrument is done in above and as a brief overview in the INST.CAT catalog file.

4.3.1.7 Parameters Index File Definition

N/A

4.3.1.8 Mission Specific Keywords

Mission specific keywords should all have the MISSION_ID "VEX" prefix.

```
= "ALL"
VEX:SCIENCE CASE ID
VEX:SCIENCE CASE ID DESC
                              = "Please refer to VEX SCIENCE CASE ID DESC.TXT
                                 in the DOCUMENT directory."
```

4.3.2 ELS Housekeeping Calibrated Data Product Design (Level 3)

ELS level 3 HK contains calibrated ELS housekeeping data with PDS detached labels. The incoming raw HK values are converted into physical values when calibration is applied. This type of data is identified by the following data descriptors within the current label file:

PRODUCT TYPE = RDR /* EDR for RAW, RDR for calibrated data */ PROCESSING_LEVEL_ID = 3

HK parameters are listed in the following fields table in the same order that they appear in the data product label file.

Rank	Field	Rank	Field
1	UTC correlated Time	23	Scanner vrefmc
2	OBT Time	24	Scanner init
3	ELS temperature	25	Lost step
4	Scanner temperature sensor	26	Scanner status state
5	SW version	27	Scanner status direction



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 62

6	ELS -5V screen grid reference	28	Scanner status position clock
7	ELS -5V screen grid monitor	29	Scanner status cw end position
8	ELS bias MCP reference	30	Scanner status ccw end position
9	ELS bias MCP monitor	31	Scanner speed
10	ELS range	32	Scanner setup direction
11	ELS table index	33	Scanner setup mode
12	ELS enable HV	34	Scanner +30V on/off
13	ELS +30V on/off	35	Scanner coast current reference
14	HK i +30V	36	Scanner ramp current reference
15	HK i +5V	37	Scanner threshold cw reference
16	HK V +12V	38	Scanner threshold ccw reference
17	HK V +30V	39	Scanner threshold wheel reference
18	HK V +5V	40	Scanner position
19	HK V -12V	41	SW mode
20	HK V -5V	42	Cpu load
21	Sun sensor 1	43	ELS sector mask
22	Sun sensor 2	44	ELS compression scheme

The table object is detailed in the following paragraph.

4.3.2.1 File Characteristics Data Elements

The following elements are present in the labels for every ELS housekeeping calibrated data product, and they describe the basic characteristics of the data product in terms of structure and naming:

/* FILE CHARACTERISTIC DATA	ELEMENTS */
PRODUCT ID	= this element defines the current product file name,
—	without extension
RECORD_TYPE	= FIXED_LENGTH
RECORD BYTES	= 222
FILE_RECORDS	= this element indicates the number of records within
	the data file

4.3.2.2 Data Object Pointers Identification Data Elements

The ELS housekeeping calibrated data are organized as ASCII table. The data object pointer that references TAB file is:

^HK_ELS_TABLE

4.3.2.3 Instrument and Detector Descriptive Data Elements

See the applicable section 4.3.1.3

4.3.2.4 Structure Definition of Instrument Parameter Objects

N/A

4.3.2.5 Data Object Definition

This section of the label defines the structure and content of the ELS housekeeping calibrated data product. Each data file (TAB) contains a 44 columns table with the calibrated HK data when calibration is applied.

OBJECT	=	HK_ELS_TABLE
NAME	=	"HK ELS"
INTERCHANGE_FORMAT	=	ASCII
ROWS	=	this element indicates the number of rows within
		the data file



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 63

COLUMNIC	
COLUMNS ROW BYTES	= 44 = 222
^STRUCTURE	= "ELS_SPECTRUM_HKELS.FMT"
	= HK_ELS_TABLE
The structure of the TABLE obje	ct is described in the file ELS_SPECTRUM_HKELS.FMT as follows:
	<pre>file "ELS_SPECTRUM_HKELS.FMT" */ = COLUMN</pre>
COLUMN_NUMBER NAME	= 1
	= "UTC"
—	= TIME
START_BYTE BYTES	= 1 = 23
	= "N/A"
	= "This column represents the UTC of the
	ELS HK data set in PDS standard format YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
_	= 2
	= "OBT"
DATA_TYPE	= CHARACTER
	= 26 = 19
UNIT	= "N/A"
DESCRIPTION	= "On board Time (OBT) is represented as :
	<pre><reset number="">/<unit seconds="">.<fractional seconds=""> with <reset number="">: integer starting at 1 Reset number 1 starts at 2005-03-01T00:00:00 UTC <unit seconds="">: 10 digits number of unit seconds <fractional seconds="">: 5 digits number of fractional seconds expressed as multiples of 2^-16 seconds"</fractional></unit></reset></fractional></unit></reset></pre>
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 3
NAME	= "ELS_TEMP"
DATA_TYPE START BYTE	= ASCII_REAL = 47
BYTES	= 7
UNIT	= "CELSIUS"
FORMAT	= "F7.2"
	= "ELS temperature in degree Celsius"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 4
NAME	= "SCANNER_TEMP_SENSOR"
DATA_TYPE START_BYTE	= ASCII_REAL = 55
BYTES	= 7
UNIT	= "CELSIUS"
FORMAT	= "F7.2"
	= "Scanner temperature sensor in degree Celsius"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 5
NAME	= "SW_VERSION"



DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= ASCII_INTEGER = 63 = 5 = "N/A" = "I5" = "Software version To decode into Binary format. Bit description: patchVersion [3:0] minorVersion [8:4] majorVersion [13:9]</pre>
END_OBJECT	releaseClass [15:14]: 1 (D), 2 (T), 3 (R)" = COLUMN
START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 6 = "ELS_MINUS_5V_SCREEN_GRID_REFERENCE" = ASCII_INTEGER = 69 = 3 = "ADC_UNITS" = "I3" = "ELS -5V screen grid reference" = COLUMN</pre>
UNIT FORMAT	<pre>= COLUMN = 7 = " ELS_MINUS_5V_SCREEN_GRID_MONITOR " = ASCII_REAL = 73 = 6 = "VOLT" = "F6.3" = "ELS -5V screen grid monitor in Volts" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	= "ELS_BIA_MCP_REFERENCE" = ASCII_INTEGER
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END OBJECT	<pre>= COLUMN = 9 = "ELS_BIA_MCP_MONITOR" = ASCII_REAL = 84 = 7 = "VOLT" = "F7.2" = "ELS bias MCP monitor in Volts" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE	= COLUMN = 10 = "ELS_RANGE" = ASCII_INTEGER = 92



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 65

BYTES UNIT FORMAT DESCRIPTION	The field takes one of the following values: 0 low
END_OBJECT	1 high" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 11 = "ELS_TABLE_INDEX" = ASCII_INTEGER = 94 = 3 = "N/A" = "I3" = "ELS table index" = COLUMN</pre>
START_BITE BYTES UNIT FORMAT	<pre>= COLUMN = 12 = "ELS_ENABLE_HV" = ASCII_INTEGER = 98 = 1 = "N/A" = "I1" = "ELS enable HV flag. The field takes one of the following values: 0 off 1 on"</pre>
end_object object	= COLUMN = COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= CONDANY = 13 = "ELS_PLUS_30V_ON_OFF" = ASCII_INTEGER = 100 = 1 = "N/A" = "I1" = "ELS +30V on/off The field takes one of the following values: 0 off 1 on"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	= "HK_I_PLUS_30V" = ASCII_REAL
OBJECT COLUMN_NUMBER NAME	= COLUMN = 15 = "HK_I_PLUS_5V"



Document No. : VEX_ASP_CESR_EAICD_V1_5

DATA_TYPE = ASCII_REAL START_BYTE = 109 BYTES = 7 UNIT = "MILLIAMPERE" FORMAT DESCRIPTION END OBJECT OBJECT COLUMN_NUMBER= COLUMNNAME= 16NAME= "HK_V_PLUS_12V"DATA_TYPE= ASCII_REALSTART_BYTE= 117BYTES= 5UNIT= "VOLT" FORMAT DESCRIPTION END OBJECT OBJECT DECT= COLUMNCOLUMN_NUMBER= 17NAME= "HK_V_PLUS_30V"DATA_TYPE= ASCII_REALSTART_BYTE= 123BYTES= 6UNIT= "VOLTS"DODME"RC 2" UNIT FORMAT DESCRIPTION END OBJECT OBJECT COLUMN_NUMBER= COLUMNNAME= 18NAME= "HK_V_PLUS_5V"DATA_TYPE= ASCII_REALSTART_BYTE= 130BYTES= 4 BYTES UNIT UNIT FORMAT DESCRIPTION END OBJECT OBJECT COLUMN_NUMBER= 19NAME= "HK_V_MINUS_12V"DATA_TYPE= ASCII_REALSTART_BYTE= 135 NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END OBJECT OBJECT JECT – COLORIN. COLUMN_NUMBER = 20 NAME = "HK_V_MINUS_5V" DATA_TYPE = ASCII_REAL START_BYTE = 142 NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT = "F5.2" DESCRIPTION = "HK V -5V in Volts" END_OBJECT = COLUMN FORMAT

= "F7.2" = "HK i +5V in milli-amperes" = COLUMN = COLUMN = "F5.2" = "HK V +12V in Volts" = COLUMN = COLUMN = "F6.2" = "HK V +30V in Volts" = COLUMN = COLUMN = 4 = 4 = "VOLT" = "F4.2" = "HK V +5V in Volts" = COLUMN = COLUMN = 6 = "VOLT" = "F6.2" = "HK V -12V in Volts" = COLUMN = COLUMN = 5 = "VOLT"



Document No. : VEX_ASP_CESR_EAICD_V1_5

OBJECT = COLUMN - 140 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Sun sensor 1 output" D_OBJECT = COLUMN END OBJECT COLUMN_NUMBER= COLUMNCOLUMN_NUMBER= 22NAME= "SUN_SENSOR_2"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 150BYTES= 1UNIT= "M/A" OBJECT = COLUMN BYTES= 1UNIT= "N/A"FORMAT= "I1"DESCRIPTION= "Sun sensor 2 output"D OBJECT= COLUMN END OBJECT = COLUMN BJECT = COLUMN COLUMN_NUMBER = 23 NAME = "SCANNER_VREFMC" DATA_TYPE = ASCII_INTEGER START_BYTE = 152 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner vrefmc" D_OBJECT = COLUMN OBJECT = COLUMN END OBJECT = COLUMN OBJECT COLUMN_NUMBER= COLUMNCOLUMN_NUMBER= 24NAME= "SCANNER_INIT"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 156BYTES= 1UNIT= "N/A" = COLUMN BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Scanner initialized" D OBJECT = COLUMN = COLUMN END OBJECT OBJECT = COLUMN COLUMN_NUMBER = 25 NAME = "LOST_STEP" DATA_TYPE = ASCII_INTEGER START_BYTE = 158 BYTES = 1 BYTES = 1 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Lost step" OPIECT = COLUMN END OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER= COLUMNCOLUMN_NUMBER= 26NAME= "SCANNER_STATUS_STATE"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 160BYTES= 1 BYTES = 1



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 68

UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner status state.
DEDCICITION	The field takes one of the following values:
	0 not busy
	1 ramp up
	2 full speed move
	3 ramp down"
END OBJECT	= COLUMN
	002011
OBJECT	= COLUMN
NAME —	= "SCANNER STATUS DIRECTION"
DATA TYPE	= 27 = "SCANNER_STATUS_DIRECTION" = ASCII_INTEGER
START_BYTE	= 162
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner status direction
	The field takes one of the following values:
	0 0-180
	1 180-0"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 28
NAME DAMA MADE	<pre>= "SCANNER_STATUS_POS_CLOCK" = ASCII_INTEGER</pre>
DATA_TYPE	= ASCII_INTEGER = 164
START_BYTE	= 104 = 1
BYTES UNIT	
FORMAT	= "N/A" = "I1"
DESCRIPTION	= "Scanner status position clock"
END OBJECT	= COLUMN
	COLORN
OBJECT	= COLUMN
COLUMN NUMBER	= 2.9
NAME —	= "SCANNER STATUS CW END POS"
DATA TYPE	= ASCII INTEGER
START BYTE	<pre>= "SCANNER_STATUS_CW_END_POS" = ASCII_INTEGER = 166</pre>
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner status cw end position
	The field takes one of the following values:
	0 scanner not in cw end position
	1 scanner in cw end position"
END_OBJECT	= COLUMN
00.7007	
OBJECT	= COLUMN
COLUMN_NUMBER	= 30
NAME	= "SCANNER_STATUS_CCW_END_POS"
DATA_TYPE START BYTE	= ASCII_INTEGER = 168
BYTES	= 100 = 1
UNIT	= 1 = "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner status ccw end position
	The field takes one of the following values:
	0 scanner not in ccw end position
	1 scanner in ccw end position"
END OBJECT	= COLUMN
_	



OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 31 = "SCANNER_SPEED" = ASCII_INTEGER = 170 = 1 = "N/A" = "I1" = "Scanner speed This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command is sent to move it. The field takes one of the following values: 0 STOP 1 32s scan 2 64s scan 3 128s scan"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= 1 = "N/A" = "I1" = "Scanner setup direction The field takes one of the following values: 0 0-180 1 180-0</pre>
END_OBJECT	for manual mode speed command only" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 33 = "SCANNER_SETUP_MODE" = ASCII_INTEGER = 174 = 1 = "N/A" = "I1" = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 34 = "SCANNER_PLUS_30V_ON_OFF" = ASCII_INTEGER = 176 = 1 = "N/A" = "I1" = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on"</pre>



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 70

END_OBJECT

= COLUMN

-	
DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 35 = "SCANNER_COAST_CURRENT_REF" = ASCII_INTEGER = 178 = 3 = "ADC_UNITS" = "I3" = "Scanner coast current reference" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 36 = "SCANNER_RAMP_CURRENT_REF" = ASCII_INTEGER = 182 = 3 = "ADC_UNITS" = "I3" = "Scanner ramp current reference" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 37 = "SCANNER_TRESHOLD_CW_REF" = ASCII_INTEGER = 186 = 3 = "ADC_UNITS" = "I3" = "Scanner threshold cw reference" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 38 = "SCANNER_TRESHOLD_CCW_REF" = ASCII_INTEGER = 190 = 3 = "ADC_UNITS" = "I3" = "Scanner threshold ccw reference" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 39 = "SCANNER_TRESHOLD_WHEEL_REF" = ASCII_INTEGER = 194 = 3 = "ADC_UNITS" = "I3" = "Scanner threshold wheel reference" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE	<pre>= COLUMN = 40 = "SCANNER_POSITION" = ASCII_REAL = 198</pre>



BYTES UNIT FORMAT	<pre>= 5 = "DEGREE" = "F5.1" = "Scanner position in degrees" = COLUMN = 41 = "SW_MODE" = ASCII_INTEGER = 204 = 3 = "N/A" = "I3" = "Software mode"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	= ASCII_INTEGER = 208 = 3 = "N/A" = "I3"
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 43 = "ELS_SECTOR_MASK" = ASCII_INTEGER = 212 = 5 = "N/A" = "I5" = "ELS sector mask defines the active sectors that are set for the measurement. This field value must be decoded in Binary format. Bit description : bit 0 (sector 0): 1 (enable), 0 (disable) bit 1 (sector 1): 1 (enable), 0 (disable) bit 2 (sector 2): 1 (enable), 0 (disable) bit 3 (sector 3): 1 (enable), 0 (disable) bit 4 (sector 4): 1 (enable), 0 (disable) bit 5 (sector 5): 1 (enable), 0 (disable) bit 6 (sector 6): 1 (enable), 0 (disable) bit 7 (sector 7): 1 (enable), 0 (disable) bit 8 (sector 8): 1 (enable), 0 (disable) bit 9 (sector 9): 1 (enable), 0 (disable) bit 9 (sector 10): 1 (enable), 0 (disable) bit 10 (sector 10): 1 (enable), 0 (disable) bit 11 (sector 11): 1 (enable), 0 (disable) bit 13 (sector 12): 1 (enable), 0 (disable) bit 14 (sector 14): 1 (enable), 0 (disable) bit 15 (sector 14): 1 (enable), 0 (disable) bit 14 (sector 14): 1 (enable), 0 (disable) bit 15 (sector 14): 1 (enable), 0 (disable) bit 13 (sector 14): 1 (enable), 0 (disable) bit 15 (sector 14): 1 (enable), 0 (disable) bit 15 (sector 14): 1 (enable), 0 (disable) bit 15 (sector 15): 1 (enable), 0 (disable)</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE	<pre>= COLUMN = 44 = "ELS_COMPRESSION_SCHEME" = ASCII_INTEGER</pre>



START_BYTE	=	218
BYTES	=	3
UNIT	=	"N/A"
FORMAT	=	"I3"
DESCRIPTION	=	"ELS compression scheme (i.e. defines mode)"
END_OBJECT	=	COLUMN

Detailed description of those parameters is provided in documents [AD 3].

4.3.2.6 Description of Instrument

See the applicable section 4.3.1.6

4.3.2.7 Parameters Index File Definition

N/A

4.3.2.8 Mission Specific Keywords

See the applicable section 4.3.1.8

4.3.3 Ion Mass Analyzer Science Edited Data Product Design (Level 2)

The IMA sensor can be operated in 32 modes as described in the document [AD 3] and be divided into 5 groups: Min, Nrm, Har, Exm and Special. But only 27 modes are physically producing formatted science data in telemetry packets during nominal mission. These packets contain data for a number of measurement cycles, wherein each data cycle usually contains one particle count value for each parameter sampled within the resolved parametric space azimuth×mass×energy×polar-angles. Thus there are 27 different types of IMA edited science file, one for each selected operation mode. Both of them are always delivered as fixed-size azimuth×mass×energy×polar arrays that are transposed to a row vector, where azimuth (the first) is the fastest varying parameter. For masses above or equal to 8, the integration is simply done by adding adjacent mass bins (e.g., 8 mass bins integrate them 4 by 4 from the 32 available). Note that the imager addressing is such that the heavier masses comes first and the lighter ones last. For masses below 8 (i.e. \leq 6), the mass bins are integrated according to lookup tables and supposed to represent true M/q. Azimuth, energy and polar angles always come in the same order. The Table 26 indicates the data contents for each science data file and their representation in the parametric space mass×azimuth×energy×polar-angles. An additional IMA header, common to all IMA modes, is inserted before each data cycle-dependent collection as represented in the Figure 14. The general IMA header information and values are shown in the Table 27.

	Мо	ode	Data descriptionAzimuth anglesMassesEnergiesPolar anglesMax			ion				
Data type	index	name				Max sets	Array Layout			
Minimum -	16 minu	tes of dur	ration							
	0	idle						No data are p	roduced	
M02SssX	2	Mspo	1	2	32	1	15	2×32×ss	spectra	
M04SssX	4	Msis	1	6	96	1	05	6×96×ss	spectra	
M05SssX	5	Mexm	1	32	96	1	05	32×96×ss	spectra	
Normal - 1	192 secor	nds of dur	ation							
M08XXXX	8	Nrm-0	16	6	96	16		16×6×96×16	spectra	
M09XXXX	9	Nrm-1	16	6	96	8		16×6×96×8	spectra	
M10XXXX	10	Nrm-2	16	6	96	4		16×6×96×4	spectra	

Table 26. IMA science data file contents and structure.



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 73

M11XXXX	11	Nrm-3	16	6	96	2	16×6×96×2 spectra	
M12XXXX	12	Nrm-4	8	6	96	2	8×6×96×2 spectra	
M13XXXX	13	Nrm-5	4	6	96	2	4×6×96×2 spectra	
M14XXXX	14	Nrm-6	4	3	96	2	4×3×96×2 spectra	
M15XXXX	15	Nrm-7	4	3	96	1	4×3×96×1 spectra	
Burst - 19				_		· · ·		
M16XXXX	16	Har-0	16	16	96	16	16×16×96×16 spectra	
M17XXXX	17	Har-1	16	16	96	8	16×16×96×8 spectra	
M18XXXX	18	Har-2	16	16	96	4	16×16×96×4 spectra	
M19XXXX	19	Har-3	16	8	96	4	16×8×96×4 spectra	
M20XXXX	20	Har-4	16	4	96	4	16×4×96×4 spectra	
M21XXXX	21	Har-5	16	2	96	4	16×2×96×4 spectra	
M22XXXX	22	Har-6	8	2	96	4	8×2×96×4 spectra	
M23XXXX	23	Har-7	8	2	96	2	8×2×96×2 spectra	
M24XXXX	24	Exm-0	16	32	96	16	16×32×96×16 spectra	
M25XXXX	25	Exm-1	16	32	96	8	16×32×96×8 spectra	
M26XXXX	26	Exm-2	16	32	96	4	16×32×96×4 spectra	
M27XXXX	27	Exm-3	16	32	96	2	16×32×96×2 spectra	
M28XXXX	28	Exm-4	8	32	96	2	8×32×96×2 spectra	
M29XXXX	29	Exm-5	4	32	96	2	4×32×96×2 spectra	
M30XXXX	30	Exm-6	2	32	96	2	2×32×96×2 spectra	
M31XXXX	31	Exm-7	2	32	96	1	2×32×96×1 spectra	
Special			•		·			
	32	Test						
	33	Cal1		Special modes are mainly aimed for ground testing and calibration. No data				
	34	Cal2	archival are planned for these modes					
	35	Fake						

Table 27. IMA header content.

Rank	Field / Value					Field / Va	alue	
1	UTC correlated Time			16			0 = Disabled 1 = Enabled	
2	OBT Time			17	Compres			0 = Disabled 1 = Enabled
3	Sync_Pattern	0xE3	0x31 0xCA	18	FIFO_filli	ng		
4	Unit	2 = IN	CA (Rosetta) IA (MEX) IA (VEX)	19	PROM_E _1_16_lo	1_EEPROM_section 0 = PRC _loaded 1-16 = E		PROM = EEPROM section 0-15
5	Mode_index 0, 2, 4, 5 or any value in the range 8 to 35			20	Sample_	processing_overru	in	
6	Experiment_data_format_counter			21	Sweep_processing_overrun			
7	Number_of_sets_in_minimum_mode			22	Post_processing_overrun			
8	Checksum_1_failure				Solar_wind_energy_start_index			
9	Checksum_0_failure	9		24	Reset_du	ie_to_watchdog_o	r_ma	chine_error
10	TM_FIFO_emptied			25	Format_s	tart_time_in_units	_of_3	1.25ms
11	HV_ramping_in_pro	gress		26	Format_le	ength_in_words		
12	Test_pattern			27	Shadow_	masking_switch		0 = Disabled 1 = Enabled
13	Post_acc_level 0 = Low 1 = High			28	Bad_HV_	masking_switch		0 = Disabled 1 = Enabled
14	Alternating_post_acc_switch 1 = alternating else it is fixed		29	Error	If Error is not equidecompression p			
15	Post_acc_high_level_reference							

The table objects are detailed in the following paragraphs.



4.3.3.1 File Characteristics Data Elements

The following elements are present in the labels for every IMA science edited data product, and they describe the basic characteristics of the data product in terms of structure and naming:

ELEMENTS */
= this element defines the current product file name,
without extension
= FIXED_LENGTH
= this element indicates the number of bytes in a data
record, including record terminators and separators
= this element indicates the number of records within
the data file

4.3.3.2 Data Object Pointers Identification Data Elements

Typically 2 pointers are defined in a label file, identifying the ASCII PDS objects within which the IMA status and uncalibrated science data are stored. The data object pointers that reference TAB files are:

```
^HEAD_TABLE
^DATA_SCIENCE_TABLE
```

4.3.3.3 Instrument and Detector Descriptive Data Elements

The following data identification elements provide additional information about the IMA data products for both particle counting data modes.

```
/* PRODUCER IDENTIFICATION */
FRODUCER_ID
PRODUCER_FULL_NAME
                             = "CESR ASPERA4 GROUP"
                            = "CLSK_ACT___
= "EMMANUEL PENOU"
PRODUCER_INSTITUTION_NAME = "CENTRE D'ETUDE SPATIALE DES RAYONNEMENTS"
PRODUCT CREATION TIME
                             = YYYY-MM-DDThh:mm:ss[.ff]
/* DATA DESCRIPTION AND IDENTIFICATION */
DATA_SET_NAME
                             = "
                   VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 IMA V1.0"
                                                                    or
       "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 IMA V1.0"
                                                                    or
       "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 IMA V1.0" or
DATA SET_ID
                              = "VEX-V/SW-ASPERA-2-IMA-V1.0"
                                                                    or
                                "VEX-V/SW-ASPERA-2-EXT1-IMA-V1.0"
                                                                    or
                                "VEX-V/SW-ASPERA-2-EXT2-IMA-V1.0"
                                                                    or
                              = 0001
RELEASE ID
REVISION ID
                              = 0000
PRODUCT TYPE
                              = EDR
PROCESSING_LEVEL_ID
                              = 2
MISSION NAME
                             = "VENUS EXPRESS"
MISSION ID
                             = VEX
                            = "VENUS EXPRESS"
INSTRUMENT HOST NAME
INSTRUMENT_HOST_ID
                              = VEX
MISSION_PHASE_NAME
                             = As defined in [AD 4]
                              - "
INSTRUMENT NAME
      ANALYZER OF SPACE PLASMA AND ENERGETIC ATOMS (4TH VERSION)"
INSTRUMENT_ID
                              = ASPERA4
INSTRUMENT TYPE
                              = {"ELECTROSTATIC ANALYZER",
                                 "MASS SPECTROMETER",
                                 "NEUTRAL PARTICLE IMAGER",
                                 "NEUTRAL PARTICLE DETECTOR" }
DETECTOR ID
                              = VEX ASP4 IMA
```



^INSTRUMENT_DESC	= "ASPERA4_DESC.TXT"
	<pre>= "PLANET" or "N/A" = "VENUS" or "SOLAR WIND" = "N/A" = "N/A"</pre>
/* SCIENCE OPERATIONS INFORMAT OBSERVATION_TYPE ^OBSERVATION_TYPE_DESC	ION */ = {"AC003B", "PE001A", "PE004A"} or "N/A" = "OBSERVATION_TYPE_DESC.TXT"
/* TIME RELATED INFORMATION */ START_TIME STOP_TIME SPACECRAFT_CLOCK_START_COUNT SPACECRAFT_CLOCK_STOP_COUNT	<pre>= YYYY-MM-DDThh:mm:ss.fff = YYYY-MM-DDThh:mm:ss.fff</pre>
SPACECRAFT_ORIENTATION ^SPACECRAFT_ORIENTATION_DESC SPACECRAFT_POINTING_MODE	<pre>= UNK = UNK = UNK = ''UNK'' = UNK</pre>

4.3.3.4 Structure Definition of Instrument Parameter Objects

N/A

4.3.3.5 Data Object Definition

This section of the label defines the structure and content of the IMA science edited data products. As specified in §4.3, each data product file (TAB) contains typically 2 objects: a header TABLE and a science data TABLE object stored in parallel. The number of rows within these tables is variable and depends roughly on the number of records contained in the processed level-1 data file. The science data objects are ASCII tables handling particle counts as collected into the entire and discrete instrument mass, azimuth, energy and polar-angles sample space. There is also a common ASCII table data object to all IMA measurements containing the common header information about the sensor status. The columns within this TABLE object are first described in the section below. The science data objects are defined in the following separate sections for each mode occurring and archived in PDS format.

4.3.3.5.1 The description of the IMA header table:

The IMA header information is organized as an ASCII table of fixed width as shown below.

OBJECT	=	HEAD TABLE
NAME	=	"IMA SPECTRUM HEAD"
ROW_SUFFIX_BYTES	=	Number of bytes that are accounted in the subsequent table, including record terminators and separators
INTERCHANGE_FORMAT ROWS		ASCII Number of rows within the data file



COLUMNS	= 29
ROW BYTES	= 141
^STRUCTURE	= "IMA_SPECTRUM_HEAD.FMT"
END_OBJECT	= HEAD_TABLE
	ct is described in the file IMA_SPECTRUM_HEAD.FMT as follows:
/* Contents of format OBJECT	file "IMA_SPECTRUM_HEAD.FMT" */ = COLUMN
	= 1
—	= "UTC"
_	= TIME
—	= 1
BYTES UNIT	= 23
	= "N/A" = "This column represents the UTC of the
DESCRIPTION	spectrum in PDS standard format YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
—	
	= "OBT" - CHARACTER
DATA_TYPE START BYTE	= CHARACTER = 26
BYTES	= 19
UNIT	= "N/A"
DESCRIPTION	<pre>= "On board Time (OBT) is represented as :</pre>
END_OBJECT	<pre><fractional seconds="">: 5 digits number of fractional seconds expressed as multiples of 2^-16 seconds" = COLUMN</fractional></pre>
OBJECT	= COLUMN
COLUMN NUMBER	= 3
	= "SYNC PATTERN"
DATA_TYPE	= CHARACTER
_	= 48
BYTES	= 14 = "N/A"
UNIT DESCRIPTION	 N/A "The 3 bytes 0xE3 0x31 0xCA mark the start of a new Experiment Data Format. A search for this is required as the EDF s floats in the TM data stream."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 4
NAME	= "UNIT"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 64 = 1
BYTES UNIT	= 1 = "N/A"
FORMAT	= "11"
DESCRIPTION	<pre>= "This parameter defines the experiment unit. The field takes one of the following values: 0 (undefined) 1 (ICA)</pre>



	2 (IMA MEX)
	3 (IMA VEX)"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 5
NAME	= "MODE_INDEX"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 66
BYTES	= 2
UNIT	= "N/A"
FORMAT	= "I2"
DESCRIPTION	= "This is the data reduction mode index used for the data in this EDF. The field takes one of the following values: 0, 2, 4, 5, or any values included in the range 8 to 35."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 6
NAME —	= "EXPERIMENT_DATA_FORMAT_COUNTER"
DATA TYPE	= ASCII_INTEGER
START_BYTE	= 69
BYTES	= 3
UNIT	= "N/A"
FORMAT	= "I3"
DESCRIPTION	= "This is an running counter incremented by 1 for each released EDF. It swaps over to 0 after 255."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 7
NAME —	= "NUMBER_OF_SETS_IN_MINIMUM_MODE"
DATA TYPE	= ASCII INTEGER
START_BYTE	= 73
BYTES	= 2
UNIT	= "N/A"
FORMAT	= "I2"
DESCRIPTION	= "This parameter gives the number of sets in this EDF for the minimum modes."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 8
NAME —	= "CHECKSUM_1_FAILURE"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 76
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "This bit will se if the checksum 1 fails during RAM booting. Sets from both PROM and EEPROM
END_OBJECT	booting." = COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 9
NAME	= "CHECKSUM 0 FAILURE"
DATA TYPE	= ASCII INTEGER
START BYTE	= 78
BYTES	= 1
UNIT	– 1 = "N/A"



FORMAT DESCRIPTION	<pre>= "I1" = "This bit will se if the checksum 0 fails during</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END OBJECT	<pre>= COLUMN = 10 = "TM_FIFO_EMPTIED" = ASCII_INTEGER = 80 = 1 = "N/A" = "I1" = "This bit will set if the TM FIFO is emptied before the start of this EDF. Always forced to and from special EDF s." = COLUMN</pre>
—	
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 11 = "HV_RAMPING_IN_PROGRESS" = ASCII_INTEGER = 82 = 1 = "N/A" = "I1" = "This bit will set if HV ramping has been performed during the data taking for this EDF."</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 12 = "TEST_PATTERN" = ASCII_INTEGER = 84 = 2 = "N/A" = "I2" = "For testing purposes a number of imager test patterns can be commanded. This parameter gives the actual test pattern number used. Ensure it is 0 for real scientific data."</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 13 = "POST_ACC_LEVEL" = ASCII_INTEGER = 87 = 1 = "N/A" = "I1" = "This bit gives the post acceleration level used for this format. The field takes one of the following values: 0 = Low 1 = High"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER	= COLUMN = 14



NAME	= "ALTERNING_POST_ACC_SWITCH"
DATA TYPE	= ASCII INTEGER
START BYTE	= 89
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "11"
DESCRIPTION	= "This bit indicates the post acceleration mode.
	If set (1) it is alternating else it is fixed."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 15
NAME	= "POST ACC HIGH LEVEL REFERENCE"
DATA TYPE	= ASCII REAL
START_BYTE	= 91
—	= 3
BYTES	
UNIT	= "N/A"
FORMAT	= "F3.1"
DESCRIPTION	"This parameter gives the post-acceleration high level reference value. It is retrieved from the
	<pre>accompanied PAHLR.asc file in the time range where applicable, if not it is set by default to 6.0. The post-acceleration index can be any value between 0 to 7. But calibration information exists only for post-acceleration index = 0, 3, 6. The calibrated values are: 0 : 39 Volts 3 : 1902 Volts</pre>
	6 : 3615 Volts"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 16
NAME	= "AUTO_REDUC_CHANGE_SWITCH"
DATA TYPE	= ASCII INTEGER
START BYTE	= 95
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	"This bit indicates whether automatic data reduction change is enabled or not. 0 = Disabled
	1 = Enabled"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 17
NAME	= "COMPRESSION SWITCH"
DATA TYPE	= ASCII INTEGER
START BYTE	= 97
BYTES	= 1
UNIT	= "N/A"
	= "I1"
FORMAT	
DESCRIPTION	<pre>= "This bit indicates whether data compression is enabled or not. 0 = Disabled 1 = Enchlad"</pre>
END_OBJECT	1 = Enabled" = COLUMN
OBJECT	= COLUMN
	= 18
COLUMN_NUMBER NAME	- 10 = "FIFO_FILLING"
14131-111	



DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 99
—	
BYTES	= 3
UNIT	= "N/A"
FORMAT	= "I3"
DESCRIPTION	= "This gives the approximate number of 1355 link
22001111101	
	packets in the TM FIFO. To convert to words,
	unpack the F8 code and multiply by 3."
END OBJECT	= COLUMN
_	
ODIECH	
OBJECT	= COLUMN
COLUMN_NUMBER	= 19
NAME	= "PROM_EEPROM_SECTION_1_16_LOADED"
DATA_TYPE	
START_BYTE	= 103
—	
BYTES	= 2
UNIT	= "N/A"
FORMAT	= "I2"
DESCRIPTION	= "This parameter gives the program code currently
DESCRIPTION	
	loaded and running in RAM. It is coded as:
	0 = PROM
	1-16 = EEPROM section $0-15"$
END OBJECT	= COLUMN
END_ODDEC1	
OBJECT	= COLUMN
COLUMN_NUMBER	= 20
NAME	= "SAMPLE_PROCESSING_OVERRUN"
DATA TYPE	= ASCII INTEGER
START BYTE	= ASCII_INTEGER = 106
—	
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "11"
DESCRIPTION	= "This bit is set if a process overruns,
	i.e. the current data processing is not
	finished when a new is requested."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 21
NAME	= "SWEEP_PROCESSING_OVERRUN"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 108
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "This bit is set if a process overruns,
	i.e. the current data processing is not
	finished when a new is requested."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 22
NAME	= "POST_PROCESSING_OVERRUN"
DATA TYPE	= ASCII INTEGER
START BYTE	= 110
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "This bit is set if a process overruns,
-	i.e. the current data processing is not
	finished when a new is requested."
END_OBJECT	= COLUMN



NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 23 = "SOLAR_WIND_ENERGY_START_INDEX" = ASCII_INTEGER = 112 = 3 = "N/A" = "I3" = "This parameter gives the energy start index when in the 32 level energy mode."</pre>
END_OBJECT	= COLUMN
NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 24 = "RESET_DUE_TO_WATCHDOG_OR_MACHINE_ERROR" = ASCII_INTEGER = 116 = 1 = "N/A" = "I1" = "This bit will set if the experiment has rebooted due to watchdog or machine error reset." = COLUMN</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	<pre>= COLUMN = 25 = "FORMAT_START_TIME_IN_UNITS_OF_31.25MS" = ASCII_INTEGER = 118 = 8 = "UNITS OF 31.25MS" = "I8" = "This parameter is the starting time of the EDF. Note that more significant bits must be taken from the ESA packet time. Some attention should be paid close in time when this 3 bytes counter swaps around. That happens at about once per 6 days."</pre>
END_OBJECT	= COLUMN
	<pre>= COLUMN = 26 = "FORMAT_LENGTH_IN_WORDS" = ASCII_INTEGER = 127 = 7 = "N/A" = "I7" = "This parameter gives the total length of</pre>
END_OBJECT	the format (EDF) in words." = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 27 = "SHADOW_MASKING_SWITCH" = ASCII_INTEGER = 135 = 1 = "N/A" = "I1" = "This bit indicates if imager data is masked (set to zero) or not for angles that are regarded</pre>



END_OBJECT	as obscured by other S/C items. 0 = Disabled 1 = Enabled." = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 28 = "BAD_HV_MASKING_SWITCH" = ASCII_INTEGER = 137 = 1 = "N/A" = "I1" = "This bit indicates if imager data is masked (set to zero) or not for angles/energies that can not be reached due to insufficient or too inaccurate HV. 0 = Disabled</pre>
END_OBJECT	1 = Enabled." = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END OBJECT	<pre>= COLUMN = 29 = "ERROR" = ASCII_INTEGER = 139 = 3 = "N/A" = "I3" = "If this parameter is not equal to 0, the data decompression process is invalid." = COLUMN</pre>
FUD_ODOFCI	

Detailed description of those parameters is provided in documents [AD 3].

4.3.3.5.2 The description of the IMA science data

The IMA sensor observes charged particles (ions) within the near-Venus space, and discriminates them by energy, angle of arrival, and mass species. Depending upon the science mode selected, data information may be reduced aboard the spacecraft by integrations in the measured parametric space azimuth×mass×energy×polar-angles. The resulting size of the data set array may therefore vary with respect to the applicable mode. To maintain the fixed-width table structure, science data arrays of a same type of sampling are grouped into a same data product, and formatted and stored as row vectors within a data table object. Each row of the storage table consists of a series of particle counts that are collected and compressed while scanning the entire parametric space of one complete cycle of measurements. The size of the table width is strictly tied to the science mode selected.

The linear storage data model is the chosen format for accommodating multi-dimensioned arrays of homogeneous elements in fixed length data files with no-repeating heading columns information. The following example, as illustrated in the Figure 15, shows a 3-dimensional array with arbitrary parameters X, Y, Z. The corresponding PDS TABLE object in use for storing the reformatted data is depicted in the bottom right of this panel and written below. The algorithm transposing the 3-dimensional array into a row vector structure keeps the rightmost axis of the array sequence varying the fastest in order to satisfy compliance with the ordering used in the IDL programming language (and Fortran) for visualization of scientific data.

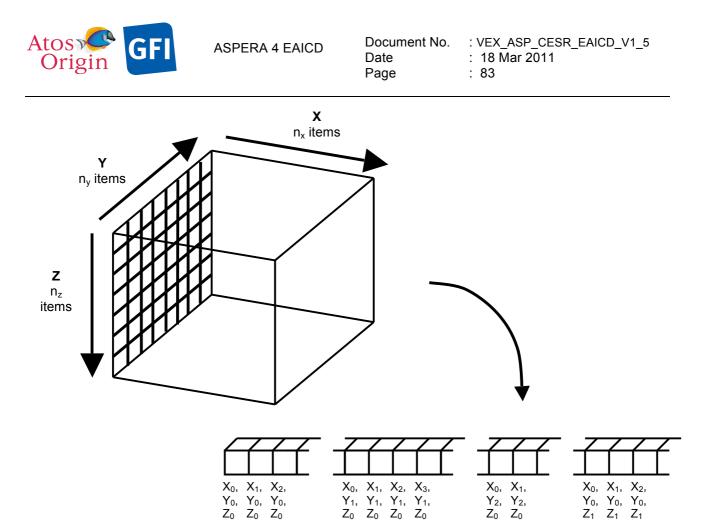


Figure 15. Conceptual view of the transpose operation between a3D geometry data storage and the PDS TABLE data object storing data in columns.

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	
OBJECT NAME DATA_TYPE START_BYTE BYTES	
UNIT	= "N/A"
FORMAT DESCRIPTION	<pre>= "I5" = "Particles (counts/accumulation) counted in the current n_x, n_y, n_z sector index. Within the X Y Z matrix, particle counts are displayed as acquired in the corresponding mode with the first index varying the fastest."</pre>
ITEMS ITEM_BYTES END_OBJECT END_OBJECT	= n _x *n _y *n _z = 6 = COLUMN = DATA_SCIENCE_TABLE

Atos GFI Origin	ASPERA 4 EAICD	Document No. Date Page	: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 84
--------------------	----------------	------------------------------	--

4.3.3.5.2.1 The description of the IMA science data in mode MSPO:

The energy deflection is stepped through 32 levels starting at the solar wind start index. For each scan all data for the two masses protons and alpha (table look up) are integrated over the sunward facing sectors. This produces a maximum of 15 sets of 2 masses \times 32 energy-levels spectra.

As many as can be fitted (on the average to stay within the TM capacity) in the current TM mode block size are transmitted. Therefore, data for all sets may not always be returned. The Number_of_sets_in_minimum_mode field value specifies the number of set in a record for the minimum modes. This number may vary between records of a same processed level-1 data file from 0 to 15, making necessary the use of separate data products for storing those data using fewer sets in a fixed width table structure. On the other hands, this makes useless the external files (FMT) referenced by include pointers since a number of different TABLE objects use different definitions.

For the IMA MSPO science data storage, it exists a total of 15 possible data products for containing block of data of each number of sets. Within each corresponding data product label file, only one science data TABLE object is defined, wherein a ROW_PREFIX_BYTES keyword value is indicating the size in bytes that are accounted in the preceding and parallel heading table, as shown in the following object description.

NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS	<pre>= ASCII = Number of rows within the data file = 1</pre>
FORMAT DESCRIPTION ITEMS	= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1
ITEM_BYTES END_OBJECT	-
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.2 The description of the IMA science data in mode MSIS:

The energy deflection is stepped through all 96 levels for each of the 16 entrance steps. For each scan all data for 6 selected ion species (table look up) are integrated over all angles (azimuth and polar). This produces a maximum of 5 sets of 6 masses \times 96 energy-levels spectra.

As many as can be fitted (on the average to stay within the TM capacity) in the current TM mode block size are transmitted. Therefore, data for all sets may not always be returned. The Number_of_sets_in_minimum_mode field value specifies the number of set in a record for the minimum modes. This number may vary between records of a same processed level-1 data file from 0 to 5, making necessary the use of separate data products for storing those data using fewer sets in a fixed width table structure. On the other hands, this makes useless the external files (FMT) referenced by include pointers since a number of different TABLE objects use different definitions.



For the IMA MSIS science data storage, it exists a total of 5 possible data products for containing block of data of each number of sets. Within each corresponding data product label file, only one science data TABLE object is defined, wherein a ROW_PREFIX_BYTES keyword value is indicating the size in bytes that are accounted in the preceding and parallel heading table, as shown in the following object description.

ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS	
OBJECT	= COLUMN
COLUMN NUMBER	= 1
NAME —	= "IMA COUNTS"
DATA TYPE	= ASCII INTEGER
START_BYTE	= 1
BYTES	= 3456*n _{sets} +2
UNIT	= "N/A"
FORMAT	= "I5"
DESCRIPTION	= "Particles (counts/accumulation) counted in the
	current mass, energy and set sector.
	Within the mass energy set matrix,
	particle counts are displayed as acquired
	in the MSIS mode with the first index varying
	the fastest."
ITEMS	$= 576 \star n_{sets}$
ITEM_BYTES	= 6
END_OBJECT	= COLUMN
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.3 The description of the IMA science data in mode MEXM:

The energy deflection is stepped through all 96 levels for each of the 16 entrance steps. For each scan all data for 32 mass bins are integrated over all angles (azimuth and polar). This produces a maximum of 5 sets of 32 mass-bins \times 96 energy-levels spectra.

As many as can be fitted (on the average to stay within the TM capacity) in the current TM mode block size are transmitted. Therefore, data for all sets may not always be returned. The Number_of_sets_in_minimum_mode field value specifies the number of set in a record for the minimum modes. This number may vary between records of a same processed level-1 data file from 0 to 5, making necessary the use of separate data products for storing those data using fewer sets in a fixed width table structure. On the other hands, this makes useless the external files (FMT) referenced by include pointers since a number of different TABLE objects use different definitions.

For the IMA MEXM science data storage, it exists a total of 5 possible data products for containing block of data of each number of sets. Within each corresponding data product label file, only one science data TABLE object is defined, wherein a ROW_PREFIX_BYTES keyword value is indicating the size in bytes that are accounted in the preceding and parallel heading table, as shown in the following object description.

OBJECT NAME ROW PREFIX BYTES	<pre>= DATA_SCIENCE_TABLE = "IMA_SPECTRUM_DATA_M05" = 141</pre>
INTERCHANGE_FORMAT ROWS COLUMNS	<pre>= ASCII = Number of rows within the data file = 1</pre>
ROW_BYTES OBJECT	= 18432*n _{sets} +2 = COLUMN



COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 18432*n_{sets} +2 = "N/A"</pre>
FORMAT	= "I5"
DESCRIPTION	<pre>= "Particles (counts/accumulation) counted in the current mass, energy and set sector. Within the mass energy set matrix, particle counts are displayed as acquired in the MEXM mode with the first index varying the fastest."</pre>
ITEMS	= 3072*n _{sets}
ITEM_BYTES	= 6
END_OBJECT	= COLUMN
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.4 The description of the IMA science data in mode NRM0:

The energy deflection is stepped through all 96 steps for each of the 16 entrance steps. In normal mode (group), science data are always delivered as row vectors and stored in the azimuth×mass×energy×polarangle columns of the data TABLE object, wherein azimuth being the fastest varying index.

ROW_PREFIX_BYTES INTERCHANGE FORM	= Number of rows within the data file = 1
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= "IMA_COUNTS" = ASCIT_INTEGER = 1 = 884738 = "N/A" = "I5" = "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the NRMO mode with the first index varying the fastest." = 147456 = 6</pre>
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.5 The description of the IMA science data in mode NRM1:

OBJECT	= DATA_SCIENCE_TABLE
NAME	= "IMA_SPECTRUM_DATA_M09"
ROW_PREFIX_BYTES	= 141
INTERCHANGE_FORMAT	= ASCII
ROWS	= Number of rows within the data file
COLUMNS	= 1



ROW_BYTES	= 442370
OBJECT	= COLUMN
COLUMN_NUMBER	= 1
NAME	= "IMA COUNTS"
DATA_TYPE	= ASCII_INTEGER
START BYTE	= 1
BYTES	= 442370
UNIT	= "N/A"
FORMAT	= "I5"
DESCRIPTION	current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the NRM1 mode with the first index varying
ITEMS	the fastest." = 73728
ITEMS ITEM BYTES	
END OBJECT	-
END_OBOECT	
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.6 The description of the IMA science data in mode NRM2:

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORM ROWS COLUMNS ROW_BYTES	<pre>MAT = ASCII = Number of rows within the data file = 1</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 221186 = "N/A" = "I5" = "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the NRM2 mode with the first index varying the fastest." = 36864 = 6</pre>
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.7 The description of the IMA science data in mode NRM3:

OBJECT	= DATA_SCIENCE_TABLE
NAME	= "IMA_SPECTRUM_DATA_M11"
ROW_PREFIX_BYTES	= 141
INTERCHANGE_FORMAT	= ASCII



ROWS COLUMNS ROW_BYTES	<pre>= Number of rows within the data file = 1 = 110594</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	= 1 = 110594 = "N/A" = "I5"
ITEMS ITEM_BYTES END_OBJECT	<pre>the fastest." = 18432 = 6 = COLUMN</pre>

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.8 The description of the IMA science data in mode NRM4:

ROW_PREFIX_BYTES INTERCHANGE_FORM	<pre>HAT = ASCII = Number of rows within the data file = 1</pre>
COLUMN_NUMBEF	= "IMA COUNTS"
DATA_TYPE	= ASCII_INTEGER
START BITE	= 1
BYTES	
UNIT	,
FORMAT	
DESCRIPTION	<pre>= "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the NRM4 mode with the first index varying the fastest."</pre>
ITEMS	= 9216
ITEM BYTES	= 6
END_OBJECT	= COLUMN
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.9 The description of the IMA science data in mode NRM5:

OBJECT	=	DATA_SCIENCE_TABLE
NAME	=	"IMA_SPECTRUM_DATA_M13"



ROW_PREFIX_BYTES INTERCHANGE_FORM ROWS COLUMNS ROW_BYTES	<pre>= 141 AT = ASCII = Number of rows within the data file = 1 = 27650</pre>
	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 27650 = "N/A" = "I5"</pre>
ITEMS	= 4608
ITEM_BYTES	= 6
END_OBJECT	= COLUMN

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.10 The description of the IMA science data in mode NRM6:

	<pre>= Number of rows within the data file = 1</pre>
COLUMN_NUMBEF NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 13826 = "N/A" = "I5" = "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the NRM6 mode with the first index varying the fastest." = 2304 = 6</pre>
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.11 The description of the IMA science data in mode NRM7:



	<pre>HAT = ASCII = Number of rows within the data file = 1</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 6914 = "N/A" = "I5" = "Particles (counts/accumulation) counted in the current azimuth, mass and energy sector. Within the azimuth mass energy matrix, particle counts are displayed as acquired in the NRM7 mode with the first index varying the fastest." = 1152 = 6</pre>
END_OBJECT	= DATA_SCIENCE_TABLE

The description of the IMA science data in mode HAR0: 4.3.3.5.2.12

The energy deflection is stepped through all 96 steps for each of the 16 entrance steps. In burst high angular resolution mode (group), science data are always delivered as row vectors and stored in the azimuth×mass×energy×polar-angle columns of the data TABLE object, wherein azimuth being the fastest varying index.

ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS	= ASCII = Number of rows within the data file = 1
START_BYTE BYTES UNIT FORMAT	<pre>= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 2359298 = "N/A" = "I5" = "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the HARO mode with the first index varying</pre>
ITEMS ITEM_BYTES END_OBJECT	



END_OBJECT =

= DATA_SCIENCE_TABLE

4.3.3.5.2.13 The description of the IMA science data in mode HAR1:

NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS	<pre>= ASCII = Number of rows within the data file = 1</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 1179650 = "N/A" = "I5" = "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired</pre>
ITEMS ITEM_BYTES END_OBJECT	<pre>in the HAR1 mode with the first index varying the fastest." = 196608 = 6 = COLUMN</pre>

END_OBJECT

= DATA_SCIENCE_TABLE

_

4.3.3.5.2.14 The description of the IMA science data in mode HAR2:

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	<pre>= ASCII = Number of rows within the data file = 1</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 589826 = "N/A" = "I5"</pre>
ITEMS ITEM_BYTES	= 98304 = 6



END_OBJECT

= COLUMN

END_OBJECT

COLOIN

OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.15 The description of the IMA science data in mode HAR3:

NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT	<pre>= ASCII = Number of rows within the data file = 1</pre>
START_BYTE BYTES UNIT FORMAT	= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 294914 = "N/A"
ITEM_BYTES	= 49152

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.16 The description of the IMA science data in mode HAR4:

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	<pre>= ASCII = Number of rows within the data file = 1</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 147458 = "N/A"
ITEMS	= 24576



ITEM_BYTES = 6 END_OBJECT = CC

= COLUMN

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.17 The description of the IMA science data in mode HAR5:

ROW_PREFIX_BYTES INTERCHANGE_FORMAT	= ASCII = Number of rows within the data file = 1
BYTES UNIT FORMAT	= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 73730 = "N/A"
ITEMS ITEM_BYTES END_OBJECT	= 12288 = 6

END_OBJECT = DATA_SCIENCE_TABLE

4.3.3.5.2.18 The description of the IMA science data in mode HAR6:

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 36866 = "N/A"</pre>



ITEMS	= 6144
ITEM_BYTES	= 6
END_OBJECT	= COLUMN

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.19 The description of the IMA science data in mode HAR7:

ROW_PREFIX_BYTES INTERCHANGE_FORMAT	<pre>= ASCII = Number of rows within the data file = 1</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 18434 = "N/A"
ITEMS	
ITEM_BYTES	= 6
END_OBJECT	= COLUMN

END_OBJECT = DATA_SCIENCE_TABLE

4.3.3.5.2.20 The description of the IMA science data in mode EXM0:

The energy deflection is stepped through all 96 steps for each of the 16 entrance steps. In normal mode (group), science data are always delivered as row vectors and stored in the azimuth×mass×energy×polar-angle columns of the data TABLE object, wherein azimuth being the fastest varying index.

The energy deflection is stepped through all 96 steps for each of the 16 entrance steps. In burst energymass matrix mode (group), science data are always delivered as row vectors and stored in the azimuth×mass×energy×polar-angle columns of the data TABLE object, wherein azimuth being the fastest varying index.

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	<pre>= DATA_SCIENCE_TABLE = "IMA_SPECTRUM_DATA_M24" = 141 = ASCII = Number of rows within the data file = 1 = 4718594</pre>
OBJECT	= COLUMN
COLUMN_NUMBER	= 1
NAME	= "IMA_COUNTS"
DATA_TYPE	= ASCII_INTEGER



BYTES UNIT	= 1 = 4718594 = "N/A" = "I5"
DESCRIPTION	<pre>= "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the EXMO mode with the first index varying the fastest."</pre>
ITEMS	= 786432
ITEM_BYTES	= 6
END_OBJECT	= COLUMN

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.21 The description of the IMA science data in mode EXM1:

ROW_PREFIX_BYTES INTERCHANGE_FORMAT	= ASCII = Number of rows within the data file = 1
START_BYTE BYTES UNIT FORMAT	= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 2359298 = "N/A"
ITEMS ITEM_BYTES END_OBJECT	= 393216 = 6

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.22 The description of the IMA science data in mode EXM2:

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	<pre>= DATA_SCIENCE_TABLE = "IMA_SPECTRUM_DATA_M26" = 141 = ASCII = Number of rows within the data file = 1 = 1179650</pre>
OBJECT	= COLUMN
COLUMN_NUMBER	= 1



NAME DATA_TYPE START_BYTE BYTES	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 1179650</pre>
UNIT	= "N/A"
FORMAT	= "I5"
DESCRIPTION	<pre>= "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the EXM2 mode with the first index varying the fastest."</pre>
ITEMS	= 196608
ITEM_BYTES	= 6
END_OBJECT	= COLUMN

END_OBJECT = DATA_SCIENCE_TABLE

4.3.3.5.2.23 The description of the IMA science data in mode EXM3:

ROW_PREFIX_BYTES INTERCHANGE_FORMAT	<pre>= ASCII = Number of rows within the data file = 1</pre>
	<pre>= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 589826 = "N/A" = "I5" = "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the EXM3 mode with the first index varying the fastest."</pre>
ITEMS ITEM_BYTES END OBJECT	= 6
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.3.5.2.24 The description of the IMA science data in mode EXM4:

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	<pre>= DATA_SCIENCE_TABLE = "IMA_SPECTRUM_DATA_M28" = 141 = ASCII = Number of rows within the data file = 1 = 294914</pre>
- OBJECT COLUMN_NUMBER	= COLUMN = 1



NAME DATA_TYPE START_BYTE BYTES	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 294914</pre>
UNIT	= "N/A" = "T5"
FORMAT	=12
DESCRIPTION	<pre>= "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the EXM4 mode with the first index varying the fastest."</pre>
ITEMS	= 49152
ITEM_BYTES	= 6
END_OBJECT	= COLUMN

END_OBJECT = DATA_SCIENCE_TABLE

4.3.3.5.2.25 The description of the IMA science data in mode EXM5:

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	= ASCII = Number of rows within the data file = 1
DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= 1 = "IMA_COUNTS" = ASCII_INTEGER = 1 = 147458 = "N/A" = "I5" = "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the EXM5 mode with the first index varying the fastest."</pre>
ITEMS ITEM_BYTES END OBJECT	= 6

END_OBJECT = DATA_SCIENCE_TABLE

4.3.3.5.2.26 The description of the IMA science data in mode EXM6:

OBJECT	= DATA_SCIENCE_TABLE
NAME	= "IMA_SPECTRUM_DATA_M30"
ROW_PREFIX_BYTES	= 141
INTERCHANGE_FORMAT	= ASCII
ROWS	= Number of rows within the data file
COLUMNS	= 1
ROW_BYTES	= 73730



OBJECT COLUMN_NUMBER NAME DATA TYPE	= COLUMN = 1 = "IMA_COUNTS" = ASCII INTEGER
START BYTE	= 1
BYTES	= 73730
UNIT	= "N/A"
FORMAT	= "15"
DESCRIPTION	<pre>= "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the EXM6 mode with the first index varying the fastest."</pre>
ITEMS	= 12288
ITEM_BYTES	= 6
END_OBJECT	= COLUMN

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.5.2.27 The description of the IMA science data in mode EXM7:

ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS	
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= "IMA_COUNTS" = ASCII_INTEGER = 1 = 36866 = "N/A" = "I5"</pre>
ITEMS ITEM_BYTES	<pre>= "Particles (counts/accumulation) counted in the current azimuth, mass and energy sector. Within the azimuth mass energy matrix, particle counts are displayed as acquired in the EXM7 mode with the first index varying the fastest." = 6144 = 6 = COLUMN</pre>

END_OBJECT

= DATA_SCIENCE_TABLE

4.3.3.6 Description of Instrument

The description of the instrument is done in above and as a brief overview in the INST.CAT catalog file.

4.3.3.7 Parameters Index File Definition



Document No. : VEX_ASP_CESR_EAICD_V1_5 Date : 18 Mar 2011 Page : 99

4.3.3.8 Mission Specific Keywords

Mission specific keywords should all have the MISSION_ID "VEX" prefix.

4.3.4 IMA Housekeeping Calibrated Data Product Design (Level 3)

Typically 2 types of HK data are provided in TM packets during the nominal mission. A number of HK data are generated onboard by the main unit and are common to all sensors. Another series of HK are monitored and provided by the processor unit located nearby the IMA sensor. These information describe the current operating state of the IMA experience. It is used to determine, among other things, IMA voltages, currents, temperatures and so on. Therefore, it may exist 2 HK data product files, one for each processor from which they derive. IMA level 3 HK contains calibrated IMA housekeeping data with PDS detached labels. The incoming raw HK values are converted into physical values when calibration is applied. This type of data is identified by the following data descriptors within the current label file:

PRODUCT_TYPE	=	RDR	/*	EDR	for	RAW,	RDR	for	calibrated	data	*/
PROCESSING LEVEL ID	=	3									

HK parameters are listed in the following fields table in the same order that they appear in the data product files.

Rank	Field	Rank	Field
M	lain Unit Housekeeping		
1	UTC correlated Time	10	HK V -5V
2	OBT Time	11	Sun sensor 1
3	SW version	12	Sun sensor 2
4	HK i +30V	13	IMA +/- 5V on/off
5	HK i +5V	14	IMA +30V on/off
6	HK V +12V	15	IMA +/- 12V on/off
7	HK V +30V	16	SW mode
8	HK V +5V	17	Cpu load
9	HK V –12V	18	IMA link status
11	NA Housekeeping		
1	UTC correlated Time	19	Grid LV monitor
2	OBT Time	20	Sensor unit temperature
3	Last command status	21	DPU temperature
4	Current data reduction mode	22	Energy deflection HV reference
5	HV switch status	23	Post acceleration low level reference
6	+28V MCP HV present	24	Direct command switch
7	+28V Opto HV present	25	Energy deflect LV reference
8	+28V main HV present	26	Post acceleration high level reference
9	Post acceleration mode	27	TM FIFO overflow
10	Current SID number	28	Entrance HV reference
11	New command received toggle bit	29	Grid LV reference
12	FIFO filling in terms of internal packets in F8	30	Post acceleration level
13	First word command return	31	Entrance upper HV monitor
14	Opto HV monitor	32	MCP HV default reference
15	MCP HV monitor	33	Opto HV default reference
16	Energy deflection HV monitor	34	Entrance lower HV monitor
17	Energy deflection LV monitor	35	MCP HV current reference
18	Post acceleration HV monitor	36	Opto HV current reference

Table 28. IMA housekeeping contents.



The table objects are detailed in the following paragraph.

4.3.4.1 File Characteristics Data Elements

The following elements are present in the labels for every IMA housekeeping calibrated data product, and they describe the basic characteristics of the data product in terms of structure and naming:

/* FILE CHARACTERISTIC DATA	ELEMENTS */
PRODUCT_ID	= this element defines the current product file name,
	without extension
RECORD_TYPE	= FIXED_LENGTH
RECORD_BYTES	= this element indicates the number of bytes in a data
	record, including record terminators and separators
	Field could take one of the following value:
	185 for HK3IMAX data type
	121 for HK3MUXX data type
FILE_RECORDS	= this element indicates the number of records within
	the data file

4.3.4.2 Data Object Pointers Identification Data Elements

The IMA housekeeping calibrated data are organized as ASCII table. The data object pointers that reference TAB files are:

^HK_MU_TABLE ^HK_IMA_TABLE

4.3.4.3 Instrument and Detector Descriptive Data Elements

See the applicable section 4.3.3.3

4.3.4.4 Structure Definition of Instrument Parameter Objects

N/A

4.3.4.5 Data Object Definition

This section of the label defines the structure and content of the IMA MU and IMA(-DPU) housekeeping calibrated data products.

4.3.4.5.1 The description of the IMA MU-housekeeping table:

Each MU HK data file contains an 18 columns table with the calibrated HK data when calibration is applied.

OBJECT	= HK_MU_TABLE
NAME	= "IMA_HKMU"
INTERCHANGE_FORMAT	= ASCII
ROWS	= Number of rows within the data file
COLUMNS	= 18
ROW_BYTES	= 121
^STRUCTURE	= "IMA_SPECTRUM_HKMU.FMT"
END_OBJECT	= HK_MU_TABLE

The structure of the TABLE object is described in the file IMA_SPECTRUM_HKMU.FMT as follows:

/* Contents of format file "IMA_SPECTRUM_HKMU.FMT" */
OBJECT = COLUMN
COLUMN NUMBER = 1



NAME DATA TYPE	= "UTC" = TIME
START BYTE	= 1
BYTES	= 23
UNIT	= "N/A"
DESCRIPTION	= "This column represents the UTC of the
	IMA HK data set in PDS standard format
	YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 2
NAME	= "OBT"
DATA_TYPE	= CHARACTER
START_BYTE	= 26
BYTES UNIT	= 19 = "N/A"
DESCRIPTION	= "On board Time (OBT) is represented as :
DESCRIPTION	<pre></pre>
	with
	<pre><reset number="">: integer starting at 1</reset></pre>
	Reset number 1 starts at 2005-03-01T00:00:00 UTC
	<unit seconds="">: 10 digits number of unit seconds</unit>
	<fractional seconds="">: 5 digits number of fractional</fractional>
	seconds expressed as multiples of 2^-16 seconds"
END OBJECT	= COLUMN
_	
OBJECT	= COLUMN
COLUMN_NUMBER	= 3
NAME	= "SW_VERSION"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	$= \frac{47}{5}$
BYTES	= 5
UNIT	= "N/A" = "15"
FORMAT	= 15 = "Software version
DESCRIPTION	To decode into Binary format. Bit description:
	patchVersion [3:0]
	minorVersion [8:4]
	majorVersion [13:9]
	releaseClass [15:14]: 1 (D), 2 (T), 3 (R)"
END OBJECT	= COLUMN
—	
OBJECT	= COLUMN
COLUMN_NUMBER	= 4
NAME	= "HK_I_PLUS_30V"
DATA_TYPE	= ASCII_REAL
START_BYTE	= 53
BYTES	
UNIT	= "MILLIAMPERE" = "F6.2"
FORMAT DESCRIPTION	= "HK i +30V in milli-amperes"
END OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 5
NAME	= "HK_I_PLUS_5V"
DATA_TYPE	= ASCII_REAL
START_BYTE	= 60
BYTES	= 7
UNIT	= "MILLIAMPERE"
FORMAT	= "F7.2"



Document No. : VEX_ASP_CESR_EAICD_V1_5 Date : 18 Mar 2011 Page : 102

DESCRIPTION = "HK i +5V in milli-amperes" END_OBJECT = COLUMN = COLUMN OBJECT COLUMN_NUMBER= 6NAME= "HK_V_PLUS_12V"DATA_TYPE= ASCII_REALSTART_BYTE= 68BYTES= 5UNIT= "VOLT"FORMAT= "F5.2"DESCRIPTION= "HK V +12V in Volts"D_OBJECT= COLUMN COLUMN NUMBER END OBJECT = COLUMN OBJECT JECT= COLUMNCOLUMN_NUMBER= 7NAME= "HK_V_PLUS_30V"DATA_TYPE= ASCII_REALSTART_BYTE= 74BYTES= 6UNIT= "VOLTS"FORMAT= "F6.2"DESCRIPTION= "HK V +30V in Volts"ID OBJECT= COLUMN END OBJECT = COLUMN BJECT= COLUMNCOLUMN_NUMBER= 8NAME= "HK_V_PLUS_5V"DATA_TYPE= ASCII_REALSTART_BYTE= 81BYTES= 4UNIT= "VOLT"FORMAT= "F4.2"DESCRIPTION= "HK V +5V in Volts"ID_OBJECT= COLUMN OBJECT END OBJECT OBJECT = COLUMN JECT = COLUMN COLUMN_NUMBER = 9 NAME = "HK_V_MINUS_12V" DATA_TYPE = ASCII_REAL START_BYTE = 86 BYTES = 6 UNIT = "VOLT" FORMAT = "F6.2" DESCRIPTION = "HK V -12V in VOLT D_OBJECT = COLUMN = "HK V -12V in Volts" END OBJECT = COLUMN OBJECT = COLUMN UNIT = "VOLT" FORMAT = "F5.2" DESCRIPTION = "HK V = "HK V -5V in Volts" END OBJECT = COLUMN OBJECT = COLUMN = 11 COLUMN_NUMBER NAME = "SUN_SENSOR_1" DATA_TYPE = ASCII_INTEGER



BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "SIN SENSOR 1 output" END_OBJECT = COLUMN COLUMN_NUMBER = 12 NAME = "SUN_SENSOR_2" DATA_TYPE = ASGIT_INTSGER START_BYTE = 101 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "SIN sensor 2 output" END_OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "INA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASGIT_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "SIN +/-SV on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "INA_PLUS_30V_ON_OFF" DATA_TYPE = ASGIT_INTEGER START_BYTE = 105 START_DYTE = 105 START_DYTE = 105 START_DYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "INA_PLUS_30V_ON_OFF" DATA_TYPE = ASGIT_INTEGER START_DYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "INA FORMAT = "INA FORMAT = "INA START_DYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "INA FORMAT = "INA FORMAT = "INA START_DYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "INA FORMAT = "INA FORMAT = "INA START_DYTE = ASGIT_INTEGER START_DYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "INA DESCRIPTION = "INA +/-12V ON_OFF" DATA_TYPE = ASGIT_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "INA FORMAT = "INA PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASGIT_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "INA FORMAT = "INA FORMAT = "INA FORMAT = "INA DESCRIPTION = "INA +/-12V ON_OFF" DATA_TYPE = ASGIT_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "INA FORMAT = COLUMN FORMAT = COLUMN FORMAT = COLUMN FORMAT = COLUMN FORMAT = TOTA FORMAT =	UNIT	= "N/A"
FORMAT= "I1"DESCRIPTION= "SUN sensor 1 output"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNNAME= "SUN SENSOR_2"DATA_TYPE= ASCIT_INTEGERSTART_BYTE= 101BYTES= 1UNIT= "N/A"FORMAT= "I1"DESCRIPTION= "Sin sensor 2 output"OBJECT= COLUMNCOLUMN_NUMBER= 13NAME= "ITA_PLUS_MINUS_SV_ON_OFF"DATA_TYPE= ASCIT_INTEGERSTART_BYTE= 103BYTRS= 1UNIT= "N/A"FORMAT= "ITADESCRIPTION= "ITA +/-SV on/offThe field takes one of the following values:0 off= COLUMNOBJECT= COLUMNOBJECT= COLUMNCOLOMN_NUMBER= 14NAME= "ITA PLUS_3OV_ON_OFF"DATA_TYPE= ASCIT_INTEGERSTART_BYTE= 105BYTRS5= 1UNIT= "N/A"FORMAT= "I"DESCRIPTION= "IMA PLUS_SMINUS_12V_ON_OFF"DESCRIPTION= "IMA PLUS_MINUS_12V_ON_OFF"DATA_TYPE= ASCIT_INTEGERSTART_BYTE= 107RATA_TYPE= ASCIT_INTEGERSTART_BYTE= 107NAME= "ITAUNIT= "N/A"FORMAT= 11UNIT= N/A"DESCRIPTION= TIMA +/-12V on/offTHA +/-12V on/offThe field takes one of the following values		
DESCRIPTION = "Sun sensor 1 output" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 12 NAME = "SUN SENSOR_2" DATA_TYPE = ASCII_INTEGEN START_BYTE = 101 BITESS = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "IMA PLUS_MINUS_SV_ON_OFF" DATA_TYPE = ASCII_INTEGEN START_BYTE = 103 BITESS = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-SV on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN	FURMAT	
END_OBJECT = COLUMN OBJECT = COLUMN ODJECT = COLUMN MAME = "SUN_SENSOR 2" DATA_TYPE = ASCIT_INTEGER START_BYTE = 101 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "ITMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCIT_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "SINA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN		
<pre> OBJECT = COLUMN COLUMN_NUMBER = 12 NAME = "SUN_SENSOR_2" DATA TYPE = ASCIT_INTEGER START_SYTE = 101 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "IMA_PUS_MINUS_SV_ON_OFF" DATA TYPE = ASCIT_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values:</pre>		= "Sun sensor 1 output" - COLUMN
COLUMN_NUMBER = 12 NAME "SUN SENSOR 2" DATA TYPE ASCIT_INTEGER START_BYTE = 101 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 103 NAME = "IMA FJUS_MINUS_SY_ON_OFF" DATA_TYPE = ASCIT_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-SV on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECN OBJECT = COLUMN OBJECN OBJECN OBJECN OBJ	END_OBGECT	
COLUMN_NUMBER = 12 NAME - "SUN SENSOR 2" DATA TYPE - ASCIT_INTEGER START_FYTE = 101 BYTES = 1 UNIT - "N/A" FORMAT - "II" DESCRIPTION = "SUN SENSOR 2 output" END_OBJECT - COLUMN OBJECT - COLUMN OBJECT - COLUMN OBJECT - COLUMN COLUMN_NUMBER = 13 NAME - "IMA FJUS_MINUS_5V_ON_OFF" DATA_TYPE - ASCIT_INTEGER START_BYTE = 103 BYTES - 1 UNIT - "N/A" FORMAT = "II" DESCRIPTION - "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT - COLUMN OBJECT -	OBJECT	= COLUMN
DATA TYPE = ASCII_INTEGER START BYTE = 101 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "IMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/Off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = 'IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "IIMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "IIMA +/-12V on/off The field takes one of the following values: 0 off UNIT = "N/A" FORMAT = "IIMA +/-12V on/off The field takes one of the following values: 0 off UNIT = "N/A" FORMAT = "IIMA +/-12V on/off The field takes one of the following values: 0 off The field takes one of the following values: 0 off END_OBJECT = COLUMN		
DATA TYPE = ASCII_INTEGER START BYTE = 101 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "IMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/Off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = 'IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "IIMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "IIMA +/-12V on/off The field takes one of the following values: 0 off UNIT = "N/A" FORMAT = "IIMA +/-12V on/off The field takes one of the following values: 0 off UNIT = "N/A" FORMAT = "IIMA +/-12V on/off The field takes one of the following values: 0 off The field takes one of the following values: 0 off END_OBJECT = COLUMN	NAME —	= "SUN SENSOR 2"
START_BYTE = 101 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN ODJECT = COLUMN ODJECT = COLUMN ODJECT = COLUMN ODJECT = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN ODJECT = 11 UNIT = "N/A" FORMAT = 14 NAME = "ITA PLUS_JOV_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN ODJECT = COLUMN	DATA TYPE	= ASCII INTEGER
BYTES = 1 UNIT = "\/A" FORMAT = "II" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 1 UNIT = "\/A" FORMAT = 111" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 14 NAME = "IMA PLUS JOV_ON_OFF" DATA TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "\/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 105 BYTES = 1 UNIT = "\/A" FORMAT = "II" DESCRIPTION = "IMA PLUS MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "\/A" FORMAT = "II" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN	START BYTE	= 101
FORMAT = "I1" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "ITMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-SV on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "I1A" DESCRIPTION = "IAA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN	BYTES	= 1
OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "IMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	UNIT	= "N/A"
OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "IMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	FORMAT	= "I1"
OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "IMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	DESCRIPTION	= "Sun sensor 2 output"
COLUMN_NUMBER = 13 NAME = "IMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = INA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA_H/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	END_OBJECT	= COLUMN
COLUMN_NUMBER = 13 NAME = "IMA_PLUS_MINUS_5V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = INA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA_H/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		
DATA TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 14 NAME = "IMA_PLUS_3OV_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IAA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IAA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	COLUMN NUMBER	-12
DATA TYPE = ASCII_INTEGER START_BYTE = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 14 NAME = "IMA_PLUS_3OV_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IAA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IAA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	NAME	- IJ - "IMA DIUS MINUS 50 ON OFF"
START_BYTES = 103 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUM_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCIT_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCIT_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	INALILL	- ASCIT INTECED
UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 15 NAME = "IMA PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	START BYTE	= 103
UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 15 NAME = "IMA PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	BYTES	
<pre>FORMAT = "II" DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 107 START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DATA_TYPE = ASCII_INTEGER START_EYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN</pre>		
DESCRIPTION = "IMA +/-5V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_3OV_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 11 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		
The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		
END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IAA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IAA +-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		0 off
COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	END_OBJECT	
COLUMN_NUMBER = 14 NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	OBJECT	= COLUMN
NAME = "IMA_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	COLUMN NUMBER	= 14
DATA_TYPE = ASCII_INTEGER START_BYTE = 105 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	NAME	= "IMA PLUS 30V ON OFF"
BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IAA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	DATA_TYPE	= ASCII_INTEGER
BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IAA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	START_BYTE	= 105
<pre>FORMAT = "I1" DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCIT_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN</pre>		= 1
DESCRIPTION = "IMA +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCIT_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		= "N/A"
The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		
END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	DESCRIPTION	The field takes one of the following values: 0 off
OBJECT = COLUMN COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	END OBJECT	
COLUMN_NUMBER = 15 NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	—	
NAME = "IMA_PLUS_MINUS_12V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	OBJECT	= COLUMN
START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 0 off 1 on" END_OBJECT = COLUMN		
START_BYTE = 107 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 0 off 1 on" END_OBJECT = COLUMN	NAME	= "IMA_PLUS_MINUS_12V_ON_OFF"
BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		
UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN	—	
FORMAT = "I1" DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		
DESCRIPTION = "IMA +/-12V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		,
The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN		
END_OBJECT = COLUMN	DESCRIPTION	The field takes one of the following values: 0 off
	END OBJECT	
	_	
	OBJECT	= COLUMN
COLUMN NUMBER = 16	COLUMN_NUMBER	= 10



Document No. : VEX_ASP_CESR_EAICD_V1_5

NAME	= "SW MODE"
DATA_TYPE	= ASCII INTEGER
START_BYTE	= ASCII_INTEGER = 109
BYTES	= 3
UNIT	= "N/A"
FORMAT	= "N/A" = "I3"
DESCRIPTION	= "Software mode"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 17
NAME	= "CPU LOAD"
	= 17 = "CPU_LOAD" = ASCII_INTEGER = 113
DATA_TYPE START_BYTE	= 113
BYTES	= 3
UNIT	= "N/A"
FORMAT	= "N/A" = "I3"
DESCRIPTION	= "CPU load"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 18
NAME	
DATA TYPE	= "IMA_LINK_STATUS" = ASCII_INTEGER = 117
START BYTE	= 117
BYTES	= 3
UNIT	= "N/A"
FORMAT	= "I3"
DESCRIPTION	= "It contains status register of IEEE 1355 LINK Chip.
	This field value has to be decoded in Binary
	format. Bit description:
	bit: 7: ndata0A
	bit 6: crdMEM
	bit 5: datav
	bit 4: resetm
	bit 3: ffrx
	bit 2: EOP1
	bit 1: ndata0
	bit 0: nml
	In typical nominal operation one should find value
	0x41 on the link when link is working properly."
END OBJECT	= COLUMN
END_ODOECT	- COTOLIN

Detailed description of those parameters is provided in documents [AD 3].

4.3.4.5.2 The description of the IMA housekeeping table for HKs generated from the IMA unit:

Each data file (TAB) contains a 36 columns table with the calibrated HK data when calibration is applied.

OBJECT	=	HK IMA TABLE
NAME	=	"IMA_HKIMA"
INTERCHANGE_FORMAT	=	ASCII
ROWS	=	Number of rows within the data file
COLUMNS	=	36
ROW_BYTES	=	185
^STRUCTURE	=	"IMA_SPECTRUM_HKIMA.FMT"
END_OBJECT	=	HK_IMA_TABLE

The structure of the TABLE object is described in the file IMA_SPECTRUM_HKIMA.FMT as follows:

```
/* Contents of format file "IMA_SPECTRUM_HKIMA.FMT" */
         = COLUMN
OBJECT
  COLUMN_NUMBER
                   = 1
```



NT 7 N 417	
NAME DATA TYPE	= "UTC" = TIME
START BYTE	= 1
BYTES	= 23
UNIT	= "N/A"
DESCRIPTION	"This column represents the UTC of the IMA HK data set in PDS standard format YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 2
NAME	= "OBT"
DATA_TYPE	= CHARACTER
START_BYTE	= 26
BYTES UNIT	= 19 = "N/A"
DESCRIPTION	
DESCRIPTION	<pre>= "On board Time (OBT) is represented as :</pre>
	<pre><reset number="">: integer starting at 1 Reset number 1 starts at 2005-03-01T00:00:00 UTC</reset></pre>
	<unit seconds="">: 10 digits number of unit seconds <fractional seconds="">: 5 digits number of fractional</fractional></unit>
END_OBJECT	<pre>seconds expressed as multiples of 2^-16 seconds" = COLUMN</pre>
OBJECT	= COLUMN
COLUMN NUMBER	= 3
NAME	= "LAST COMMAND STATUS"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 47
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "11"
DESCRIPTION	= "Last command status
	The field takes one of the following values:
	0 ok 1 parameter out of range
	2 invalid
	3 erroneous opcode"
END OBJECT	= COLUMN
—	
OBJECT	= COLUMN
COLUMN_NUMBER	= 4
NAME	= "CURRENT_DATA_REDUCTION_MODE"
DATA_TYPE START BYTE	= ASCII_INTEGER = 49
BYTES	= 49
UNIT	$= \frac{1}{2}$
FORMAT	= "12"
DESCRIPTION	= "Current data reduction mode. The field takes one
	of the following mode index values:
	0 idle
	2 Mspo
	4 Msis
	5 Mexm
	8 Nrm0
	9 Nrm1 10 Nrm2
	10 NFM2 11 Nrm3
	12 Nrm4



	<pre>13 Nrm5 14 Nrm6 15 Nrm7 16 Har0 17 Har1 18 Har2 19 Har3 20 Har4 21 Har5 22 Har6 23 Har7 24 Exm0 25 Exm1 26 Exm2</pre>
	27 Exm3 28 Exm4 29 Exm5 30 Exm6 31 Exm7 32 Test 33 Call 34 Cal2 35 Fake"
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	= "HW_SWITCH_STATUS" = ASCII_INTEGER
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 6 = "+28V_MCP_HV_PRESENT" = ASCII_INTEGER = 56 = 1 = "N/A" = "I1" = "MCP 28V switch The field takes one of the following values: 0 No 1 Yes"</pre>
END_OBJECT	= COLUMN
OBJECT	= COLUMN



UNIT FORMAT	<pre>= 7 = "+28V_OPTO_HV_PRESENT" = ASCII_INTEGER = 58 = 1 = "N/A" = "I1" = "Opto 28V switch The field takes one of the following values: 0 No 1 Yes"</pre>
-	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	= 60 = 1 = "N/A" = "II"
END_OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 9 = "POST_ACCELREATION_MODE" = ASCII_INTEGER = 62 = 1 = "N/A" = "I1" = "Post-acceleration mode The field takes one of the following values: 0 Fixed 1 Alternating"</pre>
END_OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= "CORRENT_SID_NOMBER" = ASCII_INTEGER = 64 = 1 = "N/A" = "I1" = "IMA internal SID type"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 11 = "NEW_COMMAND_RECEIVED_TOGGLE_BIT" = ASCII_INTEGER = 66 = 1 = "N/A" = "I1" = "I1" = "The new command received toggle 0/1 bit for each new command returned in Line -First word</pre>



	command return-"
END_OBJECT	= COLUMN
	= COLUMN
COLUMN_NUMBER	= 12
NAME	<pre>= "FIFO_FILLING_IN_TERMS_OF_INTERNAL_PACKETS_IN_F8" = ASCII_INTEGER</pre>
DATA_TYPE	= ASCII_INTEGER
START_BYTE	
BYTES	= 3
UNIT	= "N/A"
	= "I3"
DESCRIPTION	= "The number of 6 byte packets held in the TM-fifo in F8 representation "
END_OBJECT	= COLUMN
OBJECT	<pre>= COLUMN = 13 = "FIRST_WORD_COMMAND_RETURN" = ASCII_INTEGER = 72 = 5 = "N/A"</pre>
COLUMN NUMBER	= 13
NAME —	= "FIRST WORD COMMAND RETURN"
DATA TYPE	= ASCII INTEGER
START BYTE	= 72
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "N/A" = "I5"
DESCRIPTION	= "The first word of the last command received"
	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 14
NAME	= "OPTO_HV_MONITOR" = ASCII_REAL
DATA_TYPE	= ASCII_REAL
START_BYTE	= 78
BYTES	= 6 = "KILOVOLT"
UNIT	= "KILOVOLT"
	= "F6.3"
DESCRIPTION	= "The Opto HV monitor in kilo-volts"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 15
NAME —	= 15 = "MCP_HV_MONITOR"
DATA TYPE	= ASCII REAL
START_BYTE	= 85
BYTES	= 6
UNIT	= "KILOVOLT"
FORMAT	= "F6.3"
DESCRIPTION	= "The MCP HV monitor in kilo-volts"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 16
NAME	= "ENERGY_DEFLECT_HV_MONITOR"
DATA_TYPE	= ASCII_REAL
START_BYTE	= 92
BYTES	= 6
UNIT	= "KILOVOLT"
FORMAT	= "F6.3"
DESCRIPTION	= "The energy deflection HV monitor in kilo-volts"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 17
NAME	= "ENERGY DEFLECT LV MONITOR"



FORMAT DESCRIPTION END_OBJECT OBJECT	<pre>= 7 = "VOLT" = "F7.3" = "The energy deflection LV monitor in Volts" = COLUMN = COLUMN</pre>
FORMAT DESCRIPTION END_OBJECT	<pre>= 18 = "POST_ACCELERATION_HV_MONITOR" = ASCII_REAL = 107 = 6 = "KILOVOLT" = "F6.3" = "The post-acceleration HV monitor in kilo-volts" = COLUMN</pre>
UNIT FORMAT	<pre>= COLUMN = 19 = "GRID_LV_MONITOR" = ASCII_INTEGER = 114 = 3 = "N/A" = "I3" = "N.A. grid grounded" = COLUMN</pre>
BYTES UNIT FORMAT	<pre>= COLUMN = 20 = "SENSOR_UNIT_TEMPERATURE" = ASCII_REAL = 118 = 7 = "CELSIUS" = "F7.2" = "The sensor unit temperature in degree Celsius" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 21 = "DPU_TEMPERATURE" = ASCII_REAL = 126 = 7 = "CELSIUS" = "F7.2" = "The DPU temperature in degree Celsius" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 22 = "ENERGY_DEFLECT_HV_REFERENCE" = ASCII_INTEGER = 134 = 4 = "ADC_UNITS" = "I4" = "The energy deflection HV reference value associated with the monitor reading"</pre>



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 110

END_OBJECT

= COLUMN

BYTES UNIT FORMAT	<pre>= COLUMN = 23 = "POST_ACCELERATION_LOW_LEVEL_REFERENCE" = ASCII_INTEGER = 139 = 1 = "ADC_UNITS" = "I1" = "The post-acceleration low level reference" = COLUMN</pre>
—	
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END OBJECT	= "DIRECT_COMMAND_SWITCH" = ASCII_INTEGER
OBJECT COLUMN_NUMBER NAME	<pre>= COLUMN = 25 = "ENERGY_DEFLECT_LV_REFERENCE" = ASCII_INTEGER</pre>
START_BYTE BYTES	= ASCII_INTEGER = 143 = 4 = "ADC_UNITS"
FORMAT DESCRIPTION END OBJECT	<pre>= "I4" = "The energy deflection LV reference value associated with the monitor reading" = COLUMN</pre>
-	
OBJECT COLUMN NUMBER	= COLUMN
DATA TYPE	<pre>= "POST_ACCELERATION_HIGH_LEVEL_REFERENCE" = ASCII_INTEGER</pre>
START_BYTE	= 148
BYTES	= 1
UNIT	= "ADC UNITS"
FORMAT	= "11"
DESCRIPTION	= "The post-acceleration high level reference"
END OBJECT	= COLUMN
- OBJECT COLUMN NUMBER	= COLUMN = 27
NAME —	= "TM FIFO OVERFLOW"
DATA TYPE	= ASCII INTEGER
START_BYTE	= 150
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	<pre>= "The TM fifo overflow The field takes one of the following values: 0 No overflow 1 Overflow"</pre>
END_OBJECT	= COLUMN
- Object	= COLUMN



BYTES UNIT FORMAT DESCRIPTION	<pre>= 28 = "ENTRANCE_HV_REFERENCE" = ASCII_INTEGER = 152 = 4 = "ADC_UNITS" = "I4" = "The entrance HV reference value associated with the monitor reading" = COLUMN</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 29 = "GRID_LV_REFERENCE" = ASCII_INTEGER = 157 = 1 = "ADC_UNITS" = "I1" = "The grid LV reference value associated with the monitor reading" = COLUMN</pre>
- OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= "POST_ACCELERATION_LEVEL" = ASCII INTEGER</pre>
- OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	<pre>= COLUMN = COLUMN = 31 = "ENTRANCE_UPPER_HV_MONITOR" = ASCII_REAL = 161 = 6 = "KILOVOLT" = "F6.3" = "The entrance upper HV monitor in kilo-volts" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 32 = "MCP_HV_DEFAULT_REFERENCE" = ASCII_INTEGER = 168 = 2 = "ADC_UNITS" = "I2" = "The MCP default reference. That is the target value for ramping" = COLUMN</pre>
OBJECT COLUMN_NUMBER	= COLUMN = 33



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 112

NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= "OPTO_HV_DEFAULT_REFERENCE" = ASCII_INTEGER = 171 = 1 = "ADC_UNITS" = "I1" = "The Opto default reference. That is the target value for ramping" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 34 = "ENTRANCE_LOWER_HV_MONITOR" = ASCII_REAL = 173 = 6 = "KILOVOLT" = "F6.3" = "The entrance lower HV monitor in kilo-volts" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 35 = "MCP_HV_CURRENT_REFERENCE" = ASCII_INTEGER = 180 = 2 = "ADC_UNITS" = "I2" = "The MCP current reference value associated with the monitor reading" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 36 = "OPTO_HV_CURRENT_REFERENCE" = ASCII_INTEGER = 183 = 1 = "ADC_UNITS" = "I1" = "The Opto current reference value associated with the monitor reading" = COLUMN</pre>

Detailed description of those parameters is provided in documents [AD 3].

4.3.4.6 Description of Instrument

See the applicable section 4.3.3.6

4.3.4.7 Parameters Index File Definition

N/A

4.3.4.8 Mission Specific Keywords

See the applicable section 4.3.3.8

Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 113
	Date

4.3.5 Neutral Particle Detector Science Edited Data Product Design (Level 2)

The NPD Sensor can be operated in 4 modes as described in the document [AD 3], producing 4 different types of formatted block data in telemetry packets, one for each selected operation mode. One of those modes is not used in flight operation. A second mode allows the acquisition and storage of series of quadruplet values that fully describe the properties of the detected particles within the subdivided and resolved parametric space defined by the following coordinates: stop pulse height MCP charge (stop PH), the Time-Of-Flight (TOF), the direction of arrival particles and the coincidence control. The last two modes deal with counts of neutral particles that are registered, respectively, in TOF and PHD×TOF counters for the 3 azimuth directions. In some certain flight operations, data may be reduced and delivered in PHD×TOF counters with fewer bins number.

Considering above, there are essentially 3 different types of NPD edited science file whose items are fitting a dedicated bin within the subdivided parametric space. The Table 29 indicates the data contents for each science data file and their PDS representation object. Those blocks of data from binning mode using fewer PHD bins will be processed and stored into appropriate neutral particle counting data files according to their number of PHD bins.

All of them are always delivered as a fixed-size array where data are stored in a linear row-major order. A NPD header, specific to each mode of observation and common to NPD1 and NPD2 sensors, is added before a data collection. The NPD headers information and values are shown in the Table 30.

Data Type	Mode	Data description	PDS data object	
RAWXXXX	NPD raw data	Continuous data streams of observations. Each event is identified by a quadruplet (Stop PHD, TOF, Direction and Coincidence) and sequentially stored.	Linear storage in a TABLE object of 2048 blank-separated data values split into 4 columns of 512 items (512 values for each coordinate: Stop PHD, TOF, Direction and Coincidence).	
BINmmDd with mm=01, 02 or 16 and d=0, 1 or 2	NPD binning data Data (in counts/accumulation) of valid events (coincidence with one start and one stop signal) stored into a PHD×TOF counters array for a given individual direction (3 possible azimuths).		Linear storage of the PHD×TOF counter matrix in a TABLE object of blank- separated data values. The size of the object depends on the Data Type: from 3 data values if <i>mm</i> =01 (meaning a 1×16 matrix for the considered direction) to its maximum of 256 data values if <i>mm</i> =16 (meaning a 16×16matrix). The PHD×TOF matrices may have to shrink into 1×16 or 2×16 bins depending on the respective Threshold value. In the PHD×TOF matrices, count for lowest TOF value is sent first. In case of 2×16 matrices, the lowest TOF values correspond to the hydrogen region, the highest TOF values are associated to the oxygen measurement.	
TOFXXXX	NPD TOF mode	Spectrum of valid events (coincidence with one start and one stop signal) counted per incremental TOF band, over the accumulation time period. Data are delivered into a 256 TOF counters array for each individual direction (3 azimuths).	Linear storage in a TABLE object of 3*256 blank-separated data values corresponding to the 768 bin counter items. The 3 represents the number of directions.	
	NPD PHD mode	his mode is not used for in flight operation		

Table 29. NPD1 and NPD2 science data file contents and structure.



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 114

Table 30. NPD1 and NPD2 headers content.

Rank	Field / Value		Rank		Field / Value
	NPD mode raw data	a header	11		
1	UTC correlated Time		13	STAT	
2	OBT Time		14	TDCRD	
3	SW version		15	CALIB11	
4	Scanner direction	0 = 0 - 180 1 = 180 - 0	16	CALIB12	
5	Scanner speed	0 (standing), 32s scan, 64s scan, or 128s scan	17	CALIB21	
6	Scanner Position	On start of scan (or step) period	18	CALIB22	
7	Accumulation Time		19	STARTCNT	
8	Log compression	Always 0 for raw data mode (0 = disabled)	20	STOP0CNT	
9	Rice compression flag status	0 = non valid 1 = valid	21	STOP1CNT	
10	Rice compression assig	ned value	22	STOP2CNT	
11	FRONTCTRL		23	TOFCNT	
12	MAINCTRL		24	RAWCNT	
	NPD mode binning	data header			
1	UTC correlated Time		11	Threshold	0 = Matrix 0, 16PHD×16TOF 1-14 = Matrix 1, 2PHD×16TOF
2	2 OBT Time				15 = Matrix 2, 1PHD×16TOF
3	SW version		12	CALIB11	
4	Scanner direction	0 = 0 - 180 1 = 180 - 0	13	3 CALIB12	
5	Scanner speed	0 (standing), 32s scan, 64s scan, or 128s scan	14	4 CALIB21	
6	Scanner Position	On start of scan (or step) period	15	CALIB22	
7	Accumulation Time		16	STARTCNT	
8	Log compression	0 = disable 1 = enable	17	7 STOP0CNT	
9	Rice compression flag status	0 = non valid 1 = valid	18	STOP1CNT	
10	Rice compression assig	ned value	19	STOP2CNT	
NPD mode TOF data header					
1	1 UTC correlated Time		10	Rice compress	sion assigned value
2	OBT Time		11	Number of valid samples integrated to the matrix	
3	SW version		12	CALIB11	
4	Scanner direction	0 = 0 - 180 1 = 180 - 0	13	CALIB12	
5	Scanner speed	0 (standing), 32s scan, 64s scan, or 128s scan	14	CALIB21	
6	Scanner Position	On start of scan (or step) period	15	CALIB22	
7	Accumulation Time		16	STARTCNT	



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 115

8 Log compression	0 = disable	17	STOP0CNT	
	1 = enable	18	STOP1CNT	
9	Rice compression flag status	0 = non valid 1 = valid	19	STOP2CNT

The table objects are detailed in the following paragraphs.

4.3.5.1 File Characteristics Data Elements

The following elements are present in the labels for every NPD science edited data product, and they describe the basic characteristics of the data product in terms of structure and naming:

/* FILE CHARACTERISTIC DATA	ELEMENTS */
PRODUCT_ID	= this element defines the current product file name,
	without extension
RECORD TYPE	= FIXED LENGTH
RECORD_BYTES	= this element indicates the number of bytes in a
	data record, including record terminators and
	separators
FILE_RECORDS	= this element indicates the number of records within
	the data file

4.3.5.2 Data Object Pointers Identification Data Elements

Several pointers are defined, identifying the ASCII PDS objects within which the NPD status and uncalibrated science data are stored. The data object pointers that reference TAB files are:

^NPD_RAWHEAD_TABLE ^NPD_BINHEAD_TABLE ^NPD_TOFHEAD_TABLE ^NPD_RAWSCIE_TABLE ^NPD_BINSCIE_TABLE ^NPD_TOFSCIE_TABLE

4.3.5.3 Instrument and Detector Descriptive Data Elements

The following data identification elements provide additional information about the NPD data products.

```
/* PRODUCER IDENTIFICATION */
PRODUCER_ID= "CESR_ASPERA4_GROUP"PRODUCER_FULL_NAME= "EMMANUEL PENOU"PRODUCER_INSTITUTION_NAME= "CENTRE D'ETUDE SPATIALE DES RAYONNEMENTS"PRODUCT_CREATION_TIME= YYYY-MM-DDThh:mm:ss[.fff]
/* DATA DESCRIPTION AND IDENTIFICATION */
                                  = "
DATA SET NAME
                      VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 NPD V1.0" or
        "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 NPD V1.0"
                                                                                 or
        "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 NPD V1.0" or
                                    = "VEX-V/SW-ASPERA-2-NPD-V1.0"
DATA SET ID
                                                                                or
                                      "VEX-V/SW-ASPERA-2-EXT1-NPD-V1.0"
                                                                                or
                                      "VEX-V/SW-ASPERA-2-EXT2-NPD-V1.0"
                                                                                 or
                                   = 0001
RELEASE ID
REVISION ID
                                  = 0000
PRODUCT TYPE
                                   = EDR
PROCESSING LEVEL ID
                                   = 2
```



MISSION_NAME MISSION_ID INSTRUMENT_HOST_NAME INSTRUMENT_HOST_ID MISSION_PHASE_NAME INSTRUMENT_NAME ANALYZER OF SPACE PLASM INSTRUMENT_ID INSTRUMENT_TYPE	<pre>= "VENUS EXPRESS" = VEX = "VENUS EXPRESS" = VEX = As defined in [AD 4] = " MA AND ENERGETIC ATOMS (4TH VERSION)" = ASPERA4 = {"ELECTROSTATIC ANALYZER", "MASS SPECTROMETER", "NEUTRAL PARTICLE IMAGER", "NEUTRAL PARTICLE DETECTOR"}</pre>
DETECTOR_ID ^INSTRUMENT_DESC	<pre>= VEX_ASP4_NPD1 or VEX_ASP4_NPD2 = "ASPERA4_DESC.TXT"</pre>
—	<pre>= "PLANET" or "N/A" = "VENUS" or "SOLAR WIND" = "N/A" = "N/A"</pre>
/* SCIENCE OPERATIONS INFORMAT OBSERVATION_TYPE ^OBSERVATION_TYPE_DESC	<pre>'ION */ = {"AC002B", "PE001A", "PE004A"} or "N/A" = "OBSERVATION_TYPE_DESC.TXT"</pre>
/* TIME RELATED INFORMATION */ START_TIME STOP_TIME SPACECRAFT_CLOCK_START_COUNT SPACECRAFT_CLOCK_STOP_COUNT	<pre>= YYYY-MM-DDThh:mm:ss.fff = YYYY-MM-DDThh:mm:ss.fff</pre>
ORBITAL_INCLINATION ORBITAL_SEMIMAJOR_AXIS PERIAPSIS_ALTITUDE PERIAPSIS_ARGUMENT_ANGLE PERIAPSIS_TIME SPACECRAFT_ORIENTATION ^SPACECRAFT_ORIENTATION_DESC SPACECRAFT_POINTING_MODE	<pre>= UNK = UNK = UNK = UNK = UNK = UNK = "UNK" = UNK = "VEX_ORIENTATION_DESC.TXT" = "ALL" = "VEX_POINTING_MODE_DESC.TXT"</pre>

4.3.5.4 Structure Definition of Instrument Parameter Objects

N/A

4.3.5.5 Data Object Definition

This section of the label defines the structure and content of the NPD1 and NPD2 science edited data product. As specified in §4.3, each data file (TAB) contains typically 2 objects: an ASCII TABLE for containing the header information about the sensor status while operating in a selected mode and an ASCII TABLE object for handling the science data that are acquired in the corresponding NPD mode. These objects are stored in parallel within a data product file, forming a data structure in which records have constant length. The number of rows within the tables is variable and depends roughly on the number of records contained in the processed level-1 data file.



The columns within these header TABLE objects are first described in the section below. The science data objects are defined in the following separate sections.

4.3.5.5.1 The description of the NPD1 and NPD2 header table for Raw mode

The description presented hereafter applies to both NPD1 and NPD2 sensors.

OBJECT NAME ROW SUFFIX BYTES	<pre>= NPD_RAWHEAD_TABLE = "NPD_RAW_HEAD" = Number of bytes that are accounted in the subsequent</pre>
	table, including record terminators and separators
INTERCHANGE_FORMAT	= ASCII
ROWS	= Number of rows within the data file
COLUMNS	= 24
ROW BYTES	= 152
^STRUCTURE	= "NPD RAWHEAD.FMT"
END_OBJECT	= NPD_RAWHEAD_TABLE

The structure of the TABLE object is described in the file NPD_RAWHEAD.FMT as follows:

	file "NPD_RAWHEAD.FMT" */
	= COLUMN
	= 1
	= "UTC"
	= TIME
START_BYTE	= 1
BYTES	= 23
UNIT	= "N/A"
DESCRIPTION	= "This column represents the UTC of the
	NPD science data in PDS standard format YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
	= 2
NAME	= "OBT" = CHARACTER
DATA_TYPE	= CHARACTER
START_BYTE	= 26
BYTES	= 19
UNIT	= "N/A"
DESCRIPTION	<pre>= "On board Time (OBT) is represented as : <reset number="">/<unit seconds="">.<fractional seconds=""> with <reset number="">: integer starting at 1</reset></fractional></unit></reset></pre>
	Reset number 1 starts at 2005-03-01T00:00:00 UTC <unit seconds="">: 10 digits number of unit seconds <fractional seconds="">: 5 digits number of fractional seconds expressed as multiples of 2^-16 seconds"</fractional></unit>
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 3
NAME —	= "SW VERSION"
DATA TYPE	= ASCII INTEGER
START BYTE	= 47
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "I5"
DESCRIPTION	<pre>= "Software version To decode into Binary format. Bit description: patchVersion [3:0]</pre>
	minorVersion [8:4]



	<pre>majorVersion [13:9] releaseClass [15:14]: 1 (D), 2 (T), 3 (R)" </pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END OBJECT	<pre>= COLUMN = 4 = "SCANNER_DIRECTION" = ASCII_INTEGER = 53 = 1 = "N/A" = "I1" = "Scanner direction. The field takes one of the following values: 0: 0 - 180 1: 180 - 0" = COLUMN</pre>
END_OBJECT	
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 5 = "SCANNER_SPEED" = ASCII_INTEGER = 55 = 3 = SECOND = "I3" = "Scanner speed. This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command is sent to move it. The field takes one of the following values: 0 (standing) 32 (seconds scan) 64 (seconds scan)"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 6 = "SCANNER_POSITION" = ASCII_REAL = 59 = 5 = "DEGREE" = "F5.1" = "Scanner position in degrees" = COLUMN</pre>
OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END OBJECT	<pre>= 7 = "ACCUMULATION_TIME " = ASCII_INTEGER = 65 = 2 = "N/A" = "I2" = "Accumulation time. Time = 2N*31.25ms" = COLUMN</pre>
—	
OBJECT	= COLUMN



UNIT FORMAT	<pre>= 8 = "LOG_COMPRESSION" = ASCII_INTEGER = 68 = 1 = "N/A" = "I1" = "The field takes one of the following values: 0 = disable 1 = enable"</pre>
END_OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 9 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 70 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = non valid 1 = valid"</pre>
END_OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	= ASCII INTEGER
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	= ASCII INTEGER



	bit 7 (ADCCALDIS) =1 disables using of ADC calibration
END_OBJECT	bit 8-15 n.c." = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 12 = "MAINCTRL" = ASCII_INTEGER = 78 = 3 = "N/A" = "I3" = "This register is used to as a common control register. To decode into Binary format. Each bit may take one of the following values : bit 0-1 (LVL[1:0]) Level of storing as binning data, storing into binning array will be omitted if COIN[2:0]>LVL[1:0] bit 2 (STOREDIS) =1 disables storing into SRAM</pre>
	bit 3 (DEBUGENA) =1 enables simulation of rawdata(debug) bit 4 (DELSIMDIS) =1 disables simultaneously deleting of both Binning and Raw Data array (after each read access on data) bit 5 (LATCHUP) =1 LatchUp occured bit 6 (ECENA) =1 Hamming-code Error Correction
END OBJECT	on SRAM data enabled bit 7-15 n.c." = COLUMN
- OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= COLUMN = 13 = "STAT" = ASCII_INTEGER = 82 = 5 = "N/A"</pre>
FORMAT DESCRIPTION	<pre>= "I5" = "This register is used to reflect some TDC and FPGA status signals. To decode into Binary format. Each bit may take one of the following values : bit 0 (TDCSYSERR) SYSERR-Flag from TDC bit 1 (TDCREADY) READY-Flag from TDC bit 2 (TDCVALID) VALID-Flag from TDC bit 3 (TDCCALM) CALM-Flag from TDC bit 4 (TDCBUSDIR) BUSDIR-Flag from TDC bit 5-8 n.c bit 9 (TDCWRERR) TDC write access error-Flag bit 10 (TDCRDERR) TDC command error-Flag bit 11 (TDCCMDERR) TDC command error-Flag bit 12 (CMDBUSY) =1 Commanding TDC active bit 13 (DACBUSY) =1 Programming DAC bit 14 (NEWCAL) =1 new calibration data available any read-access to the CALIBxx registers resets this flag bit 15 (ADCERR) =1 ADC error occured"</pre>
END_OBJECT	= COLUMN



OBJECT	= COLUMN
COLUMN_NUMBER	= 14
NAME	
DATA TYPE	= ASCII_INTEGER
START BYTE	= 88
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "15"
	= "After the transmission of an appropriate
	TDC-opcode, the contents of the requested TDC
	register is available in this register."
END OB TECT	= COLUMN
END_OBJECT	- COLOMN
OBJECT	= COLUMN
COLUMN_NUMBER	
NAME	= "CALIB11" = ASCII_INTEGER
DATA_TYPE	
START_BYTE	
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "15"
DESCRIPTION	= "This register contains part1 of the calibration
	data from the TDC (CAL11)."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER NAME	= 16
NAME	= "CALIB12"
DATA_TYPE	= ASCII_INTEGER = 100
START_BYTE	= 100
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "T5"
DESCRIPTION	= "This register contains part2 of the calibration
	data from the TDC (CAL12)."
END OBJECT	= COLUMN
-	
OBJECT	= COLUMN
COLUMN_NUMBER	= 17
NAME —	= "CALIB21"
DATA TYPE	= ASCII_INTEGER
START BYTE	= 106
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "15"
DESCRIPTION	= "This register contains part3 of the calibration
	data from the TDC (CAL21)."
END OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 18
NAME	= "CALIB22"
DATA TYPE	= ASCII INTEGER
START BYTE	= 112
BYTES	= 112
-	$=$ $\frac{1}{2}$
UNIT	= "N/A" = "I5"
FORMAT	
DESCRIPTION	= "This register contains part4 of the calibration
END OD IECH	data from the TDC (CAL22)."
END_OBJECT	= COLUMN
OBIECH	
OBJECT	= COLUMN



BYTES UNIT FORMAT	<pre>= 19 = "STARTCNT" = ASCII_INTEGER = 118 = 5 = "N/A" = "I5" = "This register counts the start-signals from the</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 20 = "STOPOCNT" = ASCII_INTEGER = 124 = 5 = "N/A" = "I5" = "This register counts the stop0-signals from the NPD-sensor up to the upper limit of 65536."</pre>
END_OBJECT	= COLUMN
BYTES UNIT FORMAT	<pre>= "STOP1CNT" = ASCII_INTEGER = 130 = 5 = "N/A" = "I5"</pre>
END_OBJECT	<pre>= "This register counts the stop1-signals from the NPD-sensor up to the upper limit of 65536." = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 22 = "STOP2CNT" = ASCII_INTEGER = 136 = 5 = "N/A" = "I5" = "This register counts the stop2-signals from the NPD-sensor up to the upper limit of 65536."</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	= 5 = "N/A" = "I5" = "This register counts the generated TOF values
END_OBJECT	up to the upper limit of 65536." = COLUMN
OBJECT COLUMN_NUMBER NAME	= COLUMN = 24 = "RAWCNT"



DATA_TYPE START_BYTE	ASCII_INTEGER 148	
BYTES	5	
UNIT	"N/A"	
FORMAT	"15"	
DESCRIPTION	"This register counts the generated R. up to the upper limit of 65536."	AW values
END_OBJECT	COLUMN	

Detailed description of those parameters is provided in documents [AD 3].

4.3.5.5.2 The description of the NPD1 and NPD2 header table for Binning data mode

The description presented hereafter applies to both NPD1 and NPD2 sensors.

OBJECT NAME	= NPD_BINHEAD_TABLE = "NPD_BINHEAD"
ROW_SUFFIX_BYTES	= Number of bytes that are accounted in the subsequent table, including record terminators and separators
INTERCHANGE_FORMAT	= ASCII
ROWS	= Number of rows within the data file
COLUMNS	= 19
ROW_BYTES	= 123
^STRUCTURE	= "NPD_BINHEAD.FMT"
END_OBJECT	= NPD_BINHEAD_TABLE

The structure of the TABLE object is described in the file NPD_BINHEAD.FMT as follows:

OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	= "UTC" = TIME
END_OBJECT	= COLUMN
DATA_TYPE START_BYTE BYTES	= "OBT" = CHARACTER
END_OBJECT	= COLUMN
COLUMN_NUMBER	= "SW_VERSION"



START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= 47 = 5 = "N/A" = "I5" = "Software version To decode into Binary format. Bit description: patchVersion [3:0] minorVersion [8:4] majorVersion [13:9] releaseClass [15:14]: 1 (D), 2 (T), 3 (R)"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 4 = "SCANNER_DIRECTION" = ASCII_INTEGER = 53 = 1 = "N/A" = "I1" = "Scanner direction. The field takes one of the following values: 0: 0 - 180 1: 180 - 0"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 5 = "SCANNER_SPEED" = ASCII_INTEGER = 55 = 3 = SECOND = "I3" = "Scanner speed. This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command is sent to move it. The field takes one of the following values: 0 (standing) 32 (seconds scan) 64 (seconds scan) 128 (seconds scan)"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 6 = "SCANNER_POSITION" = ASCII_REAL = 59 = 5 = "DEGREE" = "F5.1" = "Scanner position in degrees" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE	<pre>= COLUMN = 7 = "ACCUMULATION_TIME " = ASCII_INTEGER = 65</pre>



BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= 2 = "N/A" = "I2" = "Accumulation time. Time = 2N*31.25ms" = COLUMN</pre>
NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= COLUMN = 8 = "LOG_COMPRESSION" = ASCII_INTEGER = 68 = 1 = "N/A" = "I1" = "The field takes one of the following values: 0 = disable 1 = enable" = COLUMN</pre>
- OBJECT COLUMN_NUMBER NAME DATA_TYPE	<pre>= COLUMN = 9 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 70 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = non valid 1 = valid"</pre>
END_OBJECT	I = Valid" = COLUMN
NAME DATA_TYPE	<pre>= COLUMN = 10 = "RICE_COMPRESSION_VALUE" = ASCII_INTEGER = 72 = 1 = "N/A" = "I1" = "Rice compression" = COLUMN</pre>
	<pre>= COLUMN = 11 = "THRESHOLD" = ASCII_INTEGER = 74 = 2 = "N/A" = "I2" = "The threshold value indicates the size of the PH*TOF matrix for the current direction. The field takes one of the following values: 0 = Bin Matrix 0, 16(stop PH)*16(TOF) 1-14 = Bin Matrix 1, 2(stop PH)*16(TOF) 15 = Bin Matrix 2, 1(stop PH)*16(TOF)"</pre>
END_OBJECT	= COLUMN
OBJECT	= COLUMN



DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	ONDIDII
COLUMN_NUMBER	= COLUMN = 13
NAME DATA_TYPE START_BYTE	= ASCII_INTEGER
BYTES UNIT	= 5 = "N/A"
FORMAT	= "I5"
	= "This register contains part2 of the calibration
END_OBJECT	
OBJECT COLUMN_NUMBER	= COLUMN = 14
NAME	= "CALTR21"
DATA_TYPE START_BYTE	= ASCII INTEGER
START_BYTE	= 89
BITES	= 5
UNIT	= "N/A" = "I5"
	<pre>= "This register contains part3 of the calibration</pre>
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER NAME	= 15 = "CALIB22"
NAME	= "CALIB22"
DATA_TYPE	
START_BYTE BYTES	= 5
	= "N/A"
	= "I5"
DESCRIPTION	= "This register contains part4 of the calibration
END OBJECT	data from the TDC (CAL22)." = COLUMN
	= COLUMN
COLUMN_NUMBER	
	= "STARTCNT"
START BYTE	= ASCII_INTEGER = 101
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "15"
DESCRIPTION	= "This register counts the start-signals from the NPD-sensor up to the upper limit of 65536."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 17
NAME	= "STOPOCNT"



START_BYTE = BYTES = UNIT = FORMAT =	ASCII_INTEGER 107 5 "N/A" "I5" "This register counts the stop0-signals from the NPD-sensor up to the upper limit of 65536."
END_OBJECT =	COLUMN
COLUMN_NUMBER = NAME = DATA_TYPE = START_BYTE = BYTES = UNIT = FORMAT = DESCRIPTION =	COLUMN 18 "STOP1CNT" ASCII_INTEGER 113 5 "N/A" "I5" "This register counts the stop1-signals from the NPD-sensor up to the upper limit of 65536." COLUMN
COLUMN_NUMBER=NAME=DATA_TYPE=START_BYTE=BYTES=UNIT=FORMAT=DESCRIPTION=	COLUMN 19 "STOP2CNT" ASCII_INTEGER 119 5 "N/A" "I5" "This register counts the stop2-signals from the NPD-sensor up to the upper limit of 65536." COLUMN

Detailed description of those parameters is provided in documents [AD 3].

4.3.5.5.3 The description of the NPD1 and NPD2 header table for the TOF data mode

The description presented hereafter applies to both NPD1 and NPD2 sensors.

OBJECT NAME ROW SUFFIX BYTES	<pre>= NPD_TOFHEAD_TABLE = "NPD_TOFHEAD" = Number of bytes that are accounted in the subsequent</pre>
	table, including record terminators and separators
INTERCHANGE_FORMAT	= ASCII
ROWS	= Number of rows within the data file
COLUMNS	= 19
ROW_BYTES	= 124
^STRUCTURE	= "NPD_TOFHEAD.FMT"
END_OBJECT	= NPD_TOFHEAD_TABLE

The structure of the TABLE object is described in the file NPD_TOFHEAD.FMT as follows:

/* Contents of format	file "NPD TOFHEAD.FMT" */
OBJECT	= COLUMN
COLUMN_NUMBER	= 1
NAME	= "UTC"
DATA_TYPE	= TIME
START_BYTE	= 1
BYTES	= 23
UNIT	= "N/A"
DESCRIPTION	= "This column represents the UTC of the
	NPD science data in PDS standard format



	YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT	= COLUMN
OBJECT	= COLUMN = 2
COLUMN_NUMBER NAME	= 2 = "OBT"
	= CHARACTER
DATA_TYPE START BYTE	= 26
BYTES	= 19
UNIT	$=$ $\frac{1}{N}$
DESCRIPTION	= "On board Time (OBT) is represented as :
	<pre><reset number="">/<unit seconds="">.<fractional seconds=""> with</fractional></unit></reset></pre>
	<pre><reset number="">: integer starting at 1 Reset number 1 starts at 2005-03-01T00:00:00 UTC <unit seconds="">: 10 digits number of unit seconds </unit></reset></pre>
	<pre><fractional seconds="">: 5 digits number of fractional </fractional></pre>
END_OBJECT	seconds expressed as multiples of 2^-16 seconds" = COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 3
NAME —	= "SW VERSION"
DATA TYPE	= ASCII INTEGER
START BYTE	= 47
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "I5"
DESCRIPTION	<pre>= "Software version To decode into Binary format. Bit description: patchVersion [3:0]</pre>
	minorVersion [8:4] majorVersion [13:9] releaseClass [15:14]: 1 (D), 2 (T), 3 (R)"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 4
NAME	= 4 = "SCANNER_DIRECTION"
DATA TYPE	= ASCII_INTEGER
START_BYTE	= 53
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	<pre>= "Scanner direction. The field takes one of the following values: 0: 0 - 180 1: 180 - 0"</pre>
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 5
NAME	= "SCANNER_SPEED"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 55
BYTES	= 3
UNIT	= SECOND
FORMAT	= "I3" - "Geometry states"
DESCRIPTION	= "Scanner speed.
	This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command



END OBJECT	<pre>is sent to move it. The field takes one of the following values: 0 (standing) 32 (seconds scan) 64 (seconds scan) 128 (seconds scan)" = COLUMN</pre>
- OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= COLUMN = COLUMN = 6 = "SCANNER_POSITION" = ASCII_REAL = 59 = 5 = "DEGREE" = "F5.1"</pre>
DESCRIPTION END_OBJECT	= "Scanner position in degrees" = COLUMN
START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 7 = "ACCUMULATION_TIME " = ASCII_INTEGER = 65 = 2 = "N/A" = "I2" = "Accumulation time. Time = 2N*31.25ms"</pre>
END_OBJECT	= COLUMN
BYTES UNIT FORMAT	<pre>= COLUMN = 8 = "LOG_COMPRESSION" = ASCII_INTEGER = 68 = 1 = "N/A" = "I1" = "The field takes one of the following values: 0 = disable 1 = comble"</pre>
END_OBJECT	1 = enable" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 9 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 70 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = non valid 1 = valid"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE	<pre>= COLUMN = 10 = "RICE_COMPRESSION_VALUE" = ASCII_INTEGER</pre>



	_ 70
START_BYTE	= 72
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Rice compression"
END OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 11
NAME —	<pre>= "NB_VALID_SAMPLES" = ASCII_INTEGER</pre>
DATA TYPE	= ASCII INTEGER
START_BYTE	= 74
BYTES	= 3
UNIT	= "N/A"
FORMAT	= "I3"
DESCRIPTION	= "Number of valid samples integrated to the matrix. LatchUp may happen during integration. Affected
	samples are not integrated to the matrix."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 12
NAME	= "CALIB11"
DATA_TYPE	= ASCII_INTEGER
START BYTE	= 78
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "I5"
DESCRIPTION	
	data from the TDC (CAL11)."
END OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 13
NAME	= "CALIB12"
DATA_TYPE	= ASCII_INTEGER
CEADE DYEE	= 84
START_BYTE	
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "I5"
DESCRIPTION	= "This register contains part2 of the calibration
	data from the TDC (CAL12)."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 14
NAME	= "CALIB21"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 90
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "15"
DESCRIPTION	= "This register contains part3 of the calibration
	data from the TDC (CAL21)."
END_OBJECT	= COLUMN
OBIECT	- COLUMN
OBJECT	= COLUMN = 15
COLUMN_NUMBER NAME	
	= "CALIB22"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 96 = 5
BYTES	- J



Document No. : VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 131

UNIT FORMAT DESCRIPTION	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." </pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 16 = "STARTCNT" = ASCII_INTEGER = 102 = 5 = "N/A" = "I5" = "This register counts the start-signals from the NPD-sensor up to the upper limit of 65536."</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 17 = "STOPOCNT" = ASCII_INTEGER = 108 = 5 = "N/A" = "I5" = "This register counts the stop0-signals from the NPD-sensor up to the upper limit of 65536." = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 18 = "STOP1CNT" = ASCII_INTEGER = 114 = 5 = "N/A" = "I5" = "This register counts the stop1-signals from the NPD-sensor up to the upper limit of 65536."</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END OBJECT	<pre>= COLUMN = 19 = "STOP2CNT" = ASCII_INTEGER = 120 = 5 = "N/A" = "I5" = "This register counts the stop2-signals from the NPD-sensor up to the upper limit of 65536." = COLUMN</pre>

Detailed description of those parameters is provided in documents [AD 3].

4.3.5.5.4 The description of the NPD1 and NPD2 science table related to mode raw data:

A raw data record contains 512 quadruplet values, one for each observation. Incoming raw data items are sequentially stored until the record is complete and properly sorted within this record by group of data with



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	:18 Mar 2011
Page	: 132

parameter of same type. Thus first 512 data values refer to the stop pulse height MCP charge (stop PH) measurements, next 512 items are Time-Of-Flight data values, followed by the direction then the coincidence values. In the label, the NPD1 and NPD2 raw science data are described as a linear storage TABLE object with fixed length containing 4 columns of 512 data values for handling each measured parameter of the quadruplet.

The structure of the science raw data object is fully described in the associated label file, with no applicable external files (FMT). This description is presented hereafter and applies to both NPD1 and NPD2 sensors.

COLUMNS ROW_BYTES	<pre>= NPD_RAWSCIE_TABLE = "NPD_RAW_SCIENCE" = 152 = ASCII = Number of rows within the data file = 4 = 6658 = "Uncalibrated NPD1 sensor science data in raw data operation mode."</pre>
OBJECT = COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT DODME	<pre>= 1 = "NPD_STOP_PH" = ASCII_INTEGER = 1 = 2048 = "N/A"</pre>
DESCRIPTION ITEMS ITEM_BYTES END_OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION ITEMS ITEM_BYTES	<pre>= ASCII_INTEGER = 2049 = 2560 = "N/A" = "I4" = "Uncalibrated Time of Flight value. The TOF values are expressed in 0.5ns steps " = 512</pre>
- Object	<pre>= COLUMN = COLUMN = 3 = "NPD_DIRECTION" = ASCII_INTEGER = 4609 = 1024 = "N/A" = "I1" = "The stop MCP value referring to the direction of the arrival particles. The field takes one of the following values: 0 = Stop0 1 = Stop1 2 = Stop2"</pre>
ITEMS ITEM_BYTES	= 512 = 2



Document No. : VEX ASP CESR EAICD V1 5 : 18 Mar 2011 : 133

END_OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE	<pre>= "NPD_COINCIDENCE" = ASCII_INTEGER = 5633 = 1024 = "N/A"</pre>
DESCRIPTION	<pre>= "The coincidence control may takes one of the following values: 0 = 1 Start, 1 Stop 1 = n Start, 1 Stop 2 = 1 Start, n Stop 3 = n Start, n Stop 4 = 0 Start, 1 Stop where n=2,3,"</pre>
ITEMS	= 512
ITEM_BYTES	= 2
END_OBJECT	= COLUMN
END_OBJECT	= NPD_RAWSCIE_TABLE

Detailed description of those parameters is provided in documents [AD 3].

4.3.5.5.5 The description of the NPD1 and NPD2 science table related to mode binning data:

A binning block data array as delivered in telemetry packets contains 3 consecutive matrices (stop PH)×(TOF) of counter values, one for each direction of observation. The first matrix refers to the first direction [0], the last one referring to the third direction [2]. All matrices may contain a maximum of 16×16 values that can be further reduced along the stop PH axis to 2 or 1 bin. For each direction, a corresponding Threshold value sets the size of the matrix. 3 sizes are available: 1×16, 2×16 and 16×16. The 16 TOF bin numbers are associated to uncompressed bin values as following:

TOF COMPRESSED	TOF[11:0]
0	100 - 124
1	125 - 156
2	157 - 197
3	198 - 248
4	249 - 311
5	312 - 391
6	392 - 491
7	492 - 617
8	618 - 774
9	775 - 972
10	973 - 1220
11	1221 - 1532
12	1533 - 1923
13	1924 - 2413
14	2414 - 3028
15	3029 - 3800

where the uncompressed TOF values are expressed in 0.5ns steps.

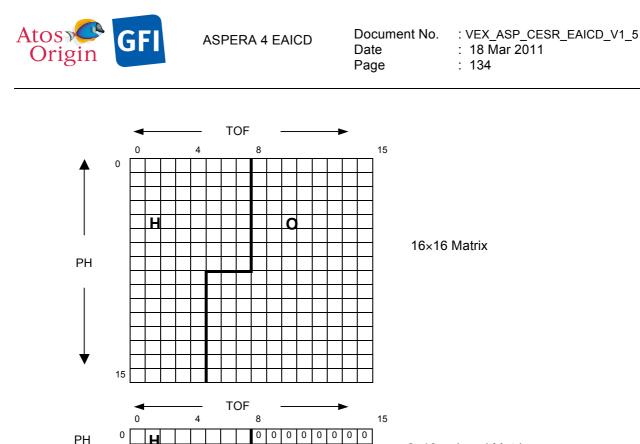


Figure 16. Reduction of the 16×16 bin matrix to 2×16 matrix.

0

0 0 0

The reduction of 16 stop PH to 2 is shown graphically in Figure 16. It is done according to the algorithm as below:

2×16 reduced Matrix

if (TOF_index ≤ 4) : New_stop_PH_index = 0 (H) if (TOF_index ≥ 8) : New_stop_PH_index = 1 (O) if (TOF_index > 4) and (TOF_index < 8) if (stop_PH_index ≤ Threshold) : New_stop_PH_index = 0 (H) else : New stop_PH index = 1 (O)

where the Threshold is commendable and depends on direction (STOP MCP number), and the New_stop_PH_index defines the mass species index (H or O) within the new 2×16 matrix. Following this algorithm, the reduction scheme consists of integrating counters of a same TOF bin number for each species group, and completing by 0 the H and O counters of the new matrix where not applicable. The reduction to 1×16 matrix is simply based on the column sum of corresponding counter values from same TOF bin number, without ENA mass separation.

Different NPD1 and NPD2 binning science data product files may exist depending on the direction of arrival particles and the PHD×TOF reduction scheme that is applied. Thus a data product file contains records of neutral particle count values for a single direction (the *Dd* field in the file name) and a single type of matrix (the *mm* field in the file name).

Within each binning data product file, data are stored into a linear storage TABLE object in which records have a constant length. The structure of this object is described in the label, with no applicable external files (FMT). It may contain of as many items as the considered matrix (meaning 16 items for a 1*16 matrix, 32 items for a 2*16 matrix and 256 items for a 16*16 matrix) with TOF the fastest varying parameter. This description is presented hereafter and applies to both NPD1 and NPD2 sensors.

OBJECT = NPD_BINSCIE_TABLE NAME = "NPD_BIN_SCIENCE" ROW_PREFIX_BYTES = 123



INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	<pre>= ASCII = Number of rows within the data file = 1 = (number of items) * (item bytes) plus 2 terminators</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 1 = "BIN_COUNTS" = ASCII_INTEGER = 1 = (number of items) * (item bytes) plus 2 terminators = "ADC_UNITS" = "I5"</pre>
DESCRIPTION ITEMS ITEM_BYTES END OBJECT	<pre>""""""""""""""""""""""""""""""""""""</pre>
END_OBJECT	= COLOMN = NPD_BINSCIE_TABL

4.3.5.5.6 The description of the NPD1 and NPD2 science table related to TOF mode:

A TOF block data array as delivered in telemetry packets contains 3 consecutive matrices of 256 TOF counters each, one for each direction of observation. The first matrix refers to the first direction [0], the last one referring to the third direction [2]. The 256 TOF bin numbers are in an 8-bit format converted from the 12-bit TOF by a 4-bit shift. The table below gives the 8-bit – 12-bit TOF correspondence. The units for the uncompressed 12-bit TOF bin values are expressed in 0.5ns steps.

TOF compressed	TOF[11:0]	TOF compressed	TOF[11:0]	TOF compressed	TOF[11:0]	TOF compressed	TOF[11:0]
0	0- 15	64	1024 - 1039	128	2048 - 2063	192	3072 - 3087
1	16 - 31	65	1040 - 1055	129	2064 - 2079	193	3088 - 3103
2	32 - 47	66	1056 - 1071	130	2080 - 2095	194	3104 - 3119
3	48 - 63	67	1072 - 1087	131	2096 - 2111	195	3120 - 3135
4	64 - 79	68	1088 - 1103	132	2112 - 2127	196	3136 - 3151
5	80 - 95	69	1104 - 1119	133	2128 - 2143	197	3152 - 3167
6	96 - 111	70	1120 - 1135	134	2144 - 2159	198	3168 - 3183
7	112 - 127	71	1136 - 1151	135	2160 - 2175	199	3184 - 3199
8	128 - 143	72	1152 - 1167	136	2176 - 2191	200	3200 - 3215
9	144 - 159	73	1168 - 1183	137	2192 - 2207	201	3216 - 3231
10	160 - 175	74	1184 - 1199	138	2208 - 2223	202	3232 - 3247
11	176 - 191	75	1200 - 1215	139	2224 - 2239	203	3248 - 3263
12	192 - 207	76	1216 - 1231	140	2240 - 2255	204	3264 - 3279
13	208 - 223	77	1232 - 1247	141	2256 - 2271	205	3280 - 3295
14	224 - 239	78	1248 - 1263	142	2272 - 2287	206	3296 - 3311
15	240 - 255	79	1264 - 1279	143	2288 - 2303	207	3312 - 3327
16	256 - 271	80	1280 - 1295	144	2304 - 2319	208	3328 - 3343
17	272 - 287	81	1296 - 1311	145	2320 - 2335	209	3344 - 3359
18	288 - 303	82	1312 - 1327	146	2336 - 2351	210	3360 - 3375
19	304 - 319	83	1328 - 1343	147	2352 - 2367	211	3376 - 3391
20	320 - 335	84	1344 - 1359	148	2368 - 2383	212	3392 - 3407
21	336 - 351	85	1360 - 1375	149	2384 - 2399	213	3408 - 3423
22	352 - 367	86	1376 - 1391	150	2400 - 2415	214	3424 - 3439
23	368 - 383	87	1392 - 1407	151	2416 - 2431	215	3440 - 3455
24	384 - 399	88	1408 - 1423	152	2432 - 2447	216	3456 - 3471
25	400 - 415	89	1424 - 1439	153	2448 - 2463	217	3472 - 3487
26	416 - 431	90	1440 - 1455	154	2464 - 2479	218	3488 - 3503
27	432 - 447	91	1456 - 1471	155	2480 - 2495	219	3504 - 3519
28	448 - 463	92	1472 - 1487	156	2496 - 2511	220	3520 - 3535
29	464 - 479	93	1488 - 1503	157	2512 - 2527	221	3536 - 3551
30	480 - 495	94	1504 - 1519	158	2528 - 2543	222	3552 - 3567



Document No. : VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 136

31	496 - 511	95	1520 - 1535	159	2544 - 2559	223	3568 - 3583
32	512 - 527	96	1536 - 1551	160	2560 - 2575	224	3584 - 3599
33	528 - 543	97	1552 - 1567	161	2576 - 2591	225	3600 - 3615
34	544 - 559	98	1568 - 1583	162	2592 - 2607	226	3616 - 3631
35	560 - 575	99	1584 - 1599	163	2608 - 2623	227	3632 - 3647
36	576 - 591	100	1600 - 1615	164	2624 - 2639	228	3648 - 3663
37	592 - 607	101	1616 - 1631	165	2640 - 2655	229	3664 - 3679
38	608 - 623	102	1632 - 1647	166	2656 - 2671	230	3680 - 3695
39	624 - 639	103	1648 - 1663	167	2672 - 2687	231	3696 - 3711
40	640 - 655	104	1664 - 1679	168	2688 - 2703	232	3712 - 3727
41	656 - 671	105	1680 - 1695	169	2704 - 2719	233	3728 - 3743
42	672 - 687	106	1696 - 1711	170	2720 - 2735	234	3744 - 3759
43	688 - 703	107	1712 - 1727	171	2736 - 2751	235	3760 - 3775
44	704 - 719	108	1728 - 1743	172	2752 - 2767	236	3776 - 3791
45	720 - 735	109	1744 - 1759	173	2768 - 2783	237	3792 - 3807
46	736 - 751	110	1760 - 1775	174	2784 - 2799	238	3808 - 3823
47	752 - 767	111	1776 - 1791	175	2800 - 2815	239	3824 - 3839
48	768 - 783	112	1792 - 1807	176	2816 - 2831	240	3840 - 3855
49	784 - 799	113	1808 - 1823	177	2832 - 2847	241	3856 - 3871
50	800 - 815	114	1824 - 1839	178	2848 - 2863	242	3872 - 3887
51	816 - 831	115	1840 - 1855	179	2864 - 2879	243	3888 - 3903
52	832 - 847	116	1856 - 1871	180	2880 - 2895	244	3904 - 3919
53	848 - 863	117	1872 - 1887	181	2896 - 2911	245	3920 - 3935
54	864 - 879	118	1888 - 1903	182	2912 - 2927	246	3936 - 3951
55	880 - 895	119	1904 - 1919	183	2928 - 2943	247	3952 - 3967
56	896 - 911	120	1920 - 1935	184	2944 - 2959	248	3968 - 3983
57	912 - 927	121	1936 - 1951	185	2960 - 2975	249	3984 - 3999
58	928 - 943	122	1952 - 1967	186	2976 - 2991	250	4000 - 4015
59	944 - 959	123	1968 - 1983	187	2992 - 3007	251	4016 - 4031
60	960 - 975	124	1984 - 1999	188	3008 - 3023	252	4032 - 4047
61	976 - 991	125	2000 - 2015	189	3024 - 3039	253	4048 - 4063
62	992 - 1007	126	2016 - 2031	190	3040 - 3055	254	4064 - 4079
63	1008 - 1023	127	2032 - 2047	191	3056 - 3071	255	3072 - 3087

In the label, the NPD1 and NPD2 TOF science data are described as a linear storage TABLE object with records that are all the same length. Each record, or every row in the table, is composed of 768 items for storing 3*256 TOF counter values. This description, presented hereafter, applies to both NPD1 and NPD2 sensors.

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION ITEMS ITEM_BYTES END_OBJECT	<pre>= COLUMN = 1 = "NPD_TOF_COUNTS" = ASCII_INTEGER = 1 = 4610 = "ADC UNITS" = "I5" = "Uncalibrated NPDX sensor science data in TOF operation mode." = 768 = 6 = COLUMN</pre>

END_OBJECT

= NPD_TOFSCIE_TABLE



4.3.5.6 Description of Instrument

The description of the instrument is done in above and as a brief overview in the INST.CAT catalog file.

4.3.5.7 Parameters Index File Definition

N/A

4.3.5.8 Mission Specific Keywords

Mission specific keywords should all have the MISSION_ID "VEX" prefix.

4.3.6 NPD Housekeeping Calibrated Data Product Design (Level 3)

NPD1 and NPD2 level 3 HK contains calibrated NPD housekeeping data with PDS detached labels. The incoming raw HK values are converted into physical values when calibration is applied. This type of data is identified by the following data descriptors within the current label file:

PRODUCT_TYPE = RDR /* EDR for RAW, RDR for calibrated data */ PROCESSING LEVEL ID = 3

HK parameters are listed in the following fields table in the same order that they appear in the data product label file.

Rank	Field	Rank	Field
1	UTC correlated Time	31	NPD1 calib12
2	OBT Time	32	NPD1 calib21
3	NPD1 temperature	33	NPD1 calib22
4	Scanner temperature sensor	34	NPD1 sefccnt
5	SW version	35	NPD1 defccnt
6	HK i +30V	36	Scanner vrefmc
7	HK i +5V	37	Scanner init
8	HK V +12V	38	Lost step
9	HK V +30V	39	Scanner status state
10	HK V +5V	40	Scanner status direction
11	HK V -12V	41	Scanner status position clock
12	HK V -5V	42	Scanner status cw end position
13	NDP1 +30V on/off	43	Scanner status ccw end position
14	NPD heaters on/off	44	Scanner speed
15	Sun sensor 1	45	Scanner setup direction
16	Sun sensor 2	46	Scanner setup mode
17	NPD1 deflector switch	47	Scanner +30V on/off
18	NPD1 bias monitor	48	Scanner coast current reference
19	NPD1 bias reference	49	Scanner ramp current reference
20	NPD1 deflector monitor	50	Scanner threshold cw reference
21	NDP1 deflector reference	51	Scanner threshold ccw reference
22	NPD1 start bias monitor	52	Scanner threshold wheel reference
23	NPD1 start bias reference	53	Scanner position
24	NPD1 stop bias monitor	54	SW mode
25	NPD1 stop bias reference	55	Cpu load
26	NPD1 front control	56	NPD accumulation time

Table 31. NPD1 housekeeping content.



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 138

27	NPD1 main control	57	NPD RICE compression enable
28	NDP1 stat	58	NPD LOG compression enable
29	NPD1 tdcrd	59	NPD1 mode
30	NPD1 calib11		

Table 32. NPD2 housekeeping content.

Rank	Field	Rank	Field
1	UTC correlated Time	31	NPD2 calib12
2	OBT Time	32	NPD2 calib21
3	NPD2 temperature	33	NPD2 calib22
4	Scanner temperature sensor	34	NPD2 sefccnt
5	SW version	35	NPD2 defccnt
6	HK i +30V	36	Scanner vrefmc
7	HK i +5V	37	Scanner init
8	HK V +12V	38	Lost step
9	HK V +30V	39	Scanner status state
10	HK V +5V	40	Scanner status direction
11	HK V -12V	41	Scanner status position clock
12	HK V -5V	42	Scanner status cw end position
13	NPD2 +30V on/off	43	Scanner status ccw end position
14	NPD heaters on/off	44	Scanner speed
15	Sun sensor 1	45	Scanner setup direction
16	Sun sensor 2	46	Scanner setup mode
17	NPD2 deflector switch	47	Scanner +30V on/off
18	NPD2 bias monitor	48	Scanner coast current reference
19	NPD2 bias reference	49	Scanner ramp current reference
20	NPD2 deflector monitor	50	Scanner threshold cw reference
21	NDP2 deflector reference	51	Scanner threshold ccw reference
22	NPD2 start bias monitor	52	Scanner threshold wheel reference
23	NPD2 start bias reference	53	Scanner position
24	NPD2 stop bias monitor	54	SW mode
25	NPD2 stop bias reference	55	Cpu load
26	NPD2 front control	56	NPD accumulation time
27	NPD2 main control	57	NPD RICE compression enable
28	NDP2 stat	58	NPD LOG compression enable
29	NPD2 tdcrd	59	NPD2 mode
30	NPD2 calib11		

The table object is detailed in the following paragraph.

4.3.6.1 File Characteristics Data Elements

The following elements are present in the labels for every NPD housekeeping calibrated data product, and they describe the basic characteristics of the data product in terms of structure and naming:

/* FILE CHARACTERISTIC DATA	ELEMENTS */
PRODUCT_ID	= this element defines the current product file name,
	without extension
RECORD_TYPE	= FIXED_LENGTH
RECORD_BYTES	= 295
FILE_RECORDS	= this element indicates the number of records within
_	the data file

4.3.6.2 Data Object Pointers Identification Data Elements



The NPD1 and NPD2 housekeeping calibrated data are organized as ASCII table. The data object pointers that references TAB file are:

^HK_NPD1_TABLE ^HK_NPD2_TABLE

4.3.6.3 Instrument and Detector Descriptive Data Elements

See the applicable section 4.3.1.3

4.3.6.4 Structure Definition of Instrument Parameter Objects

N/A

4.3.6.5 Data Object Definition

This section of the label defines the structure and content of the NPD1 and NPD2 housekeeping calibrated data product. Each data file (TAB) are organized as a linear storage TABLE object with fixed length records of 59 columns each that are assigned to contain calibrated HK data when calibration is applied.

NPD1 sensor:

2	
OBJECT	= HK_NPD1_TABLE
NAME	= "HK NPDI"
INTERCHANGE FORMAT	= ASCII
ROWS	= Number of rows within the data file
COLUMNS	= 59
ROW BYTES	= 295
^STRUCTURE	= "NPD1 SPECTRUM HKNPD1.FMT"
END OBJECT	= HK NPD1 TABLE
—	

The structure of the TABLE object is described in the file NPD1_SPECTRUM_HKNPD1.FMT as follows:

OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE	= "UTC" = TIME
END_OBJECT	= COLUMN
COLUMN_NUMBER	= "OBT" = CHARACTER



END_OBJECT	<pre>seconds expressed as multiples of 2^-16 seconds" = COLUMN</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 3 = "NPD1_TEMP" = ASCII_REAL = 47 = 7 = "CELSIUS" = "F7.2" = "NPD1 temperature in degree Celsius" = COLUMN</pre>
BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 4 = "SCANNER_TEMP_SENSOR" = ASCII_REAL = 55 = 7 = "CELSIUS" = "F7.2" = "Scanner temperature sensor in degree Celsius" = COLUMN</pre>
	<pre>= COLUMN = 5 = "SW_VERSION" = ASCII_INTEGER = 63 = 5 = "N/A" = "I5" = "Software version To decode into Binary format. Bit description: patchVersion [3:0] minorVersion [8:4] majorVersion [13:9] releaseClass [15:14]: 1 (D), 2 (T), 3 (R)"</pre>
DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = COLUMN = 6 = "HK_I_PLUS_30V" = ASCII_REAL = 69 = 6 = "MILLIAMPERE" = "F6.2" = "HK i +30V in milli-amperes"</pre>
DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = COLUMN = 7 = "HK_I_PLUS_5V" = ASCII_REAL = 76 = 7 = "MILLIAMPERE" = "F7.2" = "HK i +5V in milli-amperes" = COLUMN</pre>



Document No. : VEX_ASP_CESR_EAICD_V1_5

OBJECT = COLUMN START_BYTE= 8NAME= "HK_V_PLUS_12V"DATA_TYPE= ASCII_REALSTART_BYTE= 84BYTES= 5UNIT... COLUMN_NUMBER = 8 BYTES = 5 UNIT = "VOLT" FORMAT = "F5.2" DESCRIPTION = "HK V +12V in Volts" D OBJECT = COLUMN END OBJECT CECI= COLUMNCOLUMN_NUMBER= 9NAME= "HK_V_PLUS_30V"DATA_TYPE= ASCII_REALSTART_BYTE= 90BYTES= 6UNIT= "WOLTC" OBJECT BYTES = 6 UNIT = "VOLTS" FORMAT = "F6.2" DESCRIPTION = "HK V +30V in Volts" D_OBJECT = COLUMN END OBJECT BJECT = COLUMN COLUMN_NUMBER = 10 NAME = "HK_V_PLUS_5V" DATA_TYPE = ASCII_REAL START_BYTE = 97 BYTES = 4 UNIT = "VOLT" FORMAT = "F4.2" DESCRIPTION = "HK V +5V in Volts" D_OBJECT = COLUMN OBJECT END OBJECT OBJECT COLUMN_NUMBER= COLUMNCOLUMN_NUMBER= 11NAME= "HK_V_MINUS_12V"DATA_TYPE= ASCII_REALSTART_BYTE= 102BYTES= 6UNIT= "VOLT" BYTES = 6 UNIT = "VOLT" FORMAT = "F6.2" DESCRIPTION = "HK V -12V in Volts" D OBJECT - COLUMN END OBJECT OBJECT COLUMN_NUMBER = 12 NAME = "HK_V_MINUS_5V" DATA_TYPE = ASCII_REAL START_BYTE = 109 BYTES BYTES BYTES = 5 UNIT = "VOLT" FORMAT = "F5.2" DESCRIPTION = "HK V -5V in Volts" D OBJECT = COLUMN END OBJECT OBJECT BYTES

= COLUMN COLUMN_NUMBER = 13 NAME = "NPD1_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 115 BYTES - 1 = 1



UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "NPD1 +30V on/off
	The field takes one of the following values:
	0 off
	1 on"
END_OBJECT	= COLUMN
	- COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	- IA - "NDD UFATEDS ON OFF"
DATA TYPE	= 14 = "NPD_HEATERS_ON_OFF" = ASCII_INTEGER
START_BYTE	= 117
BYTES	= 1
	= "N/A"
DESCRIPTION	= "I1" = "NPD heaters on/off
	The field takes one of the following values:
	0 off
	1 on"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
NAME	- IJ = "SUN SENSOR 1"
DATA TYPE	= ASCII INTEGER
START BYTE	= 119
BYTES	<pre>= COLUMN = 15 = "SUN_SENSOR_1" = ASCII_INTEGER = 119 = 1</pre>
UNIT	= "N/A" = "I1" = "Sun sensor 1 output"
FORMAT	= "I1"
DESCRIPTION	= "Sun sensor 1 output"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 16
NAME	= "SUN SENSOR 2"
DATA TYPE	= ASCII INTEGER
START BYTE	= 16 = "SUN_SENSOR_2" = ASCII_INTEGER = 121
BYTES	= 1
UNIT	= "N/A" = "I1"
FORMAT	= "I1"
	= "Sun sensor 2 output"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	
NAME	= "NPD1_DEFL_SWITCH"
DATA TYPE	= ASCII INTEGER
START BYTE	
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "NPD1 deflector switch"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 18
NAME	= "NPD1 BIAS MONITOR"
DATA_TYPE	
START_BYTE	= 125
BYTES	= 6
UNIT	= "VOLT"



Document No. : VEX_ASP_CESR_EAICD_V1_5

= "F6.1" FORMAT DESCRIPTION = "NPD1 bias monitor in Volts" END OBJECT = COLUMN JECT = COLORN COLUMN_NUMBER = 19 NAME = "NPD1_BIAS_REFERENCE" DATA_TYPE = ASCII_INTEGER START_BYTE = 132 BYTES = 3 "COC UNITES" = COLUMN OBJECT = "ADC_UNITS" = "I3" UNIT FORMAT DESCRIPTION = "NPD1 bias reference" = COLUMN END OBJECT = COLUMN OBJECT COLUMN_NUMBER= COLUNAME= 20NAME= "NPIDATA_TYPE= ASC:START_BYTE= 136BYTES= 6 = "NPD1_DEFL_MONITOR" = ASCII REAL BYTES = "VOLT" UNIT FORMAT = "F6.1" FORMAT DESCRIPTION = "NPD1 deflector monitor in Volts" = COLUMN END OBJECT JECT = COLONN COLUMN_NUMBER = 21 NAME = "NPD1_DEFL_REFERENCE" DATA_TYPE = ASCII_INTEGER START_BYTE = 143 RYTES = 3 "ADC_UNITS" OBJECT = COLUMN = "ADC_UNITS" = "I3" UNIT FORMAT DESCRIPTION = "NPD1 deflector reference" END OBJECT = COLUMN OBJECT = COLUMN JECT = COLUMN COLUMN_NUMBER = 22 NAME = "NPD1_START_BIAS_MONITOR" DATA_TYPE = ASCII_REAL START_BYTE = 147 PATES = 6 BYTES = 6 = "VOLT" UNIT = "F6.1" FORMAT DESCRIPTION = "NPD1 start bias monitor in Volts" = COLUMN END_OBJECT OBJECT = COLUMN = 23 = "NPE = ASCI = 154 = 3 COLUMN_NUMBER NAME DATA_TYPE = "NPD1_START_BIAS_REFERENCE" = ASCII INTEGER START_BYTE BYTES = "ADC UNITS" UNIT = "I3" FORMAT DESCRIPTION = "NPD1 start bias reference" = COLUMN END OBJECT OBJECT = COLUMN COLUMN_NUMBER = 24 NAME = "NPD1 STOP BIAS MONITOR"



END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= 158 = 6 = "VOLT" = "F6.1" = "NPD1 stop bias monitor in Volts" = COLUMN = COLUMN</pre>	
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 26 = "NPD1_FRONTCTRL" = ASCII_INTEGER = 169 = 3 = "N/A" = "I3" = "This register is used to as a common control register for the NPD1 sensor. The field value has to be decoded into Binary format. Each bit may take one of the following values : bit 0 (TDCINEMA) =1 enables attention of TDC to the input signals start, stop and calibration clock bit 1 (TDCOUNTIS) =1 disables readout of valid data from the TDC bit 2 (CALWAITENA)=1 enables wait for calibration values bit 3 (AUTORSTDIS)=1 disables generation of artificial stop signal bit 4 (STOARTDIS) =1 disables generation of artificial stop signal bit 5 (CNTDIS) =1 disables start signal going into TDC bit 7 (ADCCALDIS) =1 disables using of ADC calibration bit 8-15 n.c."</pre>	
END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>Dit 8-15 h.c." = COLUMN = COLUMN = 27 = "NPD1_MAINCTRL" = ASCII_INTEGER = 173 = 3 = "N/A" = "I3" = "This register is used to as a common control register for the NPD1 sensor. The field value has to be decoded into Binary format. Each bit may take one of the following values :</pre>	



END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>bit 0-1 (LVL[1:0]) Level of storing as binning</pre>
END_OBJECT	bit 15 (ADCERR) =1 ADC error occurred" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 29 = "NPD1_TDCRD" = ASCII_INTEGER = 183 = 5 = "N/A" = "I5" = "After the transmission of an appropriate TDC-opcode, the contents of the requested TDC register is available in this register."</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME	<pre>= COLUMN = 30 = "NPD1_CALIB11"</pre>



	= ASCII INTEGER
START_BYTE	= ASCII_INTEGER = 189
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "T5"
DESCRIPTION	= "This register contains part1 of the calibration data from the TDC (CAL11)."
END_OBJECT	<pre>data from the TDC (CAL11)." = COLUMN</pre>
OBJECT	= COLUMN
COLUMN NUMBER	= 31
NAME	<pre>= COLUMN = 31 = "NPD1_CALIB12" = ASCII_INTEGER = 195 = 5</pre>
DATA TYPE	= ASCII INTEGER
START BYTE	= 195
BYTES	= 5
UNIT	= "N/A"
FORMAT	= "15"
DESCRIPTION	= "This register contains part2 of the calibration data from the TDC (CAL12)."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COTIIMN NIIMPED	- 32
NAME	= "NPD1_CALIB21" = ASCII_INTEGER = 201
DATA TYPE	= ASCII INTEGER
START BYTE	= 201
BYTES	= 5
FORMAT	= "N/A" = "15"
	<pre>= "This register contains part3 of the calibration data from the TDC (CAL21)."</pre>
END_OBJECT	= COLUMN
OBJECT	= COLUMN
	= 33
COLUMN_NUMBER NAME	= "NPD1 CALTB22"
DATA TYPE	= "NPD1_CALIB22" = ASCII_INTEGER
START_BYTE	= 207
BYTES	= 5
	=)
UNIT	*
UNIT FORMAT	= '5' = "N/A" = "15"
	= "N/A" = "I5" = "This register contains part4 of the calibration
FORMAT	= "N/A" = "I5"
FORMAT DESCRIPTION	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)."</pre>
FORMAT DESCRIPTION END_OBJECT	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = COLUMN</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = COLUMN = 34</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = COLUMN = 34 = "NPD1_SEFCCNT"</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER = 213</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER = 213 = 5</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER = 213 = 5 = "N/A" = "I5" = "This registers counts the occurrence and correction of single bit errors of the SRAM up to</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER = 213 = 5 = "N/A" = "I5" = "This registers counts the occurrence and</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER = 213 = 5 = "N/A" = "I5" = "This registers counts the occurrence and correction of single bit errors of the SRAM up to the upper limit of 65536." = COLUMN</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT OBJECT	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER = 213 = 5 = "N/A" = "I5" = "This registers counts the occurrence and correction of single bit errors of the SRAM up to the upper limit of 65536." = COLUMN = COLUMN</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER = 213 = 5 = "N/A" = "I5" = "This registers counts the occurrence and correction of single bit errors of the SRAM up to the upper limit of 65536." = COLUMN = 35</pre>
FORMAT DESCRIPTION END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT OBJECT	<pre>= "N/A" = "I5" = "This register contains part4 of the calibration data from the TDC (CAL22)." = COLUMN = 34 = "NPD1_SEFCCNT" = ASCII_INTEGER = 213 = 5 = "N/A" = "I5" = "This registers counts the occurrence and correction of single bit errors of the SRAM up to the upper limit of 65536." = COLUMN = COLUMN</pre>



BYTES UNIT FORMAT	<pre>= 219 = 5 = "N/A" = "I5" = "This registers counts the occurrence of double bit errors bit errors of the SRAM data from up to the upper limit of 65536."</pre>			
END_OBJECT	= COLUMN			
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 36 = "SCANNER_VREFMC" = ASCII_INTEGER = 225 = 3 = "ADC_UNITS" = "I3" = "Scanner vrefmc" = COLUMN</pre>			
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= COLUMN = 37 = "SCANNER_INIT" = ASCII_INTEGER = 229 = 1 = "N/A" = "I1" = "Scanner initialized" = COLUMN</pre>			
BYTES UNIT FORMAT	<pre>= COLUMN = 38 = "LOST_STEP" = ASCII_INTEGER = 231 = 1 = "N/A" = "I1" = "Lost step" = COLUMN</pre>			
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 39 = "SCANNER_STATUS_STATE" = ASCII_INTEGER = 233 = 1 = "N/A" = "I1" = "Scanner status state. The field takes one of the following values: 0 not busy 1 ramp up 2 full speed move 3 ramp down"</pre>			
END_OBJECT	= COLUMN			
OBJECT COLUMN_NUMBER NAME DATA_TYPE	= COLUMN = 40 = "SCANNER_STATUS_DIRECTION" = ASCII_INTEGER			



UNIT FORMAT DESCRIPTION	<pre>= 235 = 1 = "N/A" = "I1" = "Scanner status direction The field takes one of the following values: 0 0-180 1 180-0"</pre>		
END_OBJECT	= COLUMN		
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 41 = "SCANNER_STATUS_POS_CLOCK" = ASCII_INTEGER = 237 = 1 = "N/A" = "I1" = "Scanner status position clock" = COLUMN</pre>		
BYTES UNIT FORMAT	<pre>= COLUMN = 42 = "SCANNER_STATUS_CW_END_POS" = ASCII_INTEGER = 239 = 1 = "N/A" = "I1" = "Scanner status cw end position The field takes one of the following values: 0 scanner not in cw end position</pre>		
END_OBJECT	1 scanner in cw end position" = COLUMN		
START_BYTE BYTES	<pre>= COLUMN = 43 = "SCANNER_STATUS_CCW_END_POS" = ASCII_INTEGER = 241 = 1 = "N/A" = "I1" = "Scanner status ccw end position The field takes one of the following values: 0 scanner not in ccw end position 1 scanner in ccw end position"</pre>		
END_OBJECT	= COLUMN		
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 44 = "SCANNER_SPEED" = ASCII_INTEGER = 243 = 1 = "N/A" = "I1" = "Scanner speed This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command is sent to move it.</pre>		



The field takes one of the following values: 0 STOP 1 32s scan 2 64s scan 3 128s scan" END OBJECT = COLUMN OBJECT = COLUMN COLUMN NUMBER = 4.5 = "SCANNER SETUP DIRECTION" NAME DATA TYPE = ASCII INTEGER = 245 START BYTE BYTES = 1 = "N/A" UNIT = "I1" FORMAT = "Scanner setup direction DESCRIPTION The field takes one of the following values: 0 0-180 1 180-0 for manual mode speed command only" END OBJECT = COLUMN OBJECT = COLUMN COLUMN NUMBER = 46 = "SCANNER_SETUP_MODE" NAME DATA TYPE = ASCII_INTEGER START BYTE = 247 BYTES = 1 = "N/A" UNIT = "I1" FORMAT = "Scanner setup mode DESCRIPTION The field takes one of the following values: 0 normal 1 manual" END OBJECT = COLUMN = COLUMN OBJECT COLUMN NUMBER = 47 = "SCANNER_PLUS_30V_ON OFF" NAME = ASCII_INTEGER = 249 DATA_TYPE START BYTE = 1 BYTES = "N/A" UNIT = "I1" FORMAT DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END OBJECT = COLUMN OBJECT = COLUMN COLUMN NUMBER = 48 = "SCANNER_COAST_CURRENT_REF" NAME DATA TYPE = ASCII INTEGER START BYTE = 251 BYTES = 3 UNIT = "ADC UNITS" = "I3" FORMAT DESCRIPTION = "Scanner coast current reference" END OBJECT = COLUMN OBJECT = COLUMN



Document No. : VEX_ASP_CESR_EAICD_V1_5

COLUMN_NUMBER = 49 NAME = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 255 BYTES = 3 BYTES= 235BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"D_OBJECT= COLUMN END OBJECT COLUMN
COLUMN_NUMBER= COLUMNCOLUMN_NUMBER= 50NAME= "SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 259BYTES= 2 OBJECT = COLUMN BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner threshold cw reference" D_OBJECT = COLUMN END OBJECT JECT = COLUMN COLUMN_NUMBER = 51 NAME = "SCANNER_TRESHOLD_CCW_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 263 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner threshold ccw reference" ND OBJECT = COLUMN OBJECT END OBJECT COLUMN_NUMBER = COLUMN COLUMN_NUMBER = 52 NAME = "SCANNER_TRESHOLD_WHEEL_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 267 BYTES = 3 UNIT OBJECT BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner threshold wheel reference" END OBJECT = COLUMN COLUMN_NUMBER = COLUMN COLUMN_NUMBER = 53 NAME = "SCANNER_POSITION" DATA_TYPE = ASCII_REAL START_BYTE = 271 BYTES = 5 UNIT OBJECT = 5 = "DEGREE" = "F5.1" = "Scanner position in degrees" UNIT FORMAT DESCRIPTION = COLUMN END OBJECT OBJECT = COLUMN JECT = COLUMN COLUMN_NUMBER = 54 NAME = "SW_MODE" DATA_TYPE = ASCII_INTEGER START_BYTE = 277 BYTES = 3 START_BYTE BYTES UNIT - 277 = 3 UNIT = "N/A" FORMAT = "TO"



DESCRIPTION END_OBJECT	<pre>= "Software mode" = COLUMN</pre>
BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 55 = "CPU_LOAD" = ASCII_INTEGER = 281 = 3 = "N/A" = "I3" = "CPU load" = COLUMN</pre>
BYTES UNIT FORMAT DESCRIPTION	<pre>= ASCII_INTEGER = 285 = 2 = "N/A" = "I2" = "Accumulation time. </pre>
START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = COLUMN = 57 = "NPD_RICE_COMPRESSION_ENABLE" = ASCII_INTEGER = 288 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = off 1 ""</pre>
END_OBJECT	1 = on" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= ASCII_INTEGER = 290 = 1 = "N/A" = "I1" = "The field takes one of the following values: 0 = off</pre>
END_OBJECT	1 = on" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 59 = "NPD1_MODE" = ASCII_INTEGER = 292 = 2 = "N/A" = "I2" = "The field takes one of the following values:</pre>



END OBJECT	<pre>0: not in use 1: raw data 2: bin matrix (0 0 0) 3: bin matrix (0 0 1), (0 1 0) or (1 0 0) 4: bin matrix (0 0 2), (0 2 0) or (2 0 0) 5: bin matrix (0 1 1), (1 0 1) or (1 1 0) 6: bin matrix (0 1 2), (1 0 2), (0 2 1),</pre>
—	rameters is provided in documents [AD 3].
NPD2 sensor:	
OBJECT	= HK_NPD2_TABLE
NAME	= "HK_NPD2"
INTERCHANGE_FORMAT	= ASCII
ROWS	= 1
COLUMNS	= 59
ROW_BYTES	= 295
^STRUCTURE	<pre>= "NPD2_SPECTRUM_HKNPD2.FMT" = HK_NPD2_TABLE</pre>
END_OBJECT	= HK_NPD2_TABLE
The structure of the TABLE obje	ct is described in the file NPD2_SPECTRUM_HKNPD2.FMT as follows:
-	
	file "NPD2_SPECTRUM_HKNPD2.FMT" */
OBJECT	= COLUMN
—	= 1 = "UTC"
NAME DATA TYPE	= TIME
	= 1
BYTES	= 2.3
	$= \frac{23}{N/A''}$
	= "This column represents the UTC of the
	NPD HK data set in PDS standard format YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 2
NAME	= "OBT"
DATA TYPE	= CHARACTER
START BYTE	= 26
BYTES	= 19
UNIT	= "N/A"
DESCRIPTION	<pre>= "On board Time (OBT) is represented as :</pre>
END OBJECT	seconds expressed as multiples of 2^-16 seconds"
END_OBJECT	= COLUMN
OBJECT	= COLUMN



DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= ASCII_REAL = 47 = 7 = "CELSIUS" = "F7.2" = "NPD2 temperature in degree Celsius"</pre>
BYTES UNIT FORMAT	<pre>= COLUMN = 4 = "SCANNER_TEMP_SENSOR" = ASCII_REAL = 55 = 7 = "CELSIUS" = "F7.2" = "Scanner temperature sensor in degree Celsius" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 5 = "SW_VERSION" = ASCII_INTEGER = 63 = 5 = "N/A" = "I5" = "Software version To decode into Binary format. Bit description: patchVersion [3:0] minorVersion [8:4] majorVersion [13:9] releaseClass [15:14]: 1 (D), 2 (T), 3 (R)"</pre>
- OBJECT COLUMN_NUMBER NAME DATA TYPE	<pre>= COLUMN = COLUMN = 6 = "HK_I_PLUS_30V" = ASCII REAL</pre>
START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= 69 = 6 = "MILLIAMPERE" = "F6.2" = "HK i +30V in milli-amperes" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 7 = "HK_I_PLUS_5V" = ASCII_REAL = 76 = 7 = "MILLIAMPERE" = "F7.2" = "HK i +5V in milli-amperes" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME	= COLUMN = 8 = "HK_V_PLUS_12V"



Document No. : VEX_ASP_CESR_EAICD_V1_5 Date : 18 Mar 2011 Page : 154

= ASCII_REAL = 84 DATA TYPE DATA_TYPE START_BYTE BYTES BYTES UNIT = 5 = "VOLT" FORMAT = "F5.2" = "HK V +12V in Volts" DESCRIPTION END OBJECT = COLUMN OBJECT = COLUMN = 9 = "HK_V_PLUS_30V" = ASCII_REAL = 90 COLUMN NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT = 6 = "VOLTS" FORMAT = "F6.2" = "HK V +30V in Volts" DESCRIPTION END OBJECT = COLUMN = COLUMN OBJECT JECT = COLOMIN COLUMN_NUMBER = 10 NAME = "HK_V_PLUS_5V" DATA_TYPE = ASCII_REAL START_BYTE = 97 BYTES = 4 UNIT = "VOLT" FORMAT = "F4.2" = "HK V +5V in Volts" DESCRIPTION = COLUMN END OBJECT = COLUMN OBJECT COLUMN_NUMBER= 11NAME= "HK_V_MINUS_12V"DATA_TYPE= ASCII_REALSTART_BYTE= 102 NAME DATA_TYPE START_BYTE BYTES UNIT = 6 = "VOLT" FORMAT = "F6.2" = "HK V -12V in Volts" DESCRIPTION END OBJECT = COLUMN = COLUMN OBJECT COLUMN_NUMBER = 12 NAME = "HK_V_MINUS_5V" = ASCII_REAL = 109 DATA TYPE DATA_TYPE START_BYTE BYTES = 5 FORMAT = "VOLT" = "F5.2" = "HK V -5V in Volts" DESCRIPTION END OBJECT = COLUMN = COLUMN OBJECT = 13 = "NPD2_PLUS_30V_ON_OFF" COLUMN NUMBER NAME = ASCII_INTEGER = 115 DATA TYPE DATA_TYPE START_BYTE BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "NPD2 +30V on/off The field takes one of the following values:



	0 off			
	1 on"			
END_OBJECT	= COLUMN			
00.70.00				
OBJECT	= COLUMN			
COLUMN_NUMBER	= 14 - "NDD UFATEDS ON OFF"			
NAME DIMIN MADE	= NPD_HEATERS_ON_OFF = ASCIT_INTEGER			
DATA_TIPE	<pre>= COLUMN = 14 = "NPD_HEATERS_ON_OFF" = ASCII_INTEGER = 117 = 1</pre>			
BYTES	-11/ = 1			
DIIES	- 1			
UNIT	= "N/A" = "I1"			
FORMAT	= "II" = "NPD heaters on/off			
DESCRIPTION	The field takes one of the following values: 0 off 1 on"			
END_OBJECT	= COLUMN			
OBJECT	= COLUMN			
COLUMN NUMBER	= 15			
NAME	= 15 = "SUN_SENSOR_1" = ASCII_INTEGER = 119 = 1 = "N(A"			
DATA TYPE	= ASCII INTEGER			
START BYTE	= 119			
BYTES	= 1			
UNIT	= "N/A"			
FORMAT	= 1 = "N/A" = "II"			
DESCRIPTION	= "Sun sensor 1 output"			
END OBJECT	= COLUMN			
—				
OBJECT	= COLUMN			
COLUMN_NUMBER	= 16			
NAME	= 16 = "SUN_SENSOR_2" = ASCII_INTEGER			
DATA_TYPE	= ASCII_INTEGER			
START BYTE	= 121			
BVTFC	= 1			
UNIT	= "N/A"			
FORMAT	= "I1"			
DESCRIPTION END OBJECT	<pre>= "N/A" = "I1" = "Sun sensor 2 output" = COLUMN</pre>			
END_OBJECT	= COLUMN			
OBJECT	= COLUMN			
COLUMN NUMBER	= 17			
NAME —	= "NPD2_DEFL_SWITCH"			
DATA TYPE	= ASCII_INTEGER			
START BYTE	= 123			
BYTES	= 1			
UNIT	= "N/A"			
FORMAT	= "I1"			
DESCRIPTION	= "NPD2 deflector switch"			
END_OBJECT	= COLUMN			
OBJECT	= COLUMN			
COLUMN NUMBER	= 18			
NAME	= "NPD2 BIAS MONITOR"			
DATA TYPE	= ASCII REAL			
START BYTE	= 125			
BYTES	= 6			
UNIT	= "VOLT"			
FORMAT	= "F6.1"			
DESCRIPTION	= "NPD2 bias monitor in Volts"			
END OBJECT	= COLUMN			
-				



Document No. : VEX_ASP_CESR_EAICD_V1_5 Date : 18 Mar 2011 Page : 156

JECT - COLDAN COLUMN_NUMBER = 19 NAME = "NPD2_BIAS_REFERENCE" DATA_TYPE = ASCII_INTEGER START BYTE = 132 OBJECT = 3 = "ADC_UNITS" BYTES UNIT FORMAT = "I3" FORMAT = "I3" DESCRIPTION = "NPD2 bias reference" D OBJECT = COLJIMN = COLUMN END OBJECT JECT - CCL COLUMN_NUMBER = 20 NAME = "NPD2_DEFL_MONITOR" DATA_TYPE = ASCII_REAL START BYTE = 136 = 6 OBJECT = 6 = "V = "VOLT" UNIT FORMAT = "F6.1" DESCRIPTION = "NPD2 deflector monitor in Volts" = COLUMN END OBJECT OFFCT= COLUMNCOLUMN_NUMBER= 21NAME= "NPD2_DEFL_RENDATA_TYPE= ASCII_INTEGERSTART_BYTE= 143BYTES= 2 OBJECT = "NPD2_DEFL_REFERENCE" = 3 = "ADC_UNITS" BYTES UNIT FORMAT = "I3" DESCRIPTION = "13" DESCRIPTION = "NPD2 deflector reference" END OBJECT = COLUMN JECT= COLUMNCOLUMN_NUMBER= 22NAME= "NPD2_STARDDATA_TYPE= ASCII_REALSTART_BYTE= 147BYTES-OBJECT = "NPD2_START_BIAS_MONITOR" BYTES = 6 = "VOLT" = "F6.1" UNIT FORMAT DESCRIPTION = "NPD2 start bias monitor in Volts" = COLUMN END OBJECT OBJECT = COLUMN COLUMN_NUMBER = 23 NAME = "NPD2_START_BIAS_REFERENCE" DATA TYPE = ASCII_INTEGER = 154 START BYTE BYTES = 3 = "ADC_UNITS" = "I3" UNIT FORMAT DESCRIPTION = "NPD2 start bias reference" = COLUMN END OBJECT OBJECT = COLUMN COLUMN_NUMBER NAME = 24 NAME DATA_TYPE = "NPD2 STOP_BIAS_MONITOR" = ASCII REAL = 158 START BYTE BYTES = 6 = "VOLT" UNIT



FORMAT DESCRIPTION END_OBJECT	= "F6.1" = "NPD2 stop bias monitor in Volts" = COLUMN		
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	= ASCII_INTEGER		
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 26 = "NPD2_FRONTCTRL" = ASCII_INTEGER = 169 = 3 = "N/A" = "I3" = "This register is used to as a common control register for the NPD2 sensor. The field value has to be decoded into Binary format. Each bit may take one of the following values : bit 0 (TDCINEMA) =1 enables attention of TDC to</pre>		
END_OBJECT	the input signals start, stop and calibration clock bit 1 (TDCOUNTIS) =1 disables readout of valid data from the TDC bit 2 (CALWAITENA)=1 enables wait for calibration values bit 3 (AUTORSTDIS)=1 disables automatic TDC-reset when SYSERR occurs bit 4 (STOARTDIS) =1 disables generation of artificial stop signal bit 5 (CNTDIS) =1 disables FPGA counter bit 6 (STADIS) =1 disables start signal going into TDC bit 7 (ADCCALDIS) =1 disables using of ADC calibration bit 8-15 n.c." = COLUMN		
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 27 = "NPD2_MAINCTRL" = ASCII_INTEGER = 173 = 3 = "N/A" = "I3" = "This register is used to as a common control register for the NPD2 sensor. The field value has to be decoded into Binary format. Each bit may take one of the following values : bit 0-1 (LVL[1:0]) Level of storing as binning data, storing into binning array will be omitted if COIN[2:0]>LVL[1:0]</pre>		



ASPERA 4 EA

ERA 4 EAICD	Docum Date Page	ent No. : VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 158
hit 2 (STO	רפז (פותק	disables storing into SRAM
		enables simulation of
DIC 5 (DED(rawdata (debug)
bit 4 (DEL		lisables simultaneously
DIC 4 (DED.		leleting of both Binning and
		Raw Data array (after each
		cead access on data)
bi+ 5 (ТАТ(atchUp occurred
		Jacob Securica Jamming-code Error Correction
DIC 0 (ECEI		on SRAM data enabled
bit 7-15 n		II SRAM data enabled
	II.C.	
COLUMN		
COLUMN		
28		
"NPD2 STAT"		
NPDZ STAT		

END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 28 = "NPD2_STAT" = ASCII_INTEGER = 177 = 5 = "N/A" = "I5" = "This register is used to reflect some TDC and FPGA status signals. The field value has to be decoded into Binary format. Each bit may take one of the following values : bit 0 (TDCSYSER) SYSERR-Flag from TDC bit 1 (TDCREADY) READY-Flag from TDC bit 2 (TDCVALID) VALID-Flag from TDC bit 3 (TDCCALM) CALM-Flag from TDC bit 4 (TDCBUSDIR) BUSDIR-Flag from TDC bit 5-8 n.c bit 9 (TDCWRERR) TDC write access error-Flag bit 10 (TDCRDERR) TDC read access error-Flag bit 11 (TDCCMDERR) TDC command error-Flag bit 12 (CMDBUSY) =1 Commanding TDC active bit 13 (DACBUSY) =1 Programming DAC bit 14 (NEWCAL) =1 new calibration data available any read-access to the CALIBxx registers resets this flag</pre>
END_OBJECT	bit 15 (ADCERR) =1 ADC error occurred" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 29 = "NPD2_TDCRD" = ASCII_INTEGER = 183 = 5 = "N/A" = "I5" = "After the transmission of an appropriate TDC-opcode, the contents of the requested TDC register is available in this register."</pre>
END_OBJECT	= COLUMN
OBJECT	= COLUMN

—	
OBJECT	= COLUMN
COLUMN NUMBER	= 30
NAME	= "NPD2_CALIB11"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 189
BYTES	= 5
UNIT	= "N/A"



	= "15"
DESCRIPTION	<pre>= "This register contains part1 of the calibration data from the TDC (CAL11)." = COLUMN</pre>
END_OBJECT	= COLUMN
	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE	= 31
NAME —	= "NPD2 CALIB12"
DATA TYPE	= ASCII INTEGER
START_BYTE	= 195
BYTES	= 5
	= "N/A"
DESCRIPTION	= "15" = "This register contains part2 of the calibration
	data from the TDC (CAL12)."
END_OBJECT	data from the TDC (CAL12)." = COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE	- JZ - "NDD2 CALID21"
NAME DAWA WYDE	- NEDZ_CALIDZI
DATA_TIPE	- ASCII_INIEGER
START_BYTE	
BYTES	= 5 = "N/A"
UNIT	
FORMAT	
DESCRIPTION	= "This register contains part3 of the calibration data from the TDC (CAL21)."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	- 33
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	
	- NPDZ_CALIBZZ
DAIA_IIPE	- ASCII_INIEGER
START_BITE	= 207 - F
DIIDO	- 5
UNIT	= "N/A" = "15"
FORMAT	= "15"
DESCRIPTION	= "This register contains part4 of the calibration
	data from the TDC (CAL22)."
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 34
NAME —	= "NPD2 SEFCCNT"
	= ASCII INTEGER
—	= 213
—	= 5
	= "N/A"
	= "I5"
	= "This registers counts the occurrence and
	correction of single bit errors of the SRAM
	up to the upper limit of 65536."
END_OBJECT	= COLUMN
	= COLUMN
_	= 35
NAME	= "NPD2_DEFCCNT"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 219
BYTES	= 5
	= "N/A"
FORMAT	= "I5"



DESCRIPTION	= "This registers counts the occurrence of double bit errors bit errors of the SRAM data from up to the upper limit of 65526 "
END_OBJECT	upper limit of 65536." = COLUMN
OBJECT COLUMN_NUMBER NAME	<pre>= COLUMN = 36 = "SCANNER_VREFMC" = ASCII_INTEGER = 225 = 3</pre>
DATA_TYPE START_BYTE BYTES UNIT	= 5
FORMAT DESCRIPTION END_OBJECT	<pre>= "ADC_UNITS" = "I3" = "Scanner vrefmc" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA TYPE	<pre>= COLUMN = 37 = "SCANNER_INIT" = ASCII_INTEGER = 229 - 1</pre>
DATA_TYPE START_BYTE BYTES UNIT	$= ASCII_INIEGER = 229 = 1 = "N/A" = "II"$
FORMAT DESCRIPTION	= "I1" = "Scanner initialized" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 38 = "LOST_STEP" = ASCII_INTEGER = 231 = 1 = "N/A" = "I1"</pre>
	= "Lost step" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 39 = "SCANNER_STATUS_STATE" = ASCII_INTEGER = 233 = 1 = "N/A" = "I1" = "Scanner status state. The field takes one of the following values: 0 not busy 1 ramp up</pre>
END_OBJECT	2 full speed move 3 ramp down" = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 40 = "SCANNER_STATUS_DIRECTION" = ASCII_INTEGER = 235 = 1 = "N/A" = "I1"</pre>



DESCRIPTION	<pre>= "Scanner status direction The field takes one of the following values: 0 0-180 1 180-0"</pre>
END_OBJECT	= COLUMN
START_BYTE BYTES	<pre>= COLUMN = 41 = "SCANNER_STATUS_POS_CLOCK" = ASCII_INTEGER = 237 = 1 = "N/A" = "I1" = "Scanner status position clock" = COLUMN</pre>
FORMAT	<pre>= COLUMN = 42 = "SCANNER_STATUS_CW_END_POS" = ASCII_INTEGER = 239 = 1 = "N/A" = "I1" = "Scanner status cw end position The field takes one of the following values: 0 scanner not in cw end position 1 scanner in cw end position"</pre>
END_OBJECT	= COLUMN
UNIT FORMAT	<pre>= COLUMN = 43 = "SCANNER_STATUS_CCW_END_POS" = ASCII_INTEGER = 241 = 1 = "N/A" = "I1" = "Scanner status ccw end position The field takes one of the following values: 0 scanner not in ccw end position 1 scanner in ccw end position"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 44 = "SCANNER_SPEED" = ASCII_INTEGER = 243 = 1 = "N/A" = "I1" = "Scanner speed This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command is sent to move it. The field takes one of the following values: 0 STOP 1 32s scan 2 64s scan</pre>



	3 128s scan"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 45
NAME	= "SCANNER_SETUP_DIRECTION"
DATA_TYPE	<pre>= "SCANNER_SETUP_DIRECTION" = ASCII_INTEGER = 245</pre>
START_BYTE	= 245
BYTES	
UNIT	= "N/A"
FORMAT DESCRIPTION	= "I1" = "Scanner setup direction
DESCRIPTION	The field takes one of the following values: 0 0-180 1 180-0
END_OBJECT	for manual mode speed command only" = COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 46
NAME	= "SCANNER_SETUP_MODE"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 247
BYTES	
UNIT FORMAT	= "N/A" = "I1"
DESCRIPTION	= "Scanner setup mode
	The field takes one of the following values: O normal 1 manual"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 47
	= "SCANNER_PLUS_30V_ON_OFF"
DATA_TYPE	= ASCII_INTEGER
START_BYTE BYTES	= 249 = 1
UNIT	= ''N/A"
FORMAT	= "11"
DESCRIPTION	= "Scanner +30V on/off
	The field takes one of the following values: 0 off 1 on"
END OBJECT	= COLUMN
—	
OBJECT	= COLUMN
COLUMN_NUMBER	<pre>= 48 = "SCANNER_COAST_CURRENT_REF" = ASCII_INTEGER = 251</pre>
NAME DATA TYPE	- ASCII INTECED
START BYTE	= 251
BYTES	= 3
UNIT	= "ADC_UNITS"
FORMAT	= "13"
	= "Scanner coast current reference"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
NAME	= "SCANNER_RAMP_CURRENT_REF"
DATA_TYPE START BYTE	= ASCII_INTEGER = 255
	200



BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= 3 = "ADC_UNITS" = "I3" = "Scanner ramp current reference" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 50 = "SCANNER_TRESHOLD_CW_REF" = ASCII_INTEGER = 259 = 3 = "ADC_UNITS" = "I3" = "Scanner threshold cw reference"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 51 = "SCANNER_TRESHOLD_CCW_REF" = ASCII_INTEGER = 263 = 3 = "ADC_UNITS" = "I3" = "Scanner threshold ccw reference"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 52 = "SCANNER_TRESHOLD_WHEEL_REF" = ASCII_INTEGER = 267 = 3 = "ADC_UNITS" = "I3" = "Scanner threshold wheel reference" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 53 = "SCANNER_POSITION" = ASCII_REAL = 271 = 5 = "DEGREE" = "F5.1" = "Scanner position in degrees" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 54 = "SW_MODE" = ASCII_INTEGER = 277 = 3 = "N/A" = "I3" = "Software mode" = COLUMN</pre>
OBJECT	= COLUMN



COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= 55 = "CPU_LOAD" = ASCII_INTEGER = 281 = 3 = "N/A" = "I3" = "CPU load" = COLUMN</pre>
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 56 = "NPD_ACCUMULATION_TIME " = ASCII_INTEGER = 285 = 2 = "N/A" = "I2" = "Accumulation time. Time = 2N*31.25 [ms]" = COLUMN</pre>
BYTES UNIT	<pre>= COLUMN = 57 = "NPD_RICE_COMPRESSION_ENABLE" = ASCII_INTEGER = 288 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = off</pre>
END_OBJECT	1 = on" = COLUMN
BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 58 = "NPD_LOG_COMPRESSION" = ASCII_INTEGER = 290 = 1 = "N/A" = "I1" = "The field takes one of the following values: 0 = off 1 = on"</pre>
end_object object	= COLUMN = COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLONN = 59 = "NPD2_MODE" = ASCII_INTEGER = 292 = 2 = "N/A" = "I2" = "The field takes one of the following values: 0: not in use 1: raw data 2: bin matrix (0 0 0) 3: bin matrix (0 0 1), (0 1 0) or (1 0 0)</pre>



Document No. : VEX ASP CESR EAICD V1 5 **ASPERA 4 EAICD** Date : 18 Mar 2011 Page : 165 4: bin matrix (0 0 2), (0 2 0) or (2 0 0) 5: bin matrix (0 1 1), (1 0 1) or (1 1 0) 6: bin matrix (0 1 2), (1 0 2), (0 2 1), (1 2 0), (2 0 1) or (2 1 0) 7: bin matrix (0 2 2), (2 0 2) or (2 2 0) 8: bin matrix (1 1 1) 9: bin matrix $(1 \ 1 \ 2)$, $(1 \ 2 \ 1)$ or $(2 \ 1 \ 1)$ 10: bin matrix (1 2 2), (2 1 2) or (2 2 1) 11: bin matrix (2 2 2) 12: phd mode 13: tof mode"

END OBJECT

Detailed description of those parameters is provided in documents [AD 3].

= COLUMN

4.3.6.6 Description of Instrument

See the applicable section 4.3.5.6

4.3.6.7 Parameters Index File Definition

N/A

4.3.6.8 Mission Specific Keywords

See the applicable section 4.3.5.8

4.3.7 Neutral Particle Imager Science Edited Data Product Design (Level 2)

The NPI sensor can be operated in 2 modes as described in the document [AD 3], producing 2 different types of formatted block data in telemetry packets, one for each selected operation mode. Both modes deal with the storage of series of particle number counts that are measured in different azimuth direction from the 32 possible ones (the anodes). Each of those series consists of a set of data samples, which are acquired and stored sequentially within the considered time interval of one sequence of measurement. This number of data samples may vary from a sequence to another depending on the number of active azimuthal sectors involved in measurement and the time duration of the sequence.

Only 2 types of NPI edited science file are assigned for containing those data, one per mode. Both of them are data products of fixed-size array where data of each sequence are stored in a linear row-major order with azimuth sector the fastest varying parameter. For those records where sample or anode data values are missing, the field is padded on the right with missing constant values ensuring a 32*32 blank separated value table object per record all along the mission.

The Table 33 indicates the data contents for each science data file and their PDS representation object. A NPI header, specific to each mode of observation, is added before the data collection. The NPI headers information and values are shown in the Table 34.



Date Page

Document No. : VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 166

Table 33. NPI science data file contents and structure.

Data type	Mode	Data description	PDS data object
NORMALX	NPI normal mode	Successive data measurements. Each measurement is defined as a neutral particle number of counts accumulated in a sampling time and simultaneously at different active azimuthal sectors.	Linear storage in a TABLE object of 1024 blank-separated data or missing constant values (32*32 data values). The missing constant value is an artifact maintaining a fixed-size table object, even if data are missing. The number of missing values depends upon the settings of the data sector mask and the NPI sample number respectively.
STEPXXX	NPI deflection stepping mode	Successive data measurements. Each measurement is defined as a neutral particle number of counts accumulated in a sampling time and simultaneously at different active azimuthal sectors. In this mode, the deflection voltage is switched up and down periodically (voltage stepping).	Linear storage in a TABLE object of 1024 blank-separated data or missing constant values (32*32 data values). The missing constant value is an artifact maintaining a fixed-size table object, even if data are missing. The number of missing values depends upon the settings of the data sector mask and the NPI sample number respectively.

Table 34. NPI headers content.

Rank	Field / Value		Rank	Fi	eld / Value
	NPI normal mode data header				
1	UTC correlated Time	9	7	Accumulation Time	
2	OBT Time		8	Sample number (max=32 samples in packet)	
3	SW version		9	NPI sector mask	If NPI_Sector_Mask = 0, sensor is not working".
4	Scanner direction	0 = 0 - 180 1 = 180 - 0	10	Log compression	Always 0 for raw data mode (0 = disabled)
5	Scanner speed	0 (standing), 32s scan, 64s scan, or 128s scan	11	Rice compression flag status	0 = non valid 1 = vadid
6	Scanner Position	On start of scan (or step) period	12	Rice compression assigned value	
	NPI deflection stepping mode data header				
1	1 UTC correlated Time		7	Accumulation Time	
2	OBT Time		8	Sample number (ma	x=32 samples in packet)
3	SW version		9	NPI sector mask	If NPI_Sector_Mask = 0, sensor is not working".
4	Scanner direction	0 = 0 - 180 1 = 180 - 0	10	Log compression	Always 0 for raw data mode (0 = disabled)
5	Scanner speed	0 (standing), 32s scan, 64s scan, or 128s scan	11	Rice compression flag status	0 = non valid 1 = vadid
6	Scanner Position	On start of scan (or step) period	12	Rice compression	assigned value
			13	NPI deflection stat	us mask

The table objects are detailed in the following paragraphs.

4.3.7.1 File Characteristics Data Elements

The following elements are present in the labels for every NPI science edited data product, and they describe the basic characteristics of the data product in terms of structure and naming:

/* FILE CHARACTERISTIC DATA ELEMENTS */



Document No. : VEX_ASP_CESR_EAICD_V1_5

PRODUCT_ID	= this element defines the current product file name, without extension
RECORD TYPE	= FIXED LENGTH
RECORD_BYTES	= this element indicates the number of bytes in a data record, including record terminators and separators
FILE_RECORDS	= this element indicates the number of records within the data file

4.3.7.2 Data Object Pointers Identification Data Elements

Several pointers are defined, identifying the ASCII PDS objects within which the NPI status and uncalibrated science data are stored. The data object pointers that reference TAB files are:

^HEAD TABLE ^DATA SCIENCE TABLE

4.3.7.3 Instrument and Detector Descriptive Data Elements

The following data identification elements provide additional information about the NPI data products.

```
/* PRODUCER IDENTIFICATION */

      PRODUCER_ID
      = "CESR_ASPERA4_GROUP

      PRODUCER_FULL_NAME
      = "EMMANUEL PENOU"

      PRODUCER_INSTITUTION_NAME
      = "CENTRE D'ETUDE SPATIALE DES RAYONNEMENTS"

      = "YYYY-MM-DDThh:mm:ss[.fff]

/* DATA DESCRIPTION AND IDENTIFICATION */
DATA_SET_NAME = "
VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 NPI V1.0" or
        "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 NPI V1.0" or
        "VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 EXTENSION 1 NPI V1.0" or
DATA SET ID
                                     = "VEX-V/SW-ASPERA-2-NPI-V1.0"
                                                                                    or
                                       "VEX-V/SW-ASPERA-2-EXT1-NPI-V1.0"
                                                                                    or
                                       "VEX-V/SW-ASPERA-2-EXT2-NPI-V1.0" or
                                     = 0001
RELEASE ID
PRODUCT_TYPE
                                     = 0000
                                    = EDR
PROCESSING LEVEL_ID
                                    = 2
MISSION NAME
                                   = "VENUS EXPRESS"
                                    = VEX
MISSION_ID
INSTRUMENT_HOST_NAME= "VENUS EXPRESS"INSTRUMENT_HOST_ID= VEXMISSION_PHASE_NAME= As defined in [AD 4]INSTRUMENT_NAME= "
    ANALYZER OF SPACE PLASMA AND ENERGETIC ATOMS (4TH VERSION)"
INSTRUMENT_ID = ASPERA4
INSTRUMENT_TYPE = {"ELECTE
                                     = {"ELECTROSTATIC ANALYZER",
                                         "MASS SPECTROMETER",
                                        "NEUTRAL PARTICLE IMAGER",
                                         "NEUTRAL PARTICLE DETECTOR" }
DETECTOR ID
                                    = VEX ASP4 NPI
^INSTRUMENT DESC
                                    = "ASPERA4_DESC.TXT"
/* TARGET IDENTIFICATION */
IARGET_TYPE
TARGET_NAME
                                    = "PLANET" or "N/A"
                                    = "VENUS" or "SOLAR WIND"
RIGHT_ASCENSION
                                     = "N/A"
                                     = "N/A"
DECLINATION
```



<pre>/* SCIENCE OPERATIONS INFORMAT OBSERVATION_TYPE ^OBSERVATION_TYPE_DESC</pre>	= {"AC002B", "PE001A", "PE004A"} or "N/A"
/* TIME RELATED INFORMATION */	= YYYY-MM-DDThh:mm:ss.fff
START_TIME	
STOP_TIME	= YYYY-MM-DDThh:mm:ss.fff
SPACECRAFT_CLOCK_START_COUNT	= "01/XXXXXXXXXXXXXXXXXX
SPACECRAFT_CLOCK_STOP_COUNT	= "01/xxxxxxxxx.xxxx"
/* ORBITAL INFORMATION */	
ORBIT NUMBER	= UNK
ORBITAL ECCENTRICITY	= UNK
ORBITAL INCLINATION	= UNK
ORBITAL SEMIMAJOR AXIS	= UNK
PERIAPSIS ALTITUDE	= UNK
PERIAPSIS ARGUMENT ANGLE	= UNK
PERIAPSIS TIME	= "UNK"
SPACECRAFT ORIENTATION	= UNK
^SPACECRAFT_ORIENTATION_DESC	= "VEX ORIENTATION DESC.TXT"
SPACECRAFT POINTING MODE	= "N/A"
	= "VEX_POINTING_MODE_DESC.TXT"

4.3.7.4 Structure Definition of Instrument Parameter Objects

N/A

4.3.7.5 Data Object Definition

This section of the label defines the structure and content of the NPI science edited data products. Each data product file (TAB) concerns a single instrument mode and contains both typically 2 objects: a header TABLE and a science data TABLE object stored in parallel. Those objects are ASCII tables containing respectively header information about the sensor status and particle number counts measured by the active sectors within each sampling time. The number of rows within these tables is variable and depends roughly on the number of sequences contained in the processed level-1 data file. The columns within the header TABLE object are first described in the section below. The table object related to the science data storage is defined in the following separate sections.

4.3.7.5.1 The description of the NPI header table for normal mode:

OBJECT	= HEAD_TABLE
NAME	= "NPI_SPECTRUM_HEAD"
ROW SUFFIX BYTES	= Number of bytes that are accounted in the subsequent
	table, including record terminators and separators
INTERCHANGE_FORMAT	= ASCII
ROWS	= Number of rows within the data file
COLUMNS	= 12
ROW_BYTES	= 111
^STRUCTURE	= "NPI NRMHEAD.FMT"
END_OBJECT =	HEAD_TABLE

The structure of the TABLE object is described in the file NPI_NRMHEAD.FMT as follows:

/* Contents of format file "NPI_NRMHEAD.FMT" */
OBJECT = COLUMN
COLUMN_NUMBER = 1
NAME = "UTC"
DATA_TYPE = TIME



START_BYTE BYTES UNIT DESCRIPTION	<pre>= 1 = 23 = "N/A" = "This column represents the UTC of the NPI science data in PDS standard format YYYY-MM-DDThh:mm:ss.sss"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT DESCRIPTION	<pre>= COLUMN = 2 = "OBT" = CHARACTER = 26 = 19 = "N/A" = "On board Time (OBT) is represented as :</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 3 = "SW_VERSION" = ASCII_INTEGER = 47 = 5 = "N/A" = "I5" = "Software version To decode into Binary format. Bit description: patchVersion [3:0] minorVersion [3:0] minorVersion [8:4] majorVersion [13:9] releaseClass [15:14]: 1 (D), 2 (T), 3 (R)"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 4 = "SCANNER_DIRECTION" = ASCII_INTEGER = 53 = 1 = "N/A" = "I1" = "Scanner direction. The field takes one of the following values: 0: 0 - 180 1: 180 - 0"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= COLUMN = 5 = "SCANNER_SPEED" = ASCII_INTEGER = 55 = 3 = SECOND</pre>



FORMAT DESCRIPTION	<pre>= "I3" = "Scanner speed. This is not the actual moving speed at the specified time, but a setting speed value that is applied in operation to the scanner once a command is sent to move it. The field takes one of the following values: 0 (standing) 32 (seconds scan) 64 (seconds scan) 128 (seconds scan)" = COLUMN</pre>
END_OBJECT	- COLOMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 6 = "SCANNER_POSITION" = ASCII_REAL = 59 = 5 = "DEGREE" = "F5.1" = "Scanner position in degrees" = COLUMN</pre>
END_OBJECT OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	<pre>= COLUMN = 7 = "ACCUMULATION_TIME" = ASCII_INTEGER = 65 = 2 = "N/A" = "I2" = "Accumulation time. Time = 2N*31.25ms" = COLUMN = COLUMN = 8 = "NUMBER_OF_SAMPLE" = ASCII_INTEGER = 68 = 3 = "N/A"</pre>
UNIT	= "N/A"
FORMAT DESCRIPTION	<pre>= "I3" = "Number of successive measurements which are stacked</pre>
END_OBJECT	in the sensor set in packet (max=32)." = COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT DESCRIPTION	<pre>= COLUMN = 9 = "NPI_SECTOR_MASK" = CHARACTER = 73 = 32 = "N/A" = "NPI Sector mask defines the active sectors that are set for the measurement. The Binary format is used. One bit (or character) represents the status of one NPI sector and may take one of the following values bit 0 (sector 0): 1 (enable), 0 (disable) bit 1 (sector 1): 1 (enable), 0 (disable) bit 2 (sector 2): 1 (enable), 0 (disable)</pre>



	bit 3 (sector 3): 1 (enable), 0 (disable)
	bit 4 (sector 4): 1 (enable), 0 (disable)
	bit 5 (sector 5): 1 (enable), 0 (disable)
	<pre>bit 6 (sector 6): 1 (enable), 0 (disable)</pre>
	bit 7 (sector 7): 1 (enable), 0 (disable)
	bit 8 (sector 8): 1 (enable), 0 (disable)
	bit 9 (sector 9): 1 (enable), 0 (disable)
	bit 10 (sector 10): 1 (enable), 0 (disable)
	bit 11 (sector 11): 1 (enable), 0 (disable)
	bit 12 (sector 12): 1 (enable), 0 (disable)
	bit 13 (sector 13): 1 (enable), 0 (disable)
	bit 14 (sector 14): 1 (enable), 0 (disable) bit 15 (sector 15): 1 (enable), 0 (disable)
	bit 16 (sector 16): 1 (enable), 0 (disable)
	bit 17 (sector 17): 1 (enable), 0 (disable)
	bit 18 (sector 18): 1 (enable), 0 (disable)
	bit 19 (sector 19): 1 (enable), 0 (disable)
	bit 20 (sector 20): 1 (enable), 0 (disable)
	bit 21 (sector 21): 1 (enable), 0 (disable)
	bit 22 (sector 22): 1 (enable), 0 (disable)
	bit 23 (sector 23): 1 (enable), 0 (disable)
	bit 24 (sector 24): 1 (enable), 0 (disable)
	bit 25 (sector 25): 1 (enable), 0 (disable)
	bit 26 (sector 26): 1 (enable), 0 (disable)
	bit 27 (sector 27): 1 (enable), 0 (disable) bit 28 (sector 28): 1 (enable), 0 (disable)
	bit 29 (sector 29): 1 (enable), 0 (disable)
	bit 30 (sector 30): 1 (enable), 0 (disable)
	bit 31 (sector 31): 1 (enable), 0 (disable)"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 10
NAME	= "LOG_COMPRESSION"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 107
BYTES	= 1
UNIT	= "N/A" = "I1"
FORMAT DESCRIPTION	- II = "The field takes one of the following values:
DESCRIPTION	0 = disable 1 = enable"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
OBJECT COLUMN_NUMBER	= COLUMN = 11
COLUMN_NUMBER NAME	= 11 = "RICE_COMPRESSION_FLAG"
COLUMN_NUMBER NAME DATA_TYPE	= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER
COLUMN_NUMBER NAME DATA_TYPE START_BYTE	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109 = 1</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109 = 1 = "N/A"</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109 = 1 = "N/A" = "I1"</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = non valid</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values:</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = non valid 1 = valid"</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = non valid 1 = valid" = COLUMN</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT OBJECT	<pre>= 11 = "RICE_COMPRESSION_FLAG" = ASCII_INTEGER = 109 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = non valid 1 = valid" = COLUMN = COLUMN</pre>



START_BYTE	= 111
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Rice compression"
END_OBJECT	= COLUMN

Detailed description of those parameters is provided in documents [AD 3].

4.3.7.5.2 The description of the NPI header table for deflection stepping mode:

OBJECT NAME ROW_SUFFIX_BYTES	<pre>= HEAD_TABLE = "NPI_SPECTRUM_HEAD" = Number of bytes that are accounted in the subsequent table, including record terminators and separators</pre>
INTERCHANGE_FORMAT	<pre>= ASCII</pre>
ROWS	= Number of rows within the data file
COLUMNS	= 13
ROW_BYTES	= 124
^STRUCTURE	= "NPI_STPHEAD.FMT"
END_OBJECT	= HEAD_TABLE

The structure of the TABLE object is described in the file NPI_STPHEAD.FMT as follows:

OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	= TIME
END_OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT	= 26
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	= 47 = 5 = "N/A"



END_OBJECT

END_OBJECT

OBJECT

OBJECT

sy GFI	ASPERA 4 EAICD		: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 173
DESCRIPTION	patchVersion minorVersion majorVersion	D Binary format. [3:0] [8:4]	<pre>Bit description: 2 (T), 3 (R)"</pre>
ND_OBJECT	= COLUMN		
BJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION ND_OBJECT	= 53 = 1 = "N/A" = "I1" = "Scanner direct	cion.	ollowing values:
BJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 5 = "SCANNER_SPEED" = ASCII_INTEGER = 55 = 3 = SECOND = "I3" = "Scanner speed.</pre>		
	m1 ' ' ' ' '		

This is not the actual moving speed at the

specified time, but a setting speed value that is applied in operation to the scanner once a command

is sent to move it. The field takes one of the following values: 0 (standing) 32 (seconds scan) 64 (seconds scan) 128 (seconds scan)" END OBJECT = COLUMN = COLUMN OBJECT = 6 = "S COLUMN NUMBER = "SCANNER POSITION" NAME DATA TYPE = ASCII REAL = 59 START_BYTE = 5 BYTES DEGRE = "F5.1" = "S UNIT = "DEGREE" FORMAT = "Scanner position in degrees" DESCRIPTION = COLUMN END OBJECT OBJECT = COLUMN = 7 COLUMN NUMBER = "ACCUMULATION_TIME" NAME = ASCII_INTEGER = 65 DATA TYPE START BYTE BYTES = 2 = "N/A" UNIT DESCRIPTION = "ACC

= "Accumulation time.



	Time = 2N*31.25ms"		
END_OBJECT	= COLUMN		
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= "NUMBER_OF_SAMPLE" = ASCII_INTEGER</pre>		
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT DESCRIPTION	<pre>= COLUMN = 9 = "NPI_SECTOR_MASK" = CHARACTER = 73 = 32 = "N/A" = "NPI Sector mask defines the active sectors that are</pre>		
	<pre>set for the measurement. The Binary format is used. One bit (or character) represents the status of one NPI sector and may take one of the following values bit 0 (sector 0): 1 (enable), 0 (disable) bit 1 (sector 1): 1 (enable), 0 (disable) bit 2 (sector 2): 1 (enable), 0 (disable) bit 3 (sector 3): 1 (enable), 0 (disable) bit 4 (sector 4): 1 (enable), 0 (disable) bit 5 (sector 5): 1 (enable), 0 (disable) bit 6 (sector 6): 1 (enable), 0 (disable) bit 7 (sector 7): 1 (enable), 0 (disable) bit 9 (sector 9): 1 (enable), 0 (disable) bit 10 (sector 10): 1 (enable), 0 (disable) bit 11 (sector 11): 1 (enable), 0 (disable) bit 12 (sector 12): 1 (enable), 0 (disable) bit 13 (sector 13): 1 (enable), 0 (disable) bit 14 (sector 14): 1 (enable), 0 (disable) bit 15 (sector 15): 1 (enable), 0 (disable) bit 16 (sector 16): 1 (enable), 0 (disable) bit 17 (sector 17): 1 (enable), 0 (disable) bit 18 (sector 16): 1 (enable), 0 (disable) bit 19 (sector 19): 1 (enable), 0 (disable) bit 20 (sector 20): 1 (enable), 0 (disable) bit 21 (sector 21): 1 (enable), 0 (disable) bit 22 (sector 22): 1 (enable), 0 (disable) bit 23 (sector 23): 1 (enable), 0 (disable) bit 24 (sector 24): 1 (enable), 0 (disable) bit 25 (sector 24): 1 (enable), 0 (disable) bit 26 (sector 24): 1 (enable), 0 (disable) bit 27 (sector 25): 1 (enable), 0 (disable) bit 28 (sector 26): 1 (enable), 0 (disable) bit 29 (sector 28): 1 (enable), 0 (disable) bit 29 (sector 29): 1 (enable), 0 (disable) bit 29 (sector 29): 1 (enable), 0 (disable) bit 30 (sector 30): 1 (enable), 0 (disable) bit 31 (sector 30): 1 (enable), 0 (disable) bit 31 (sector 30): 1 (enable), 0 (disable)</pre>		
END_OBJECT	= COLUMN		
OBJECT COLUMN_NUMBER NAME	<pre>= COLUMN = 10 = "LOG_COMPRESSION"</pre>		



Document No. : VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 175

END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 11 NAME = "RICE_COMPRESSION_FLAG"
COLUMN NUMPER - 11
<pre>CONTRACT = IT NAME = "RICE_COMPRESSION_FLAG" DATA_TYPE = ASCII_INTEGER START_BYTE = 109 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Rice compression flag status. The field takes one of the following values: 0 = non valid 1 = valid"</pre>
END_OBJECT = COLUMN
OBJECT= COLUMNCOLUMN_NUMBER= 12NAME= "RICE_COMPRESSION_VALUE"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 111BYTES= 1UNIT= "N/A"FORMAT= "I1"DESCRIPTION= "Rice compression"END_OBJECT= COLUMN
OBJECT = COLUMN COLUMN_NUMBER = 13 NAME = "NPI_DEFLECT_STATUS_MASK" DATA_TYPE = CHARACTER START_BYTE = 114 BYTES = 10 UNIT = "N/A" DESCRIPTION = "NPI Deflection status mask expresses the switch states of voltage for each of the 32 samples being returned. The Hexadecimal format is used. If the bit value is set to 0, the switch was off, the deflection voltage was not applied. If the bit value is set to 1, the switch was on, the deflection voltage was applied. If the ordering of the NPI deflection status mask is as below: sample 31 represents the MSB (bit 31) of the word and sample 0 represents the LSB (bit 0) of the word."
END_OBJECT = COLUMN

Detailed description of those parameters is provided in documents [AD 3].

4.3.7.5.3 The description of the NPI science table related to the normal mode:

A NPI science data table object contains a certain number of sequences of measurement of 32 samples × 32 azimuthal-sectors data values. Each of them are stored in a row with the azimuthal sector the fastest varying

Atos GFI Origin	ASPERA 4 EAICD	Document No. Date Page	: VEX_ASP_CESR_EAICD_V1_5 : 18 Mar 2011 : 176
--------------------	----------------	------------------------------	---

parameter. However, science data for all sectors may not always be returned. The field sector mask, specified in the NPI header, indicates which of the 32 possible sectors are being returned in the data matrix. In addition, the sample number parameter value can vary from a NPI sequence of measurement to another one. To ensure a fixed-size table object, though both the number of sectors and the number of successive measurements may vary, the counting table may have to be completed with a missing constant, chosen to be -9999 to avoid mixing up constant values and science data values (positive counter values).

For the NPI science data storage, a fixed-size TABLE object, filled with missing constants will be used and inserted within corresponding data product label files. The structure of the science NPI data object is fully described in the associated label file, with no applicable external files (FMT). This description is presented hereafter and applies to the NPI normal mode.

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= "NPI_COUNTS" = ASCII_INTEGER = 1 = 6146 = "ADC_UNITS" = "I5"</pre>
MISSING_CONSTANT DESCRIPTION ITEMS	
	= 6 = COLUMN

END_OBJECT

= DATA SCIENCE TABLE

4.3.7.5.4 The description of the NPI science table related to the deflection stepping mode:

The following example is a fixed-size TABLE object storing science data produced in deflection stepping data mode.

OBJECT NAME ROW_PREFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES	
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT MISSING_CONSTANT DESCRIPTION	<pre>= COLUMN = 1 = "NPI_COUNTS" = ASCII_INTEGER = 1 = 6146 = "ADC_UNITS" = "I5" = -9999 = "ENA (counts/sampling time) counted in the</pre>



"

ITEMS ITEM_BYTES END_OBJECT	current bin azimuthal sector. = 1024 = 6 = COLUMN
END_OBJECT	= DATA_SCIENCE_TABLE

4.3.7.6 Description of Instrument

The description of the instrument is done in above and as a brief overview in the INST.CAT catalog file.

4.3.7.7 Parameters Index File Definition

N/A

4.3.7.8 Mission Specific Keywords

Mission specific keywords should all have the MISSION_ID "VEX" prefix.

VEX:SCIENCE_CASE_ID	=	"ALL"							
VEX:SCIENCE CASE ID DESC	=	"Please	refer t	to	VEX	SCIENCE	CASE	ID	DESC.TXT
		in the	DOCUMEN	NΤ	dire	ectory."			_

4.3.8 NPI Housekeeping Calibrated Data Product Design (Level 3)

NPI level 3 HK contains calibrated NPI housekeeping data with PDS detached labels. The incoming raw HK values are converted into physical values when calibration is applied. This type of data is identified by the following data descriptors within the current label file:

PRODUCT_TYPE = RDR /* EDR for RAW, RDR for calibrated data */
PROCESSING_LEVEL_ID = 3

HK parameters are listed in the following fields table in the same order that they appear in the data product label file.

Rank	Field	Rank	Field
1	UTC correlated Time	24	Lost step
2	OBT Time	25	Scanner status state
3	NPI temperature	26	Scanner status direction
4	Scanner temperature sensor	27	Scanner status position clock
5	SW version	28	Scanner status cw end position
6	HK i +30V	29	Scanner status ccw end position
7	HK i +5V	30	Scanner speed
8	HK V +12V	31	Scanner setup direction
9	HK V +30V	32	Scanner setup mode
10	HK V +5V	33	Scanner +30V on/off
11	HK V -12V	34	Scanner coast current reference
12	HK V -5V	35	Scanner ramp current reference
13	Sun sensor 1	36	Scanner threshold cw reference
14	Sun sensor 2	37	Scanner threshold ccw reference
15	NPI bias reference	38	Scanner threshold wheel reference
16	NPI bias monitor	39	Scanner position
17	NPI deflector reference	40	SW mode
18	NPI deflector monitor	41	Cpu load
19	NPI deflector mode	42	NPI sector mask
20	NPI deflector switch	43	NPI RICE compression enable



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 178

21	NPI +30V on/off	44	NPI LOG compression enable
22	Scanner vrefmc	45	NPI accumulation time
23	Scanner init	46	NPI mode

The table object is detailed in the following paragraph.

4.3.8.1 File Characteristics Data Elements

The following elements are present in the labels for every NPI housekeeping calibrated data product, and they describe the basic characteristics of the data product in terms of structure and naming:

4.3.8.2 Data Object Pointers Identification Data Elements

The NPI housekeeping calibrated data are organized as ASCII table. The data object pointer that references TAB file is:

^HK_NPI_TABLE

4.3.8.3 Instrument and Detector Descriptive Data Elements

See the applicable section 4.3.7.3

4.3.8.4 Structure Definition of Instrument Parameter Objects

N/A

4.3.8.5 Data Object Definition

This section of the label defines the structure and content of the NPI housekeeping calibrated data product. Each data file (TAB) contains a 46 columns table with the calibrated HK data when calibration is applied.

OBJECT	= HK_NPI_TABLE
NAME	= "HK_NPI"
INTERCHANGE_FORMAT	= ASCII
ROWS	= this element indicates the number of records within
	the data file
COLUMNS	= 46
ROW_BYTES	= 223
^STRUCTURE	= "NPI HKNPI.FMT"
END_OBJECT	= HK_NPI_TABLE

The structure of the TABLE object is described in the file NPI_HKNPI.FMT as follows:

/* Contents of format file "NPI_HKNPI.FMT" */
OBJECT = COLUMN
COLUMN_NUMBER = 1
NAME = "UTC"
DATA_TYPE = TIME
START_BYTE = 1
BYTES = 23
UNIT = "N/A"



DESCRIPTION	= "This column represents the UTC of the NPI HK data set in PDS standard format YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT DESCRIPTION	<pre>= COLUMN = 2 = "OBT" = CHARACTER = 26 = 19 = "N/A" = "On board Time (OBT) is represented as :</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	<pre>= COLUMN = 3 = "NPI_TEMP" = ASCII_REAL = 47 = 7 = "CELSIUS" = "F7.2" = "NPI temperature in degree Celsius" = COLUMN</pre>
OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION END_OBJECT	= 4 = "SCANNER TEMP SENSOR"
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 5 = "SW_VERSION" = ASCII_INTEGER = 63 = 5 = "N/A" = "I5" = "Software version To decode into Binary format. Bit description: patchVersion [3:0] minorVersion [8:4] majorVersion [13:9] releaseClass [15:14]: 1 (D), 2 (T), 3 (R)"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER	= COLUMN = 6



Document No. : VEX_ASP_CESR_EAICD_V1_5

= "HK_I_PLUS_30V" NAME= 'nn_i_rloo_coDATA_TYPE= ASCTI_REALSTART_BYTE= 69BYTES= 6UNIT= "MILLIAMPERE" NAME FORMAT = "F6.2" = "HK i +30V in milli-amperes" DESCRIPTION = COLUMN END OBJECT SJECT= COLUMNCOLUMN_NUMBER= 7NAME= "HK_I_PLUS_5V"DATA_TYPE= ASCII_REALSTART_BYTE= 76BYTES= 7UNIT= "MILLIAMPERE"FORMAT= "F7.2"DESCRIPTION= "HK i +5V in milli-amperes"D_OBJECT= COLUMN OBJECT END_OBJECT BJECT= COLUMNCOLUMN_NUMBER= 8NAME= "HK_V_PLUS_12V"DATA_TYPE= ASCII_REALSTART_BYTE= 84BYTES= 5UNIT= "VOLT"FORMAT= "F5.2"DESCRIPTION= "HK V +12V in Volts"D_OBJECT= COLUMN OBJECT END OBJECT = COLUMN BJECT = COLUMN COLUMN_NUMBER = 9 NAME = "HK_V_PLUS_30V" DATA_TYPE = ASCII_REAL START_BYTE = 90 BYTES = 6 UNIT = "VOLTS" FORMAT = "F6.2" DESCRIPTION = "HK V +30V in Volts" D_OBJECT = COLUMN OBJECT END_OBJECT JECT = COLUMN COLUMN_NUMBER = 10 NAME = "HK_V_PLUS_5V" DATA_TYPE = ASCII_REAL START_BYTE = 97 BYTES = 4 UNIT = "VOLT" FORMAT - "E4_2" OBJECT FORMAT FORMAT = "F4.2" DESCRIPTION = "HK V +5V in Volts" END OBJECT = COLUMN JECT = COLOUR. COLUMN_NUMBER = 11 NAME = "HK_V_MINUS_12V" DATA_TYPE = ASCII_REAL START_BYTE = 102 = 6 - "VOLT" OBJECT UNIT-VOLIFORMAT= "F6.2"DESCRIPTION= "HK V -12V in Volts"



Document No. : VEX_ASP_CESR_EAICD_V1_5

END OBJECT = COLUMN BJECT= COLUMNCOLUMN_NUMBER= 12NAME= "HK_V_MINUS_5V"DATA_TYPE= ASCII_REALSTART_BYTE= 109BYTES= 5UNIT= "VOLT"FORMAT= "F5.2"DESCRIPTION= "HK V -5V in Volts"ID_OBJECT= COLUMN OBJECT END OBJECT BJJECT= COLOFINCOLUMN_NUMBER= 13NAME= "SUN_SENSOR_1"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 115BYTES= 1 = COLUMN OBJECT BYTES UNIT BITES- IUNIT= "N/A"FORMAT= "I1"DESCRIPTION= "Sun sensor 1 output"D OBJECT= COLUMN = COLUMN END OBJECT BJECT = COLORN, COLUMN_NUMBER = 14 NAME = "SUN_SENSOR_2" DATA_TYPE = ASCII_INTEGER START_BYTE = 117 BYTES = 1 - "N/\" OBJECT = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Sun sensor 2 output" END_OBJECT = COLUMN BJECT = COLUMIN COLUMN_NUMBER = 15 NAME = "NPI_BIAS_REFERENCE" DATA_TYPE = ASCII_INTEGER START_BYTE = 119 DYTES = 3 - "ADC_UNITS" OBJECT = "ADC_UNITS" = "I3" FORMAT DESCRIPTION = "13" DESCRIPTION = "NPI bias reference" END_OBJECT = COLUMN BJECT= COLOFINCOLUMN_NUMBER= 16NAME= "NPI_BIAS_MONITOR"DATA_TYPE= ASCII_REALSTART_BYTE= 123BYTES= 7"VOLT" OBJECT BYTES UNIT UNIT = "VOLT" FORMAT = "F7.1" DESCRIPTION = "NPI bias monitor in Volts" D_OBJECT = COLUMN END OBJECT OBJECT = COLUMN SJECT= COLUMNCOLUMN_NUMBER= 17NAME= "NPI_DEFL_REFERENCE"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 131



FORMAT DESCRIPTION	<pre>= 3 = "ADC_UNITS" = "I3" = "NPI deflector reference" = COLUMN</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 18 = "NPI_DEFL_MONITOR" = ASCII_REAL = 135 = 6 = "VOLT" = "F6.1" = "NPI deflector monitor in Volts" = COLUMN</pre>
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 19 = "NPI_DEFL_MODE" = ASCII_INTEGER = 142 = 1 = "N/A" = "I1" = "NPI deflector mode The field takes one of the following values: 0 off 1 on"</pre>
END_OBJECT	= COLUMN
COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT	= "NPI_DEFL_SWITCH" = ASCII INTEGER
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 21 = "NPI_PLUS_30V_ON_OFF" = ASCII_INTEGER = 146 = 1 = "N/A" = "I1" = "NPI +30V on/off The field takes one of the following values: 0 off 1 on"</pre>
END_OBJECT	= COLUMN
COLUMN_NUMBER NAME	<pre>= COLUMN = 22 = "SCANNER_VREFMC" = ASCII_INTEGER = 148 = 3</pre>



UNIT FORMAT	= "ADC_UNITS" = "I3"
FORMAT	
END OBJECT	= "Scanner vrefmc" = COLUMN
END_ODGEC1	
OBJECT	= COLUMN
COLUMN NUMBER	= COLOMN = 23 = "SCANNER_INIT" = ASCII_INTEGER = 152 = 1
NAME —	= "SCANNER INIT"
DATA TYPE	= ASCII INTEGER
START BYTE	= 152
	- 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner initialized"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLOMN_NOMBER	
NAME DAMA MYDE	= "LOST_STEP" - ACCLL_INTECED
DAIA_IIPE	= COLUMN = 24 = "LOST_STEP" = ASCII_INTEGER = 154 = 1
START_BYTE BYTES	= 1
	= 1 = "N/A"
EODMAT	
FORMAT DESCRIPTION	= "I1" = "Lost step"
END_OBJECT	= COLUMN
END_OBGECI	
OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME	= 25
NAME —	= "SCANNER_STATUS_STATE" = ASCII_INTEGER = 156
DATA TYPE	= ASCII_INTEGER
START_BYTE BYTES	= 156
BYTES	= 1
UNIT	= "N/A" = "I1"
FORMAT	= "I1"
DESCRIPTION	= "Scanner status state.
	The field takes one of the following values:
	0 not busy
	1 ramp up
	2 full speed move
	3 ramp down"
END_OBJECT	= COLUMN
OBJECT	
COLUMN NUMBER	= COLUMN $= 26$
NAME	= 20 = "SCANNER_STATUS_DIRECTION"
DATA TYPE	= ASCII_INTEGER
START BYTE	= 158
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner status direction
Dibonitition	The field takes one of the following values:
	$0 \ 0-180$
	1 180-0"
END OBJECT	= COLUMN
-	
OBJECT	= COLUMN
COLUMN_NUMBER	= 27
NAME	= "SCANNER_STATUS_POS_CLOCK"
DATA_TYPE	= ASCII_INTEGER
START_BYTE	= 160



BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner status position clock" = COLUMN
END_OBJECT	= COLUMN
OBJECT	= COLUMN = 28
NAME	= 28 = "SCANNER_STATUS_CW_END_POS" = ASCII_INTEGER
DATA TYPE	= ASCII_INTEGER
START_BYTE	= 162
BYTES	= 1
UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner status cw end position
	The field takes one of the following values:
	0 scanner not in cw end position
END OD TECH	1 scanner in cw end position" = COLUMN
END_OBJECT	- COLOMN
OBJECT	= COLUMN
	= 29
NAME	= "SCANNER_STATUS_CCW_END_POS"
DATA_TYPE	<pre>= "SCANNER_STATUS_CCW_END_POS" = ASCII_INTEGER = 164</pre>
BYTES	= 1 = "N/A"
UNIT FORMAT	= "II"
	= "II = "Scanner status ccw end position
	The field takes one of the following values:
	0 scanner not in ccw end position
	1 scanner in ccw end position"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	
NAME	= "SCANNER_SPEED" = ASCII_INTEGER
DATA_TYPE	= ASCII_INTEGER
START_BYTE	
BYTES UNIT	= 1 = "N/A"
FORMAT	= "I1"
DESCRIPTION	= "Scanner speed
	This is not the actual moving speed at the
	specified time, but a setting speed value that is
	applied in operation to the scanner once a command
	is sent to move it.
	The field takes one of the following values:
	0 STOP
	1 32s scan 2 64s scan
	3 128s scan"
END OBJECT	= COLUMN
—	
OBJECT	= COLUMN
COLUMN_NUMBER	= 31
NAME	= "SCANNER_SETUP_DIRECTION"
DATA_TYPE	= ASCII_INTEGER = 168
START_BYTE BYTES	= 100 = 1
UNIT	= "N/A"
FORMAT	= "II"



DESCRIPTION = "Scanner soup direction The field takes one of the following values: 0 0-180 1 180-0 for manual mode speed command only" END_OBJECT = COLUMN COLUMN_NUMBER = 32 NAME = "SCANNER_SETUP MODE" DATA_TYPE = ASCII_INTEGER START_FYTE = 170 DESCRIPTION = "Scanner soup mode The field takes one of the following values: 0 normal DESCRIPTION = "Scanner soup mode The field takes one of the following values: 0 normal DESCRIPTION = "SCANNER_PLUS_JOV_ON_OFF" DATA_TYPE = ASCII_INTEGER START_PTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "11" DESCRIPTION = "SCANNER_PLUS_JOV_ON_OFF" DATA_TYPE = ASCII_INTEGER START_PTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "11" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off The field takes one of the following values: 0 off The field takes one of the following values: 0 off END_OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = 174 BYTES = 3 UNIT = "ACC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner cost current reference" END_OBJECT = COLUMN OBJECT = COLUMN		
0 0-180 1 180-0 for manual mode speed command only" OBJECT = COLUMN COLUMN NUMBER = 32 NAME = "SCANNER_SETUP_MODE" DATA_TYPE = ASCIT_INTEGER START_EXTE = 170 BYTES = 1 UNIT = "N/A" FORMAT = "I!" DESCRIPTION = "SCANNER_SETUP_MODE" DATA_TYPE = ASCIT_INTEGER START_BATE = 170 MAMES = "SCANNER_PIUS_3OV_ON_OFF" DATA_TYPE = ASCIT_INTEGER START_BATE = 172 NAMES = "SCANNER_FUIS_3OV_ON_OFF" DATA_TYPE = ASCIT_INTEGER START_BATE = 172 WINT = "N/A" PORTAT_TYPE = ASCIT_INTEGER START_BATE = 172 WINT = "N/A" PORTAT_TYPE = ASCIT_INTEGER START_BATE = 172 WINT = "N/A" PORTAT_TYPE = ASCIT_INTEGER START_BATE = 174 WINT = "N/A" <	DESCRIPTION	
END_OBJECT FOR MANUAL mode speed command only" OBJECT COLUMN OBJECT COLUMN COLUMN NUMBER 32 NAME "SCANNER_SETUP_MODE" DATA_TYPE ASCIT_INTEGER START_BYTE 170 BYTES 1 UNIT "N/A" FORMAT "I!" DESCRIPTION "Scanner setup mode The field takes one of the following values: 0 normal NAME "SCANNER_PLUS_3OU_ON_OFF" DATA_TYPE ASCI INTEGER START_BYTE 172 START_BYTE 172 START_BYTE 172 ONTO "SCANNER_PLUS_3OU_ON_OFF" DATA_TYPE ASCI INTEGER START_BYTE 172 START_BYTE 172 START_BYTE 172 DATA_TYPE ASCI INTEGER OUNT "SCANNER_FILE DATA_TYPE ASCI INTEGER START_BYTE 174 BYTES 34 NAME "SCANNER_CONST_CURRENT_REF" DATA_TYPE ASCI INTEGER </td <td></td> <td>-</td>		-
END_OBJECT = COLUMN OBJECT = COLUMN COLUMN NUMBER = 32 NAME = *SCANNER SETUP_MODE" DATA_TYPE = ASCII_INTEGER START_BYTE = 170 BYTES = 1 UNIT = *N/A" FORMAT = "I!" END_OBJECT = COLUMN OBJECT = COLUMN		
CUTT COLUMN NUMBER = 32 COLUMN NUMBER = 32 NAME = "SCANNER SETUP_MODE" DATA_TYPE = ASCTI_INTEGER START_PITE = 170 BYTES = 1 UNIT = "N'A" PORMAT = "II" DESCRIPTION = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN COLUMN_NUMBER = 33 NAME = "SCANNER_PLUS_30V_ON_OFF" DATA_TYPE = ASCTI_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N'A" FORMAT = "II" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CORRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 DATA_TYPE = ASCII_INTEGER START_BYTE = 174 DATA_TYPE = ASCII_INTEGER START_BYTE = 174 DATA_TYPE = ASCII_INTEGER START_BYTE = 174 DESCRIPTION = "SCANNER_COAST_CORRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 173 DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 NAME = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 DATA_TYPE = ASCINER_TRESHOLD_CM_RE	END OD TECH	
COLUMN_NUMBER = 32 NAME = "SCANNER_SETUP_MODE" DATA_TYPE = ASCII_INTEGER START_BYTE = 170 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN COLUMN_NUMBER = 3 NAME = "SCANNER_FLUS_JOV_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner +JOV on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner +JOV on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I]" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN COLUMN_NUMBER = 35 NAME = "SCANNER_CAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I]" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN COLUMN_NUMBER = 35 NAME = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I]" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN COLUMN_NUMBER = 36 NAME = "SCANNER_TESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 161 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER	END_OBJECT	= COLUMN
COLUMN_NUMBER = 32 NAME = "SCANNER_SETUP_MODE" DATA_TYPE = ASCII_INTEGER START_BYTE = 170 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN COLUMN_NUMBER = 3 NAME = "SCANNER_FLUS_JOV_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner +JOV on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner +JOV on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I]" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN COLUMN_NUMBER = 35 NAME = "SCANNER_CAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I]" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN COLUMN_NUMBER = 35 NAME = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I]" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN COLUMN_NUMBER = 36 NAME = "SCANNER_TESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 161 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER	OBJECT	= COLUMN
DATA_TYPE = ASCII_INTEGER START_BYTE = 170 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 172 BYTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN O	COLUMN_NUMBER	= 32
SUART_PYTE = 1/0 BTTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN COLUMN_NUMBER = 3 NAME = "SCANNER_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BTTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "SCANNER_FUS 30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BTTES = 1 UNIT = "N/A" FORMAT = "II" DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_PYTE = 174 BTTES = 3 UNIT = "AC UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BTTES = 3 UNIT = "AC UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_PYTE = 174 BTTES = 3 UNIT = "AC UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_PYTE = 174 BTTES = 3 UNIT = "AC UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_PYTE = 178 BTTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BTTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER START_PYTE = COLUMN COLUMN_NUMBER = 36 NAME = "SCANIER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER	NAME	= "SCANNER_SETUP_MODE"
UNIT = "W/A" FORMAT = "II" DESCRIPTION = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 33 NAME = "SCANNER_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = C	DATA_TYPE	= ASCII_INTEGER
UNIT = "W/A" FORMAT = "II" DESCRIPTION = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 33 NAME = "SCANNER_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = C	BYTES	= 1/0
PORMAT = "11" DESCRIPTION = "Scanner setup mode The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 33 NAME = "SCANNER_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BITES = 1 UNIT = "M/A" FORMAT = "T1" DESCRIPTION = "Scanner + 30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BITES = 3 UNIT = "ACC_UNITS" FORMAT = "T3" DESCRIPTION = "SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 </td <td>UNIT</td> <td>= "N/A"</td>	UNIT	= "N/A"
The field takes one of the following values: 0 normal 1 manual" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 33 NAME = "SCANNER PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = SCANNER FAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER TARP CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER TARP CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER TARP CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_PYE = ASCII_INTEGER START_PYE = ASCII_INTEGER START_PYE = ASCII_INTEGER	FORMAT	= "T1"
O normal I manual" END_OBJECT = COLUMN OBJECT = COLUMN ODJECT = COLUMN COLUMN_NUMBER = 33 NAME = "SCANNER_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER START_PYTE = ASCII_INTEGER	DESCRIPTION	
I manual" END_OBJECT = COLUMN OBJECT = COLUMN COLUNN_NUMBER = 33 NAME = "SCANNER_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = COLU		
<pre>END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 33 NAME = "SCANNER PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "SCANNER + 30V on/off The field takes one of the following values:</pre>		
<pre> OBJECT = COLUMN COLUMN_NUMBER = 33 NAME = "SCANNER_PLUS_30V_ON_OFF" DATA_TYPE = ASCII_INTEGER START_BYTE = 172 BYTES = 1 UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ACUNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER </pre>	END OBJECT	
BYTES = 1 UNIT = "N/A" FORMAT = "11" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN	-	
BYTES = 1 UNIT = "N/A" FORMAT = "11" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN	OBJECT	= COLUMN
BYTES = 1 UNIT = "N/A" FORMAT = "11" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN	COLUMN_NUMBER	= 33
BYTES = 1 UNIT = "N/A" FORMAT = "11" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN	NAME	= "SCANNER_PLUS_30V_ON_OFF"
BYTES = 1 UNIT = "N/A" FORMAT = "11" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "13" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN	DATA_TIPE START BYTE	$= ASCII_INTEGER$ $= 172$
UNIT = "N/A" FORMAT = "I1" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = SCANNER_TAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER ACCUMN_NUMBER = 36 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER	BYTES	_ · _
FORMAT = "I1" DESCRIPTION = "Scanner +30V on/off The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN OUMMER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER COAST_CURRENT_REF" DATA_TYPE = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 35 NAME = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN		
The field takes one of the following values: 0 off 1 on" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 34 NAME = "SCANNER_COAST_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 174 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER coast current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "SCANNER ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN	FORMAT	= "T1"
0 off1 on"END_OBJECT= COLUMNOBJECT= COLUMNCOLUMN_NUMBER= 34NAME= "SCANNER_COAST_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 174BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "SCANNER_COAST_CURRENT_REF"OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNDATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "SCANNER ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNDATA_TYPE= ASCII_INTEGER	DESCRIPTION	
I on"END_OBJECT= COLUMNOBJECT= COLUMNCOLUMN_NUMBER= 34NAME= "SCANNER_COAST_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 174BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 35NAME= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "SCANNER_TREP CURRENT reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNDATA_TYPE= ASCII_INTEGER		
END_OBJECT= COLUMNOBJECT= COLUMNCOLUMN_NUMBER= 34NAME= "SCANNER_COAST_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 174BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "SCANNER coast current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "SCANNER ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNDATA_TYPE= ASCII_INTEGERNAME= "SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER		
COLUMN_NUMBER= 34NAME= "SCANNER_COAST_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 174BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner coast current reference"END_OBJECT= COLUMNOBJECT= COLUMNCOLUMN_NUMBER= 35NAME= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNMATA_TYPE= 36NAME= "SCANNER_REP"DATA_TYPE= COLUMNOBJECT= COLUMNDATA_TYPE= ASCII_INTEGER	END OBJECT	
COLUMN_NUMBER= 34NAME= "SCANNER_COAST_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 174BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner coast current reference"END_OBJECT= COLUMNOBJECT= COLUMNCOLUMN_NUMBER= 35NAME= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNMATA_TYPE= 36NAME= "SCANNER_REP"DATA_TYPE= COLUMNOBJECT= COLUMNDATA_TYPE= ASCII_INTEGER	-	
NAME= "SCANNER_COAST_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 174BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner coast current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER		
START_DITE= 174BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner coast current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNDATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNDATA_TYPE= 36NAME= "SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER	COLUMN_NUMBER	- 34 - "SCANNED COAST CUDDENT DEE"
START_DITE= 174BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner coast current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNDATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNOBJECT= COLUMNDATA_TYPE= 36NAME= "SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER	DATA TYPE	= SCANNER_COAST_CONNENT_NET = ASCII INTEGER
BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 35 NAME = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = COLUMN OBJECT = SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER	START BYTE	= 174
FORMAT= "I3"DESCRIPTION= "Scanner coast current reference"END_OBJECT= COLUMNOBJECT= COLUMNCOLUMN_NUMBER= 35NAME= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER	BYTES	= 3
DESCRIPTION = "Scanner coast current reference" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 35 NAME = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 36 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER		
END_OBJECT= COLUMNOBJECT= COLUMNCOLUMN_NUMBER= 35NAME= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER		
- OBJECT = COLUMN COLUMN_NUMBER = 35 NAME = "SCANNER_RAMP_CURRENT_REF" DATA_TYPE = ASCII_INTEGER START_BYTE = 178 BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN OBJECT = SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER		
COLUMN_NUMBER= 35NAME= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER		
NAME= "SCANNER_RAMP_CURRENT_REF"DATA_TYPE= ASCII_INTEGERSTART_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNCOLUMN_NUMBER= 36NAME= "SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER	OBJECT	= COLUMN
DATA_TYPE = ASCII_INTEGER	COLUMN_NUMBER	= 35
START_BYTE= 178BYTES= 3UNIT= "ADC_UNITS"FORMAT= "I3"DESCRIPTION= "Scanner ramp current reference"END_OBJECT= COLUMNOBJECT= COLUMNOBJECT= SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER	NAME	= "SCANNER_RAMP_CURRENT_REF"
BYTES = 3 UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 36 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER		
UNIT = "ADC_UNITS" FORMAT = "I3" DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 36 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER		
DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 36 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER	UNIT	
DESCRIPTION = "Scanner ramp current reference" END_OBJECT = COLUMN OBJECT = COLUMN COLUMN_NUMBER = 36 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER		
OBJECT = COLUMN COLUMN_NUMBER = 36 NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER		
COLUMN_NUMBER= 36NAME= "SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER	END_OBJECT	= COLUMN
COLUMN_NUMBER= 36NAME= "SCANNER_TRESHOLD_CW_REF"DATA_TYPE= ASCII_INTEGER	OBJECT	= COLUMN
NAME = "SCANNER_TRESHOLD_CW_REF" DATA_TYPE = ASCII_INTEGER		
	NAME	= "SCANNER_TRESHOLD_CW_REF"
START_BITE = 182		
	START_BYTE	= 197



BYTES UNIT	= 3 = "ADC UNITS"
FORMAT	= "I3"
DESCRIPTION	= "Scanner threshold cw reference"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN NUMBER	= 37
DATA TYPE	= "SCANNER_TRESHOLD_CCW_REF" = ASCII_INTEGER
START BYTE	= 186
BYTES	= 3
UNIT	= "ADC_UNITS"
FORMAT	= "I3"
DESCRIPTION	= "Scanner threshold ccw reference"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
	= 38
NAME	= "SCANNER TRESHOLD WHEEL REF"
DATA TYPE	= ASCII_INTEGER
START BYTE	= 190
BYTES	= 3
UNIT	= "ADC_UNITS"
FORMAT	= "I3"
DESCRIPTION	= "Scanner threshold wheel reference"
END_OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 39
NAME	= "SCANNER_POSITION"
—	= ASCII_REAL
START_BYTE	= 194
BYTES	= 5
UNIT	= "DEGREE" = "F5.1"
FORMAT DESCRIPTION	= "J.1 = "Scanner position in degrees"
END OBJECT	= COLUMN
OBJECT	= COLUMN
COLUMN_NUMBER	= 40
NAME	= "SW_MODE"
DATA_TYPE	= ASCII_INTEGER
START_BYTE BYTES	= 200 = 3
UNIT	– 5 = "N/A"
FORMAT	= "I3"
DESCRIPTION	= "Software mode"
END_OBJECT	= COLUMN
	0011001
OBJECT COLUMN NUMBER	= COLUMN = 41
NAME	= "CPU LOAD"
DATA TYPE	= ASCII INTEGER
START BYTE	= 204
BYTES	= 3
UNIT	= "N/A"
FORMAT	= "I3"
DESCRIPTION	= "CPU load"
END_OBJECT	= COLUMN
OBJECT	= COLUMN



START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= 42 = "NPI_SECTOR_MASK" = ASCII_INTEGER = 208 = 5 = "N/A" = "I5" = "NPI Sector mask defined the active sectors set for the measurement. The Hexadecimal format is used. The bit order is described below: Sector 31 represents the MSB (bit 31) of the word and Sector 0 represents the LSB (bit 0) of the word Each bit may have one of the following values: 1 (enable) 0 (disable)"</pre>
END_OBJECT	= COLUMN
START_BYTE BYTES UNIT FORMAT	<pre>= COLUMN = 43 = "NPI_RICE_COMPRESSION_ENABLE" = ASCII_INTEGER = 214 = 1 = "N/A" = "I1" = "Rice compression flag status. The field takes one of the following values: 0 = off 1 = on"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 44 = "NPI_LOG_COMPRESSION_ENABLE" = ASCII_INTEGER = 216 = 1 = "N/A" = "I1" = "The field takes one of the following values: 0 = off 1 = on"</pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION	<pre>= COLUMN = 45 = "NPI_ACCUMULATION_TIME" = ASCII_INTEGER = 218 = 2 = "N/A" = "I2" = "Accumulation time. </pre>
END_OBJECT	= COLUMN
OBJECT COLUMN_NUMBER NAME DATA_TYPE START_BYTE BYTES	<pre>= COLUMN = 46 = "NPI_MODE" = ASCII_INTEGER = 221 = 1</pre>



UNIT	= "N/A"
FORMAT	= "I1"
DESCRIPTION	= "NPI mode"
END_OBJECT	= COLUMN

Detailed description of those parameters is provided in documents [AD 3].

4.3.8.6 Description of Instrument

See the applicable section 4.3.7.6

4.3.8.7 Parameters Index File Definition

N/A

4.3.8.8 Mission Specific Keywords

See the applicable section 4.3.7.8



Document No.	: VEX_ASP_CESR_EAICD_V1_5
Date	: 18 Mar 2011
Page	: 189

5 Appendix A: Available Software to read PDS files

The PDS table tool "tbtool" is used for reading and veryfying the consistency of housekeeping and science PDS files with TABLE objects.

All data products can be visualized using the IDL software 'readpds' standard PDS reader. The standard package is available for download from the PDS website (<u>http://pds.jpl.nasa.gov</u>).



Document No. : VEX_ASP_CESR_EAICD_V1_5 Date : 18 Mar 2011 Page : 190

6 Appendix B: Example of Data Set Directory Listing

Files in Root Directory VEX-V SW-ASPERA-2-ELS-V1.0: AAREADME.TXT ERRATA.TXT VOLDESC.CAT Subdirectories in Root Directory VEX-V SW-ASPERA-2-ELS-V1.0: CALIB CATALOG DATA DOCUMENT GEOMETRY INDEX LABEL VEX-V SW-ASPERA-2-ELS-V1.0/CALIB: CALINFO.TXT VEX-V SW-ASPERA-2-ELS-V1.0/CATALOG: CATINFO.TXT DATASET.CAT INSTHOST.CAT INST.CAT MISSION.CAT PERSON.CAT REF.CAT RELEASE.CAT SOFTWARE.CAT TARGET.CAT Subdirectories in Root Directory VEX-V SW-ASPERA-2-ELS-V1.0/DATA: 20051109_20060831 20060901_20061130 20061201 20070228 VEX-V SW-ASPERA-2-ELS-V1.0/DATA/20051109 20060831: ELS E128A16 060101123000 11.TAB ELS E128A16 060101123000 11.LBL ELS_ENGXXXX_060101123000_11.TAB ELS_ENGXXXX_060101123000_11.LBL ELS_HK3MUXX_060101123000_11.TAB ELS HK3MUXX 060101123000 11.LBL ELS E128A16 060202101530 11.TAB ELS_E128A16_060202101530_11.LBL ELS_ENGXXXX_060202101530_11.TAB ELS_ENGXXXX_060202101530_11.LBL ELS_HK3MUXX_060202101530_11.TAB ELS HK3MUXX 060202101530 11.LBL ELS_E128A16_060519004359_11.TAB ELS_E128A16_060519004359_11.LBL ELS_ENGXXXX_060519004359_11.TAB ELS_ENGXXXX_060519004359_11.LBL ELS HK3MUXX 060519004359 11. TAB ELS HK3MUXX 060519004359 11.LBL



Document No. : VEX ASP CESR EAICD V1 5 : 18 Mar 2011 : 191

VEX-V SW-ASPERA-2-ELS-V1.0/DATA/20060901 20061130:

ELS_E128A16_061015232744_11.TAB ELS_E128A16_061015232744_11.LBL ELS_ENGXXXX_061015232744_11.TAB ELS ENGXXXX 061015232744 11.LBL ELS HK3MUXX 061015232744 11.TAB ELS HK3MUXX 061015232744 11.LBL

VEX-V SW-ASPERA-2-ELS-V1.0/DATA/20061201 20070228:

ELS_E128A16_061209214517_11.TAB ELS_E128A16_061209214517_11.LBL ELS_ENGXXXX_061209214517_11.TAB ELS ENGXXXX 061209214517 11.LBL ELS HK3MUXX 061209214517 11.TAB ELS_HK3MUXX_061209214517_11.LBL ELS_E128A16_06122215243_11.TAB ELS_E128A16_061212215243_11.LBL ELS ENGXXXX 061212215243 11. TAB ELS ENGXXXX 061212215243 11.LBL ELS_HK3MUXX_061212215243_11.TAB ELS_HK3MUXX_061212215243_11.LBL

VEX-V SW-ASPERA-2-ELS-V1.0/DOCUMENT:

DOCINFO.TXT ASPERA4 DESC.TXT ASPERA4 DESC.LBL VE-ASP-TN-060402.PDF VE-ASP-TN-060402.LBL BARABASHP3.PDF BARABASHP3.LBL ASPERA4-L1-061016.PDF ASPERA4-L1-061016.LBL VEX_ASP_CESR_EAICD_V1_4.PDF VEX_ASP_CESR_EAICD_V1_4.LBL VEX SCIENCE CASE ID DESC.TXT VEX SCIENCE CASE ID DESC.LBL OBSERVATION TYPE DESC.TXT OBSERVATION TYPE DESC.LBL VEX ORIENTATION_DESC.TXT VEX ORIENTATION DESC.LBL VEX-SCIOPS-TN-050.PDF VEX-SCIOPS-TN-050.LBL VEX RSSD LI 009.TAB VEX RSSD LI 009.LBL VEX_POINTING_MODE_DESC.TXT VEX_POINTING_MODE_DESC.LBL ELS DATA ANALYSIS SUMMARY.PDF ELS DATA ANALYSIS SUMMARY.LBL VEX-V SW-ASPERA-2-ELS-V1.0/GEOMETRY:

GEOMINFO.TXT ORB.FMT ORB 060101123000 00320.TAB ORB 060101123000 00320.LBL ORB 060202101530 00530.TAB ORB 060202101530 00530.LBL ORB_060519004359_00812.TAB ORB_060519004359_00812.LBL ORB_061015232744_00550.TAB



ORB_061015232744_00550.LBL ORB_061209214517_00123.TAB ORB_061209214517_00123.LBL ORB_061212215243_00539.TAB ORB_061212215243_00539.LBL

VEX-V_SW-ASPERA-2-ELS-V1.0/INDEX:

INDXINFO.TXT INDEX.LBL INDEX.TAB GEO_VENUS.LBL GEO_VENUS.TAB

VEX-V_SW-ASPERA-2-ELS-V1.0/LABEL:

LABINFO.TXT ELS_SPECTRUM_HEAD.FMT ELS_SPECTRUM_ENGINR.FMT ELS_SPECTRUM_DEFLCT.FMT ELS_SPECTRUM_HKELS.FMT



7 Appendix C: Example of PDS detached label for an ASPERA-4 ELS level-2 data product

PDS VERSION ID = PDS3 /* FILE CHARACTERISTIC DATA ELEMENTS */ = "ELS E128A16 060603010208 11" PRODUCT ID = FIXED LENGTH RECORD TYPE RECORD BYTES = 12384= 119 FILE_RECORDS /* DATA OBJECT POINTERS */ ^HEAD TABLE = "ELS E128A16 060603010208 11.TAB" ^DATA SCIENCE TABLE = "ELS E128A16 060603010208 11.TAB" /* PRODUCER IDENTIFICATION */ = " PRODUCER ID CESR_ASPERA4_GROUP" PRODUCER_FULL_NAME = " EMMANUEL PENOU" PRODUCER_INSTITUTION NAME = " CENTRE D'ETUDE SPATIALE DES RAYONNEMENTS" PRODUCT_CREATION_TIME = 2007-12-06T10:48:19 /* DATA DESCRIPTION AND IDENTIFICATION */ - " DATA_SET_NAME VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 ELS V1.0" = "VEX-V/SW-ASPERA-2-ELS-V1.0" DATA SET ID RELEASE ID = 0001 REVISION ID = 0000 PRODUCT_TYPE = EDR = 2 = "VENUS EXPRESS" PROCESSING_LEVEL_ID MISSION_NAME INSTRUMENT_HOST_NAME= VEXINSTRUMENT_HOST_ID= VEXMISSION_PHASE_NAME= "PHASE 0"INSTRUMENT_NAME= " ANALYZER OF SPACE PLASMA AND ENERGETIC ATOMS (4TH VERSION)" INSTRUMENT_ID = ASPERA4 INSTRUMENT TYPE = {"ELECTROSTATIC ANALYZER", "MASS SPECTROMETER", "NEUTRAL PARTICLE IMAGER", "NEUTRAL PARTICLE DETECTOR" } DETECTOR ID = VEX ASP4 ELS ^INSTRUMENT DESC = "ASPERA4 DESC.TXT" /* TARGET IDENTIFICATION */ TARGET_TYPE = "PLANET" = "VENUS" TARGET_NAME = "N/A" RIGHT ASCENSION = "N/A" DECLINATION /* SCIENCE OPERATIONS INFORMATION */



= " VEX:SCIENCE CASE ID ALL" VEX:SCIENCE CASE ID DESC = "Please refer to VEX SCIENCE CASE ID DESC.TXT in the DOCUMENT directory." OBSERVATION TYPE = {"AC003B", "PE001A", "PE004A"} ^OBSERVATION_TYPE_DESC = "OBSERVATION_TYPE_DESC.TXT" /* TIME RELATED INFORMATION */ START TIME = 2006-06-03T01:02:08.906 STOP TIME = 2006-06-03T01:11:07.408 SPACECRAFT CLOCK START COUNT = "01/0039661328.40239" SPACECRAFT CLOCK STOP COUNT = "01/0039661867.07602" /* ORBITAL INFORMATION */ ORBIT NUMBER = 42 ORBIT_NUMBER= 42ORBITAL_ECCENTRICITY= 0.839199ORBITAL_INCLINATION= 83.232491ORBITAL_SEMIMAJOR_AXIS= 39467.509009PERIAPSIS_ALTITUDE= 294.620753PERIAPSIS_ARGUMENT_ANGLE= 122.983458PERIAPSIS_TIME= 2006-06-02T01:42:21.349SPACECRAFT_ORIENTATION= (-0.242323,-0.769143,0.5913)^SPACECRAFT_ORIENTATION_DESC= "VEX_ORIENTATION_DESC.TXT" = (-0.242323, -0.769143, 0.591353)= " SPACECRAFT POINTING MODE N/A" ^SPACECRAFT POINTING MODE DESC= "VEX POINTING MODE DESC.TXT" /* DATA OBJECT DEFINITION */ OBJECT = HEAD TABLE = "ELS_SPECTRUM_HEAD" NAME ROW_SUFFIX_BYTES = 12290INTERCHANGE_FORMAT = ASCII = 119 ROWS COLUMNS = 12 ROW BYTES = 94 ^STRUCTURE = "ELS_SPECTRUM_HEAD.FMT" = HEAD_TABLE END OBJECT OBJECT = DATA SCIENCE TABLE ROW_PREFIX_BYTES = "ELS_SPECTRUM_DATA" = 94 INTERCHANGE FORMAT = ASCII = 119 ROWS COLUMNS = 1 ROW BYTES = 12290 = COLUMN OBJECT JECT = COLUMN COLUMN_NUMBER = 1 NAME = "ELS_COUNTS" DATA_TYPE = ASCII_INTEGER START_BYTE = 1 BYTES = 12290 BYTES UNIT = "ADC UNITS" FORMAT = "I5" DESCRIPTION = "Electrons (counts/accumulation) counted in the current energy step number and azimuthal sector." ITEMS = 2048 LTEMS ITEM_BYTES = 6



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 195

END_OBJECT

= COLUMN

END_OBJECT

= DATA_SCIENCE_TABLE

END



8 Appendix D: Example of PDS detached label for an ASPERA-4 IMA level-2 data product

PDS VERSION ID = PDS3 /* FILE CHARACTERISTIC DATA ELEMENTS */ PRODUCT ID = "IMA M24XXXX 060610172145 11" RECORD_TYPE = FIXED LENGTH RECORD BYTES $= 47187\overline{3}5$ FILE RECORDS = 108 /* DATA OBJECT POINTERS */ ^HEAD TABLE = "IMA M24XXXX 060610172145 11.TAB" ^DATA SCIENCE TABLE = "IMA M24XXXX 060610172145 11.TAB" /* PRODUCER IDENTIFICATION */ = " PRODUCER ID CESR ASPERA4 GROUP" PRODUCER FULL NAME = " EMMANUEL PENOU" PRODUCER_INSTITUTION NAME = " CENTRE D'ETUDE SPATIALE DES RAYONNEMENTS" PRODUCT CREATION TIME = 2007-12-12T14:30:40 /* DATA DESCRIPTION AND IDENTIFICATION $\star/$ = " DATA SET NAME VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 IMA V1.0" DATA_SET_ID = "VEX-V/SW-ASPERA-2-IMA-V1.0" RELEASE ID = 0001 REVISION ID = 0000 PRODUCT_TYPE = EDR = 2 = "VENUS EXPRESS" PROCESSING_LEVEL_ID MISSION_NAME MISSION_ID= VENOS EATRADOMISSION_ID= VEXINSTRUMENT_HOST_ID= VEXMISSION_PHASE_NAME= "PHASE 1"INSTRUMENT_NAME= " ANALYZER OF SPACE PLASMA AND ENERGETIC ATOMS (4TH VERSION)" INSTRUMENT_TYPE = {"ELECTROSTATIC ANALYZER", "MASS SPECTROMETER", "NEUTRAL PARTICLE IMAGER", "NEUTRAL PARTICLE DETECTOR" } = VEX ASP4_IMA DETECTOR ID ^INSTRUMENT DESC = "ASPERA4 DESC.TXT" /* TARGET IDENTIFICATION */ TARGET TYPE = "PLANET" TARGET_NAME = "VENUS" RIGHT_ASCENSION = "N/A" = "N/A" DECLINATION /* SCIENCE OPERATIONS INFORMATION */ = " VEX:SCIENCE CASE ID



ALL" VEX:SCIENCE_CASE_ID_DESC = "Please refer to VEX_SCIENCE_CASE_ID_DESC.TXT OBSERVATION_TYPE in the DOCUMENT directory." = {"AC003B", "PE001A", "PE004A"} = "OBSERVATION TYPE_DESC.TXT" ^OBSERVATION TYPE DESC /* TIME RELATED INFORMATION */ START TIME = 2006-06-10T17:21:45.346 STOP TIME = 2006-06-10T23:07:24.318 SPACECRAFT CLOCK START COUNT = "01/0040324904.63439" SPACECRAFT CLOCK STOP COUNT = "01/0040345643.61407" /* ORBITAL INFORMATION */ ORBIT NUMBER = 50 ORBITAL_ECCENTRICITY = 0.839098 ORBITAL_INCLINATION = 83.202232 ORBITAL_SEMIMAJOR_AXIS = 39465.282197 = 298.259010 PERIAPSIS ALTITUDE = 122.929391 = 2006-06-10T01:45:38.036 PERIAPSIS ARGUMENT ANGLE PERIAPSIS TIME SPACECRAFT ORIENTATION = (-0.362577, 0.713916, -0.599051) ^SPACECRAFT ORIENTATION DESC = "VEX ORIENTATION DESC.TXT" - " SPACECRAFT POINTING MODE N/A" ^SPACECRAFT POINTING MODE DESC= "VEX POINTING MODE DESC.TXT" /* DATA OBJECT DEFINITION */ OBJECT = HEAD_TABLE NAME = "IMA SPECTRUM HEAD" = 4718594ROW SUFFIX BYTES INTERCHANGE_FORMAT = ASCII ROWS = 108 = 29 COLUMNS ROW BYTES = 141 ^STRUCTURE = "IMA SPECTRUM HEAD.FMT" = HEAD TABLE END OBJECT = DATA SCIENCE TABLE OBJECT = "IMA SPECTRUM DATA M24" NAME ROW PREFIX BYTES = 141 INTERCHANGE FORMAT = ASCII ROWS = 108 COLUMNS = 1 ROW BYTES = 4718594 OBJECT = COLUMN COLUMN_NUMBER = 1 = "IMA_COUNTS" NAME = ASCII INTEGER DATA TYPE = 1 START BYTE = 4718594 BYTES = "N/A" UNIT = "I5" FORMAT DESCRIPTION = "Particles (counts/accumulation) counted in the current azimuth, mass, energy and polar angle sector. Within the azimuth mass energy polar-angle matrix, particle counts are displayed as acquired in the EXMO mode with the first index varying



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 198

ITEMS = 786432 ITEM_BYTES = 6 END_OBJECT = COLUMN END_OBJECT

END_OBJECT END

= DATA_SCIENCE_TABLE

the fastest."



9 Appendix E: Example of PDS detached label for an ASPERA-4 NPI level-2 data product

PDS_VERSION_ID = PDS3 /* FILE CHARACTERISTIC DATA ELEMENTS */ = "NPI NORMALX 070212153119 11" PRODUCT ID RECORD TYPE = FIXED LENGTH RECORD BYTES = 6257 = 208 FILE RECORDS /* DATA OBJECT POINTERS */ ^HEAD TABLE = "NPI NORMALX 070212153119 11.TAB" ^DATA_SCIENCE_TABLE = "NPI_NORMALX_070212153119_11.TAB" /* PRODUCER IDENTIFICATION */ PRODUCER ID = " CESR_ASPERA4_GROUP" = " PRODUCER_FULL_NAME EMMANUEL PENOU" = " PRODUCER INSTITUTION NAME CENTRE D'ETUDE SPATIALE DES RAYONNEMENTS" PRODUCT_CREATION_TIME = 2007-08-07T07:05:12 /* DATA DESCRIPTION AND IDENTIFICATION */ - " DATA SET NAME VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 NPI V1.0" DATA_SET_ID = "VEX-V/SW-ASPERA-2-NPI-V1.0" = 0003 RELEASE ID REVISION ID = 0000 PRODUCT_TYPE = EDR = 2 = "VENUS EXPRESS" PROCESSING LEVEL ID = "VENUS EXPRESS" INSTRUMENT_HOST_NAME = VEX INSTRUMENT_HOST_ID = VEX MISSION_PHASE_NAME = "PHASE 5" INSTRUMENT_NAME = " MISSION_NAME ANALYZER OF SPACE PLASMA AND ENERGETIC ATOMS (4TH VERSION)" INSTRUMENT_ID = ASPERA4 INSTRUMENT_TYPE = {"ELECTROSTATIC ANALYZEP" "MASS SPECTROMETER", "NEUTRAL PARTICLE IMAGER", "NEUTRAL PARTICLE DETECTOR" } DETECTOR ID = VEX ASP4 NPI ^INSTRUMENT DESC = "ASPERA4 DESC.TXT" /* TARGET IDENTIFICATION */ TARGET TYPE = "PLANET" TARGET NAME = "VENUS" RIGHT ASCENSION = "N/A" = "N/A" DECLINATION /* SCIENCE OPERATIONS INFORMATION */



```
VEX:SCIENCE CASE ID
                                     = "
ALL"
VEX:SCIENCE_CASE_ID_DESC
                                    = "Please refer to VEX_SCIENCE_CASE_ID_DESC.TXT
OBSERVATION_TYPE
                                       in the DOCUMENT directory."
                                     = {"AC002B", "PE001A", "PE004A"}
^OBSERVATION TYPE DESC
                                   = "OBSERVATION TYPE DESC.TXT"
/* TIME RELATED INFORMATION */
START TIME
                                     = 2007-02-12T15:31:19.632
STOP TIME
                                     = 2007-02-12T17:22:16.181
SPACECRAFT_CLOCK_START_COUNT = "01/0061659076.49086"
SPACECRAFT_CLOCK_STOP_COUNT = "01/0061665733.19464"
/* ORBITAL INFORMATION */
ORBITAL_ECCENTRICITY= 0.839513ORBITAL_INCLINATION= 83.338442ORBITAL_SEMIMAJOR_AXIS= 39443.405220PERIAPSIS_ALTITUDE= 278.363152PERIAPSIS_ARGUMENT_ANGLE= 120.845168PERIAPSIS_TIME= 2007-02-12T07:09:34.403SPACECRAFT_ORIENTATION= (-0.455591, -0.593954.007)
ORBIT NUMBER
                                     = 297
                                     = (-0.455591, -0.593954, 0.663065)
 ^SPACECRAFT ORIENTATION_DESC = "VEX_ORIENTATION_DESC.TXT"
                                    = "
SPACECRAFT POINTING MODE
N/A"
 ^SPACECRAFT POINTING MODE DESC= "VEX POINTING MODE DESC.TXT"
/* DATA OBJECT DEFINITION */
OBJECT
                              = HEAD TABLE
    NAME
                             = "NPI_SPECTRUM_HEAD"
    ROW_SUFFIX_BYTES
                             = 6146
    INTERCHANGE_FORMAT = ASCII
                             = 208
    ROWS
    COLUMNS
                             = 12
                           = 111
= "NPI
   ROW BYTES
   ^STRUCTURE
                             = "NPI_NRMHEAD.FMT"
= HEAD_TABLE
END OBJECT
OBJECT
    ROW_PREFIX_BYTES = 111
                             = DATA SCIENCE TABLE
    INTERCHANGE FORMAT = ASCII
                             = 208
    ROWS
    COLUMNS
                              = 1
    ROW BYTES
                             = 6146
       = COLUMN

COLUMN_NUMBER = 1

NAME = "NPI_COUNTS"

DATA_TYPE = ASCII_INTEGER

START_BYTE = 1

BYTES = 61.12

UNIT
    OBJECT
        FORMAT
                             = "I5"
       DESCRIPTION
                          = "ENA (counts/sampling time) counted in the
                               current bin azimuthal sector."
        = 1024
ITEM_BYTES = 6
```



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 201

END_OBJECT

= COLUMN

END_OBJECT

= DATA_SCIENCE_TABLE

END



10 Appendix F: Example of PDS detached label for an ASPERA-4 NPD level-2 data product

PDS VERSION ID = PDS3 /* FILE CHARACTERISTIC DATA ELEMENTS */ = "NP1 TOFXXXX 070820201019 11" PRODUCT ID = FIXED LENGTH RECORD TYPE RECORD BYTES = 4734 FILE_RECORDS = 10 /* DATA OBJECT POINTERS */ ^NPD_TOFHEAD_TABLE = "NP1_TOFXXXX_070820201019_11.TAB" ^NPD TOFSCIE TABLE = "NP1 TOFXXXX 070820201019 11.TAB" /* PRODUCER IDENTIFICATION */ = " PRODUCER ID CESR_ASPERA4_GROUP" PRODUCER_FULL_NAME = " EMMANUEL PENOU" PRODUCER_INSTITUTION NAME = " CENTRE D'ETUDE SPATIALE DES RAYONNEMENTS" PRODUCT_CREATION_TIME = 2007-12-12T15:06:14 /* DATA DESCRIPTION AND IDENTIFICATION */ - " DATA_SET_NAME VENUS EXPRESS VENUS/SOLARWIND ASPERA 2 NPD V1.0" DATA SET ID = "VEX-V/SW-ASPERA-2-NPD-V1.0" RELEASE ID = 0005 REVISION ID = 0000 PRODUCT_TYPE = EDR = 2 = "VENUS EXPRESS" PROCESSING_LEVEL_ID MISSION_NAME MISSION_ID= VENUS EXPRESS"INSTRUMENT_HOST_NAME= "VENUS EXPRESS"INSTRUMENT_HOST_ID= VEXMISSION_PHASE_NAME= "PHASE 8"INSTRUMENT_NAME= " ANALYZER OF SPACE PLASMA AND ENERGETIC ATOMS (4TH VERSION)" INSTRUMENT_ID = ASPERA4 INSTRUMENT TYPE = {"ELECTROSTATIC ANALYZER", "MASS SPECTROMETER", "NEUTRAL PARTICLE IMAGER", "NEUTRAL PARTICLE DETECTOR" } DETECTOR ID = VEX ASP4 NPD1 ^INSTRUMENT DESC = "ASPERA4 DESC.TXT" /* TARGET IDENTIFICATION */ TARGET_TYPE = "PLANET" = "VENUS" TARGET_NAME = "N/A" RIGHT ASCENSION = "N/A" DECLINATION /* SCIENCE OPERATIONS INFORMATION */



VEX:SCIENCE_CASE_ID	= "	
ALL" VEX:SCIENCE_CASE_ID_DESC	<pre>C = "Please refer to VEX_SCIENCE_CASE_ID_DESC.TXT in the DOCUMENT directory."</pre>	
OBSERVATION_TYPE ^OBSERVATION_TYPE_DESC		
/* TIME RELATED INFORMATION */		
START_TIME STOP_TIME SPACECRAFT_CLOCK_START_C SPACECRAFT_CLOCK_STOP_CC	= 2007-08-20T20:10:19.133 = 2007-08-20T20:10:28.133 COUNT = "01/0078005414.08913" = "01/0078005432.08913"	
/* ORBITAL INFORMATION *	s /	
SPACECRAFT_POINTING_MODE N/A"	= 39360.539935 = 320.117128 = 119.093604 = 2007-08-20T04:18:40.756 = (-0.432016,0.374939,-0.820233) DESC = "VEX ORIENTATION DESC.TXT"	
/* DATA OBJECT DEFINITIC	DN */	
NAME ROW_SUFFIX_BYTES INTERCHANGE_FORMAT ROWS COLUMNS ROW_BYTES ^STRUCTURE	= 10	
OBJECT NAME ROW_PREFIX_BYTES	<pre>= NPD_TOFSCIE_TABLE = "NPD_TOF_SCIENCE" = 124 = ASCII = 10 = 1 = 4610</pre>	
DATA_TYPE START_BYTE BYTES UNIT FORMAT DESCRIPTION ITEMS	<pre>= COLUMN = 1 = "NPD_TOF_COUNTS" = ASCII_INTEGER = 1 = 4610 = "ADC UNITS" = "I5" = "Uncalibrated NPD1 sensor science data in TOF operation mode." = 768 = 6 = COLUMN</pre>	



Document No.: VEX_ASP_CESR_EAICD_V1_5Date: 18 Mar 2011Page: 204

END_OBJECT

= NPD_TOFSCIE_TABLE

END