European Space Agency Research and Science Support Department Planetary Missions Division

ROSETTA - CONSERT

To Planetary Science Archive Interface Control Document

RO-OCN-IF-3800

Issue 1.0

21/12/2010

Prepared by: LPG and SONC

Approved by: Wlodek Kofman





No. : 1. Issue/Rev. : 2

: 1.0 : 21/12/2010 : 2/ 66

No. Date Page

Distribution List

| Recipient | Organisation | Recipient |
|-----------|--------------|-----------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |



: RO-OCN-IF-3800 Document

No.

: 1.0 : 21/12/2010 Issue/Rev. No. : 3/66

Date Page

Change Log

| Date | Sections Changed | Reasons for Change |
|------------|------------------|--|
| 21/12/2010 | | Delivery of Issue 1.0 to PSA after peer review |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |



: RO-OCN-IF-3800 Document

No.

: 1.0 : 21/12/2010 Issue/Rev. No. : 4/66

Date Page

TBD ITEMS

| netry directory set containing the geometry index |
|---|
| |
| set containing the geometry index |
| |
| 1 |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 1/66

Date Page

Table Of Contents

| 1 | Intr | troduction | 3 |
|---|------|---|-------------------|
| | 1.1 | Purpose and Scope | 3 |
| | 1.2 | Archiving Authorities | 3 |
| | 1.3 | Contents | |
| | 1.4 | Intended Readership | |
| | 1.5 | Applicable Documents | |
| | | | |
| | 1.6 | Relationships to Other Interfaces | |
| | 1.7 | Acronyms and Abbreviations | |
| | 1.8 | Contact Names and Addresses | 5 |
| 2 | Ove | erview of Instrument Design, Data Handling Process and Product Generation | 5 |
| | 2.1 | Scientific Objectives | 5 |
| | 2.2 | Instrument Design | |
| | 2.3 | Data Handling Process | |
| | 2.4 | Overview of Data Products | |
| | 2.4. | | |
| | 2.4. | | |
| | 2.4. | In-Flight Data Products | 10 |
| | 2.4. | Documentation | 11 |
| | 2.4. | Ancillary Data Usage | 12 |
| 3 | Arc | chive Format and Content | 12 |
| | 3.1 | Format and Conventions | 12 |
| | 3.1. | | 12 |
| | 3.1. | | |
| | 3.1. | | |
| | 3.1. | .4 File naming Convention | 13 |
| | 3.2 | Standards Used in Data Product Generation | |
| | 3.2. | | |
| | 3.2. | | |
| | 3.2. | | 17 |
| | 3.2. | 2.4 Other Applicable Standards Erreur ! St | ignet non défini. |
| | 3.3 | Data Validation | |
| | 3.3. | 3.1 Data Quality ID | 18 |
| | 3.4 | Content | |
| | 3.4. | | |
| | 3.4. | | |
| | 3.4. | Directories | 18 |
| 4 | Det | tailed Interface Specifications | 21 |



: RO-OCN-IF-3800 Document

No.

: 1.0 : 21/12/2010 : 2/ 66 Issue/Rev.

No. Date Page

| 4. | 1 Structure and Organization Overview | 21 |
|-----|---|----|
| 4.2 | 2 Data Sets, Definition and Content | 22 |
| 4. | 3 Data Product Design | 22 |
| | 4.3.1 Data Product Design (Level 2) | 22 |
| 1 | Appendix: structure of CONSERT level 2 data product | 51 |
| 2 | Appendix: Available Software to read PDS files | 55 |
| 3 | Appendix: Example of Directory Listing of Data Set RO-RL-CAL-CONSERT-2-CVP-V1.0 | 55 |
| 4 | Appendix: Example of Consert Lander level 2 data product label | 56 |
| 5 | Appendix: Example of Consert Orbiter level 2 data product label | 58 |



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 3/ 66

Date Page

1 Introduction

1.1 Purpose and Scope

The purpose of this EAICD (Experimenter to Planetary Science Archive Interface Control Document) is two fold. First it provides users of the CONSERT instrument with detailed description of the product and a description of how it was generated, including data sources and destinations. Secondly, the EAICD describes the interface to the Planetary Science Archive (PSA) of ESA and is the official document between each experimenter team and the PSA.

1.2 Archiving Authorities

The Planetary Data System Standard is used as archiving standard by

 NASA for U.S. planetary missions, implemented by PDS
 ESA for European planetary missions, implemented by the Research and Scientific Support Department (RSSD) of ESA

1.3 Contents

This document describes the data flow of the CONSERT instrument on ROSETTA from the s/c until the insertion into the PSA. It includes information on how data were processed, formatted, labeled and uniquely identified. The document discusses general naming schemes for data volumes, data sets, data and label files. Standards used to generate the product are explained. Software that may be used to access the product is explained.

The design of the data set structure and the data product is given. Examples of these are given in the appendix.

1.4 Intended Readership

The staff of the Planetary Science Archive design team and any potential user of the CONSERT data.

1.5 Applicable Documents

- AD 1. Planetary Data System Data Preparation Workbook, February 17, 1995, Version 3.1, JPL, D-7669, Part1
- AD 2. Planetary Data System Standards Reference, August 1, 2003, Version 3.6, JPL, D-7669, Part 2
- AD 3. Consert User Manual Orbiter RO-OCN-TN-3044
- AD 4. Consert User Manual Lander RO-LCN-TN-3048
- AD 5. Consert Data Format RO-OCN-TN-3823
- AD 6. Mission Calender RO-ESC-TN-5026
- AD 7. Consert experiment; description and performances in view of the new targets
- AD 8. ROSETTA MISSION: Surface Science Instruments for Champollion and Roland, Comet Nucleus Sounding Experiment by Radio wave Transmission CONSERT, volume I, Investigation and Technical



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 4/ 66

Date Page

Plan

AD 9. ROSETTA Archive Conventions RO-EST-TN-3372 Issue 5, Rev. 6, 25 March 2010

AD 10. CDMS Command and Data Management System - Subsystem Specification RO-LCD-SP-3101 29/08/2001, Issue 3, Rev. 5

AD 11. Rosetta Time handling RO-EST-TN-3165, issue 1 rev 0, February 9, 2004

AD 12. CDMS Command and Data Management System - Operation Manual RO-LCD-SW-3402 12/02/2001, Issue 1, Rev. 2

AD 13. DDID- Data Delivery Interface Document RO-ESC-IF-5003 Issue B6 23/10/2003

AD 14. ROSETTA Archive Generation, Validation and Transfer Plan, January 10, 2006, Issue 2, Rev. 3, RO-EST-PL-5011

AD 15. Calibration FMO-FSL at Kourou, November 01, 2003, Issue 1, Rev.0, RO-CN-TR-3805

AD 16. The CONSERT instrument for the ROSETTA mission, Advances in Space Research, Volume 24, Issue 9, 1999, pages 1115-1126, W. Kofman at al.

1.6 Relationships to Other Interfaces

N/A

1.7 Acronyms and Abbreviations

AD Applicable Document

APID Application Process IDentifier.

CDMS Command and Data Management System
CIVA Cometary Infrared and Visible Analyser
CNES Centre National d'Etudes Spatiales

CONSERT Comet Nucleus Sounding Experiment by Radiowave Transmission

DN Digital Number

DDS Data Delivery System (ESOC server)

DECW Data Error Control Word

EAICD Experiment Archive Interface Control Document

ESA European Space Agency

ESOC European Space Operation Center

ESS Electrical Support System

ESTEC European Space Research and Technology Center

GRM Ground Reference Model

HK Housekeeping

LPG Laboratoire de Planétologie de Grenoble

MJT Modified Julian Time
OBDH On Board Data Handling

OBT On Board Time

NAIF Navigation Ancillary Information Facility

PDS Planetary Data System
PECW Packet Error Control Word
PI Principal Investigator
PID Process Identifier

PSA Planetary Science Archive
PVV PSA Volume Verifier
RF Radio Frequency
S/C Spacecraft

SCET Spacecraft Elapsed Time SFDU Standard Formatted Data Unit

SONC Science Operations and Navigation Center (CNES Toulouse)



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 5/ 66

No. Date Page

1.8 Contact Names and Addresses

Laboratoire de Planétologie de Grenoble

Bâtiment D de Physique, BP53, 38041 Grenoble Cedex 9, France

Alain Hérique +33 4 76 51 41 73 consert@obs.ujf-grenoble.fr

Béatrice Pibaret +33 4 76 51 41 55 Beatrice.Pibaret@obs.ujf-grenoble.fr

2 Overview of Instrument Design, Data Handling Process and Product Generation

2.1 Scientific Objectives

The scientific objectives of the CONSERT experiment on the ROSETTA mission are described in the original proposal (see AD 8) and in a paper (see AD 16). The purpose of the experiment is to determine the main dielectric properties from the propagation delay and, through modelling, to set constraints on the cometary composition (materials, porosity...) to detect large-size structures (several tens of meters) and stratification, to detect and characterize small-scale irregularities within the nucleus. A detailed analysis of the radio-waves which have passed through all or parts of the nucleus puts real constraints on the materials and on inhomogeneities and helps to identify blocks, gaps or voids. From this information we attempt to answer some fundamental questions of cometary physics: How is the nucleus built up? Is it homogeneous, layered or composed of accreted blocks (cometesimals, boulders)? What is the nature of the refractory component? Is it chondritic as generally expected or does it contain inclusions of unexpected electromagnetic properties? With the answer to these questions, it should also be possible to provide answers to the basic question of the formation of the comet. Did it form directly from unprocessed interstellar grain-mantle particles or from grains condensed in the presolar nebular? Did the accretion take place in a multi step process leading first to the formation of cometesimals which then collided to form a kilometre size body?

2.2 Instrument Design

Our experiment concerns the rough tomography of the comet nucleus performed by the CONSERT instrument (COmet Nucleus Sounding Experiment by Radiowave Transmission). It works as a time domain transponder between one module which lands on the comet surface (Lander) and another which flies around the comet (Orbiter). *Figure 1* gives a schematic diagram of the experiment which is detailed in AD 16. Basically, a 90 MHz sinusoidal waveform is phase modulated by a pseudorandom code or PSK (Phase Shift Keying) Coding. Such frequency, in the radio range, is expected to minimize the losses during the propagation inside the comet material and the generated pulse code maximizes the signal to noise ratio. In these experimental conditions great attempt is made on the good measurement of the mean dielectric properties and on the detection of large size embedded structures or small irregularities within the comet nucleus.



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 6/ 66

Date Page

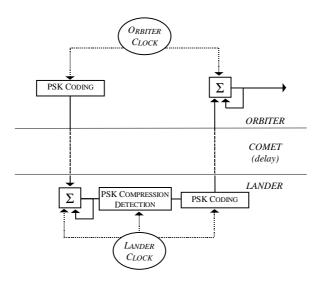


Figure 1: Block diagram of the CONSERT experiment. The coded signal is emitted from the Orbiter. The Lander makes a coherent addition and a detection of the correlation principal peak. A clean coded signal is finally emitted with the found delay. The Orbiter accumulates the signal and send it to the earth (via the satellite interface).

The complete Consert experiment is composed of:

- One Orbiter part (Electronics, antenna, harness)
- One Lander part (Electronics, antennas, harness)

Each scientific measurement sequence (called scanning sequence) involves the orbiter and the lander parts, by transmitting radio waves through the comet nucleus.

The duration of a scanning sequence is typically of the order of one revolution around the nucleus. It should correspond to the time when the Lander and the orbiter are separated by the comet.

During the direct line of sight periods, the synchronization occurs. This means that the duration of the data recording do not correspond to the total time of one revolution.

The number of samples is given by the following formula:

2 * PI *Radius of comet/ (lambda/2)

Where lambda is wavelength

During the scanning sequence, for a circular comet with a 750m radius, about 3000 individual measurements, called soundings are taken. The individual duration of this sounding is less than one second.

The general structure of the CONSERT operational scenario does not depend on the comet type that is explored during the Rosetta mission. But a certain amount of the parameters depend on the shape and size of the comet nucleus and of the orbit of the spacecraft and nucleus rotation.

The numbers used here to derive the numerical parameters are:

Radius of the comet nucleus: 500 to 1500 m;
 Nominal radius = 750 m

Spacecraft orbit period around the comet: Minimum 3 hours



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 7/ 66

Date Page

Nominal: 10 hours

Maximum: 30 hours

• Number of CONSERT soundings during one orbit: 3000

Parameters:

• T ON o Consert/Orbiter switch-on time (in UT)

- T ON L: Consert/Lander switch-on time (in UT)
- TUNESTART _O: Start time for Consert/Orbiter Clock Tuning mode (in UT)
- TUNESTART L: Start time for Consert/Lander Clock Tuning mode (in UT)
- SOUND START: Consert/Orbiter & Consert/Lander sounding start time (in UT)
- NB SOUND: total number of soundings performed by Consert/Orbiter & Consert/Lander
- DELTA SOUND: period between each sounding

The Rosetta Orbiter Spacecraft should be able to initiate the Consert Orbiter instrument Switch-on, Switch-off and Clock tuning time-tagged procedures with a time accuracy of 10 seconds with respect to ground UT.

The Rosetta Lander Spacecraft should be able to initiate the Consert Lander instrument Switch-on, Switch-off and Clock tuning time-tagged procedures with a time accuracy of 10 seconds with respect to ground UT.

Typical values of these numbers:

We suppose here that the soundings are made during the two third orbit 'behind' the comet and 5 minutes before and after this 2/3 turn.

T ON o: calculated on ground, based on orbit

T ON L: calculated on ground, based on orbit


TUNESTART O = T ON o + 5 minutes

TUNESTART L = T ON L + 5 minutes

And: TUNESTART O = TUNESTART L + 30

seconds (+/- 20 seconds)

SOUNDSTART = TUNESTART + 5minutes

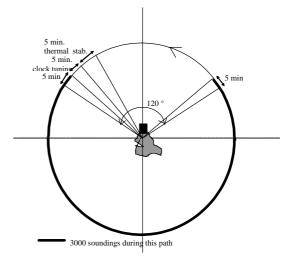

The time accuracy that the experiment requires defines the necessary clock stability. This accuracy is given by the time-transponder structure of Consert. The simplest explanation of this technique is to imagine Philea as a simple reflector of the signal coming from Rosetta. The signal is thus measured in the time reference of Rosetta and this enables one to relax the constraints on the stability of clocks. It is technically impossible to use Philea as a simple reflector; but it is possible to use it as a delayed active reflector.



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 8/ 66

No.

Date Page

In practice, both the orbiter and Philea have their own clocks. Both clocks are tuned and they drift during the experiment. This small frequency shift induces a drift of Philea internal time relative to the orbiter one. This drift is by-passed by the in-time transponder structure of the experiment.

- During a single measurement sequence the orbiter transmits a long signal lasting 200 ms but Philea
 receive the signal for only 26 ms. This localisation of Philea's receiving window within the orbiter
 transmitting window has to be preserved during the whole of the CONSERT measurement cycle (up
 to 10h). This is the first constraint on the clock accuracy.
- The transmitted signal is periodic and consists of the repetition of a 25.5µs-long Binary Phase Shift Keying (hereafter BPSK) code. At Philea, this signal is coherently accumulated with this period of 25.5µs. To have a coherent summation during the 26ms receive window, the lander carrier phase used for the signal demodulation has to remain coherent with the orbiter one. This is the second clock accuracy constraint, improving the signal to noise ratio.
- At Philea, the received signal is convolved with the BPSK code and the arrival time of the main propagation path is measured. This epoch is the time reference for the second wave transmission: a known delay after this epoch, Philea transmits the BPSK signal lasting 200 ms which is received during 26 ms and accumulated by the orbiter. This signal is processed on ground. The arrival time of the main propagation path corresponds to twice the main propagation delay (one for each propagation way) plus the known delay added by the lander. This is because the lander was synchronized on the main path (shortest one) and due to the fact that on the time scale of measurements the orbiter is almost stationary, the paths between Philea and the orbiter and the orbiter and Philea are the same. This transponder processing delay has to be known with accuracy compliant with the scientific requirements on the propagation delay accuracy (third clock constraint).

To summarize, the propagation from the orbiter to Philea synchronizes both time systems while the scientific measurement is in the propagation from Philea to the orbiter. These constraints on the clocks stability allow a relaxation to $\Delta f/f = 10^{-7}$ during a 10-hour period. The time diagram for the synchronization principle is shown *Figure 2*.



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 9/ 66

Date Page

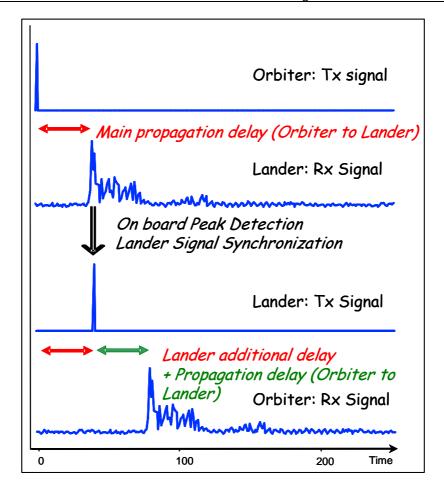


Figure 2 : In-Time transponder

2.3 Data Handling Process

The SONC is responsible for PDS CONSERT (Orbiter and Lander) data sets generation and delivery to the PSA.

The CONSERT telemetry data are provided by the ESA DDS (Data Distribution Server). Following the operations plan the SONC pulls out archived packets (Science, HK, ACK, EVENT) by direct request to the DDS via FTP and stores them into SONC database.

As soon as they are received, the raw data packets are passed through data processing software. The SONC data processing system takes as input raw telemetry data (packets) and reconstructs the scanning sequence. Each record of the resulting data contains information from one sounding (housekeeping, I and Q signals, correlation peak ...). There are two processors, one for the Lander and one for the Orbiter.

The following data are immediately available through W3-SONC server (http://sonc-rosetta.cnes.fr) and the authorized users can get them for a selected time interval:

¹ The authorization is controlled by PI. At his request, SONC delivers a login/password to the authorized user.



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 10/66

Date Page

- Raw telemetry packets (SC, HK, EVENT, ACK) as binary files

- SONC level 0 data as binary files arranged in chronological order containing one all information (SC and HK) from one sounding per record).

Moreover, the W3-SONC provides interactive plots of CONSERT science and housekeeping data.

The delivery format is described in this document.

No software is delivered to process the data.

For any questions contact:

Laboratoire de Planétologie de Grenoble

Bâtiment D de Physique, BP53, 38041 Grenoble Cedex 9, France

Alain Hérique +33 4 76 51 41 73 consert@obs.ujf-grenoble.fr

2.4 Overview of Data Products

2.4.1 Pre-Flight Data Products

The LPG provided pre-flight data obtained during on ground tests and calibrations during Kourou Test in September 2003 (two files). The Kourou test is described in the document RO-OCN-TR-3805 (in DOCUMENT directory). Other files are provided when SONC will be able to process CSS Orbiter data format.

2.4.2 Instrument Calibrations

Due to the design of the instrument, there is no calibration data. The science data is the propagation channel of the comet nucleus as a function of time:

- The propagation time is the main data to be inverse and its accuracy is waranty by the consert clock absolute accuracy and stability.
- The signal amplitude can also provide information about the nucleus structure but there is no internal calibration channel to increase the link budget accuracy.

2.4.3 In-Flight Data Products

The data products are a mapping comet by tomography.

CONSERT doesn't use a cross-instrument calibration and cross-instrument scientific analysis.

The in-flight data correspond to all the on board data. They can be produced during following mission phases:



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 11/66

Date Page

| MISSION_PHASE_NAME | Abbreviation | Start Date | End Date | CONSER | T data (1) |
|--------------------------------------|--------------|--------------|--------------|-----------|------------|
| | | (dd/mm/yyyy) | (dd/mm/yyyy) | C. Lander | C. Orbiter |
| Commissioning (part 1) | CVP1 | 05/03/2004 | 06/06/2004 | | X |
| Cruise 1 | CR1 | 07/06/2004 | 05/09/2004 | | |
| Commissioning (part 2) | CVP2 | 06/09/2004 | 16/10/2004 | | K |
| Earth Swing-by 1 (including PC#0) | EAR1 | 17/10/2004 | 04/04/2005 | Х | X (HK) |
| Cruise 2 (including PC#1,2) | CR2 | 05/04/2005 | 28/07/2006 | 2 | K |
| Mars Swing-by (including PC#3,4,5) | MARS | 29/07/2006 | 28/05/2007 | 7 | K |
| Cruise 3 | CR3 | 29/05/2007 | 12/09/2007 | | |
| Earth Swing-by 2 (including PC#6,7) | EAR2 | 13/09/2007 | 27/01/2008 | 2 | K |
| Cruise 4-1 (including PC#8) | CR4A | 28/01/2008 | 03/08/2008 |) | K |
| Steins Flyby | AST1 | 04/08/2008 | 05/10/2008 | | |
| Cruise 4-2 (including PC#9) | CR4B | 06/10/2008 | 13/09/2009 | 2 | K |
| Earth Swing-by 3 (including PC#10) | EAR3 | 14/09/2009 | 13/12/2009 | 2 | K |
| Cruise 5 (including PC#12) | CR5 | 14/12/2009 | 06/06/2010 | 7 | K |
| Lutetia Flyby | AST2 | 07/06/2010 | 10/09/2010 | | |
| RV Manoeuver 1 | RMV1 | 11/09/2010 | 13/07/2011 | X (| tbc) |
| Cruise 6 | CR6 | 14/07/2011 | 22/01/2014 | X (| tbc) |
| RV Manoeuver 2 | RVM2 | 23/01/2014 | 17/08/2014 | X (| tbc) |
| Comet | COM | 18/08/2014 | 31/12/2015 | X (| tbc) |

⁽¹⁾ The last column indicates if CONSERT data are available

Table 2-1 Mission phases

The CONSERT data products are edited raw data organized according to soundings. Each record in the file contains all information related to a sounding (including tuning data).

2.4.4 Documentation

The documentation directory contains the following documents:

Orbiter User Manual: RO-OCN-TN-3044Lander User Manual: RO-LCN-TN-3048

- Calibration FMO-FSL at Kourou: RO-OCN-TR-3805

- EAICD (this document)

- Data Format: RO-OCN-TN-3823

- TIMELINE_ph_DESC.TXT, description of the timeline file for phase ph
- TIMELINE_ph_obty.PNG, timeline Image file for phase ph and observation type obty
- TIMELINE_ph_obty.LBL, PDS label for file TIMELINE_ph_obty.PNG



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 12/66

Date Page

- TIMELINE_ph_obty.TXT, timeline ASCII file (attached label) for phase ph and observation type obty

2.4.5 Ancillary Data Usage

The S/C orbitography, the nucleus shape and the nucleus motion are major inputs for the success of the Consert data processing.

Consert needs the following data in a Comet fixed frame:

- The Orbiter and Lander positions with 1 m resolution.
- A model of the comet surface with 1 m resolution

During commissioning and cruise phase, auxiliary data consist in solar panel orientation and high gain antenna orientation. Files are delivered in the DATA directory.

3 Archive Format and Content

3.1 Format and Conventions

Data processing level number used in CONSERT naming scheme conforms to CODMAC norm. Only level 2 data are provided (SONC level 0). Level 2 is defined as follows:

2: Edited Data Corrected for telemetry errors and split or decommutated into a data set for a given instrument. Sometimes called Experimental Data Record. Data are also tagged with time and location of acquisition. Corresponds to NASA Level 0 data.

3.1.1 Deliveries and Archive Volume Format

A data set is delivered for each simple mission phase except for the COMET phase which is an accumulative phase. Each data set contains only one level data processing.

The list of mission phases is given in (1) The last column indicates if CONSERT data are available Table 2-1.

3.1.2 Data Set ID Formation

DATA_SET_ID = <INSTRUMENT_HOST_ID>-<target id>-<INSTRUMENT_ID>-<data processing level number>-<mission phase abbreviation>-<description>-<version>

DATA_SET_NAME = <INSTRUMENT_HOST_NAME> <target name> <INSTRUMENT_ID> <data processing level number> <mission phase abbreviation> <description> <version>

See AD 9.

Examples of DATA_SET_ID and DATA_SET_NAME for CONSERT data obtained in-flight during CVP:

DATA_SET_ID = "RO-RL-CAL-CONSERT-2-CVP-V1.0"

DATA_SET_NAME = "ROSETTA-ORBITER/ROSETTA-LANDER CVP CONSERT 2 V1.0"



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 13/ 66

Date Page

3.1.3 Data Directory Naming Convention

See § 3.4.3

3.1.4 File naming Convention

The file naming is produced as follows:

{exp}_{inst}_{level}_{begin of observation}.{ext}

- exp (2 characters) = CN (fixed)
- inst = instrument origin :
 - o O for Orbiter
 - o L for Lander
 - A for auxiliary data AOCS
- level (1 character) = data processing level number norm CODMAC (CONSERT archives only level 2 data)

begin of observation (13 characters) = time of measurement in UTC yymmddThhmmss (e.g 020415T100013) :

- o yy = year
- o mm = month
- \circ dd = day
- o hh=hour
- o mm = minute
- \circ ss = secondes
- **ext** = extension of file. For CONSERT possible extensions are:
 - o LBL for label file associated to data file .TAB
 - o TAB for HK/SC data (CODMAC level 2)

Each file corresponds to an instrument and a slot:

- One file for Orbiter Consert, and one file for Lander Consert.
- A slot is a consecutive sequence of operation with a maximum gap of 10 days between two successive operations. In practice, during cruise, a payload checkout test is a slot.
- This gap of 10 day is reduced at 4 days during the comet phase.

Ex.: CN_O_2_ 100221T122501.TAB

The file contains the Consert Orbiter slot beginning at 2010/02/21 12:25:01

3.2 Standards Used in Data Product Generation

3.2.1 PDS Standards

The archive structure given in this document complies with PDS standard version 3.6.



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 14/ 66

Date Page

3.2.2 Time Standards

3.2.2.1 Generalities

This paragraph gives a summary of the different existing formats in the Rosetta Ground segment, from their generation by the instruments to their availability at SONC:

- The Lander CDMS requires the scientific instruments to transmit the data by bursts of 8 or 64 bytes (4 or 32 16-bit words)
- When sufficient data are received, the CDMS builds packets containing 256 bytes of instrument data. The CDMS adds 18 bytes header (unit PID, sequence count, OOBT: Orbiter OBT, data type) and a 2 bytes checksum (DECW) and creates packets with a fixed length of 276 bytes². For transmission between Lander and Orbiter, a 4 bytes synchro header and a 2 bytes trailing checksum (PECW) are added, increasing the packet size to 282 bytes. The extra bytes are removed by the ESS.

To comply with ESA requirements, the time registered in the CDMS packets is the **OOBT**. It is reconstituted from the LOBT, as shown in Figure 3:

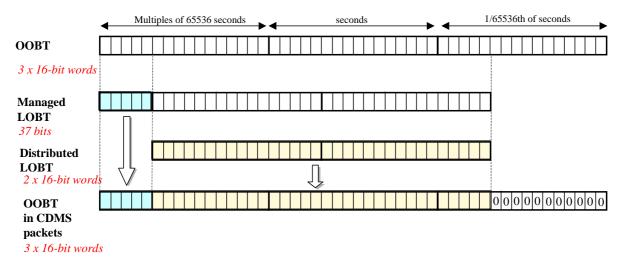


Figure 3 Reconstruction of on board time in CDMS packets

- The ESS groups together several packets and passes them to the Orbiter OBDH, which transmits them according to the Space/Ground interface. This part is transparent for the Lander ground segment.
- The data are delivered by the Rosetta Data Distribution System (DDS) to the SONC in SFDU format. A SFDU file is basically a collection of 276-byte packets interspersed with auxiliary information records. An 18 bytes SFDU header is added to the CDMS 276-byte packets. This header contains information added at the ground station (time correlated OBT, ground station id, virtual channel id, service channel, type of data, time quality)

² The Lander CDMS header and the headers of the telemetry source packets from the Orbiter instruments are quite similar. There is a difference in the data field header. The byte containing PUS version, checksum flag and spare fields is set to zero in the CDMS header. Besides the last byte of the OOBT is set to zero in the CDMS header. The CDMS header has an additional word (2 bytes) after the data field header named "FORMAT ID". This word is mainly used for HK data and it contains the HK scanning period and the SID (structure identification).




No. : 1.0

Issue/Rev. : 21/12/2010 No. : 15/ 66

Date Page

• SONC processes the SFDU files to retrieve the 276-byte packets. This format is available in the SONC database.

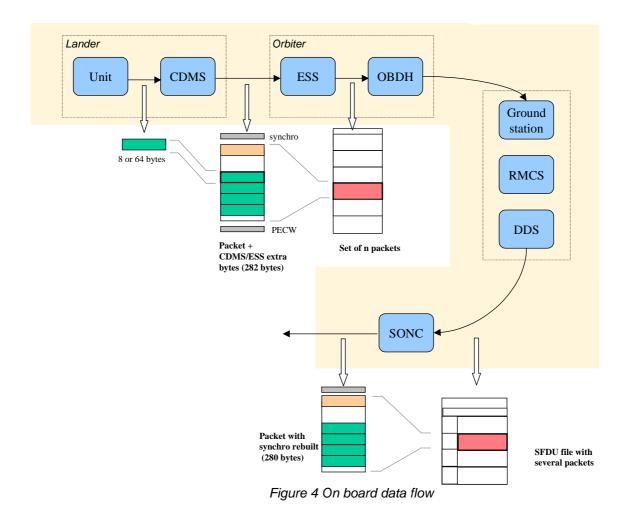

Afterwards, SONC processes science raw packets in order to recompose the science measurement (e.g. an image, a spectrum, ...).

Figure 4 gives an overview of this data flow.

Only the following principles are applied:

- the packet wrapping is removed, and science frames that had to be split into several raw data packets are rebuilt. Basic error detection controls are applied, to recover from possible problems in the transmission chain.
- the Lander On-Board time (LOBT) (synchronised with OOBT) extracted from the packet, and corresponding UTC time coming from the SFDU header, are added.



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 16/ 66

Date Page

- UTC time is calculated from the On-Board time taking into account the On-Board clock drift as following: UTC (seconds since 01/01/1970) = LOBT(seconds) * Gradient + Offset (these coefficients are extracted from TCP packets delivered by DDS).

LOBT is either the LOBT extracted from CDMS header or the Experiment internal clock when it exists (CIVA, COSAC, PTOLEMY, ROMAP, ROLIS, SESAME). In the last case, it must be taken into account that the Internal clock (32 bits) resets all 4 years, 4 months, 3 days (first reset: 03/04/2007 10:42:07).

- in few cases, bit fields are expanded: flags that were stored as bits in the telemetry (to save bandwidth) are stored as integer values instead; the aim is to ease further processing.

UTC time-stamped Science and HK data are available in the SONC database and used to generate PDS format.

3.2.2.2 CONSERT time standards

3.2.2.2.1 The CONSERT internal Time

There are three different times for CONSERT:

- Rebuilt Time on ground : SCET Time (in SFDU Header)
- On-Board Set Time : OBT time
- CONSERT own Time: counter in TIC sets to zero when Consert is turned on and resets to zero after tuning phase, allows the precise synchronization between CONSERT Orbiter and CONSERT. Lander

All the Consert operation are synchronized on the Consert own Time. This times are given in TIC: $1 \text{ TIC} = 2^{14} / 10^7 = 1.6384 \text{ millisecond}$

3.2.2.2.2 The Lander On-Board Time (LOBT)

The instruments on board the spacecraft (Orbiter) generate telemetry source packets with an OOBT (orbiter on board time) time stamp in the header.

The OOBT written into the packet header specifies the time, when CDMS can complete a packet.

In terms of HK packets this is the time of the last HK word. Using the HK scanning rate, which is given in word #9 of the packet, one can calculate the OBT of every individual word in this packet. Note that this is only valid if packets with SID (word #9) 1 or 2 are generated. Packets with SID 4 and 5 are "snapshots", which means you can apply the packet OOBT for every word in this packet. SID 3 packets have to be analysed case by case.

In terms of SC packets this is the reception of the last 32 word block by CDMS, which also completes the SC packet. How often 32 word blocks are created (and sent) by the unit, and corresponding to this the delta time between each block, might be different for each unit. So, re-calculation of OOBT for SC words depends on this unit feature.

The Orbiter On-Board Time (OOBT) is a linear binary counter having a resolution of 1/65536 sec stored in 3 16-bit words.

The <u>Lander On-Board Time</u> (LOBT) is a linear binary counter having a resolution of 1/32 sec, kept in 37 bits. Only the 32 least significant bits are distributed to the instruments, in 2 16-bit words. The 5 most significant bits are supposed constant during most of the mission, they are available through a specific service.

The LOBT is derived from the Orbiter On-Board Time (OOBT): the 11 least significant bits of the OOBT are discarded to obtain the LOBT, hence the reduced resolution. A re-synchronization between OOBT and LOBT



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 17/ 66

Date Page

is performed regularly (see AD 10).

The Lander is synchronized prior to Separation and during every RF link after landing. So, during descent and the First Science Sequence this should not be a problem, since LOBT is kept synchronized as long as the Lander is powered.

Technical details about Sychronisation of Lander On-board Time can be found in § 2.3.2.6 AD 10.

For a description of time handling in the Rosetta project see AD 11. For a description of Lander on board time handling see AD 10: § 2.3.2.6 Sychronisation and Adjustment of Lander On-board Time § 2.3.2.6.1 Absolute vs. relative time references § 2.3.2.6.2 On-board Time Failure Modes and Recovery Procedures and AD 12 § 6. About Lander On-board Time.

3.2.2.2.3 The DDS header time correlated

The OOBT is converted to UTC (Coordinated Universal Time) by means of time correlation and included in the additional DDS packet header when the packets are distributed via the DDS server.

The <u>DDS header time correlated</u> (SCET field in the DDS header) is the UTC of the start of measurement derived from the OOBT by time correlation.

Its format is the Sun Modified Julian Time (MJT) i.e. two 32 bit integers. The first (MSB) contains the number of seconds since 00:00:00 on 1st January 1970 and the second (LSB) integer the number of microseconds from seconds in the first field.

Time correlation is described in AD 13 § 18.1.2.1.

3.2.2.2.4 The UTC

The $\underline{\mathtt{UTC}}$ used as time stamp for CONSERT data products (level 2) is obtained from the OOBT and LOBT. The start of LOBT = 01/01/2003 0h.

This UTC time is of the main interest for geometry.

3.2.3 Reference Systems

To be done in cooperation with the other instrument teams and RSOC/RMOC.

3.3 Data Validation

The CONSERT data products are delivered to PSA by SONC. All the data produced by SONC are validated by Consert PI. These data are also distributed via the W3-SONC server and used by all the experiment team.

All the data are published in the archive.



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 18/ 66

Date Page

3.3.1 Data Quality ID

The quality of CONSERT level 2 data products is "N/A".

3.4 Content

3.4.1 Volume Set

One volume corresponds to one data set. The possible values of VOLUME keywords can be found in AD 9. The volume keyword values for the Cruise 4A mission phase are given in the following example.

VOLUME_NAME = "CONSERT RAW DATA FOR THE

CR4A PHASE"

VOLUME_SERIES_NAME = "ROSETTA SCIENCE ARCHIVE"

VOLUME_SET_ID = "FR_CNRSUG_IPAG_RORLCN_10XX"

VOLUME_SET_NAME = "ROSETTA COSAC DATA"

VOLUME_ID = "RLCOS2_1007"

VOLUME_VERSION_ID = "VERSION 1"

VOLUME_FORMAT = "ISO-9660"

MEDIUM_TYPE = "ONLINE"

VOLUMES = 15

PUBLICATION_DATE = 2006-11-13

DESCRIPTION = " This volume contains data and supporting documentation

from the Rosetta CR4A

mission phase "

3.4.2 Data Set

The CONSERT data are archived in as many Data Sets as simple mission phase and level data processing :

| Name element | Data Set ID | Data Set Name | |
|---|---|-----------------------|------------------|
| INSTRUMENT_HOST_ID / INSTRUMENT_HOST_NAME | {"RO","RL"} | {"ROSETTA-ORBITER","F | ROSETTA-LANDER"} |
| Target id / target name | See AD 9 | See AD 9 | |
| INSTRUMENT_NAME | COMET NUCLEUS SOUNDING EXPERIMENT BY RADIOWAVE TRANSMISSION | | |
| INSTRUMENT_ID | CONSERT | | |
| Data processing level number | * Level 2 contains level 2 SC and HK | | |
| mission phase abbreviation | See AD 9 | | |
| description | N/A | N/A. | |
| version | The first version of a data set is V1.0 | | |

3.4.3 Directories


The organisation (directories) of a level 2 dataset is shown below.



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 19/66

Date Page

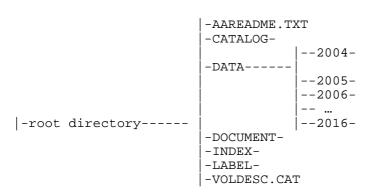

3.4.3.1 Root Directory

| File Name | Contents | |
|--------------|--|--|
| AAREADME.TXT | Volume content and format information | |
| VOLDESC.CAT | A description of the contents of this volume in PDS format readable by both humans and | |
| | computers | |

The name of the root directory is the data set ID.

3.4.3.2 Calibration Directory

There are no calibration data connected to the measurement.

3.4.3.3 Catalog Directory

The catalog directory provides a top level understanding of the mission, spacecraft, instruments and data sets. The catalog directory contains the following files:

| File Name | Contents |
|--------------|---|
| CATINFO.TXT | A description of the contents of the catalog directory |
| DATASET.CAT | Data set information |
| INST.CAT | Instrument information |
| INSTHOST.CAT | Instrument host (spacecraft) information |
| MISSION.CAT | Mission information |
| REF.CAT | Full citations for references mentioned in any and all of the catalog files, or in any associated label files. |
| PERSON.CAT | PDS personnel catalog information about the instrument team responsible for generating the data products. There is one file for each instrument team providing data to this data set. |
| SOFTWARE.CAT | Information about the software included in the SOFTWARE directory |

3.4.3.4 Index Directory

The index directory contains the indices for all data products on the volume. The following files are included in the index directory:



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 20/ 66

Date Page

3.4.3.4.1 Dataset Index File, INDEX.LBL and INDEX.TAB

| File Name | Contents |
|--------------|--|
| INDEX.LBL | PDS label for the volume index file, INDEX.TAB |
| INDEX.TAB | Volume index in tabular format |
| INDXINFO.TXT | A description of the contents of the Index Directory |

3.4.3.4.2 Geometric Index File

The following Geometry index files are created, according to reference targets. They are available in a general dataset (TBD).

| File Name | File Contents |
|-----------------|---|
| GEO_EARTH.LBL | A PDS detached label that describes GEO_EARTH.TAB |
| GEO_EARTH.TAB | A table listing the geometric index parameters for reference target EARTH |
| GEO_MARS.LBL | A PDS detached label that describes GEO_MARS.TAB |
| GEO_MARS.TAB | A table listing the geometric index parameters for reference target MARS |
| GEO_STEINS.LBL | A PDS detached label that describes GEO_STEINS.TAB |
| GEO_STEINS.TAB | A table listing the geometric index parameters for reference target STEINS |
| GEO_LUTETIA.LBL | A PDS detached label that describes GEO_LUTETIA.TAB |
| GEO_LUTETIA.TAB | A table listing the geometric index parameters for reference target LUTETIA |

3.4.3.5 Geometry Directory

TBD

This directory contains the cometary model to be defined by ESOC.

3.4.3.6 Label Directory

The label directory contains include files (.FMT files with label definitions) referenced by data files on the data set. The following files are included in the index directory:

| File Name | Contents |
|----------------------|--|
| LABINFO.TXT | A description of the contents of this directory (.FMT files) |
| AOCS.FMT | Edited auxiliary (AOCS) data |
| L0_PARAMETER_DEF.FMT | Edited SC and HK data for Orbiter and Lander |



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 21/66

Date Page

3.4.3.7 Document Directory

This directory contains all original documents necessary to understand the data.

The following files are included in the document directory:

| File Name | Contents | |
|----------------------|--|--|
| DOCINFO.TXT | identifies and describes the function of each file in the | |
| | DOCUMENT subdirectory. | |
| RO-OCN-TN-3823.LBL | PDS label of file RO-OCN-TN-3823.PDF | |
| RO-OCN-TN-3823.PDF | Consert data formats | |
| RO-LCN-TN-3048.LBL | PDS label of file RO-LCN-TN-3048.PDF | |
| RO-LCN-TN-3048.PDF | Consert experiment user manual, Lander instrument | |
| RO-OCN-TN-3044.LBL | PDS label of file RO-OCN-TN-3044.PDF | |
| RO-OCN-TN-3044.PDF | Consert experiment user manual, Orbiter instrument | |
| RO-OCN-TR-3805.LBL | PDS label of file RO-OCN-TR-3805.PDF | |
| RO-OCN-TR-3805.PDF | Calibration FMO-FSL at Kourou | |
| EAICD_CONSERT.LBL | PDS label of EAICD_CONSERT.PDF | |
| EAICD_CONSERT.PDF | CONSERT EAICD (this document) | |
| TIMELINE_ph.TXT | Timeline Ascii file with the PDS label attached for phase <i>ph</i> | |
| TIMELINE_ph_DESC.TXT | Description of the timeline file for phase <i>ph</i> | |
| TIMELINE_ph_obty.PNG | Timeline Image file for phase <i>ph</i> and observation type <i>obty</i> | |
| TIMELINE_ph_obty.LBL | PDS label for image TIMELINE_ph_obty.PNG | |

3.4.3.8 Data Directory

The structure and naming scheme of the data directory is described in chapter 3.4.3.

The DATA directory also contain AOCS data.

During the Cruise phase (Lander attached on the Orbiter), the Solar Array attitude and the High Gain Antenna attitude impact on the propagation pathes between Consert Orbiter and Lander antennas. These parameters determine the shape of the calibration signals.

During the Science Phase (Landed Lander) the SA attitude and the HGA attitude impact on the antenna pattern of Consert Orbiter (gain, position of the measurement).

The SA attitude and the HGA attitude are given in the files that are one to one mapping of the corresponding SC files. The filenaming is the same as for SC data : {exp}_{inst}_{level}_{begin of observation}.{TAB} with inst = A (for AOCS data).

4 Detailed Interface Specifications

4.1 Structure and Organization Overview

For each sounding, three files will be generated. Two with the same format: one for Lander instrument and one for the Orbiter instrument. Both files are located in the same directory. They contain complete



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 22/66

Date Page

information (science and housekeeping) related to a sounding. The third one concerns the auxiliary **AOCS** data.

4.2 Data Sets, Definition and Content

The following table gives the definition of the name and id of the CONSERT data sets:

| Data Set ID | Data Set Name |
|--------------------------------|--|
| RO-RL-CAL-CONSERT-2-CVP-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER CAL CONSERT 2 CVP V1.0 |
| RO-RL-E-CONSERT-2-EAR1-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER EARTH CONSERT 2 EAR1 V1.0 |
| RO-RL-E-CONSERT-2-EAR2-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER EARTH CONSERT 2 EAR2 V1.0 |
| RO-RL-E-CONSERT-2-EAR3-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER EARTH CONSERT 2 EAR3 V1.0 |
| RO-RL-M-CONSERT-2-MARS-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER MARS CONSERT 2 MARS V1.0 |
| RO-RL-CAL-CONSERT-2-CR2-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER CAL CONSERT 2 CR2 V1.0 |
| RO-RL-CAL-CONSERT-2-CR4A-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER CAL CONSERT 2 CR4A V1.0 |
| RO-RL-CAL-CONSERT-2-CR4B-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER CAL CONSERT 2 CR4B V1.0 |
| RO-RL-CAL-CONSERT-2-CR5-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER CAL CONSERT 2 CR5 V1.0 |
| RO-RL-CAL-CONSERT-2-CR6-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER CAL CONSERT 2 CR6 V1.0 |
| RO-RL-A-CONSERT-2-AST2-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER LUTETIA CONSERT 2 AST2 V1.0 |
| RO-RL-CAL-CONSERT-2-RVM1-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER CAL CONSERT 2 RVM1 V1.0 |
| RO-RL-CAL-CONSERT-2-RVM2-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER CAL CONSERT 2 RVM2 V1.0 |
| RO-RL-C-CONSERT-2-COM-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER 67P CONSERT 2 COM V1.0 |
| RO-RL-CAL-CONSERT -2-GRND-V1.0 | ROSETTA-ORBITER/ROSETTA-LANDER GRND CONSERT 2 V1.0 |

4.3 Data Product Design

The CONSERT data products delivered to PSA are edited data (CODMAC level 2) in ADC units containing sounding information (from tunning phase to the I an Q signals and correlation peak)

All CONSERT data products have PDS detached labels.

4.3.1 Data Product Design (Level 2)

The global data product structure is shown below.

PDS label file

Experiment data

L0 + IQ Signal



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 23/ 66

Date Page

One experiment data file consists in identical records. Each record consists in 3 parts (3 x 255 words - Integer 2 bytes): header (named L0), I signal and Q signal. The corresponding data product is organized as three TABLE objects using ROW_PREFIX_BYTES and ROW_SUFFIX_BYTES for defining the 3 parts. At first phases of the experiment (init, mission table received, tuning, waiting), there is no sounding and the records are completed by nulls. The length of these phases depends in the mission table and the time interval between records varies.

In sounding mode the time interval between two records is fixed (Mission Table)

| LO | I signal | Q signal | Record # 1 |
|----|----------|--------------|--------------|
| LU | I signal | Q signal | Record # 2 |
| | | | |
| L0 | l signal | Q signal | Record # n-1 |
| | - 3 | -, - 3 | |

The record structure is shown in annex 4.

4.3.1.1 File Characteristics Data Elements

The PDS file characteristic data elements for ROMAP MAG edited science data (level 2) are:

```
RECORD_TYPE = FIXED_LENGTH
RECORD_BYTES = 1530
FILE_RECORDS
LABEL_RECORDS
```

4.3.1.2 Data Object Pointers Identification Data Elements

The CONSERT edited data are organized as binary tables. The data object pointers (^TABLE) reference TAB files.

4.3.1.3 Instrument and Detector Descriptive Data Elements

4.3.1.4 Data Object Definition

For the Lander and Orbiter data:

```
= L0_TABLE
OBJECT
                          = L0 TABLE
 NAME
 INTERCHANGE_FORMAT
                          = BINARY
 ROWS
                          = FILE_RECORDS
 COLUMNS
                          = 115
 ROW_BYTES
                          = 510
 ROW_SUFFIX_BYTES
                          = 1020
 ^STRUCTURE
                          = "LO_PARAMETER_DEF.FMT"
END_OBJECT
                    = LO_TABLE
```



No.

: 1.0 : 21/12/2010 Issue/Rev. No. : 24/66

Date Page

```
OBJECT
                  = I_TABLE
 NAME
                         = I_TABLE
  INTERCHANGE_FORMAT
                         = BINARY
                        = FILE_RECORDS
 ROW_BYTES
                         = 510
  ROW_PREFIX_BYTES
                         = 510
 ROW_SUFFIX_BYTES
                        = 510
  COLUMNS
                         = 1
  OBJECT
                         = COLUMN
      NAME
                         = "I SIGNAL"
                         = LSB _INTEGER
      DATA_TYPE
      START_BYTE
                         = 510
      BYTES
      ITEMS
                         = 255
      ITEM BYTES
                         = 2
      ITEM_OFFSET
                         = 2
      DESCRIPTION
                         = "THIS TABLE REPRESENTS THE I VALUES OF THE CONSERT RADIO
                       SOUNDING"
  END_OBJECT = COLUMN
END_OBJECT
                        = I_TABLE
```

```
OBJECT
                   = Q_TABLE
                      = Q_TABLE
 NAME
  INTERCHANGE_FORMAT
                          = BINARY
 ROWS
                         = FILE_RECORDS
 ROW_PREFIX_BYTES
                         = 1020
 COLUMNS
                          = 1
 ROW_BYTES
                          = 510
 OBJECT
                         = COLUMN
                          = "Q SIGNAL"
      DATA_TYPE
                          = LSB _INTEGER
      START_BYTE
                          = 1
                          = 510
      BYTES
                          = 255
      ITEMS
      ITEM_BYTES
                          = 2
      ITEM_OFFSET
DESCRIPTION
                          = 2
                          = "THIS TABLE REPRESENTS THE Q VALUES OF THE CONSERT
                        RADIO SOUNDING"
  END_OBJECT = COLUMN
END_OBJECT
                          = Q_TABLE
```

The structure of the TABLE object is described in the file L0 PARAMETER DEF.FMT (LABEL directory) as follows:

```
OBJECT
                           = COLUMN
                           = "PROCESSING LEVEL"
   NAME
                           = "N/A"
   UNIT
   DATA_TYPE
                           = MSB_UNSIGNED_INTEGER
   START_BYTE
                           = 1
   BYTES
   COLUMN NUMBER
   DESCRIPTION
                           = "0 for decommutated raw data (internally
                              named level 0), Data level takes only the
                              value 0"
END_OBJECT
                            = COLUMN
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 25/ 66

```
/* ----- */
                        = COLUMN
OBJECT
                        = "FORMAT VERSION"
                       = MSB_UNSIGNED_INTEGER
   DATA TYPE
   START_BYTE
                       = 3
   BYTES
   COLUMN_NUMBER
                        = 2
   DESCRIPTION
                        = "Version of the format used by the spacecraft
                         to transmit data (the table data structure).
                          Valid value: 00"
END_OBJECT
                        = COLUMN
/* ----- */
                        = COLUMN
                        = "DATA SOURCE"
   NAME
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 5
                        = 2
   BYTES
   COLUMN_NUMBER
                        = "This column indicates the format of the raw
   DESCRIPTION
                          data set. There are 5 formats to store data
                           with different headers and ends These formats
                           differ only in the headers and ends which is
                           deleting when we stored data in PDS format.
                           The indication of format allows us to know
                           where data come from.
                           The possible values are:
                                0-OBDH format from CCS
                                1-SISH KFKI orbiter interface simulator
                                2-ROLBIN Lander data format (CCS and
                                 fly),
                                3-CDMS KFKI lander interface simulator,
                                4-SFDU (Standard Formatted Data Units)'
END_OBJECT
                        = COLUMN
/* ----- */
OBJECT
                        = COLUMN
                        = "INSTRUMENT HOST"
   NAME
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 2
   COLUMN NUMBER
                        = 4
                        = " 1 for Orbiter
   DESCRIPTION
                           2 for Lander"
                        = COLUMN
END OBJECT
/* ----- */
OBJECT
                        = COLUMN
   NAME
                        = "SIGNAL FORMAT"
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
   BYTES
   COLUMN_NUMBER
                        = 5
                        = "Onboard Software version for lander short
   DESCRIPTION
                          signal formatting
                           1=SWL12 data= I2+Q2 on 16 bits for long signal
                          2=SWL15 data= I&Q on 8 bits for short signal
                          SWL stands for Software lander"
                        = COLUMN
END_OBJECT
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 26/ 66

```
/* ----- */
OBJECT
                     = COLUMN
                     = "BLOCK NUMBER"
  NAME
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 11
   BYTES
                     = 2
   COLUMN_NUMBER
                      = 6
                      = "Incremental number of record a block contains
   DESCRIPTION
                        data and an header"
END_OBJECT = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "YEAR ACQUISITION DATA"
  NAME
                      = "YEAR"
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 13
                      = 2
   COLUMN_NUMBER
                      = 7
                   = 7
= "Year of the date for the raw data file
   DESCRIPTION
                        (when the spacecraft acquire data)"
END_OBJECT
                      = COLUMN
/* ------ */
OBJECT
                      = COLUMN
  NAME
                      = "MONTH ACQUISITION DATA"
                      = "MONTH"
   UNIT
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 15
   BYTES
                    = 8
   COLUMN_NUMBER
   DESCRIPTION
                     = "Month of the date for the raw data file
                        (when the spacecraft acquires data)"
END_OBJECT = COLUMN
OBJECT
                      = COLUMN
                      = "DAY ACQUISITION DATA"
 NAME
  UNIT
                      = "DAY"
 DATA TYPE
                      = MSB_UNSIGNED_INTEGER
 START_BYTE
                      = 17
  BYTES
  COLUMN_NUMBER
                      = 9
  DESCRIPTION
                      = "Day of the date for the raw data file
                        (when the spacecraft acquires data)"
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "HOUR ACQUISITION DATA"
  NAME
                      = "HOUR"
   UNIT
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 19
   BYTES
                      = 2
   COLUMN_NUMBER
                      = 10
                      = "Hour of the date for the raw data file
  DESCRIPTION
                        (when the spacecraft acquires data)"
END OBJECT
                      = COLUMN
/* ----- */
```



: RO-OCN-IF-3800 Document

No. : 1.0 Issue/Rev. : 21/12/2010 No. : 27/ 66

```
OBJECT
                      = COLUMN
  NAME
                      = "MINUTE ACQUISITION DATA"
                      = "MINUTE"
   UNIT
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
  START_BYTE
                      = 21
  BYTES
                      = 2
   COLUMN_NUMBER
                      = 11
   DESCRIPTION
                      = "Minutes of the date for the raw data
                        file (when the spacecraft acquires data)"
                      = COLUMN
END_OBJECT
/* ----- */
OBJECT
                      = COLUMN
                      = "SECONDS ACQUISITION DATA"
  NAME
                      = "SECOND"
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 23
                      = 2
   COLUMN_NUMBER
                      = 12
                    = 12
= "Seconds of the date for the raw data
   DESCRIPTION
                        file (when the spacecraft acquires data)"
END_OBJECT
                      = COLUMN
/* ------ */
OBJECT
                      = COLUMN
  NAME
                      = "YEAR LO DATA"
                      = "YEAR"
   UNIT
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
   BYTES
                      = 2
   COLUMN_NUMBER
                   = 13
= "V
  DESCRIPTION
                      = "Year of the created date for the LO file"
END_OBJECT
                      = COLUMN
/* ----- */
                      = COLUMN
OBJECT
  NAME
                      = "MONTH LO DATA"
                      = "MONTH"
   UNIT
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 27
                      = 2
   COLUMN NUMBER
                      = 14
   DESCRIPTION
                      = "Month of the created date for the LO file"
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
  NAME
                      = "DAY LO DATA"
                      = "DAY"
   UNIT
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
                      = 29
   START_BYTE
   BYTES
   COLUMN_NUMBER
                      = 15
                      = "Day of the created date for the LO file"
  DESCRIPTION
                      = COLUMN
END_OBJECT
/* ----- */
OBJECT
                      = COLUMN
  NAME
                      = "HOUR LO DATA"
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 28/ 66 No.

```
UNIT
                      = "HOUR"
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 31
   BYTES
                      = 2
   COLUMN_NUMBER
                    = "Hour of the created date for the LO file"
   DESCRIPTION
                     = COLUMN
END_OBJECT
/* ----- */
OBJECT
                      = COLUMN
                      = "MINUTE LO DATA"
                     = "MINUTE"
   UNTT
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START BYTE
                      = 33
   BYTES
   COLUMN_NUMBER
                    = 17
   DESCRIPTION
                     = "Minutes of the created date for the LO file"
END_OBJECT
                      = COLUMN
/* _____ */
                      = COLUMN
OBJECT
                     = "SECONDS LO DATA"
                     = "SECOND"
  UNIT
  DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 35
   BYTES
                     = 2
   COLUMN_NUMBER
                   = 18
= "Seconds of the created date for the LO file"
                     = 18
   DESCRIPTION
                      = COLUMN
END_OBJECT
/* ------ */
                      = COLUMN
OBJECT
  NAME
                     = "EMPTY_19"
   DATA TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 37
   BYTES
   COLUMN_NUMBER
                     = 19
                    = 19
= "=0 Nothing in this column"
  DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
   NAME
                     = "EMPTY_20"
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 39
   BYTES
                      = 2
   COLUMN NUMBER
                     = 20
                    = "=0 Nothing in this column"
   DESCRIPTION
                      = COLUMN
END_OBJECT
/* ----- */
OBJECT
                      = COLUMN
  NAME
                     = "EMPTY_21"
                     = MSB_UNSIGNED_INTEGER
   DATA_TYPE
   START_BYTE
                     = 41
                     = 2
   BYTES
                   = 21
= "=0 Nothing in this column"
   COLUMN_NUMBER
  DESCRIPTION
                      = COLUMN
END_OBJECT
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 29/ 66

```
OBJECT
                     = COLUMN
                   = "EMPTY_22"
= MSB_UNSIGN:
= 43
  NAME
  DATA_TYPE
START_BYTE
                      = MSB_UNSIGNED_INTEGER
  BYTES
                     = 2
  BYTES
COLUMN_NUMBER
                   = 22
= "=0 Nothing in this column"
   DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
  NAME
                      = "EMPTY 23"
                     = "EMPII_25
= MSB_UNSIGNED_INTEGER
   DATA_TYPE
   START_BYTE
                     = 45
   BYTES
                      = 2
   COLUMN_NUMBER
                      = 23
                    = "=0 Nothing in this column"
  DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "EMPTY_24"
   NAME
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 47
                      = 24
   COLUMN NUMBER
                    = 24
= "=0 Nothing in this column"
   DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                    = MSB_UNSIGNED_INTEGER
= 49
  NAME
   DATA_TYPE
   START_BYTE
                      = 2
   BYTES
                   = 25
= "=
  COLUMN_NUMBER
  DESCRIPTION
                      = "=0 Nothing in this column"
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                     = "EMPTY_26"
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 51
   BYTES
                      = 2
   COLUMN_NUMBER
                     = 26
   DESCRIPTION
                      = "=0 Nothing in this column"
END OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "EMPTY_27"
   NAME
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
                      = 53
   START_BYTE
                      = 2
                    = 27
   COLUMN_NUMBER
  DESCRIPTION
                      = "=0 Nothing in this column"
END_OBJECT
                      = COLUMN
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 30/ 66

```
/* ----- */
OBJECT
                     = COLUMN
                     = "EMPTY_28"
                    = MSB_UNSIGNED_INTEGER
  DATA TYPE
   START_BYTE
                    = 55
  BYTES
   COLUMN_NUMBER
                     = 28
                    = "=0 Nothing in this column"
  DESCRIPTION
                     = COLUMN
END_OBJECT
/* ----- */
OBJECT
                     = COLUMN
                     = "EMPTY_29"
  NAME
  DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 57
   BYTES
                     = 2
                   = 29
= "=
  COLUMN_NUMBER
                     = "=0 Nothing in this column"
  DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                     = COLUMN
                     = "EMPTY_30"
  NAME
  DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 59
                     = 2
  RYTES
   COLUMN_NUMBER
                    = 30
  DESCRIPTION
                     = "=0 Nothing in this column"
END_OBJECT
                      = COLUMN
/* _____ */
OBJECT
                     = COLUMN
                    = "EMPTY_31"
  DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
                     = 61
  START_BYTE
                     = 2
                   = 31
  COLUMN_NUMBER
  DESCRIPTION
                     = "=0 Nothing in this column"
                     = COLUMN
END OBJECT
OBJECT
                     = COLUMN
                     = "EMPTY 32"
  NAME
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
  START_BYTE
                     = 63
  BYTES
                     = 2
  COLUMN_NUMBER
                     = 32
                     = "=0 Nothing in this column"
  DESCRIPTION
END_OBJECT
                      = COLUMN
/* ------ */
OBJECT
                     = COLUMN
                     = "EMPTY_33"
  NAME
  DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 65
  BYTES
                     = 2
   COLUMN_NUMBER
                     = 33
  DESCRIPTION
                     = "=0 Nothing in this column"
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 31/ 66

```
END_OBJECT
                         = COLUMN
                         = COLUMN
   NAME
                         = "TUNING STATUS"
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                         = 67
   BYTES
   COLUMN_NUMBER
                         = 34
                         = "- Orbiter:
   DESCRIPTION
                            + ETM00501-NCNA0EID = (41002=Tuning OK) or
                            + ETM00502-NCNA0EID = (41020 = Timeout Pb)
                            (ETM00501 is a telemetry packet name a
                            progress report and NCNAOEID is a CONSERT
                            telemetry parameter name) [AD 3]
                            - Lander: N/A"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                         = COLUMN
   NAME:
                         = "TUNING OCXO FREQUENCY"
                         = "HERTZ"
                         = MSB_UNSIGNED_INTEGER
   DATA_TYPE
   START_BYTE
                         = 69
   BYTES
                         = 2
   COLUMN_NUMBER
                         = 35
   DESCRIPTION
                         = "- Orbiter: OCXO after tuning
                            + NCND0511-ETM00501 (field 9 MSB):
                              Clock frequency OCXO_freq at end of
                              tuning phase (ETM00501 is a telemetry packet
                              name: CONSERT PROGRESS REPORT and NCND0511
                              is a CONSERT telemetry parameter name)
                              [AD 3]
                            + Lander: OCXO for tuning - TM_Type_standard
                              (field 6 MSB): OCXO Frequency
                              (TM_Type_standard is a telemetry packet
                              name) [AD 4]"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                         = COLUMN
                         = "TUNING INTERCARTILE"
   DATA TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                         = 71
                         = 2
   COLUMN_NUMBER
                         = 36
   DESCRIPTION
                         = "- Orbiter: Interquartile after tuning
                            + NCND0512 - ETM00501 (field 9 LSB)
                              Confidence indicator of tuning phase
                              or 1: good confidence
                              The interquartile range is a measure of
                              dispersion (ETM00501: is a telemetry packet
                              name: CONSERT PROGRESS REPORT and NCND0512
                              is a CONSERT telemetry parameter name)
                              [AD 3]
                            - Lander: N/A"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                         = COLUMN
  NAME
                         = "TUNING GCW"
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 32/ 66

```
UNIT
                         = "DECIBEL"
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                         = 73
                         = 2
   BYTES
   COLUMN_NUMBER
   DESCRIPTION
                         = "GCW: Gain control word of this sounding
                            - Orbiter: GCW after tuning
                            + NCND0513-ETM00501 (field 10 MSB)
                             Tuning Phase GCW (ETM00501: is a telemetry
                            packet name: CONSERT PROGRESS REPORT and
                            NCND0513 is a CONSERT telemetry parameter
                            name) [AD 3]
                            - Lander: N/A"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                         = COLUMN
                         = "TUNING NBL GCW"
                         = "DECIBEL"
   UNIT
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                         = 2
   BYTES
   COLUMN_NUMBER
                         = 38
                         = "- Orbiter: NBLL tuning
   DESCRIPTION
                            + NCND0514 - ETM00501 (field 10 LSB)
                             Level GCW: ADC level achieved on NBL signal
                             at end of tuning phase AGC
                             NBLL: Narrow Band Line Level
                              (ETM00501: is a telemetry packet name:
                              CONSERT PROGRESS REPORT and NCND0514 is a
                             CONSERT telemetry parameter name) [AD 3]
                            + Lander: N/A"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                         = COLUMN
   NAME
                         = "TUNING NBLL ZERO"
                         = "DECIBEL"
   UNIT
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
                         = 77
   START_BYTE
   BYTES
   COLUMN NUMBER
                         = 39
   DESCRIPTION
                         = "- Orbiter: NBLL after tuning
                              ETM00501-NCND0515- (field 11 MSB)
                              level zero: ADC level achieved on NBLL
                              signal at end of tuning phase, zero
                              detection
                              NBLL: Narrow Band Line Level
                              (ETM00501 is a telemetry packet name:
                              CONSERT PROGRESS REPORT and NCND0515 is a
                             CONSERT telemetry parameter name) [AD 3]
                            - Lander: N/A"
                         = COLUMN
END_OBJECT
/* ----- */
OBJECT
                         = COLUMN
   NAME
                         = "OCXO TEMPERATURE"
                         = "DEGREE CELSIUS"
                      = MSB_UNSIGNED_INTEGER
= 79
   UNIT
   DATA_TYPE
   START_BYTE
   BYTES
   COLUMN_NUMBER
                         = 40
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 33/ 66

```
DESCRIPTION
                       = "- Obiter: OCXO Temperature
                           ETM00325 - NCND0339 - (field 11 LSB)
                           (ETM00325 is a telemetry packet name:
                           CONSERT PROGRESS REPORT and NCND00339 is a
                           CONSERT telemetry parameter name: CONSERT
                           HOUSEKEEPING REPORT) [AD 3]
                          - Lander: OCXO Temperature
                           TM type 1- (field 4 MSB)
                            (TM type 1 is a LANDER telemetry packet
                           name) [AD 4]"
END_OBJECT
                       = COLUMN
/* ----- */
OBJECT
                       = COLUMN
                       = "EMPTY_41"
   NAME
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                       = 81
   BYTES
                       = 2
   BYTES
COLUMN_NUMBER
                    = 41
= "=
                       = "=0 Nothing in this column"
   DESCRIPTION
END_OBJECT
                       = COLUMN
/* ----- */
OBJECT
                       = COLUMN
                       = "EMPTY_42"
   NAME
   DATA_TYPE
                       = MSB_UNSIGNED_INTEGER
   START_BYTE
                       = 83
                       = 2
   RYTES
                     = 42
-
   COLUMN NUMBER
   DESCRIPTION
                       = "=0 Nothing in this column"
END_OBJECT
                       = COLUMN
/* _____ */
                       = COLUMN
OBJECT
                      = "EMPTY_43"
   DATA_TYPE
                       = MSB_UNSIGNED_INTEGER
                      = 85
   START_BYTE
                      = 2
                    = 43
   COLUMN_NUMBER
   DESCRIPTION
                       = "=0 Nothing in this column"
                       = COLUMN
END OBJECT
OBJECT
                       = COLUMN
                       = "EMPTY_44"
   NAME
   DATA_TYPE
                       = MSB_UNSIGNED_INTEGER
   START_BYTE
                       = 87
   BYTES
                       = 2
   COLUMN_NUMBER
                       = 44
                       = "=0 Nothing in this column"
   DESCRIPTION
END_OBJECT
                       = COLUMN
/* ----- */
OBJECT
                       = COLUMN
                       = "EMPTY 45"
   NAME
                      = MSB_UNSIGNED_INTEGER
   DATA_TYPE
   START_BYTE
                       = 89
   BYTES
   COLUMN_NUMBER
                       = 45
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 34/ 66

```
DESCRIPTION
                    = "=0 Nothing in this column"
END_OBJECT
                    = COLUMN
/* ----- */
OBJECT
                    = COLUMN
  NAME
                    = "EMPTY_46"
  DATA_TYPE
                    = MSB_UNSIGNED_INTEGER
  START_BYTE
                    = 91
  BYTES
                    = 2
  COLUMN_NUMBER
                    = 46
                   = 40
= "=0 Nothing in this column"
  DESCRIPTION
                    = COLUMN
END_OBJECT
/* ----- */
OBJECT
                    = COLUMN
                    = "EMPTY_47"
  DATA_TYPE
                    = MSB_UNSIGNED_INTEGER
  START_BYTE
                    = 93
  BYTES
  COLUMN_NUMBER
                    = 47
  DESCRIPTION
                    = "=0 Nothing in this column"
                    = COLUMN
END_OBJECT
/* ----- */
OBJECT
                    = COLUMN
                  = MSB_UNSIGNED_INTEGER
= 95
  NAME
  DATA_TYPE
  START_BYTE
                    = 2
  BYTES
  BYTES
COLUMN_NUMBER
                 = 48
= "=
                    = "=0 Nothing in this column"
  DESCRIPTION
END_OBJECT
                     = COLUMN
/* ----- */
                    = COLUMN
OBJECT
                   = "EMPTY_49"
  NAME
  DATA_TYPE
                    = MSB_UNSIGNED_INTEGER
  START_BYTE
                    = 97
  BYTES
                    = 2
  COLUMN_NUMBER
                    = 49
  DESCRIPTION
                    = "=0 Nothing in this column"
END_OBJECT
                     = COLUMN
/* ----- */
OBJECT
                    = COLUMN
                    = "EMPTY_50"
  NAME
  DATA_TYPE
                    = MSB_UNSIGNED_INTEGER
  START_BYTE
                    = 99
                    = 2
  BYTES
  COLUMN_NUMBER
                    = 50
                   = "=0 Nothing in this column"
  DESCRIPTION
                     = COLUMN
END_OBJECT
/* ----- */
OBJECT
                    = COLUMN
  NAME
                    = "OBDH PACKET NUMBER"
  DATA_TYPE
                    = MSB_UNSIGNED_INTEGER
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 35/ 66

```
START_BYTE
                        = 101
   BYTES
                        = 2
   COLUMN_NUMBER
                        = 51
   DESCRIPTION
                         = "Source sequence count
                           - Orbiter: ETM00325 (field 2-14bits LSB)
                             (ETM00325 is a telemetry packet name:
                             CONSERT HOUSEKEEPING REPORT) [AD 3]
                           - Lander: APID 112,12
                             (field 2-14bits LSB)
                             (APID : Application Process ID)[AD 4]"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                        = COLUMN
                        = "OBT SECOND MSW"
   NAME
                        = "SECOND"
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 103
                        = 2
   COLUMN_NUMBER
                        = 52
   DESCRIPTION
                        = "On Board Time second MSW
                           - Orbiter: ETM00325 (field 3)
                             (ETM00325 is a telemetry packet name:
                             CONSERT HOUSEKEEPING REPORT) [AD 3]
                           - Lander: APID 112,12 (field 3)
                             (APID : Application Process ID)[AD 4]"
END OBJECT
                         = COLUMN
/* _____ */
OBJECT
                        = COLUMN
   NAME
                        = "OBT SECOND LSW"
                        = "SECOND"
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 105
                        = 2
   BYTES
   COLUMN_NUMBER
                        = 53
   DESCRIPTION
                        = "On Board Time - second LSW
                           - Orbiter: ETM00325 (field 4)
                             (ETM00325 is a telemetry packet name:
                             CONSERT HOUSEKEEPING REPORT) [AD 3]
                           - Lander: APID 112,12 (field 4)
                             (APID : Application Process ID)[AD 4]"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                        = COLUMN
   NAME
                        = "OBT FRACTION MSW"
                        = "MILLISECOND"
   UNIT
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 107
                        = 2
   BYTES
   COLUMN NUMBER
                         = 54
   DESCRIPTION
                        = "This column contains the MSW part of
                           the On Board Time fraction (milliseconds)
                           - Orbiter: ETM00325 (field 5)
                            (ETM00325 is a telemetry packet name:
                             CONSERT HOUSEKEEPING REPORT) [AD 3]
                           - Lander: APID 112,12 (field 5)
                             (APID : Application Process ID)[AD 4]"
END OBJECT
                         = COLUMN
/* ----- */
```



Interface Control Document

Document : RO-OCN-IF-3800

No. : 1.0 Issue/Rev. : 21/12/2010 No. : 36/ 66

```
OBJECT
                          = COLUMN
                          = "CONSERT TIC MSW"
   NAME
   DATA_TYPE
                          = MSB_UNSIGNED_INTEGER
                          = 109
   START_BYTE
   BYTES
   COLUMN_NUMBER
                          = 55
   DESCRIPTION
                          = "CONSERT internal time in TICs - MSW
                             - Orbiter: ETM00325 (field 9)
                               (ETM00325 is a telemetry packet name:
                                CONSERT HOUSEKEEPING REPORT) [AD 3]
                             - Lander: TM type 1 (field 1)[AD 4]'
END_OBJECT
                          = COLUMN
                          = COLUMN
                          = "CONSERT TIC LSW"
   NAME
   DATA_TYPE
                          = MSB_UNSIGNED_INTEGER
   START_BYTE
                          = 111
   BYTES
                          = 2
   COLUMN_NUMBER
                          = 56
                          = "CONSERT internal time in TIC - LSW
   DESCRIPTION
                             - Orbiter: ETM00325 (field 10)
                               (ETM00325 is a telemetry packet name:
                                CONSERT HOUSEKEEPING REPORT) [AD 3]
                             - Lander: TM type 1 (field 2) [AD 4]"
END OBJECT
                          = COLUMN
/* ----- */
OBJECT
                          = COLUMN
                          = "CONSERT UTC MINUTES"
   NAME
                          = "MINUTE"
   DATA_TYPE
                          = MSB_UNSIGNED_INTEGER
   START_BYTE
                          = 113
   BYTES
   COLUMN_NUMBER
                          = 57
                          = "decoded consert internal time minutes
    - From Orbiter: ETM00325 (field 9&10)
   DESCRIPTION
                               (ETM00325 is a telemetry packet name:
                                CONSERT HOUSEKEEPING REPORT) [AD 3]
                             - From Lander: TM type 1 (field 1&2)[AD 4]"
END OBJECT
                          = COLUMN
OBJECT
                          = COLUMN
   NAME
                          = "CONSERT UTC SECONDS"
                          = "SECOND"
   UNIT
                          = MSB_UNSIGNED_INTEGER
   DATA TYPE
   START_BYTE
                          = 115
   BYTES
   COLUMN_NUMBER
                          = 58
   DESCRIPTION
                           = "decoded consert internal time second
                             - From Orbiter: ETM00325 (field 9&10)
                               (ETM00325 is a telemetry packet name:
                                CONSERT HOUSEKEEPING REPORT)[AD 3]
                             - From Lander: TM type 1(field 1&2)[AD 4]"
END_OBJECT
                          = COLUMN
/* ----- */
OBJECT
                          = COLUMN
  NAME
                          = "CONSERT UTC MILLISECONDS"
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 37/ 66

```
UNIT
                         = "MILLISECOND"
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                         = 117
   BYTES
                         = 2
   COLUMN_NUMBER
   DESCRIPTION
                         = "decoded consert internal time millisecond
                            - From Orbiter: ETM00325 (field 9&10)
                             (ETM00325 is a telemetry packet name:
                              CONSERT HOUSEKEEPING REPORT) [AD 3]
                            - From Lander: TM type 1 (field 1&2)[AD 4]"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                         = COLUMN
   NAME
                         = "DATA TYPE"
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 119
   BYTES
                         = 2
   COLUMN NUMBER
                         = 60
   DESCRIPTION
                         = "- Orbiter: 0
                            - Lander:
                            + with long signal: 1;
                            + with short signal only: 2[AD 4]"
END_OBJECT
                         = COLUMN
/* ------ */
OBJECT
                         = COLUMN
                      SCANNING SEQUENCE CO
= MSB_UNSIGNED_INTEGER
= 121
                         = "SCANNING SEQUENCE COUNT"
   NAME
   DATA_TYPE
   START_BYTE
   BYTES
                        = 2
   COLUMN_NUMBER
                     = 61
= "S
   DESCRIPTION
                        = "Scanning sequence count"
END_OBJECT
                         = COLUMN
/* ----- */
                         = COLUMN
                        = "SOUNDING NUMBER"
   NAME
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                         = 123
   BYTES
                         = 2
   COLUMN_NUMBER
                         = 62
   DESCRIPTION
                         = "Present Sounding number
                            - Orbiter: ETM02003 (field 11)
                           (ETM02003: is a telemetry packet name:
                            CONSERT SCIENCE REPORT) [AD 3]
                            - Lander: TM type 1 (field 8) [AD 4]"
END OBJECT
                         = COLUMN
OBJECT
                         = COLUMN
                         = "ACK SOURCE SEQUENCE COUNT"
   NAME
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 125
   BYTES
                         = 2
   COLUMN_NUMBER
                         = 63
   DESCRIPTION
                         = "Last ACK report number
                            - Orbiter: last ETM00101 or ETM00102
                              (field 2-14bits LSB)(ETM00101/ETM00102
                              is a telemetry packet name: CONSERT
                             ACKNOWLEDGEMENT SUCCESS/FAILURE) [AD 3]
```



No. : 1.0 Issue/Rev. : 21/12/2010 No No. : 38/66

```
- Lander: last TM type 2
                              (field 0-14bits LSB) [AD 4]"
END_OBJECT
                         = COLUMN
/* _____ */
OBJECT
                         = COLUMN
   NAME
                         = "ACK TC SEQ CONTROL"
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                         = 127
                         = 2
   BYTES
   COLUMN_NUMBER
                         = 64
   DESCRIPTION
                         = "TC number for the Last ACK
                            - Orbiter: last ETM00101 or ETM00102 field 9
                              (ETM00101/ETM00102 is a telemetry packet
                              name : CONSERT ACKNOWLEDGEMENT
                              SUCCESS/FAILURE) [AD 3]
                            - Lander: =0 Nothing in this column"
END_OBJECT
                          = COLUMN
/* ----- */
OBJECT
                         = COLUMN
                         = "ACK FAILURE CODE"
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                         = 129
                         = 2
   COLUMN_NUMBER
                         = 65
   DESCRIPTION
                         = "Failure code for the Last ACK
                            - Orbiter: zero for an ETM00101 No failure
                              Or field 10 for an ETM00102
                              1: ERR_TC_TIMEOUT: TC packet not complete
                                 after 2 seconds
                              2: ERR_TYPE_WRONG CRC: Calculated CRC is
                                 not egal to CRC at end of TC packet
                              3: ERR_TYPE_WRONGAPID: TC packet has wrong APID (ID # 59 or Cat #12)
                              4: ERR_TC_TYPE_UNKNOWN: TC packet has
                              unknown Type or Subtype
5: ERR_TWO_MISS_TAB: TC with mission table
                                 received and other table already received
                              6: ERR_TC_DIRECT_UNKNOWN: Direct TC of
                                 unknown type received
                              (ETM00101/ETM00102 is a telemetry packet
                               name: CONSERT ACKNOWLEDGEMENT
                               SUCCESS/FAILURE)[AD 3]
                            - Lander: =0 Nothing in this column"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                         = COLUMN
   NAME
                         = "PROGRESS REPORT NUMBER"
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
                         = 131
   START_BYTE
   BYTES
                         = 2
   COLUMN_NUMBER
                         = 66
   DESCRIPTION
                         = "Last Progress report number
                           - Orbiter:last ETM00501 or ETM00502 field 2
                             (ETM00501/ETM00502 is a telemetry packet
                             name: CONSERT PROGRESS/EVENT REPORT) [AD 3]
                           - Lander: =0 Nothing in this column"
END OBJECT
                         = COLUMN
/* ----- */
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 39/ 66

```
OBJECT
                        = COLUMN
   NAME
                        = "EVENT ID"
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 133
   BYTES
   COLUMN_NUMBER
                        = 67
   DESCRIPTION
                        = "Event id for the Last Progress report
                          - Orbiter:
                          + ETM00501-NCNA0EID=
                          (41003=Sounding started, 41004=Sounding
                          finished)
                          + ETM00502-NCNA0EID=
                          (41008 = Timeout Data, 41007 = Time OUt AGC)
                          (ETM00501/ETM00502 is a telemetry packet name:
                           CONSERT PROGRESS/EVENT REPORT and NCNAOEID is
                           a CONSERT telemetry parameter name) [AD 3]
                           - Lander: TM type 1 (field 7 LSB) [AD 4]
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                        = COLUMN
                        = "LAST HK"
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 135
                        = 2
   COLUMN_NUMBER
                        = 68
   DESCRIPTION
                        = "Last HK number
                           - Orbiter: ETM00325 (field 2-14bits LSB)
                            (ETM00325 is a telemetry packet name:
                            CONSERT HOUSEKEEPING REPORT) [AD 3]
                           - Lander: =0 Nothing in this column"
END_OBJECT
                        = COLUMN
OBJECT
                        = COLUMN
                        = "EMPTY 69"
   NAME
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
                       = 137
   START_BYTE
   BYTES
                        = 2
   COLUMN_NUMBER
   DESCRIPTION
                        = "=0 Nothing in this column"
END_OBJECT
                        = COLUMN
/* ----- */
OBJECT
                        = COLUMN
   NAME
                        = "EMPTY_70"
                        = MSB_UNSIGNED_INTEGER
   DATA TYPE
   START_BYTE
                        = 139
   BYTES
                        = 2
                        = 70
   COLUMN_NUMBER
   DESCRIPTION
                        = "=0 Nothing in this column"
END OBJECT
                        = COLUMN
/* ----- */
OBJECT
                        = COLUMN
                        = "EMPTY_71"
   NAME
   DATA_TYPE
                        = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 141
   BYTES
   COLUMN_NUMBER
                        = 71
```



Document : RO-OCN-IF-3800 No. : 1.0 Issue/Rev. : 21/12/2010 No. : 40/ 66

```
DESCRIPTION
                        = "=0 Nothing in this column"
END_OBJECT
                        = COLUMN
/* _____ */
OBJECT
                        = COLUMN
   NAME
                         = "EMPTY_72"
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 143
                        = 2
                      = 72
= "="
   COLUMN_NUMBER
   DESCRIPTION
                        = "=0 Nothing in this column"
END_OBJECT
                         = COLUMN
/* ----- */
                        = COLUMN
                         = "STATUS BIT INIT OK"
   NAME
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 145
   BYTES
                        = 2
   COLUMN_NUMBER
                         = 73
                         = "status vector bit 7 - Init OK
   DESCRIPTION
                           0=Init not performed, 1=init OK
                            - Orbiter: ETM00325 (field 11-bit 15)
                              (ETM00325 is a telemetry packet name:
                              CONSERT HOUSEKEEPING REPORT) [AD 3]
                            - Lander: TM type 1-INSTRUMENT STATUS
                              (field 3 - bit 7) [AD 4]"
END OBJECT
                         = COLUMN
/* ----- */
OBJECT
                         = COLUMN
   NAME
                         = "STATUS BIT MISS TAB OK"
   DATA_TYPE
                         = MSB_UNSIGNED_INTEGER
   START_BYTE
                        = 147
                         = 2
   COLUMN NUMBER
                         = "status vector bit 6 - mission table received
   DESCRIPTION
                            0 = Mission table not received
                            1 = Mission table received
                            - Orbiter: ETM00325 (field 11-bit 14)
                             (ETM00325 is a telemetry packet
                             name: CONSERT HOUSEKEEPING
                            REPORT) [AD 3]
- Lander: TM type 1 (field 3-bit 6) [AD 4]"
END_OBJECT
                         = COLUMN
/* ----- */
OBJECT
                    = COLUMN
                  = "STATUS BIT TUNING OK"
= MSB_UNSIGNED_INTEGER
   NAME
   DATA_TYPE
   START_BYTE
                    = 149
                     = 2
   BYTES
   COLUMN_NUMBER
                     = 75
   DESCRIPTION
                     = "status vector bit 5 - tuning finished
                       0 = Tuning not performed
                        1 = Tuning performed
- Orbiter: ETM00325 (field 11-bit 13)
                         (ETM00325 is a telemetry packet name:
                          CONSERT HOUSEKEEPING REPORT) [AD 3]
                        - Lander: TM type 1 (field 3-bit 5) [AD 4]"
END_OBJECT
                     = COLUMN
```



Interface Control Document

Document : RO-OCN-IF-3800

ino. : 1.0 Issue/Rev. : 21/12/2010 No. No. : 41/66

```
/* ----- */
                    = COLUMN
OBJECT
                     = "STATUS BIT SOUNDING"
                   = MSB_UNSIGNED_INTEGER
   DATA_TYPE
   START_BYTE
                    = 151
   BYTES
                     = 76
   COLUMN_NUMBER
   DESCRIPTION
                     = "status vector bit 4-sounding started
                       0 = Not in sounding mode
                        1 = In sounding mode
                        - Orbiter: ETM00325 (field 11-bit 12)
                         (ETM00325 is a telemetry packet name:
                          CONSERT HOUSEKEEPING REPORT) [AD 3]
                        - Lander: TM type 1 (field 3-bit 4) [AD 4]"
END_OBJECT
                     = COLUMN
/* ----- */
OBJECT
                    = COLUMN
   NAME
                     = "STATUS BIT END"
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                    = 153
                     = 2
= 77
   BYTES
   COLUMN_NUMBER
   DESCRIPTION
                     = "status vector bit 3-sounding finished
                       0 = Sounding not finished yet
                        1 = Sounding finished
                        - Orbiter: ETM00325 (field 11-bit 10)
                         (ETM00325 is a telemetry packet name:
                          CONSERT HOUSEKEEPING REPORT) [AD 4]
                        - Lander: TM type 1 (field 3-bit 3) [AD 4]"
END_OBJECT
                     = COLUMN
OBJECT
                    = COLUMN
                     = "STATUS BIT HKREP"
   NAME
                   = MSB_UNSIGNED_INTEGER
   DATA_TYPE
                    = 155
   START_BYTE
   BYTES
                     = 2
   COLUMN_NUMBER
                     = 78
   DESCRIPTION
                     = "status vector bit 2-HK report enabled
                       0= no HK reporting
                        1= HK reporting enabled (default)
                        - Orbiter: ETM00325 (field 11-bit 9)
                        (ETM00325 is a telemetry packet name:
                         CONSERT HOUSEKEEPING REPORT) [AD 3]
                        - Lander: =0 Nothing in this column"
END OBJECT
                     = COLUMN
/* ----- */
OBJECT
                     = COLUMN
                     = "STATUS BIT SCREP"
   NAME
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                    = 157
   BYTES
                     = 2
                     = 79
   COLUMN_NUMBER
   DESCRIPTION
                     = "status vector bit 1-science report enabled
                       0= no SCreporting
                        1= SC reporting enabled (default)
                        - Orbiter: ETM00325 (field 11 - bit 8)
                          (ETM00325 is a telemetry packet name:
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 42/66

```
CONSERT HOUSEKEEPING REPORT) [AD 3]
                      - Lander: =0 Nothing in this column"
END_OBJECT
                    = COLUMN
/* ----- */
OBJECT
                   = COLUMN
                   = "STATUS BIT LOBT"
   NAME
   DATA_TYPE
                    = MSB_UNSIGNED_INTEGER
   START_BYTE
                   = 159
   BYTES
                    = 2
   COLUMN_NUMBER
                    = 80
   DESCRIPTION
                    = "status vector bit 0-SCET (LOBT) received
                       0 = LOBT updated not received yet
                       1 = LOBT update received
                       - Orbiter: ETM00325 (field 11 - bit 7)
                        (ETM00325 is a telemetry packet name:
                         CONSERT HOUSEKEEPING REPORT) [AD 3]
                       - Lander: =0 Nothing in this column"
END OBJECT
                    = COLUMN
/* ----- */
                 = COLUMN
= "EMPTY_81"
= MSB_UNSIGNED_INTEGER
= 161
   NAME
   DATA_TYPE
   START_BYTE
   BYTES
                   = 2
   COLUMN_NUMBER = 81
DESCRIPTION = "=0 Nothing in this column"
                    = COLUMN
END_OBJECT
/* ----- */
                 = COLUMN
= "EMPTY_82"
= MSB_UNSIGNED_INTEGER
OBJECT
   DATA_TYPE
   NAME
   START_BYTE
                   = 163
   BYTES
                    = 2
   COLUMN_NUMBER = 82

DESCRIPTION = "=0 Nothing in this column"

OBJECT - COLUMN
END_OBJECT
                    = COLUMN
/* ----- */
OBJECT
                    = COLUMN
                   = "GCW"
   NAME
                  = MSB_UNSIGNED_INTEGER
   DATA_TYPE
                    = 165
   START_BYTE
   BYTES
   COLUMN NUMBER
                    = 83
   DESCRIPTION
                    = "Gain control word
                       - Orbiter: ETM02003 (field 12 MSB)
                         (ETM02003: is a telemetry packet name:
                         CONSERT SCIENCE REPORT) [AD 3]
                       - Lander: Last TM type 1 or
                         Last TM type 3 (field 9 MSB) [AD 4]"
END_OBJECT
                    = COLUMN
/* ----- */
OBJECT
                    = COLUMN
   NAME
                    = "FRAM"
   DATA_TYPE
                    = MSB_UNSIGNED_INTEGER
   START_BYTE
                   = 167
```



Interface Control Document

Document : RO-OCN-IF-3800

No. : 1.0 Issue/Rev. : 21/12/2010 No. : 43/ 66

```
BYTES
   COLUMN_NUMBER
                    = 84
   DESCRIPTION
                    = "Lander Framing word
                       - Orbiter: N/A
                       - Lander: Last TM type 1 or Last TM type 3
                         (field 9 LSB) [AD 4]"
END_OBJECT
                     = COLUMN
/* _____ */
OBJECT
                    = COLUMN
                    = "PEAK POSITION"
                  = MSB_UNSIGNED_INTEGER
   DATA_TYPE
   START_BYTE
                   = 169
   BYTES
   COLUMN_NUMBER
                    = 85
   DESCRIPTION
                    = "On board calculated peak position
                       - Orbiter: N/A
                       - Lander: Last TM type 1or Last TM type 3
                         (field 10 MSB) [AD 4]"
END_OBJECT
                     = COLUMN
/* ----- */
OBJECT
                    = COLUMN
   NAME
                    = "FREQUENCY OXCO"
                   = "HERTZ"
                   = MSB_UNSIGNED_INTEGER
   DATA_TYPE
   START_BYTE
                    = 171
                    = 2
   BYTES
   COLUMN_NUMBER
                    = 86
   DESCRIPTION
                    = "Present OXCO value
                       - Orbiter: ETM02003 (field 12 LSB)
                         (ETM02003 is a telemetry packet name:
                          CONSERT SCIENCE REPORT) [AD 3]
                        - Lander: Last TM type 1or Last TM type 3
                         (field 6 MSB) [AD 4]"
END_OBJECT
                     = COLUMN
/* ----- */
OBJECT
                    = COLUMN
   NAME
                    = "TEMPERATURE OXCO"
                    = "DEGREE CELSIUS"
   UNIT
   DATA_TYPE
                   = MSB_UNSIGNED_INTEGER
                    = 173
= 2
   START_BYTE
   BYTES
   COLUMN_NUMBER
                    = 87
                    = "OCXO board temperature
   DESCRIPTION
                       - Orbiter: ETM02003 (field 10 MSB)
                         (ETM02003 is a telemetry packet name:
                          CONSERT SCIENCE REPORT) [AD 3]
                       - Lander: Last TM type 1 or Last TM type 3 (field 4 MSB) [AD 4]"
                     = COLUMN
END_OBJECT
/* ----- */
OBJECT
                    = COLUMN
   NAME
                    = "DIGITAL BOARD TEMPERATURE"
                    = "CELSIUS"
   UNIT
                  = MSB_UNSIGNED_INTEGER
   DATA_TYPE
   DATA_TYPE
START_BYTE
                    = 175
   BYTES
                    = 2
   COLUMN_NUMBER
                    = 88
```



Document : RO-OCN-IF-3800 No. : 1.0 Issue/Rev. : 21/12/2010 No.

No. : 44/66

```
DESCRIPTION
                   = "Digital board temperature
                      - Orbiter: ETM02003 (field 10 LSB)
                        (ETM02003 is a telemetry packet name:
                         CONSERT SCIENCE REPORT) [AD 3]
                       Lander: Last TM type 1 or Last TM type 3
                        (field 4 LSB) [AD 4]"
END_OBJECT
                    = COLUMN
/* _____ */
OBJECT
                   = COLUMN
                   = "NBLS LEVEL"
                  = "N/A"
                  = MSB_UNSIGNED_INTEGER
   DATA_TYPE
   START BYTE
                   = 177
                   = 2
   BYTES
   COLUMN_NUMBER
                  = 89
   DESCRIPTION
                   = "NBLS level
                      - Orbiter: ETM00325 (field 12 LSB)
                        (ETM00325 is a telemetry packet name:
                         CONSERT HOUSEKEEPING REPORT) [AD 3]
                      - Lander: Last TM type 1 or Last TM type 3
                        (field 5 MSB) [AD 4]"
END_OBJECT
                    = COLUMN
/* ----- */
OBJECT
                  = COLUMN
   NAME
                   = "TMIX LEVEL"
                   = "N/A"
   UNIT
   DATA_TYPE
                   = MSB_UNSIGNED_INTEGER
   START_BYTE
                   = 179
                   = 2
   BYTES
   COLUMN_NUMBER
                   = 90
   DESCRIPTION
                   = "NBLS level
                      - Orbiter: ETM00325 (field 13 MSB)
                       (ETM00325 is a telemetry packet name:
                        CONSERT HOUSEKEEPING REPORT) [AD 3]
                      - Lander: Last TM type 1 or Last TM type 3
                        (field 5 LSB) [AD 4]"
END_OBJECT
                   = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                       = "EMPTY 91"
   NAME
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
                      = 181
   START_BYTE
                       = 2
   BYTES
   COLUMN_NUMBER
                       = 91
                     = "=0 Nothing in this column"
   DESCRIPTION
END_OBJECT
                       = COLUMN
/* ----- */
OBJECT
                       = COLUMN
                       = "EMPTY_92"
   NAME
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 183
   BYTES
   COLUMN_NUMBER
                      = 92
   DESCRIPTION
                      = "=0 Nothing in this column"
END OBJECT
                       = COLUMN
/* ----- */
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 45/ 66

```
OBJECT
                      = COLUMN
  NAME
                     = "EMPTY_93"
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 185
                     = 2
                   = 93
   COLUMN_NUMBER
  DESCRIPTION
                     = "=0 Nothing in this column"
                     = COLUMN
END_OBJECT
/* ----- */
OBJECT
                     = COLUMN
                     = "EMPTY_94"
   NAME
   DATA_TYPE
                     = MSB UNSIGNED INTEGER
   START_BYTE
                     = 187
   COLUMN_NUMBER
                     = 94
                     = "=0 Nothing in this column"
   DESCRIPTION
END OBJECT
                      = COLUMN
/* ----- */
OBJECT
                     = COLUMN
                     = "EMPTY_95"
  NAME
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                    = 189
   BYTES
   BYTES
COLUMN_NUMBER
                     = 2
                   = 95
= "=0 Nothing in this column"
  DESCRIPTION
                      = COLUMN
END_OBJECT
/* ------ */
                     = COLUMN
OBJECT
  NAME
                     = "EMPTY_96"
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 191
   BYTES
   COLUMN_NUMBER
                     = 96
                    = 96
= "=0 Nothing in this column"
  DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                     = "EMPTY_97"
   NAME
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 193
   BYTES
   COLUMN NUMBER
                     = 97
                   = "=0 Nothing in this column"
   DESCRIPTION
                      = COLUMN
END_OBJECT
/* ----- */
OBJECT
                      = COLUMN
  NAME
                     = "EMPTY_98"
                     = MSB_UNSIGNED_INTEGER
   DATA_TYPE
                     = 195
   START_BYTE
                     = 2
   BYTES
   COLUMN_NUMBER
DESCRIPTION
                   = 98
= "=0 Nothing in this column"
  DESCRIPTION
                      = COLUMN
END_OBJECT
```



Interface Control Document

Document : RO-OCN-IF-3800

No. : 1.0 Issue/Rev. : 21/12/2010 No. : 46/ 66

```
OBJECT
                      = COLUMN
                     = "EMPTY_99"
   NAME
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
                    = MSB
= 197
   START_BYTE
   BYTES
                      = 2
   BYTES
COLUMN_NUMBER
                    = 99
= "=0 Nothing in this column"
   DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                       = COLUMN
   NAME
                       = "EMPTY 100"
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 199
   BYTES
                       = 2
   COLUMN_NUMBER
                       = 100
   DESCRIPTION
                      = "=0 Nothing in this column"
END_OBJECT
                       = COLUMN
/* ----- */
OBJECT
                       = COLUMN
   NAME
                       = "L1_DATA"
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 201
   BYTES
                       = 200
                      = 100
   ITEMS
   ITEM BYTES
                      = 2
                    = 101
   COLUMN_NUMBER
                      = "Contains L1 DATA: 0 for a L0 TABLE"
   DESCRIPTION
END_OBJECT
                       = COLUMN
/* ----- */
OBJECT
                       = COLUMN
   NAME
                       = "SHORTS PIC I"
                      = "N/A"
   UNIT
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
                       = 401
   START_BYTE
   BYTES
                       = 21
   ITEMS
   ITEM_BYTES
                       = 2
   COLUMN NUMBER
                       = 102
   DESCRIPTION
                       = "On board calculated correlation
                         21 points around the detected max.
                         - Orbiter: =0 Nothing in these columns
                          - Lander:
                            + For SWL15 I channel for bytes
                            + For SWL12 correlation power on word
                         Last TM type 1 or Last TM type 3 [AD 4]"
END OBJECT
                       = COLUMN
/* ----- */
OBJECT
                       = COLUMN
   NAME
                       = "SHORTS PIC Q"
                       = "N/A"
   UNIT
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                    = 443
   BYTES
                      = 42
                      = 21
   ITEMS
   ITEM_BYTES
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 47/ 66

```
COLUMN_NUMBER
                      = 103
   DESCRIPTION
                      = "On board calculated correlation
                        21 points around the detected max
                         - Orbiter: =0 Nothing in these columns
                           + For SWL15 Q channel for bytes
                           + For SWL12 Zero (N/A)
                         Last TM type 1 or Last TM type 3 [AD 4]"
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "EMPTY_244"
   NAME
   DATA TYPE
                      = MSB UNSIGNED INTEGER
   START_BYTE
                      = 485
                      = 2
   COLUMN_NUMBER
                      = 104
   DESCRIPTION
                      = "=0 Nothing in this column"
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "EMPTY 245"
  NAME
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 487
                      = 2
   BYTES
   COLUMN_NUMBER
                   = 105
= "=0 Nothing in this column"
                      = 105
  DESCRIPTION
                      = COLUMN
END_OBJECT
/* ------ */
OBJECT
                      = COLUMN
  NAME
                      = "EMPTY_246"
   DATA TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 489
   BYTES
   COLUMN_NUMBER
                      = 106
                    = "=0 Nothing in this column"
  DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "EMPTY_247"
   NAME
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 491
   COLUMN NUMBER
                      = 107
   DESCRIPTION
                      = "=0 Nothing in this column"
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
  NAME
                      = "EMPTY_248"
                      = MSB_UNSIGNED_INTEGER
   DATA_TYPE
                      = 493
   START_BYTE
                      = 2
   BYTES
                   = 108
= "=0
   COLUMN_NUMBER
  DESCRIPTION
                      = "=0 Nothing in this column"
                      = COLUMN
END_OBJECT
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 48/ 66

```
OBJECT
                   - COLUMN
= "EMPTY_249"
= MSB_UNSIGNED
= 495
                     = COLUMN
  NAME
   DATA_TYPE
  START_BYTE
                      = MSB_UNSIGNED_INTEGER
  BYTES
                     = 2
  BYTES
COLUMN_NUMBER
                   = 109
= "=0 Nothing in this column"
   DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
  NAME
                      = "EMPTY 250"
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 497
   BYTES
                      = 2
   COLUMN_NUMBER
                      = 110
                    = "=0 Nothing in this column"
  DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "EMPTY_251"
   NAME
   DATA_TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 499
   BYTES
                      = 111
   COLUMN NUMBER
                    = III
= "=0 Nothing in this column"
   DESCRIPTION
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                    = MSB_UNSIGNED_INTEGER
= 501
  NAME
   DATA_TYPE
   START_BYTE
                      = 2
   BYTES
                   = 112
= "=0
  COLUMN_NUMBER
  DESCRIPTION
                      = "=0 Nothing in this column"
END_OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                     = "EMPTY_253"
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
   START_BYTE
                      = 503
   BYTES
                      = 2
                    = 113
   COLUMN_NUMBER
   DESCRIPTION
                      = "=0 Nothing in this column"
END OBJECT
                      = COLUMN
/* ----- */
OBJECT
                      = COLUMN
                      = "EMPTY_254"
   NAME
   DATA_TYPE
                      = MSB_UNSIGNED_INTEGER
                      = 505
   START_BYTE
                      = 2
                    = 114
   COLUMN_NUMBER
  DESCRIPTION
                      = "=0 Nothing in this column"
END_OBJECT
                      = COLUMN
```



No.

: 1.0 : 21/12/2010 Issue/Rev. No. : 49/66

Date Page

```
/* ----- */
OBJECT
                     = COLUMN
                     = "EMPTY_255"
   NAME
  DATA TYPE
                     = MSB_UNSIGNED_INTEGER
   START_BYTE
                     = 507
  BYTES
                     = 2
   COLUMN_NUMBER
                     = 115
  DESCRIPTION
                     = "=0 Nothing in this column"
END_OBJECT
                     = COLUMN
```

END

For the Auxiliary data (AOCS):

```
OBJECT
                  = AOCS TABLE
                    = "AOCS
 NAME
  INTERCHANGE_FORMAT = ASCII
 ROWS
                   = 81000
  ^STRUCTURE
                    = "AOCS.FMT"
 COLUMNS
                   = 8
                   = 156
 ROW_BYTES
                  = AOCS_TABLE
END_OBJECT
```

The structure of the TABLE object is described in the file AOCS.FMT (LABEL directory) as follows:

```
OBJECT
                    = COLUMN
   NAME
                     = "UTC_TIME"
   DATA_TYPE
                    = TIME
   START_BYTE
                    = 1
   BYTES
                     = 23
   DESCRIPTION
                     = "This column represents the UTC in PDS standard format
                       YYYY-MM-DDThh:mm:ss.sss"
END_OBJECT
                     = COLUMN
OBJECT
                   = COLUMN
                    = "OOBT_TIME"
   NAME
   DATA_TYPE
                     = CHARACTER
                   = 26
   START_BYTE
   BYTES
                     = 17
   DESCRIPTION
                     = "This column represents On Board Time represented as :
                        Reset number (integer starting at 1) / seconds
                        The time resolution is 1/65536 s"
END_OBJECT
                     = COLUMN
OBJECT
                  = COLUMN
   NAME
                    = "SID"
   DATA_TYPE
                    = ASCII_INTEGER
                    = 45
   START_BYTE
                    = 3
                    = "N/A"
   UNIT
   FORMAT
                    = "I3"
                    = "SID reading in CDMS packet header
   DESCRIPTION
                       Possible values are :
                       110 or
                       101'
END_OBJECT
                = COLUMN
OBJECT
                  = COLUMN
               = "AOCS_PARAM_II
= ASCII_INTEGER
= 49
                   = "AOCS_PARAM_ID"
   DATA_TYPE
   START_BYTE
```



Document: RO-OCN-IF-3800 : 1.0 : 21/12/2010 No.

Issue/Rev. No. : 50/66

Date Page

```
BYTES
                    = 3
                    = "N/A"
    UNIT
                    = "I3"
    FORMAT
    DESCRIPTION
                   = "AOCS parameter identifier
                       Possible values are:
                       [1,...,12]"
END_OBJECT
                  = COLUMN
OBJECT
                  = COLUMN
   NAME
                   = "AOCS_UNIT"
                    = CHARACTER
    DATA_TYPE
    START_BYTE
                    = 54
   BYTES
                    = 3
    UNIT
                    = "N/A"
    DESCRIPTION
                    = "Unit of AOCS parameter
                       Possible value is:
                       rad (for radian)"
END_OBJECT
                  = COLUMN
OBJECT
                  = COLUMN
   NAME
                    = "AOCS_PARAM_LABEL"
    DATA_TYPE
                    = CHARACTER
    START_BYTE
                    = 60
    BYTES
                    = 20
    FORMAT
                    = "N/A"
                    = "N/A"
   UNIT
                   = "AOCS parameter label
   DESCRIPTION
                       Possible values are:
                       NACW1102, NACW1103, NACW1104,
                       NACW1105, NACW1106, NACW1107
                       NACW1300, NACW1301, NACW1304,
                       NACW1305, NACW1306, NACW1307'
END_OBJECT
                  = COLUMN
                  = COLUMN
OBJECT
    NAME
                    = "AOCS_PARAM_DESC"
                   = CHARACTER
    DATA TYPE
    START_BYTE
                   = 83
                    = 60
    BYTES
                    = "N/A"
   FORMAT
                    = "N/A"
    UNIT
    DESCRIPTION
                    = "AOCS parameter describtion
                       Possible values are:
                       APME Cur Onbrd Cmd Elv
                       APME Cur Onbrd Cmd Az
                       APME Ground Cmd Elev
                       APME Ground Cmd Az
                       APME Encdr Measured Elev
                       APME Encdr Measured Azi
                        SADE Grd Cmd Ang Pos YP
                       SADE Grd Cmd Ang Pos YM
                        SADE Cmd Ang Position YP
                        SADE Cmd Ang Position YM
                       SADE Measured Ang Pos YP
                       SADE Measured Ang Pos YM"
END OBJECT
                  = COLUMN
OBJECT
                  = COLUMN
    NAME
                   = "AOCS_VALUE"
    DATA_TYPE
                    = ASCII_REAL
    START_BYTE
                    = 145
    BYTES
                    = 10
    FORMAT
                    = "F10.7"
                    = "N/A"
    UNIT
```

= "AOCS parameter VALUE,

DESCRIPTION



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 51/66

Date Page

with MIL-STD-1750A, PC(5,2) format describes on

the website:

http://www.xgc.com/manuals/m1750-ada/m1750/book1.html"

END_OBJECT = COLUMN

4.3.1.5 Description of Instrument

The description of the instrument is done in AD 3 AD 4 AD 7 and as a brief overview in the INST.CAT catalog file

4.3.1.6 Mission Specific Keywords (Lander and Orbiter)

ROSETTA:CON_MISSION_TABLE_STARTTIC

Type : integer (4 Bytes)Standard values :

- Description : Date of the first sounding in TIC

1 Appendix: structure of Lander/Orbiter CONSERT level 2 data product

The level 2 data product has the same structure as the L0 data at SONC:

| Block | N° | Size in bytes | Description |
|-----------|---------|---------------|------------------------------|
| | 0-49 | 50 | General parameters |
| | 50-99 | 50 | raw data parameters |
| L0 Header | 100-149 | 50 | reserved for L1 format |
| LU Headei | 150-199 | 50 | reserved for L1 format |
| | 200-249 | 50 | short signal for lander only |
| | 250-254 | 5 | free |
| I signal | 255-509 | 255 | Signal I |
| Q signal | 510-764 | 255 | Signal Q |

Structure of the L0 Header (/XF means the most significant byte of the Xth word and /Xf means the least significant byte of the Xth word)



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 52/66

Date Page

| | | General Parameters | | Orbiter | | Lander | |
|----|------------|---|-----|----------------------|----------|---------|----|
| N° | Nom | Objet | For | valeur | | valeur | |
| 0 | Data_level | Data level | | 0 | | 0 | |
| 1 | Version | Version du Format : 00 | | 00 | | 00 | |
| 2 | Source | System d'acquistion 0: obdh, 1: Sish kfki 2: rolbin, 3: cdms, 4 :sfdu | | Fichier | | Fichier | |
| 3 | Box | Type : 1: Orbiter, 2:Lander | | Prg | | Prg | |
| 4 | court | Format signal court 1: SW12 2: SW15 3 | | 2 | | Prg | |
| 5 | Nb | Numero d'enregistrement incremental | NS | Interne | | Interne | |
| 6 | Time_Fich | Années: Date du fichier données brutes | | Fichier | | Fichier | |
| 7 | | Mois | | Fichier | | Fichier | |
| 8 | | Jour | | Fichier | | Fichier | |
| 9 | | Heure | | Fichier | | Fichier | |
| 10 | | Minutes | | Fichier | | Fichier | |
| 11 | | Seconde | | Fichier | | Fichier | |
| 12 | Time_Pres | Années : Date de création du fichier L0 | | Interne | | Interne | 1 |
| 13 | | Mois | | Interne | | Interne | |
| 14 | | Jour | | Interne | | Interne | |
| 15 | | Heure | | Interne | | Interne | |
| 16 | | Minutes | | Interne | | Interne | |
| 17 | | Seconde | | Interne | | Interne | |
| 18 | | | | | | | |
| 19 | | | | | | | † |
| 20 | | | | | | | |
| 21 | | | | | | | † |
| 22 | | | | | | | |
| 23 | | | | | | | |
| 24 | | | | | | | |
| 25 | | | | | | | |
| 26 | | | | | | | |
| 27 | | | | | | | |
| 28 | | | | | | | |
| 29 | | | | | | | |
| 30 | | | | | | | |
| 31 | | | | | | | |
| 32 | | | | | | | |
| 33 | TUN_stat | EV_ID code 41002/41020 | | 59,7/8 | LO | | |
| 34 | TUN_ocxo | Ocxo after tuning | | 59,7/9F ⁴ | L0 | TM1/6F | LO |
| 35 | TUN_Inter | Intercartile | | 59,7/9f | LO | | + |
| 36 | TUN_gcw | Tunning GCW | | - | LO | | + |
| 37 | TUN_nblg | NBLL GCW | | 59,7/10f | LO | | + |
| 38 | TUN_nblz | NBLL Zero | 1 | 59,7/ 11F | | | + |
| 39 | TUN_Tocxo | Temperature Ocxo Tunning | | | LO | TM1/4F | LO |
| 40 | | | | , , | <u> </u> | , | + |
| 41 | | | | | | | + |

__

³ The SW Lander version determines the format of the short signal (I&Q / 8 bits or I2+Q2 / 16 bits) The short signal from the Orbiter is computed in I&Q. It is thus compatible with the format SW15 Lander ⁴ The TM used is of type TM 59,7 having the 8th word set to 41002



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 50/65 No. : 53/66

| 42 | | | | | | |
|-----|------------|---|-----|------------------|------------------|----|
| 43- | | | | | | |
| 49 | | | | | | |
| | | raw data | | Orbiter | Lander | |
| N° | Nom | Objet | For | valeur | valeur | L. |
| 50 | OBDH_PN | OBDH Packet Number | NS | 59,12 / 1 | 112,12 / | |
| 51 | COBT | COBT Time second MSW | NS | 59,12 / 3 | 112,12 / 3 | |
| 52 | | COBT Time second LSW | NS | 59,12 / 4 | 112,12 / 4 | |
| 53 | | COBT Time fraction. second MSW | NS | 59,12 / 5 | 112,12 / | |
| 54 | CTIC | Temps Consert en TIC MSW | NS | 59,12/8 | TM / 1 | |
| 55 | | LSW | NS | 59,12/9 | TM / 2 | |
| 56 | | Temps Consert TIC decoded : minutes | NS | Calcul | Calcul | |
| 57 | | seconde | NS | Calcul | Calcul | |
| 58 | | Milliseconde | NS | Calcul | Calcul | |
| 59 | Data_Type | Type de données: For orbiter : 0, For Lander :TM long signal: 1, short signal:2 | | 0 | Prg ⁵ | |
| 60 | Sca_Seq_Ct | Scanning Sequence Count | | Prg ⁶ | Prg | |
| 61 | S_Nb | Present Sounding Number | NS | 59,12/11 | TM / 8 | |
| 62 | AK | No du dernier AK_report | NS | 59,1 / 1 | TM / 0 | |
| 63 | | AK TC nb | | 59,1 / 8 | 0 | |
| 64 | | AK failure code | | 59,1/10 | 0 | |
| 65 | PR | No de la dernier progress report | NS | 59,7 | TM/7F | |
| 66 | | EV_ID | NS | 59,7 | TM/7f | |
| 67 | HK | N°du dernier HK | NS | 59,4 / 1 | TM/0 | |
| 68 | | | | | | |
| 69 | | | | | | |
| 70 | | | | | | |
| 71 | | | | | | |
| 72 | Status | Status de la manip bit 7 (0/1) | | 59,4 / 11 | TM / 3f | |
| 73 | | Status de la manip bit 6 (0/1) | | 59,4 / 11 | TM / 3f | |
| 74 | | Status de la manip bit 5 (0/1) | | 59,4 / 11 | TM / 3f | |
| 75 | | Status de la manip bit 4 (0/1) | | 59,4 / 11 | TM / 3f | |
| 76 | | Status de la manip bit 3 (0/1) | | 59,4 / 11 | TM / 3f | |
| 77 | | Status de la manip bit 2 (0/1) | | 59,4 / 11 | 0 | |
| 78 | | Status de la manip bit 1 (0/1) | | 59,4 / 11 | 0 | |
| 79 | | Status de la manip bit 0 (0/1) | | 59,4 / 11 | 0 | |
| 80 | | | | | | |
| 81 | | | | | | |
| 82 | GCW | GCW | | 59,12/12 F | TM / 9F | |
| 83 | FRAM | Framming | | 0 | TM / 9f | |
| 84 | Peak_P | Peak position | | 0 | TM / 10F | |
| 85 | Осхо | OCXO dac | | 59,12 / 12f | TM / 6F | |

Lander TM Type: Long signal (Type 3) or Short Signal (Type 1)
 Number of scanning sequence count, each sounding number begins at 1



No. : 1.0

Issue/Rev. : 21/12/2010 No. : 54/66

Date Page

| 86 | Т_осхо | Т осхо | 59,12 / 10F | TM / 4F | |
|----|--------|------------|----------------|---------|--|
| 87 | T_digi | T digit | 59,12 / 10f | TM / 4f | |
| 88 | NBLS | NBL level | 59,4/ 12f | TM / 5F | |
| 89 | TMIX | TMIX Level | 59,4/ 13F | TM / 5f | |

| | | L1 data | | Orbiter | | Lander | |
|------|-----|-----------------------|-----|---------|----|--------|----|
| N° | Nom | Objet | For | valeur | L. | valeur | L. |
| 100- | | reserverd for L1 data | | | | | |
| 199 | | | | | | | |

| | | Short signal (2*21 pts) | | Orbiter | | Lander | |
|-------------|-------|-------------------------------------|-----|---------|----|--------|----|
| N° | Nom | Objet | For | valeur | L. | valeur | L. |
| 200- 220 | Pic_I | Signal corrélé I ou racine de I2+Q2 | | 0 | | TM | LO |
| 242 | | Q ou 0 | | 0 | | TM | L0 |
| 243- 249 | | free | | 0 | | 0 | |

| | | free | | Orbiter | | Lander | |
|------|-----|-------|-----|---------|----|--------|----|
| N° | Nom | Objet | For | valeur | L. | valeur | L. |
| 250- | | | | | | | |
| 254 | | | | | | | |

I and Q signal

Signal I et signal Q Orbiter Lander Nom Objet For valeur valeur L. L. TM 32 – 286 ⁷ 1 -59,12/13 L0 L0 Signal I Signal I -268 TM 288 Signal Q Signal Q 59,12/26 L0 L0 255 9-524 - 542

⁷ Zéro for short signal , else TM



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 55/66

Date Page

Appendix: Available Software to read PDS files

The level 2 housekeeping and science PDS files can be read with the PDS table verifier tool "tbtool" and readpds (Small Bodies Node tool).

Appendix: Example of Directory Listing of Data Set RO-RL-CAL-3

| CONSERT-2-CVP-V1.0 | | | |
|--------------------------------|-------------------|--|---|
| | -AAREADME.TXT | | |
| | -CATALOG | -CATINFO. -DATASET.(-INST.CAT -INSTHOST -MISSION.C -PERSON.C -REF.CAT -SOFTWARE | CAT .CAT CAT AT |
| -RO-RL-CAL-CONSERT-2-CVP-V1.0- | -DATA | -2004 | -CN_L_2_040412T000921.LBL -CN_L_2_040412T000921.TAB -CN_L_2_040514T205525.LBL -CN_L_2_040514T205525.TAB -CN_L_2_041001T050823.LBL -CN_L_2_041001T050823.TAB -CN_O_2_040520T211035.LBL -CN_O_2_040520T211035.TAB -CN_O_2_040520T211035.TAB -CN_O_2_040920T080759.LBL -CN_O_2_040920T080759.TAB -CN_O_2_040920T080759.TAB -CN_O_2_041001T050804.LBL -CN_O_2_041001T050804.TAB |
| | | -RO-OCN-TI -RO-LCN-TI -RO-CCN-TI -RO-OCN-TI -RO-OCN-TI -RO-OCN-TI -RO-OCN-TI -TIMELINE -TIMELINE -TIMELINE -TIMELINE | NSERT.LBL NSERT.PDF N-3823.LBL N-3823.PDF N-3848.LBL N-3848.PDF N-3044.LBL N-3044.PDF R-3805.LBL R-3805.PDF _CVP.TXT _CVP_DESC.TXT _CVP_PART1.LBL _CVP_PART1.PNG _CVP_PART2.LBL |
| | -INDEX | | L |
| | -LABEL | -LABINFO.: -L0_PARAM | |
| | -VOLDESC.CAT | | |



No.

: 1.0 : 21/12/2010 Issue/Rev. : 56/66 No.

Date Page

Appendix: Example of Consert Lander level 2 data product label

```
PDS_VERSION_ID
                             = PDS3
LABEL_REVISION_NOTE = "2007-07-16, SONC, version 1.0"
/* PVV version 3.6 */
                                                  * /
                Raw data (Level 2)
/* FILE CHARACTERISTIC DATA ELEMENTS */
RECORD_TYPE
                     = FIXED_LENGTH
RECORD BYTES
                    = 1530
FILE RECORDS
                     = 398
                    = "CN_L_2_080718T184822.DAT"
FILE_NAME
/* DATA OBJECT POINTERS */
^LO TABLE
               = ("CN_L_2_080718T184822.DAT",1 <BYTES>)
               = ("CN L 2 080718T184822.DAT",511 <BYTES>)
^I TABLE
^O TABLE
               = ("CN L 2 080718T184822.DAT",1021 <BYTES>)
/* IDENTIFICATION KEYWORDS */
DATA_SET_ID = "RO/RL-CAL-CONSERT-2-CR4A-V1.0"
DATA_SET_NAME = "ROSETTA-OPRITER_CAL_CONSERT_2
                = "ROSETTA-ORBITER CAL CONSERT 2 CR4A V1.0"
DATA_SET_NAME
PRODUCT_ID = "CN_L_2_080718T184822"
PRODUCT_CREATION_TIME = 2011-05-13T09:54:21
                      = "INTERNATIONAL ROSETTA MISSION"
MISSION_NAME
MISSION_ID
                      = ROSETTA
INSTRUMENT_HOST_NAME = {"ROSETTA-ORBITER","ROSETTA-LANDER"}
INSTRUMENT_HOST_ID = {"RO","RL"}
OBSERVATION_TYPE = "ACTIVE CHECKOUT 8"
                      = "CRUISE 4-1"
MISSION_PHASE_NAME
PRODUCT_TYPE
                     = EDR
START_TIME
                    = 2008-07-18T18:48:22
STOP_TIME
                     = 2008-07-18T23:49:27
SPACECRAFT_CLOCK_START_COUNT = "2/175027666.22528"
SPACECRAFT_CLOCK_STOP_COUNT = "2/175045731.08192"
ORBIT_NUMBER
                      ="N/A"
                     = "SONC"
PRODUCER_ID
PRODUCER FULL NAME = "SCIENCE OPERATIONS AND NAVIGATION CENTER"
PRODUCER INSTITUTION NAME = "CNES"
INSTRUMENT_ID
                     = CONSERT
                     = "COMET NUCLEUS SOUNDING EXPERIMENT BY RADIOWAVE
INSTRUMENT NAME
                      TRANSMISSION"
                    = "RADAR"
INSTRUMENT_TYPE
INSTRUMENT_MODE_ID = "PINGPONG"
INSTRUMENT_MODE_DESC = "CONSERT IN SOUNDING MODE"
TARGET_NAME = "CALIBRATION"
TARGET_TYPE = "CALIBRATION"
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 57/ 66

```
PROCESSING_LEVEL_ID = "2"
DATA_QUALITY_ID = "N/A"
DATA_QUALITY_DESC = "N/A"
/* GEOMETRY PARAMETERS */
/* SPACECRAFT LOCATION: Position <km> */
SC_SUN_POSITION_VECTOR = ( 158966620.3, 227582449.3, 103671796.1)
/* TARGET PARAMETERS: Position <km>, Velocity <km/s> */
SC_TARGET_POSITION_VECTOR = ("N/A", "N/A", "N/A")
SC_TARGET_VELOCITY_VECTOR = ("N/A", "N/A", "N/A")
/* SPACECRAFT POSITION WITH RESPECT TO CENTRAL BODY */
SPACECRAFT_ALTITUDE = "N/A"
SUB_SPACECRAFT_LATITUDE = "N/A"
SUB_SPACECRAFT_LONGITUDE = "N/A"
NOTE = "The values of the keywords SC_SUN_POSITION_VECTOR,
       {\tt SC\_TARGET\_POSITION\_VECTOR} \ \ {\tt and} \ \ {\tt SC\_TARGET\_VELOCITY\_VECTOR}
       are related to the EMEJ2000 reference frame.
       The values of SUB_SPACECRAFT_LATITUDE and SUB_SPACECRAFT_LONGITUDE
       are northern latitude and eastern longitude in the standard
       planetocentric IAU_<TARGET_NAME> frame.
       All values are computed for the time = START TIME.
       Distances are given in <km> velocities in <km/s>, Angles in <deg>"
/* DATA OBJECT DEFINITION */
ROSETTA: CON_MISSION_TABLE_STARTTIC = 45686
OBJECT
                      = L0 TABLE
                     = "LO_TABLE"
  INTERCHANGE_FORMAT = BINARY
 ROWS
                     = 398
 COLUMNS
                     = 115
 END_OBJECT
OBJECT
                     = I_TABLE
                     = "I_TABLE"
  INTERCHANGE_FORMAT = BINARY
  ROWS
                     = 510
  ROW BYTES
  ROW_PREFIX_BYTES
                     = 510
 ROW_SUFFIX_BYTES = 510
  COLUMNS
                      = 1
  OBJECT
                       = COLUMN
   NAME
                      = "I SIGNAL"
                      = MSB_INTEGER
    DATA_TYPE
    START_BYTE
                       = 1
                        = 510
    BYTES
    ITEMS
                        = 255
    ITEM_BYTES
                       = 2
    ITEM OFFSET
                       = 2
    DESCRIPTION
                      = "THIS TABLE REPRESENTS THE I VALUES OF THE CONSERT
                           RADIO SOUNDING"
  END_OBJECT
                       = COLUMN
```



Document: RO-OCN-IF-3800 ino. : 1.0 Issue/Rev. : 21/12/2010 No. : 50/67

Date Page

```
END OBJECT
                   = I_TABLE
OBJECT
                   = Q_TABLE
 NAME
                   = "Q_TABLE"
 INTERCHANGE_FORMAT = BINARY
            = 398
 ROWS
                  = 510
 ROW_BYTES
 ROW\_PREFIX\_BYTES = 1020
 COLUMNS
           = 1
                     = COLUMN
 OBJECT
                    = "Q_SIGNAL"
   NAME
   DATA_TYPE
                    = MSB_INTEGER
= 1
   START_BYTE
   BYTES
                    = 510
                    = 255
   ITEMS
   ITEM_BYTES
                    = 2
   ITEM_OFFSET
                   = 2
                    = "THIS TABLE REPRESENTS THE Q VALUES OF THE CONSERT
   DESCRIPTION
                        RADIO SOUNDING"
                    = COLUMN
 END_OBJECT
                  = Q_TABLE
END OBJECT
END
```

Appendix: Example of Consert Orbiter level 2 data product label

```
PDS_VERSION_ID
                               = PDS3
LABEL_REVISION_NOTE = "2007-07-16, SONC, version 1.0"
/* PVV version 3.6 */
                Raw data (Level 2)
                                                    * /
/* FILE CHARACTERISTIC DATA ELEMENTS */
RECORD TYPE
                     = FIXED LENGTH
RECORD_BYTES
                     = 1530
FILE_RECORDS
                     = 11385
FILE NAME
                     = "CN O 2 080718T191812.DAT"
/* DATA OBJECT POINTERS */
^L0_TABLE
               = ("CN_O_2_080718T191812.DAT",1 <BYTES>)
                = ("CN_O_2_080718T191812.DAT",511 <BYTES>)
^I_TABLE
               = ("CN_O_2_080718T191812.DAT",1021 <BYTES>)
^O TABLE
/* IDENTIFICATION KEYWORDS */
DATA_SET_ID = "RO/RL-CAL-CONSERT-2-CR4A-V1.0"
DATA_SET_NAME = "ROSETTA-ORBITER CAL CONSERT 2 CR4A V1.0"
                = "CN_O_2_080718T191812"
PRODUCT ID
PRODUCT_CREATION_TIME = 2011-05-13T09:54:31
MISSION_NAME = "INTERNATIONAL ROSETTA MISSION"
MISSION_NAME
                       = ROSETTA
MISSION_ID
INSTRUMENT_HOST_NAME = { "ROSETTA-ORBITER", "ROSETTA-LANDER" }
INSTRUMENT_HOST_ID = { "RO", "RL" }
OBSERVATION_TYPE = "ACTIVE CHECKOUT 8"
```



No. : 1.0 Issue/Rev. : 21/12/2010 No. : 59/ 66

```
MISSION_PHASE_NAME
                      = "CRUISE 4-1"
PRODUCT_TYPE
                     = 2008-07-18T19:18:12
START_TIME
STOP TIME
                     = 2008-07-20T11:28:47
SPACECRAFT_CLOCK_START_COUNT = "2/175029456.13824"
SPACECRAFT_CLOCK_STOP_COUNT = "2/175174091.38400"
ORBIT_NUMBER
                      ="N/A"
PRODUCER_ID = "SONC"
PRODUCER_FULL_NAME = "SCIENCE OPERATIONS AND NAVIGATION CENTER"
PRODUCER_INSTITUTION_NAME = "CNES"
INSTRUMENT ID
                    = CONSERT
INSTRUMENT_NAME
                    = "COMET NUCLEUS SOUNDING EXPERIMENT BY RADIOWAVE
                      TRANSMISSION"
INSTRUMENT_MODE_DESC = "CONSERT IN SOUNDING MODE"
TARGET_NAME = "CALIBRATION"
TARGET_TYPE = "CALIBRATION"
TARGET TYPE
PROCESSING_LEVEL_ID = "2"
DATA QUALITY ID = "N/A"
DATA_QUALITY_DESC = "N/A"
/* GEOMETRY PARAMETERS */
/* SPACECRAFT LOCATION: Position <km> */
SC_SUN_POSITION_VECTOR = ( 158947231.8, 227604762.8, 103686122.7)
/* TARGET PARAMETERS: Position <km>, Velocity <km/s> */
SC_TARGET_POSITION_VECTOR = ("N/A", "N/A", "N/A")
SC_TARGET_VELOCITY_VECTOR = ("N/A", "N/A", "N/A")
/* SPACECRAFT POSITION WITH RESPECT TO CENTRAL BODY */
SPACECRAFT_ALTITUDE = "N/A"
SUB_SPACECRAFT_LATITUDE = "N/A"
SUB_SPACECRAFT_LONGITUDE = "N/A"
NOTE = "The values of the keywords SC_SUN_POSITION_VECTOR,
       SC_TARGET_POSITION_VECTOR and SC_TARGET_VELOCITY_VECTOR
       are related to the EMEJ2000 reference frame.
       The values of SUB_SPACECRAFT_LATITUDE and SUB_SPACECRAFT_LONGITUDE
       are northern latitude and eastern longitude in the standard
       planetocentric IAU <TARGET NAME> frame.
       All values are computed for the time = START_TIME.
       Distances are given in <km> velocities in <km/s>, Angles in <deg>"
/* DATA OBJECT DEFINITION */
ROSETTA: CON MISSION TABLE STARTTIC = 36624
OBJECT
                      = L0_TABLE
                      = "LO_TABLE"
 NAME
  INTERCHANGE_FORMAT = BINARY
                    = 11385
                     = 115
  COLUMNS
 ROW_BYTES
                    = 510
```



Document : RO-OCN-IF-3800 No. : 1.0 Issue/Rev. : 21/12/2010 No. : 60/ 66

Date Page

```
ROW_SUFFIX_BYTES = 1020
 ^STRUCTURE = "LO_PARAMETER_DEF.FMT"
END_OBJECT
                    = LO_TABLE
OBJECT
                   = I_TABLE
                   = "I TABLE"
 NAME
 INTERCHANGE_FORMAT = BINARY
            = 11385
 ROWS
                   = 510
 ROW_BYTES
 ROW_PREFIX_BYTES = 510
ROW_SUFFIX_BYTES = 510
 COLUMNS
                    = 1
                      = COLUMN
 OBJECT
                     = "I_SIGNAL"
   NAME
   DATA_TYPE
START_BYTE
                  = MSB_INTEGER
= 1
= 510
   BYTES
                     = 255
   ITEMS
   ITEM_BYTES
                    = 2
   ITEM_OFFSET
   DESCRIPTION
                    = "THIS TABLE REPRESENTS THE I VALUES OF THE CONSERT
                         RADIO SOUNDING"
                     = COLUMN
 END OBJECT
END OBJECT
                   = I TABLE
           = Q_TABLE
OBJECT
 NAME
                   = "Q_TABLE"
 INTERCHANGE_FORMAT = BINARY
 ROWS = 11385
ROW_BYTES = 510
 ROW_PREFIX_BYTES = 1020
 COLUMNS
                  = 1
                   -
= COLUMN
= "Q_SIGNAL"
= MSB_INTEGER
- 1
 OBJECT
   NAME
   DATA_TYPE
   DATA_TYPE
START_BYTE
   BYTES
                      = 510
                      = 255
   ITEMS
                     = 2
   ITEM_BYTES
   ITEM OFFSET
                    = 2
   DESCRIPTION
                    = "THIS TABLE REPRESENTS THE Q VALUES OF THE CONSERT
                       RADIO SOUNDING"
                     = COLUMN
 END_OBJECT
                 = Q_TABLE
END OBJECT
```

Appendix: Example of Consert AOCS level 2 data product label

```
PDS VERSION ID
                             = PDS3
LABEL_REVISION_NOTE
                              = "2007-07-16, SONC, version 1.0"
/* PVV version 3.1 */
                Raw data (Level 2)
                                                  * /
/* FILE CHARACTERISTIC DATA ELEMENTS */
```

END



Interface Control Document

Document: RO-OCN-IF-3800

No. : 1.0 Issue/Rev. : 21/12/2010 No. : 61/ 66

```
= FIXED_LENGTH
RECORD_TYPE
RECORD_BYTES
                   = 132
FILE_RECORDS
                    = 8100
FILE_NAME
                    = "CN_A_2_070225T000130.TAB"
/* DATA OBJECT POINTERS */
/* IDENTIFICATION KEYWORDS */
               = "RO-RL-CAL-CONSERT-2-MARS-V1.0"
DATA_SET_ID
                     = "ROSETTA-ORBITER MARS CONSERT 2 MARS V1.0"
DATA_SET_NAME
PRODUCT_ID
                     = "CN A 2 070225T000130"
PRODUCT_CREATION_TIME = 2009-09-18T15:54:26
MISSION_NAME = "INTERNATIONAL ROSETTA MISSION"
MISSION_ID = ROSETTA
INSTRUMENT_HOST_NAME = {"ROSETTA-ORBITER", "ROSETTA-LANDER"}
INSTRUMENT_HOST_ID = {"RO", "RL"}
OBSERVATION_TYPE = "MARS SWING-BY"
                     = "MARS SWING-BY"
MISSION PHASE NAME
PRODUCT TYPE
                     = EDR
            = 2007-02-25T00:01:30
START TIME
STOP_TIME
                    = 2007-02-25T23:59:23
SPACECRAFT_CLOCK_START_COUNT = "1/130982462.04371"
SPACECRAFT_CLOCK_STOP_COUNT = "1/131068734.08113"
ORBIT_NUMBER
                    ="N/A"
PRODUCER_ID
                   = "SONC"
PRODUCER_FULL_NAME = "SCIENCE OPERATIONS AND NAVIGATION CENTER"
PRODUCER_INSTITUTION_NAME = "CNES"
INSTRUMENT ID
                    = CONSERT
INSTRUMENT_NAME
                    = "COMET NUCLEUS SOUNDING EXPERIMENT BY RADIOWAVE
                      TRANSMISSION"
INSTRUMENT_TYPE
                   = "RADAR"
INSTRUMENT_MODE_ID = "PINGPONG"
INSTRUMENT_MODE_DESC = "CONSERT IN SOUNDING MODE"
              = "MARS"
= "DTANE
TARGET_NAME
                   = "PLANET"
TARGET_TYPE
PROCESSING_LEVEL_ID = 2
DATA QUALITY ID = "N/A"
DATA_QUALITY_DESC = "N/A"
/* GEOMETRY PARAMETERS */
/* SPACECRAFT LOCATION: Position <km> */
SC_SUN_POSITION_VECTOR = ( -18392147.6, 195586521.2, 90211464.9)
/* TARGET PARAMETERS: Position <km>, Velocity <km/s> */
SC_TARGET_POSITION_VECTOR = ( -153539618.6, 251085093.4, 114271891.0)
SC_TARGET_VELOCITY_VECTOR = (
                              -36.3, -20.8, -9.1)
/* SPACECRAFT POSITION WITH RESPECT TO CENTRAL BODY */
SPACECRAFT_ALTITUDE = 315709008.7 < km>
SUB_SPACECRAFT_LATITUDE = -21.07 <deg>
```



Document : RO-OCN-IF-3800 No : 1.0

No. : 1.0 Issue/Rev. : 21/12/2010 No. : 62/ 66

Date Page

```
SUB_SPACECRAFT_LONGITUDE = 151.15 <deg>
NOTE = "The values of the keywords SC_SUN_POSITION_VECTOR,
      SC_TARGET_POSITION_VECTOR and SC_TARGET_VELOCITY_VECTOR
      are related to the EMEJ2000 reference frame.
      The values of SUB_SPACECRAFT_LATITUDE and SUB_SPACECRAFT_LONGITUDE
      are northern latitude and eastern longitude in the standard
      planetocentric IAU_<TARGET_NAME> frame.
      All values are computed for the time = START_TIME.
      Distances are given in <km> velocities in <km/s>, Angles in <deg>"
/* DATA OBJECT DEFINITION */
OBJECT
                    = FILE
 RECORD_TYPE
                  = FIXED_LENGTH
 FILE_RECORDS
                  = 8100
 RECORD_BYTES
                  = 132
  ^AOCS_TABLE
                   = "CN_A_2_070225T000130.TAB"
 OBJECT
                   = AOCS_TABLE
   NAME
                      = AOCS
   INTERCHANGE_FORMAT = ASCII
               = 8100
   ROWS
   ^STRUCTURE
                    = "AOCS.FMT"
                    = 7
   COLUMNS
   ROW BYTES
                     = 132
  END_OBJECT
                  = AOCS_TABLE
END_OBJECT
                   = FILE
```

END