









Test Procedure

Herschel

Title: **Unit Functional Test of Integrated AVM SPIRE**

CI-No: 125200

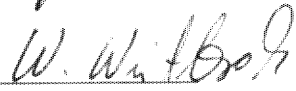Prepared by:	<u>S. Hamer/TERMA AS</u> 	Date:	<u>20th February 2007</u>
Checked by:	<u>S. Idler</u> 		<u>20.02.2007</u>
Product Assurance:	 <u>R. Stritter</u> 		<u>21.02.07</u>
Configuration Control:	<u>W. Wietbrock</u> 		<u>21.02.07</u>
Project Management:	<u>W. Fricke</u> 		<u>21/02/07</u>

Distribution: See Distribution List (last page)

Copying of this document, and giving it to others and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of a patent or the registration of a utility model or design.

Issue	Date	Sheet	Description of Change	Release
DraftA 1.0	16.02.07 20.02.07	All All	First Draft Issue First Formal Issue	

Table of Content

1	Scope	7
1.1	Objective	7
1.2	Test Flow	7
2	Documents/Drawings	9
2.1	Applicable Documents	9
2.2	Reference Documents	9
2.3	Other Documents	10
2.4	Acronyms & Abbreviations	10
3	Requirements to be verified	14
4	Configuration	15
4.1	Satellite Configuration	15
4.2	EGSE Configuration	15
4.3	Set-up	15
5	Conditions	17
5.1	Personnel	17
5.2	Environmental	17
5.3	General Precautions and Safety	17
5.3.1	General Safety Requirements, Precautions	18
5.3.2	ESD constraints	18
5.3.3	Special QA Requirements	18
5.4	GSE	18
5.4.1	MGSE	18
5.4.2	CVSE	18
5.4.3	EGSE	18
5.4.4	OGSE	18
5.4.5	Special Equipment	19
6	Verification Requirements and Test Criteria	20
7	Test Procedure	21

7.1	Initial EGSE and Satellite Configuration for the Test	21
7.2	Step by Step Procedure	21
7.2.1	EGSE & Satellite Switch On	21
7.2.2	Switch On SPIRE PRIME DPU	22
7.2.3	Switch ON DRCU (Simulator) Prime	28
7.2.4	Check correct functioning of the SCU PRIME Low Speed Link	29
7.2.5	Check correct functioning of the SCU PRIME High Speed Link	30
7.2.6	Check correct functioning of the MCU PRIME Low Speed Link	30
7.2.7	Check correct functioning of the MCU PRIME High Speed Link	31
7.2.8	Check correct functioning of the DCU PRIME Low Speed Link	31
7.2.9	Check correct functioning of the DCU PRIME High Speed Link	33
7.2.10	Switch Off MCU Prime	34
7.2.11	Switch Off DRCU Simulator	34
7.2.12	Switch Off SPIRE DPU Prime Unit	35
7.2.13	Switch On Redundant SPIRE Units	38
7.2.14	Switch On Redundant DRCU (Simulator)	38
7.2.15	Check correct functioning of the SCU REDUNDANT Low Speed Link	38
7.2.16	Check correct functioning of the SCU REDUNDANT High Speed Link	38
7.2.17	Check correct functioning of the MCU REDUNDANT Low Speed Link	38
7.2.18	Check correct functioning of the MCU REDUNDANT High Speed Link	38
7.2.19	Check correct functioning of the DCU REDUNDANT Low Speed Link	38
7.2.20	Check correct functioning of the DCU REDUNDANT High Speed Link	39
7.2.21	Switch Off MUC Redundant	39
7.2.22	Switch Off DRCU Simulator	39
7.2.23	Switch Off Redundant SPIRE Units	39
7.2.24	Satellite & EGSE Switch Off	40
8	Summary Sheets	41
8.1	Procedure Variation Summary	42
8.2	Non Conformance Report (NCR) Summary	43
8.3	Sign-off Sheet	44

Table of Figures

Figure 4-1: AVM SPIRE UFT Configuration15

List of Tables

Table 8.1-1: Procedure Variation Sheet	42
Table 8.2-1: Non-Conformance Record Sheet.....	43

1 Scope

This document describes the set of functional tests to be performed on the AVM SPIRE Instrument to check correct operation using the Herschel CCS after it has been electrically integrated with the FM SVM.

Specifically the functional test will verify the following for both prime (and redundant – FM only) SPIRE warm units:

- **Power on/off of AVM SPIRE (CDMS/PCDU Interface) warm unit and DRCU Simulator**
- **Health Status HKTM Acquisition from SPIRE (CDMS Interface)**
- **Check of SCU Prime Low & High Speed Links**
- **Check of MCU Prime Low & High Speed Links**
- **Check of DCU Prime Low & High Speed Links**

Constraint

This test shall only be executed upon successful completion of the AVM SPIRE integration activities as defined in ref. AD1.

1.1 Objective

The objective of the test is twofold:

1. To check as much as possible the correct functional operation of the integrated AVM SPIRE warm units.
2. To act as baseline procedure on which the SPIRE specific aspects of the satellite level SFT and IST procedures can be developed.

1.2 Test Flow

This test flow is structured to reflect nominal operations of the AVM SPIRE as much as possible to enable re-use for PFM and higher-level Satellite tests (SFT and IST).

The flow is as follows:

1. Power on and configure EGSE for test
2. Power on and configure SVM for test
3. Power on NOMINAL SPIRE Prime DPU and enable Mil1553B-bus interface
4. Power on DRCU Simulator

5. Check of SCU Prime Low & High Speed Links
6. Check of MCU Prime Low & High Speed Links
7. Check of DCU Prime Low & High Speed Links
8. Power off MCU Prime
9. Power off DRCU Simulator
10. Disable Mil1553B-bus interface and Power off SPIRE Prime DPU
11. Power off SVM
12. Switch off all EGSE

2 Documents/Drawings

2.1 Applicable Documents

AD 1	AVM SPIRE Integration to Herschel SVM Worksheet	AAS: EWIO71
AD 2	Herschel PCDU & CDMS Nominal Switch On/Off Procedure	HP-2-ASED-PR-070, in preparation
AD 3	Herschel SAT Emergency Switch Off Procedure	HP-2-ASED-PR-071
AD 4	PA Plan	HP-2-ASED-PL-0007
AD 5	I-EGSE Switch ON/OFF Procedure	tbi
AD 6	Test Specification for Herschel Instrument AVM & FM Tests Performed at Satellite Level	H-P-2-ASP-TS-1083
AD 7	H-P GDIR	H-P-1-ASPI-SP-0027
AD 8	DRCU Simulator HW/SW User Manual Iss. 1.0	

2.2 Reference Documents

RD 1	Herschel Planck Central Checkout System System User Manual	H-P-4-TE-MA-0010
RD 2	Herschel Instrument Testing on AVM	H-P-1-ASP-TN-0852
RD 3	Herschel CDMU ASW S/W Interface Control Document	H-P-4-SSF-IC-0001
RD 4	Herschel CDMU BSW S/W Interface Control Document	H-P-4-SES-NT-0076
RD 5	SPIRE IID-B	SCI-PT-IIDB/SPIRE-02124
RD 6	SPIRE Warm Units Integration Test Procedures Iss. 1.3	SPIRE-RAL-PRC-2680
RD 7	SPIRE Functional Test Specification Iss. 1.4	SPIRE-RAL-DOC-001652
RD 8	SPIRE ILT Warm Functional Test Procedure Iss. 1.2	SPIRE-RAL-PRC-002322
RD 9	SPIRE Instrument User Manual Iss. 1.0	SPIRE-RAL-PRJ-002395

RD 10 H/P OBT-UTC Time Synchronisation
Technical Note Iss. 1.3

PT-CMOC-OPS-TN-6604-
OPS- OGH

2.3 Other Documents

None

2.4 Acronyms & Abbreviations

1553	MIL-STD-1553B conform communication interface
AAD	Attitude Anomaly Detector
ACC	ACMS Control Computer
ACMS	Attitude Control and Measurement Subsystem
AD	Applicable Document
AIR	ACC In Reconfiguration
AIT	Assembly, Integration and Test
AIV	Assembly, Integration and Verification
APID	Application Process ID
ASW	Application Software
AVM	Avionics Model
BOLC	BOLometer Control unit (PACS)
BSW	Basic Software
CBH	Catalyst Bed Heater
CCS	Central Check-out System
CCSDS	Consultative Committee for Space Data Systems
CDMU	Control and Data Management Unit
CDMS	Control and Data Management Sub-system
CIR	CDMU In Reconfiguration
CLCW	Command Link Control Word
CLTU	Command Link Transmission Unit
CPDU	Command Pulse Distribution Unit
CRS	Coarse Rate Sensor
CTR	Central on board Reference Time

DCU	Detector Control Unit (SPIRE)
DEC	Detectors Electronics Control unit (PACS)
DMC	Detector and Mechanism Control unit (PACS)
DPU	Digital Processing Unit
DRCU	Detector Readout & Control Unit (SPIRE)
EEPROM	Electrically Erasable PROM
EGSE	Electrical Ground Support Equipment
FCL	Fold-back Current Limiter
FCV	Flow Control Valves
FDIR	Failure Detection, Isolation, and Recovery
FPU	Focal Plane Unit
GDIR	General Design and Interface Requirement
GRP	Group Heaters Switch
HBR	High Bit Rate
HL/HLC	High Level command
HP/HPC	High Priority commands
HPLM	Herschel PayLoad Module
HPSDB	Herschel Planck System Data Base
HW	Hardware
i.a.w.	In accordance with
I/F	InterFace
I/O	Input/Output
ICD	Interface Control Document
IST	Integrated System Test
LCL	Latching Current Limiter
LV	Latching Valves
LBR	Low Bit Rate
MAP	Multiplexed Access Point
MBR	Medium Bit Rate
MCU	(SPIRE)
MEC	Mechanisms Electronics Control unit (PACS)
ML 16	Memory Load command (ML 16)

MM	Memory Module
MOIS	Mission Operations Information System
MTL	Mission Timeline
NRZ-L	Non Return to Zero – Litton
OBCP	On-Board Control Procedure
OBDH	On-Board Data Handling
OBMF	On-Board Monitoring Function
OBRT/OBT	On-Board Reference Time
OIRD	Operation Interface Requirement Document
PACS	Photodetector Array Camera & Spectrometer
P/L	Payload
PCDU/PCS	Power Control Distribution Unit/Power Control Subsystem
PM	Processor Module
PROM	Programmable Read Only Memory
PSK	Phase Shift Keying
RA	Rate Anomaly
RAM	Random Access Memory
RCS	Reaction Control Subsystem
RD	Reference Document
RF	Radio Frequency
RM	Reconfiguration Module
RT	1553 Remote Terminal
RTU	RT Unit
RTA	RTU
RWL	Reaction Wheel Assembly
SA	1553 Remote Terminal Sub Address
SAS	Sun Acquisition Sensor
SCOE	Special Check-out Equipment
SCU	(SPIRE)
SIR	S/C In Reconfiguration
SIT	Subsystem Integrated Test
SP	Sun Pointing

SPIRE	Spectral & Photometric Imaging Receiver
SPU	Signal Processing Unit (PACS)
SSMM	Solid State Mass Memory
STR	Star Tracker
SVM	Service Module
SW	Software
TAI	International Atomic Time
TC	TeleCommand
TFG	Transfer Frame Generator
TM	TeleMetry
TTC	Telemetry Tracking & Command subsystem
TTR	Telemetry Telecommand and Reconfiguration
UFT	Unit Functional Test
VC	Virtual Channel
WD	Watchdog

3 Requirements to be verified

This is purely a functional health check of the AVM SPIRE warm units and interfaces. No specific requirements are to be verified.

4 Configuration

The figure below shows the overall EGSE/Satellite configuration for the test.

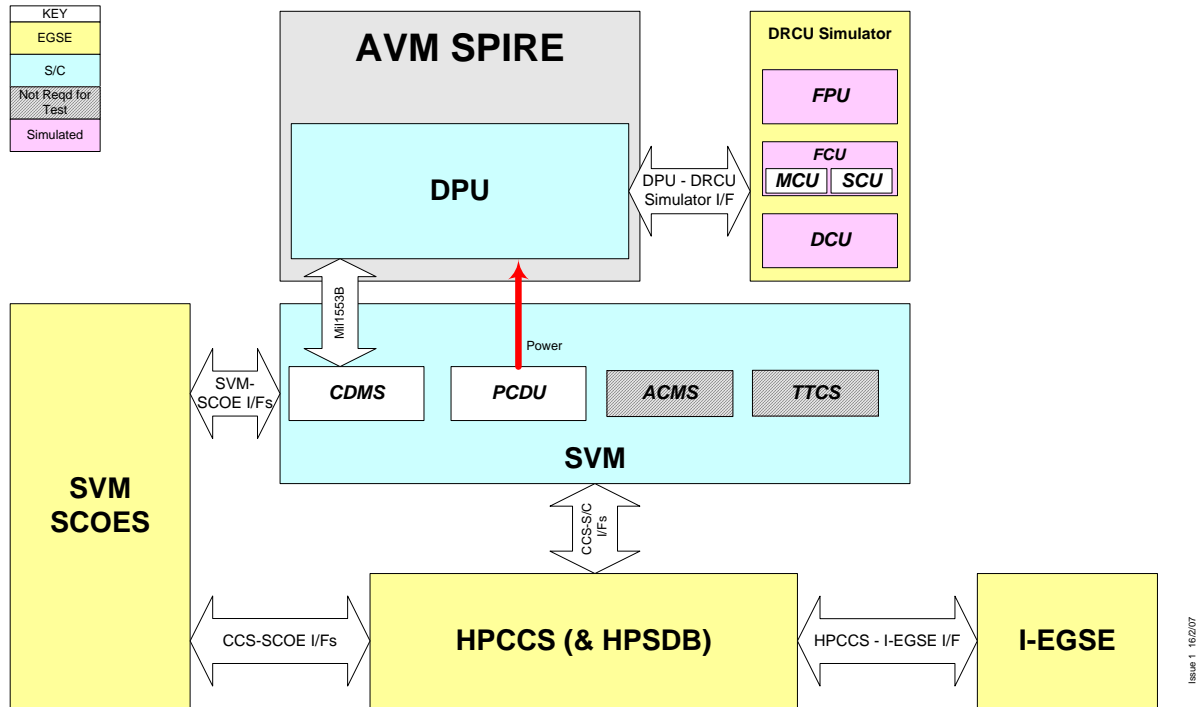


Figure 4-1: AVM SPIRE UFT Configuration

4.1 Satellite Configuration

The test requires use of the FM SVM powered on in its basic test mode (i.e. quick switch on (PCDU & CDMS) in accordance with AD 2.

4.2 EGSE Configuration

This test requires the EGSE to be configured and elements powered on in accordance with AD 2.

I-EGSE shall be configured and connected to the HPCCS in accordance with AD 5.

4.3 Set-up

SPIRE Test Scripts for the test must be loaded on to the HPCCS and checked in to the TBD Environment and compiled prior to start of test. The following test scripts are required for execution on the HPCCS:

Number	Tcl Script Name	Comment	Confirmed
1	SPIRE-WU-INT-DPU-ON-P	DPU Prime power on sequence	
2	SPIRE-WU-INT-DRCU-ON-P	DRCU PRIME Power up	
3	SPIRE-WU-INT-SCU-01-P	SCU Low Speed Link check	
4	SPIRE-WU-INT-SCU-02-P	SCU High Speed Link check	
5	SPIRE-WU-INT-MCU-01-P	MCU Low Speed Link check	
6	SPIRE-WU-INT-MCU-02-P	MCU High Speed Link check	
7	SPIRE-WU-INT-DCU-01-P	DCU Low Speed Link check	
8	SPIRE-WU-INT-DCU-02-P	DCU High Speed Link check	
9	SPIRE-WU-INT-MCU-OFF-P	MCU power off	
10	SPIRE-WU-INT-DRCU-OFF-P	DRCU PRIME power off	
11	SPIRE-WU-INT-DPU-OFF-P	DPU Prime power off sequence	

The HPCSS must also have the following MIB files for SPIRE loaded:

HPCSS Software	Version	Comment	Confirmed Installed
SPIRE MIB version	2.2.G2	Valid for both versions of DPU software.	

The SPIRE I-EGSE will be running the following software for the test:

I-EGSE Software	Version	Comment
SPIRE MIB version	2.2.G2	Valid for both versions of DPU software.
SCOS version	2.3e patch 5	

5 Conditions

5.1 Personnel

Responsibility	Name / Organisation
Test Director	
Test Conductor	
EGSE Operator	
Electrical Engineer	
Specialist Engineer	
Element Cognizant	
PA Responsible	
Instrument Representative	
Customer Representative	
ESA Representative	

5.2 Environmental

The actual clean room environmental conditions for the test shall be recorded below.

Environmental	Nominal	Actual	P	N
Clean Room Class	class 100000 or better			
Temperature	22°C ± 3°C			
Rel. Humidity	40 % - 60 %			
Pressure	970 to 1050 mbar			

5.3 General Precautions and Safety

Non-test specific precautions and safety considerations are detailed in section 5.3 of AD 2. Specific safety issues and general precautions for the tests to performed are detailed in the following sections.

5.3.1 General Safety Requirements, Precautions

In the event of unrecoverable anomaly requiring emergency switch off of the satellite, the switch off shall be performed in accordance with AD 3.

5.3.2 ESD constraints

Normal ESD constraints are to be observed when handling SPIRE units.

5.3.3 Special QA Requirements

None.

5.4 GSE

Non-test specific GSE details are provided in section 5.4 of AD 2. Specific GSE needs for the tests to be performed are detailed in the following sections.

5.4.1 MGSE

None.

5.4.2 CVSE

None.

5.4.3 EGSE

The I-EGSE is required for this test and will be connected to the HPCCS in accordance with AD 5.

5.4.4 OGSE

None.

5.4.5 Special Equipment

SPIRE DRCU Simulator PC and interconnected with the SPIRE AVM DPU in accordance with AD 8.

6 Verification Requirements and Test Criteria

Functional performance and status parameter actual values recorded will be checked during the test and must be the same as the nominal status value indicated.

The test will only be deemed successful once all offline analysis of the results has been performed. Typically, the TRB will be held before completion of this activity and therefore only a preliminary assessment of the test success can be provided to allow any disconnection of specific GSE required for the test, and which needs to be removed before further activities can be performed.

7 Test Procedure

7.1 Initial EGSE and Satellite Configuration for the Test

AVM Integration to Herschel SVM Test Procedure ref. AD 1 SHALL be successfully completed before execution of this procedure.

The EGSE and Satellite SHALL be configured according to AD 2 prior to start of test.

In the event of emergency the Satellite SHALL be switched down according to AD 3.

7.2 Step by Step Procedure

7.2.1 EGSE & Satellite Switch On

Step-No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
	Install Test Box and Satellite & EGSE Switch On						
1.1	Confirm I-EGSE physically connected to HPCCS	OK					
1.2	Confirm DRCU Simulator is connected and configured correctly i.a.w. AD 8	OK					
1.3	If not already on, switch on HPCCS, SCOE's and Satellite/SVM and configure into Basic Test Mode i.a.w. AD 2 Section 7.1 to 7.5						
1.4	Confirm that EGSE and Satellite are in the correct configuration as per AD 2	OK					
1.5	If not already selected, from HPCCS command CDMU to use SPIRE Bus Profile (Profile 3): DC819160 SelectActiveSCBP DH049160 =3	OK			AND: ZAD07999 SPIRE Bus Profile		
1.6	Verify correct bus profile selected:						

Step-No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
	DEF5F160	3					
1.7	Switch on & configure SPIRE I-EGSE i.a.w. AD5						
1.8	Confirm SPIRE I-EGSE is in the correct configuration as per AD5	OK					
1.9	From HPCCS Test Conductor console issue command to connect to SPIRE I-EGSE CONNECT I_EGSE						
1.10	Confirm from HPCCS and SPIRE I-EGSE that the connection has been established	OK					
	START OF SPIRE UFT						

7.2.2 Switch On SPIRE PRIME DPU

Step-No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
	SWITCH ON DPU PRIME						
	DPU-A Power On						
	Initial Conditions: DPU-A OFF						
2.1	Verify the following PCDU telemetry to verify DPU-A Off: LCL11 Status SpireHsdN_L11 LCL11 current SpireHsN_L11	WM32C565 OFF WM308565 =0.0A			AND: ZAD03999 MIM: LCL_HERSCHEL		
2.2	Disable CDMU FDIR while DPU switched ON and forced boot (RTA SPIRE used but not relevant) by issuing the following CMDS telecommand and verify on-board execution (x = don't care, either 0 or 1) : ConfigureSDBFDIR	DC005161	OK				

Step-No.	Test-Step-Description			Nominal Value	Tolerance	Actual Value	Remarks	P	N
	RTA	DH011161	=21				SPIRE-A		
	F0	DH018161	=x				RTA ON		
	F1	DH019161	=x				RTA Alive		
	F2	DH020161	=x				RTA Well_TC		
	F3	DH021161	=x				RTA Well_TM		
	F4	DH022161	=x				RTA Valid		
	F5	DH023161	=x				RTA Vital/Non-vital		
	F6	DH024161	=x				RT Nominal Unit		
	F7	DH025161	=x				RT TM Retry On/Off		
	F8	DH026161	=x				Bus A Active		
	F9	DH027161	=x				Bus A Healthy/Unhealthy		
	F10	DH028161	=x				Bus B Healthy/Unhealthy		
	F11	DH029161	=1				SDBFDIR Enable/Disable		
	M0	DH030161	=0				Mask F0		
	M1	DH031161	=0				Mask F1		
	M2	DH032161	=0				Mask F2		
	M3	DH033161	=0				Mask F3		
	M4	DH034161	=0				Mask F4		
	M5	DH035161	=0				Mask F5		
	M6	DH036161	=0				Mask F6		
	M7	DH037161	=0				Mask F7		
	M8	DH038161	=0				Mask F8		
	M9	DH039161	=0				Mask F9		
	M10	DH040161	=0				Mask F10		

Step- No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
	M11 DH041161 =1				Mask F11		
	CNT DH042161 =1				Vital RT Loop (1)		
	M_C DH043161 =0				Mask for CNT		
2.3	Verify FDIR disabled TBD Disabled				AND:		
2.4	Switch on RTA and enable Bus A on SPIRE DPU-A (RTA=21) by issuing the following CMDS telecommand and verify on-board execution (x = don't care, either 0 or 1) : ConfigureSDBFDIR	DC005161	OK				
	RTA DH011161 =21				SPIRE-A		
	F0 DH018161 =1				RTA ON		
	F1 DH019161 =1				RTA Alive		
	F2 DH020161 =1				RTA Well_TC		
	F3 DH021161 =1				RTA Well_TM		
	F4 DH022161 =1				RTA Valid		
	F5 DH023161 =x				RTA Vital/Non-vital		
	F6 DH024161 =0				RT Nominal Unit		
	F7 DH025161 =x				RT TM Retry On/Off		
	F8 DH026161 =0				Bus A Active		
	F9 DH027161 =x				Bus A Healthy/Unhealthy		
	F10 DH028161 =x				Bus B Healthy/Unhealthy		
	F11 DH029161 =x				SDBFDIR Enable/Disable		
	M0 DH030161 =1				Mask F0		
	M1 DH031161 =1				Mask F1		

Step-No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
2.8	Enable CDMU FDIR (RTA SPIRE used but not relevant) by issuing the following CMDS telecommand and verify on-board execution (x = don't care, either 0 or 1) :						
	ConfigureSDBFDIR	DC005161	OK				
	RTA	DH011161	=21			SPIRE-A	
	F0	DH018161	=x			RTA ON	
	F1	DH019161	=x			RTA Alive	
	F2	DH020161	=x			RTA Well_TC	
	F3	DH021161	=x			RTA Well_TM	
	F4	DH022161	=x			RTA Valid	
	F5	DH023161	=x			RTA Vital/Non-vital	
	F6	DH024161	=x			RT Nominal Unit	
	F7	DH025161	=x			RT TM Retry On/Off	
	F8	DH026161	=x			Bus A Active	
	F9	DH027161	=x			Bus A Healthy/Unhealthy	
	F10	DH028161	=x			Bus B Healthy/Unhealthy	
	F11	DH029161	=0			SDBFDIR Enable/Disable	
	M0	DH030161	=0			Mask F0	
	M1	DH031161	=0			Mask F1	
M2	DH032161	=0			Mask F2		
M3	DH033161	=0			Mask F3		
M4	DH034161	=0			Mask F4		
M5	DH035161	=0			Mask F5		
M6	DH036161	=0			Mask F6		

Step- No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
	M7 DH037161 =0				Mask F7		
	M8 DH038161 =0				Mask F8		
	M9 DH039161 =0				Mask F9		
	M10 DH040161 =0				Mask F10		
	M11 DH041161 =1				Mask F11		
	CNT DH042161 =1				Vital RT Loop (1)		
	M_C DH043161 =0				Mask for CNT		
2.9	Verify FDIR (re-)enabled <p style="text-align: right;">TBD Enabled</p>				AND:		
2.10	HPCCS Operator to inform SPIRE Responsible that SPIRE DPU Nominal powered	OK					
2.11	On HPCCS start SPIRE-WU-INT-DPU-START-P.tcl test script to configure DPU.	OK					
2.12	<p>Check that Nominal and Critical HK packets are arriving at the CCS:</p> <p>SPIRE Nominal HK:</p> <ul style="list-style-type: none"> (type ,subtype) : (3,25) APID : 0x502 <p>SPIRE Critical HK:</p> <ul style="list-style-type: none"> (type ,subtype) : (3,25) APID: 0x500 <p>When the HK requests start being generated several HK parameters will go Out of Limits (Hard). This is a design feature of the DRCU Simulator and cannot be avoided.</p> <p style="text-align: right;"> PLIAP5V -/OOL PLIAP9V -/OOL </p>	OK					

Step-No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
	PLIAM9V SLIAP5V SLIAP9V SLIAM9V LIAPiTEMP LIASiTEMP BIASTEMP DAQTEMP	-/OOL -/OOL -/OOL -/OOL -/OOL -/OOL -/OOL -/OOL					
2.13	On I-EGSE check that THSK parameter is refreshing every second	OK					
2.14	On I-EGSE check that TM2N parameter is incrementing by 1 every second	OK					
2.15	On I-EGSE check that TM1N parameter is incrementing by 1 every 2 second	OK					
2.16	On CCS check the consistency of the SPIRE on board time to the HCDMU time and the CCS. *	OK					
2.17	On IEGSE check the consistency between SCOS time and THSK and QLA time.	OK					
SPIRE PRIME DPU POWER ON COMPLETE							

7.2.3 Switch ON DRCU (Simulator) Prime

Step	Description	Expected Values	Tolerance	Actual Values	Remark	Pass/Fail
3.1	On HPCCS execute TCL script SPIRE-WU-INT-DRCU-ON-STEP1-P.tcl					

Step	Description	Expected Values	Tolerance	Actual Values	Remark	Pass/Fail
3.2	On I-EGSE check that THSK parameter is not refreshing anymore	OK				
3.3	On I-EGSE check that TM2N parameter is not incrementing anymore	OK				
3.4	Start DRCU simulator application software: <i>It is assumed that the DRCU simulator PC is already ON. Double click on the Transmit.exe icon on the desktop of the PC to start the application software.</i>	OK				
3.5	On HPCCS Execute TCL script SPIRE-WU-INT-DRCU-ON-STEP2-P.tcl					
3.6	On I-EGSE check that THSK parameter is again refreshing every second	OK				
3.7	On I-EGSE check that TM2N parameter is again incrementing every second	OK				

7.2.4 Check correct functioning of the SCU PRIME Low Speed Link

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
4.1	On HPCCS Execute TCL script SPIRE-WU-INT-SCU-01-P.tcl		OK		
4.2	On I-EGSE verify:	SCUTEMPSTAT SUBKSTAT	0/0xFFFF 0/1		

7.2.5 Check correct functioning of the SCU PRIME High Speed Link

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
5.1	On HPCCS Execute TCL script SPIRE-WU-INT-SCU-02-P.tcl		OK		
5.2	On I-EGSE verify:	SCUFRAMECNT TM5N	0/31 0x3FFF/1		
5.3	Verify that two telemetry packets with : <ul style="list-style-type: none"> • (type,subtype): (21,1). • APID : 0x508 have been received at CCS		OK		

7.2.6 Check correct functioning of the MCU PRIME Low Speed Link

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
6.1	On HPCCS Execute TCL script SPIRE-WU-INT-MCU-01-P.tcl		OK		
6.2	On I-EGSE check that the MCU is booted up successfully	MCUBITSTAT	0/-/1		

7.2.7 Check correct functioning of the MCU PRIME High Speed Link

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
7.1	On HPCCS Execute TCL script SPIRE-WU-INT-MCU-02-P.tcl		OK		
7.2	On I-EGSE Record the values of MCUFRAMECNT at the start and end of the test	MCUFRAMECNT	AVM: 0/~300		
7.3	Verify that the following type of MCU telemetry packets have been received at the CCS : ENG: - (type,subtype): (21,3). - APID 0x508 BSM - (type,subtype): (21,1). - APID 0x508 SMEC -(type,subtype): (21,1). - APID 0x508		OK		

7.2.8 Check correct functioning of the DCU PRIME Low Speed Link

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
8.1	On HPCCS Execute TCL script SPIRE-WU-INT-DCU-01-P.tcl		OK		
8.2	On I-EGSE check that:	PSWBIA5	0/0xff/0		

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
		PMWBIAS PLWBIAS	0/0xff/0 0/0xff/0		

7.2.9 Check correct functioning of the DCU PRIME High Speed Link

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
9.1	On HPCCS Execute TCL script SPIRE-WU-INT-DCU-02-P.tcl		OK		
9.2	On I-EGSE check that:	DCUFRAMECNT	AVM: 0/~700		
9.3	<p>Verify that the following type of DCU science telemetry packets have been received at the CCS :</p> <p>Full Photometer:</p> <ul style="list-style-type: none"> - (type,subtype): (21,1). - APID 0x504 <p>PSW</p> <ul style="list-style-type: none"> - (type,subtype): (21,2). - APID 0x504 <p>PMW</p> <ul style="list-style-type: none"> -(type,subtype): (21,2). - APID 0x504 <p>PLW</p> <ul style="list-style-type: none"> -(type,subtype): (21,2). - APID 0x504 <p>Full Spectrometer:</p> <ul style="list-style-type: none"> - (type,subtype): (21,1). - APID 0x506 <p>SSW</p> <ul style="list-style-type: none"> - (type,subtype): (21,2). - APID 0x506 <p>SLW</p> <ul style="list-style-type: none"> -(type,subtype): (21,2). - APID 0x506 		OK		

7.2.10 Switch Off MCU Prime

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
10.1	On HPCCS Execute TCL script SPIRE-WU-INT-MCU-OFF-P.tcl		OK		
10.2	On I-EGSE check that the MCU is switched off:	MCUBITSTAT	1/-/0		

7.2.11 Switch Off DRCU Simulator

Step	Description	Parameter	Expected Values Before/After	Actual Values Before/After	Pass/Fail
11.1	On HPCCS Execute TCL script SPIRE-WU-INT-DRCU-OFF-P.tcl		OK		
11.2	On I-EGSE Check that THSK parameter is not refreshing anymore	THSK	Not refreshing		
11.3	On I-EGSE Check that TM2N parameter is not incrementing anymore	TM2N	Not incrementing		
11.4	Stop DRCU Simulator application software		OK		

7.2.12 Switch Off SPIRE DPU Prime Unit

Step-No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
SWITCH OFF DPU PRIME							
DPU-A Power Off							
Initial Conditions: DPU-A ON							
12.1	On HPCCS start SPIRE-WU-INT-DPU-OFF-P.tcl test script to configure DPU.	OK					
12.2	Verify the following PCDU telemetry to verify DPU-A Off: LCL11 Status SpireHsdN_L11 WM32C565 LCL11 current SpireHsn_L11 WM308565	ON 0.46 A			AND: ZAD03999 MIM: LCL_HERSHEL		
12.3	Disable and Switch off RTA SPIRE DPU-A (RTA=21) by issuing the following CMDS telecommand and verify on-board execution (x = don't care) :						
	ConfigureSDBFDIR	DC005161	OK				
	RTA DH011161 =21				SPIRE-A		
	F0 DH018161 =0				RTA OFF		
	F1 DH019161 =x				RTA Alive		
	F2 DH020161 =x				RTA Well_TC		
	F3 DH021161 =x				RTA Well_TM		
	F4 DH022161 =0				RTA Invalid		
	F5 DH023161 =x				RTA Vital/Non-vital		
	F6 DH024161 =x				RT Nominal Unit		
F7 DH025161 =x				RT TM Retry On/Off			
F8 DH026161 =x				Bus A Active			

Step- No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
	F9 DH027161 =x				Bus A Healthy/Unhealthy		
	F10 DH028161 =x				Bus B Healthy/Unhealthy		
	F11 DH029161 =x				SDBFDIR Enable/Disable		
	M0 DH030161 =1				Mask F0		
	M1 DH031161 =0				Mask F1		
	M2 DH032161 =0				Mask F2		
	M3 DH033161 =0				Mask F3		
	M4 DH034161 =1				Mask F4		
	M5 DH035161 =0				Mask F5		
	M6 DH036161 =0				Mask F6		
	M7 DH037161 =0				Mask F7		
	M8 DH038161 =0				Mask F8		
	M9 DH039161 =0				Mask F9		
	M10 DH040161 =0				Mask F10		
	M11 DH041161 =0				Mask F11		
	CNT DH042161 =1				Vital RT Loop (1)		
	M_C DH043161 =0				Mask for CNT		
12.4	After 10secs verify SPIRE-A RTA OFF: SPIREA_OnOff DED1G161 OFF SPIREA_ValidInval DED1K161 Invalid				AND: ZAD12999		
12.5	Power off DPU-A by issuing the following SwOff_SpireHSPDU_N_L11 telecommand (CDMS- TC(8,4,112,5)) and verify on-board execution: DC11B170 OK						

Step- No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value	Remarks	P	N
12.6	Verify the following PCDU telemetry to verify DPU-A OFF: LCL11 (DPU-A) Status STS_LCL11 LCL11 (DPU-A) current ITLM_LCL11	WM32C565 OFF WM308565 0.0 A	 +/- 0.15 A		AND: ZAD03999 MIM: LCL_HERSCHEL		
12.7	HPCCS Operator to inform SPIRE Responsible that SPIRE DPU Prime powered off	OK					
SPIRE DPU PRIME POWER OFF COMPLETE							

7.2.13 Switch On Redundant SPIRE Units

Not to be executed for AVM SPIRE

7.2.14 Switch On Redundant DRCU (Simulator)

Not to be executed for AVM SPIRE

7.2.15 Check correct functioning of the SCU REDUNDANT Low Speed Link

Not to be executed for AVM SPIRE

7.2.16 Check correct functioning of the SCU REDUNDANT High Speed Link

Not to be executed for AVM SPIRE

7.2.17 Check correct functioning of the MCU REDUNDANT Low Speed Link

Not to be executed for AVM SPIRE

7.2.18 Check correct functioning of the MCU REDUNDANT High Speed Link

Not to be executed for AVM SPIRE

7.2.19 Check correct functioning of the DCU REDUNDANT Low Speed Link

Not to be executed for AVM SPIRE

7.2.20 Check correct functioning of the DCU REDUNDANT High Speed Link

Not to be executed for AVM SPIRE

7.2.21 Switch Off MUC Redundant

Not to be executed for AVM SPIRE

7.2.22 Switch Off DRCU Simulator

Not to be executed for AVM SPIRE

7.2.23 Switch Off Redundant SPIRE Units

Not to be executed for AVM SPIRE

7.2.24 Satellite & EGSE Switch Off

Step-No.	Test-Step-Description	Nominal Value	Tolerance	Actual Value		P	N
	Satellite & EGSE Switch Off						
	Initial Conditions: Nominal & Redundant SPIRE warm units OFF						
13.1	From HPCCS Test Conductor console issue command to disconnect from SPIRE I-EGSE DISCONNECT I_EGSE	OK					
13.2	Confirm from HPCSS and SPIRE I-EGSE that the disconnection was successful	OK					
13.3	Switch OFF I-EGSE i.a.w. AD 5						
13.4	Switch OFF Satellite/SVM, HPCCS and SCOEs i.a.w. procedure AD 2 Sections 7.7 to 7.11	OK					
13.5	Confirm both Satellite and EGSE powered down	OK					
	End Conditions: Satellite and EGSE OFF						
	END OF TEST						

8 Summary Sheets

8.1 Procedure Variation Summary

	Test Change	Curr. No.:	
		Date	
		Page	of
Test designation	Test Procedure	Issue	Rev.
Test step changed	Reason for Change		
Prepared by:	Resp. Test Leader	Project Engineer	
PA/QA	Prime	Customer	

Table 8.1-1: Procedure Variation Sheet

8.2 Non Conformance Report (NCR) Summary

NCR - No.	NCR - Title	Date	Open Closed	PA sig.

Table 8.2-1: Non-Conformance Record Sheet

8.3 Sign-off Sheet

	Date	Signature
Test Manager		
Operator		
PA Responsible		
ESA Representative		

END OF DOCUMENT

	Name	Dep./Comp.		Name	Dep./Comp.
X	Alberti von Mathias Dr.	ASG22		Schweickert Gunn	ASG22
	Baldock Richard	FAE12	X	Sonn Nico	ASG51
	Barlage Bernhard	AED13		Steininger Eric	AED32
	Bayer Thomas	ASA42	X	Stritter Rene	AED11
	Brune Holger	ASA45		Suess Rudi	OTN/ASA44
	Edelhoff Dirk	AED2		Wagner Klaus	ASG22
	Fehringer Alexander	ASG13	X	Wietbrock Walter	AET12
X	Fricke Wolfgang Dr.	AED 65		Wöhler Hans	ASG22
	Geiger Hermann	ASA42		Wössner Ulrich	ASE252
	Grasl Andreas	OTN/ASA44	X	Hamer Simon/TERMA	ASA43
	Grasshoff Brigitte	AET12	X	Martin Olivier	ASA43
	Hamer Simon	Terma	X	Carl Hall/TERMA	ASA43
	Hendry David	Terma			
	Hengstler Reinhold	ASA42			
	Hinger Jürgen	ASG22			
X	Hohn Rüdiger	AED65			
	Hölzle Edgar Dr.	AED32			
	Huber Johann	ASA42			
	Hund Walter	ASE252			
	Idler Siegmund	AED312			
	Ivány von András	FAE12			
	Jahn Gerd Dr.	ASG22			
	Kalde Clemens	ASM2			
	Kameter Rudolf	OTN/ASA42			
	Kettner Bernhard	AET42			
	Knoblauch August	AET32	X	Alcatel Alenia Space Cannes	AAS-F
X	Koelle Markus	ASA43		Alcatel Alenia Space Torino	AAS-I
X	Koppe Axel	AED312	X	ESA/ESTEC	ESA
X	Kroeker Jürgen	AED65			
	La Gioia Valentina	Terma		Instruments:	
	Lang Jürgen	ASE252		MPE (PACS)	MPE
	Langenstein Rolf	AED15	X	RAL (SPIRE)	RAL
	Langfermann Michael	ASA41		SRON (HIFI)	SRON
X	Maukisch Jan	ASA43			
X	Much Christoph	ASA43			
	Müller Jörg	ASA42		Subcontractors:	
X	Müller Martin	ASA43		Alcatel Alenia Space Antwerp	ABSP
	Peltz Heinz-Willi	ASG13		Austrian Aerospace	AAE
	Pietroboni Karin	AED65		Austrian Aerospace	AAEM
	Platzer Wilhelm	AED2		BOC Edwards	BOCE
	Reichle Konrad	ASA42		Dutch Space Solar Arrays	DSSA
	Runge Axel	OTN/ASA44		EADS Astrium Sub-Subsyst. & Equipment	ASSE
	Schink Dietmar	AED32		EADS CASA Espacio	CASA
	Schlosser Christian	OTN/ASA44		EADS CASA Espacio	ECAS
	Schmidt Rudolf	FAE12		European Test Services	ETS
	Schmidt Thomas	ASA42		Patria New Technologies Oy	PANT
	Schuler Günter	ASA42		SENER Ingenieria SA	SEN