



**Herschel PACS**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0

# **DEC/MEC User Manual**

## **For OBS version 6.033**

Doc. PACS-CL-SR-002, 5.0  
29 September, 2010

Prepared by : B. Marquet, A. Mazy

Verified by :

Authorised by : E. Renotte

Approved by :

filename : PACS-CL-SR-002 SUM v4.9.doc



## Distribution List

Recipients	Affiliation
CSL PACS Team c/o E. Renotte	CSL - Liege
PANDORA @ K.U. Leuven c/o W. De Meester	KUL - Leuven
Livelink Intranet @ astro.estec.esa.nl	ESTEC - Noordwijk
Herschel-Planck Project Team c/o A. Heske	ESTEC/SCI/PT - Noordwijk
A. Poglitsch, O. Bauer, R. Katterloher, N. Geis, B. Voss, H. Feuchtgruber, G. Wildgruber (Projectoffice MPE), Ch. Hartinger, W. Schmid	MPE - Garching
D. Lemke, R. Hofferbert, U. Grözinger, H. Dannerbauer, U. Klaas	MPIA - Heidelberg

## Document Change Record

Issue	Date	Comments
draft 0.1	09/08/01	initial issue
draft 0.2	30/01/02	updated HK list, included command list
draft 0.3	01/03/02	updated the HK list : <ul style="list-style-type: none"><li>last BOLC entry is now 195 =&gt; every ID has been offset by 4.</li><li>Added the Hk Entry 443 and 444.</li><li>Split the DMC_LAST_ERR_BUF array into 16 entries</li></ul>
draft 0.4	4/03/02	added 16 spare HK entries
draft 0.5	19/07/02	Trigger commands changes : <ul style="list-style-type: none"><li>SwitchOnFilterWheelsControllers -&gt; SwitchOnFWSpec</li><li>SwitchOffFilterWheelsControllers-&gt;SwitchOnFWPhoto</li></ul> Updated many command parameters description. Bits affectation in DMC_XXX_STATUS has changed (where XXX is a task). Added trigger command 85 (test command) Additional error messages
issue 1.0	21/08/02	New error code : 0x901 Changed the name of HK 447 & HK 448 (they had the same name as HK 445 & HK 446) Added bit 20 in HK 201 & HK 204
issue 2.0	11/09/02	Added PID parameters description Updated description of HK 208 to HK 214 Updated description of DEC_WRITE_TIMING_FPGA_PARAM This issue of the User Manual concerns OBS version 2.



Issue 2.1	13/12/02	ECP-KUL-281002-02 : replaced the 'label' by the number of measures in the HK diagnostic packet (page45, byte22). This issue of the User Manual concerns OBS version 4.
Issue 2.2	16/04/03	Modified the definition of Write commands 150,151 and 152 Modified the definition of trigger command 59 Added error code 0x0210 Added the definition of END_OF_HK_LIST_ID Renamed HK entry 223 (DMC_LABEL -> DMC_SEQ_LABEL) to avoid a name conflict between the Hk entry and the command. Changed the layout of HK measure description (red text should be checked carefully in the MIB (bit position, name, ...)) Changed HK and command names to match those in the MIB
Issue 2.3	10/06/03	Modified the definition of Hk Entry n°450. Updated description of Hk Entries 226 and 227. Renamed all the spare fields in status HK (e-mail from Milena on 9/5) Added trigger commands n°86 -> 89.
Issue 2.4	30/07/03	Modified the name of trigger commands 17 and 18. Update description of write commands 158 and 159 Added more information on failure codes returned by trigger commands Added more information on how to use the commands
Issue 2.5	03/10/03	Modified the DMC_LOCK_GRAT command (now has a parameter). Added a new valid parameter value for DMC_START_DIAG_HK Modified the HK Entries 452, 453 and 454. Modified the description of HK Entries 238, 239, 240, 463. Modified the naming of counters in Diagnostic Hk packet header Added section 5.1 about time-stamping. All these changes will be reflected in EM software only. MIB can be updated immediately and will remain compatible with AVM software. Modified DMC_WRT_SPU_TRAN_MODE which now takes 2 parameters. Modified the HK Entries 450 and 451 These changes will be reflected in AVM software.
Issue 2.6	05/03/04	Modified HK Entries 455 -> 458, 208, 210, 211, 255 -> 264 Renamed HK entry 223, 237 Added HK Entries with ID >= 512 Modified Trigger commands 42, 44, 45, 46, 47, 48 Removed Trigger commands 60, 61, 62, 63 Added section 'Detecting Memory Errors' Removed Activity ID 149: DMC_WRT_COOLER_CONF_PAR Added the chopper position offset in DMC_WRT_CHOP_CONF_PAR



		<p>Added Activity ID 160: DMC_WRT_GRAT_REDUNDANT</p> <p>Added Activity ID 161: DMC_WRT_GRAT_RANGE</p> <p>Modified Activity ID 145 and 146</p> <p>Added section "Dump Addresses"</p> <p>Added section "working with the redundant grating"</p> <p>Modified the format of the Hk Diag Packet</p>
Issue 2.7	19/05/04	<p>Added trigger commands 90-96,</p> <p>Renamed trigger commands 71 and 75.</p> <p>Added conversion information for all DEC HK + 405-&gt;408, 427, 428, 429</p> <p>Modified HK entries 208, 209, 213, 214, 243-&gt;246, 259, 267, 278, 283, 295, 296, 301, 312, 335, 346, 369, 380, 404, 445-&gt;448, 453, 459, 460, 512-&gt;521</p> <p>Modified Activity ID 147, 148, 157</p> <p>Removed error codes 0xB12, B22, B32, B42, B52, B62</p> <p>Note : this SUM is a preliminary version for the EM. A few changes might still occur on EM OBS. The AVM OBS will never be adapted to implement what is documented here.</p>
Issue 2.8	26/05/04	<p>Modified HK entries 208 (bit24), 265, 270, 272, 299, 304, 306, 333, 338, 340, 367, 372, 374</p> <p>Changed conversion units for HK entries :265-&gt;280, 299-&gt;314, 333-&gt;348, 367-&gt;382</p> <p>Modified Activity ID 157.</p> <p>Note : this SUM is a preliminary version for the EM. A few changes might still occur on EM OBS. The AVM OBS will never be adapted to implement what is documented here.</p>
Issue 3.0	07/07/04	<p>Modified HK entries 413, 414, 571, 572, 575, 576, 291, 325, 359, 393</p> <p>Modified conversion units for HK entries 292, 293, 326, 327, 360, 361, 394, 395</p> <p>Modified parameters value for trigger ID 57</p> <p>Added a description for bit9 of CRE_Ctrl_Reg</p> <p>Added a section "Connection/reconnection strategy"</p> <p>Added some information about the duration of trigger commands</p> <p>Updated section about time-stamping to take into account the replacement of DMC_SOBT_COUNT by DMC_OBT_COUNT</p> <p>Documented the default values for DEC FPGA</p>
Issue 3.1		<p>Modified Activity ID 143, 144, 154, 155</p> <p>Modified Trigger ID 57</p> <p>Added a section about temperature sensors</p> <p>Updated the section about the grating</p> <p>Changed the units for HK entries 295, 296, 329,330, 363, 364, 397, 398, 405-&gt;408, 426, 427, 429</p>
Issue 3.2	15/10/04	<p>Changed length of Activity ID 147, 148</p>



		<p>Changed HK entries 419, 522-&gt;553, renamed bit10-15 in hk359,          Changed units in Hk entries 286, 354, 320, 321, 388, 389, 409-&gt;412,          420, 424, 425, 428, 430, 554-&gt;578          Changed the units for Trigger ID 17, 18          Removed useless parameters for Trigger ID 47, 48          Renamed Hk Entry 364 + all renaming suggested by Milena          Non destructive sync is always 2 CRE clock width =&gt;          Changed bit8 in Hk entries 291, 325, 359, 393 and changed the          definition of CRE_Ctrl reg in Activity ID 154 and 155</p>
Issue 3.3	06/12/04	<p>Modified section about grating          Added procedure to upload new version of the OBS          Modified Hk entry 512, 513, 514, 515          Modified default parameters for chopper and grating.          Additional information provided concerning activity ID 162</p>
Issue 3.4	28/04/05	<p>Renamed bit2 and bit3 in CRE_CTRL_REG          Modified bit2 and bit3 meaning in Hk entry 291, 325, 359, 393          Renamed bit3 and 5 of Timing FPGA control register          Added section about Synchronization of DMC science header and          science data          Added error code 0x0B24          Additional information provided concerning HK coming from SPU          (HK 419 -&gt; 427)</p>
Issue 4.0	07/02/06	<p>This version of the SUM relates to software that will be installed on          QM and FM DMC only.          Added a section on 'how to determine the grating range'          Modified section about 'Using the spectroscopy detectors'          Added bit10&amp;11 definition in Cre_ctrl_reg          Added bit 18 description in HK 196          added/updated commands for heater and flasher          updated HK related to heater and flasher          Changed the format of trigger parameters to UINT32 or INT32 (no          more 8bits or 16bits parameters).          The CRE output conversion has been slightly modified          + everything in red and in green          Introduced HK limit checking for HK ID 263, 264, 284, 352, 413, 414</p>
Issue 4.1		Unofficial release
Issue 4.2	09/02/07	<p>Changes from 4.0:          Everything that is marked in red.          Removed simplified PID chopper controller (bit2 of          DMC_SELECT_MECH_CTRL_MODE)</p>
Issue 4.3	05/06/07	<p>Updated FW commanding to take into account the 4 threshold values          and the direction of rotation. Updated: HK Ids 210&amp;211, Trigger          ID64&amp;66, Write commands 145&amp;146</p>



		<p>Updated Chopper commanding to consider the field plate lookup tables.</p> <p>Other changes about chopper output filter description.</p> <p>Updated the cre output conversion (6.27V instead of 6.22V)</p> <p>Added section about Internal sampling frequency of housekeeping values</p> <p>All changes are in red</p>
Issue 4.4	07/06/08	<p>Added a new write command for the new filter in the grating controller</p> <p>Updated the section about dump addresses (that can also be used to program the custom hk entries).</p>
Issue 4.5	30/07/08	<p>Added new values for SelectFielPlateLUT in the chopper parameters block.</p> <p>Updated the section about dump addresses (that can also be used to program the custom hk entries).</p> <p>Swapped definition of bit 10 &amp; 11 of HK entries 291, 325, 359, 939</p>
Issue 4.6	07/10/08	<p>Added new parameters value for DMC_SYNCHRONIZE_ON_DET</p> <p>Added new write-command DMC_WRT_GRAT_MAX_POWER</p> <p>HK entry 234 is now a synchro counter</p>
Issue 4.7	09/10/08	<p>Changed the id of the new write-command DMC_WRT_GRAT_MAX_POWER</p> <p>DMC_SYNC_COUNT moved from hk entry 234 to 240.</p> <p>DMC_CUSTOM_HK1 is now referencing the CRDCCP by default</p> <p>New parameters values for the DMC_SELECT_MECH_MODE</p>
Issue 4.8	10/11/08	<p>Corrected and updated definition of parameters values for the DMC_SELECT_MECH_MODE</p> <p>Updated the definition of phase_shift_reg</p> <p>Added section 4.4.21 describing the diagnostic mode</p>
Issue 4.9	17/02/09	<p>Added a section about using the mechanisms in simulation mode</p>
Issue 5.0	29/09/10	<p>Added section 6.5 describing the new DMC_SET_PAR_BOTH_SPEC command</p>

*last saved by Alain Mazy on 29-Sep-10*



## List of Abbreviations

AC	Alternating Current
ADC	Analog-to-Digital Converter
AIV	Assembly Integration & Verification
AVM	Avionic Verification Model
ASW	Application SoftWare
BOLA	Bolometer Amplifier
BOLC	Bolometer Controller
CoI	Co-investigator
CQM	Cryogenic Qualification Model
CSL	Centre Spatial de Liège
DAC	Digital-to-Analog Converter
DEC/MEC	Detector & Mechanism Controller
DC	Direct Current
DM	Data Memory
DMC	DEC/MEC
DPU	Digital Processing Unit
EEPROM	Electrically Erasable PROM
EGSE	Electrical Ground Support Equipment
EM	Engineering/Electrical Model
EMC	Electro-Magnetic Compatibility
FM	Flight Model
FPGA	Field Programmable Gate Array
FPU	Focal Plane Unit
FS	Flight Spare
HK	HouseKeeping
HW	Hardware
ICD	Interface Control Document
IID-A	Instrument Interface Document - Part A
IID-B	Instrument Interface Document - Part B
ISR	Interrupt Service Routine
NA	Not Applicable
OBS	On-Board Software
OBSW	On-Board SoftWare (=OBS)
PACS	Photodetector Array Camera and Spectrometer
PI	Prime Investigator
PM	Program Memory
PROM	Programmable ROM
QM	Qualification Model
RAM	Random Access Memory
ROM	Read-Only Memory
S/C	SpaceCraft
SPU	Signal Processing Unit
S/S	Sub-System
SSD	Software Specification Document
SUSW	StartUp SoftWare
TBC	To Be Confirmed
TBD	To Be Defined
URD	User Requirement Document



## Table of Contents

<b>1</b>	<b>SCOPE.....</b>	<b>1</b>
1.1	INTRODUCTION .....	1
1.2	PURPOSE.....	1
1.3	ORGANISATIONAL RESPONSIBILITIES .....	1
<b>2</b>	<b>DOCUMENTS .....</b>	<b>1</b>
2.1	APPLICABLE DOCUMENTS.....	1
2.2	REFERENCE DOCUMENTS .....	2
<b>3</b>	<b>STARTING THE SOFTWARE.....</b>	<b>2</b>
3.1	STARTING THE SOFTWARE FROM EEPROM .....	2
3.1.1	<i>SUSW self test.....</i>	2
3.1.2	<i>Copy OBS from EEPROM.....</i>	3
3.1.3	<i>Give control to ASW.....</i>	4
3.2	BUILDING A NEW VERSION OF THE SOFTWARE.....	4
3.3	UPLOADING A NEW VERSION OF THE SOFTWARE .....	4
3.3.1	<i>Summary of HLSW commands and telemetry.....</i>	5
3.4	INTERFACE WITH OTHER WARM ELECTRONICS SUBSYSTEMS .....	5
3.4.1	<i>1355 communication handling by the DMC OBS.....</i>	5
3.4.2	<i>Summary of HLSW commands and telemetry.....</i>	6
3.4.3	<i>Interface with DPU.....</i>	7
3.4.4	<i>Interface with SPUs.....</i>	7
3.4.5	<i>Interface with BOLC.....</i>	7
3.4.6	<i>Interface with DECS .....</i>	7
3.4.7	<i>Master/Slave strategy .....</i>	8
<b>4</b>	<b>COMMANDS.....</b>	<b>8</b>
4.1	TRIGGER COMMANDS .....	8
4.2	WRITE COMMANDS.....	17
4.2.1	<i>Parameters arrays formats .....</i>	17
4.3	DUMP/CHECK COMMANDS.....	35
4.3.1	<i>Dump addresses.....</i>	35
4.4	USING THE COMMANDS.....	52
4.4.1	<i>Detector software simulator .....</i>	52
4.4.2	<i>Detector hardware simulation .....</i>	53
4.4.3	<i>Switching between Spectrometry/Photometry modes .....</i>	53
4.4.4	<i>Using the spectroscopy detectors .....</i>	54
4.4.5	<i>Using the photometry detectors .....</i>	59
4.4.6	<i>The chopper : general description.....</i>	60
4.4.7	<i>Using the chopper.....</i>	65
4.4.8	<i>The Grating : general description .....</i>	68
4.4.9	<i>Using the grating.....</i>	72
4.4.10	<i>The filter wheels : general description.....</i>	82
4.4.11	<i>Using the filter wheels.....</i>	84
4.4.12	<i>The calibration sources : general description.....</i>	87





4.4.13	Using the calibration sources .....	91
4.4.14	Using the FPU temperature sensors .....	93
4.4.15	Using the CRE temperature sensors.....	95
4.4.16	Warm electronic temperature sensors.....	96
4.4.17	SPU housekeeping.....	96
4.4.18	Using diagnostic housekeeping.....	97
4.4.19	Using the sequencer .....	98
4.4.20	Adjusting the timing parameters .....	102
4.4.21	FPGA status register diagnostic mode.....	105
4.4.22	Using the mechanisms and calibration sources in simulation mode.....	106
<b>5</b>	<b>HOUSEKEEPING .....</b>	<b>107</b>
5.1	OFFSET AND GAIN CORRECTION OF ANALOG HOUSEKEEPING.....	108
5.2	INTERNAL SAMPLING FREQUENCY OF HOUSEKEEPING VALUES .....	109
5.2.1	MEC analog housekeeping values.....	109
5.3	LIST OF AVAILABLE MEASURES .....	109
5.3.1	How to use the list of HK measures .....	109
5.3.2	List of Nominal housekeeping Measure.....	112
5.3.3	List of Diagnostic housekeeping Measure .....	164
5.4	ERROR MANAGEMENT.....	180
5.4.1	Error code table .....	180
5.5	PACKET CONTENT DESCRIPTION .....	184
5.5.1	Nominal Housekeeping.....	184
5.5.2	Diagnostic Housekeeping.....	184
<b>6</b>	<b>OTHER INFORMATION .....</b>	<b>187</b>
6.1	TIME-STAMPING.....	187
6.1.1	Photometry science packet .....	187
6.1.2	Spectroscopy science packet.....	187
6.1.3	Nominal housekeeping.....	187
6.1.4	Diagnostic housekeeping.....	187
6.1.5	Involved commands .....	188
6.1.6	Summary of commands and telemetry .....	188
6.2	SYNCHRONIZATION OF DMC SCIENCE HEADER AND SCIENCE DATA .....	189
6.3	SCIENCE DATA SAMPLING .....	190
6.4	DETECTING MEMORY ERRORS.....	192
6.4.1	Example .....	192
6.4.2	How to react ? .....	193
6.4.3	Related dump commands.....	193
6.4.4	Summary of commands and telemetry .....	194
6.5	UPDATE 6.033: NEW IMPLEMENTATION OF THE DMC_SET_PAR_BOTH_SPEC COMMAND .....	194
6.5.1	Old implementation .....	194
6.5.2	New implementation .....	195



## 1 Scope

### 1.1 Introduction

The Photodetector Array Camera and Spectrometer (PACS) is an imaging spectrometer-photometer which forms part of the science payload of the Herschel Space Observatory (formerly called FIRST), an ESA cornerstone mission (CS4) to be launched in 2007 on Ariane 5.

A presentation of the Herschel mission and status is available at URL: <http://sci.esa.int/home/herschel/>. Useful information on PACS instrument, mission and Consortium can be found at <http://pacs.mpe-garching.mpg.de> and <http://pacs.ster.kuleuven.ac.be/>.

### 1.2 Purpose

This document is the User Manual of DMC. It is targeted to ground operators, DPU software designer and DMC testers.

This version of the SUM relates to software that will be installed on QM and FM DMC only.

### 1.3 Organisational Responsibilities

The PACS project activities including project management and system engineering will be done at MPE-Garching under the direction of A. Poglitsch (PI). Design, fabrication, testing, and integration of the flight units will be done at CoI and commercial facilities as appropriate.

In this programme the CSL is responsible for the design, production and unit-level verification of:

- the focal plane Grating Assembly;
- the Detector & Mechanism Controller (DEC/MEC);
- the Warm Interconnecting Harness.

## 2 Documents

### 2.1 Applicable Documents

[AD1]	ESA PT-IID-A-04624	FIRST/PLANCK Instrument Interface Document - Part A
[AD2]	ESA PT-RQ-04410	PA Requirements for FIRST/PLANCK Scientific Instruments
[AD3]	PACS-ME-RS-004	PACS Science Requirements Document
[AD4]	PACS-ME-RS-005	PACS Instrument Requirements Document
[AD5]	PACS-ME-PL-007	PACS Project Product Assurance Plan
[AD6]	PACS-CL-ID-003	ICD DEC/MEC-DPU issue 3.5 from 3 october 2003



[AD7] PACS-CL-ID-004 ICD DEC/MEC-SPU issue 3.5 from 29 july 2004

## 2.2 Reference Documents

[RD1] ESA PT-PACS-02126 Instrument Interface Document - Part B - Instrument "PACS"  
[RD2] PACS-ME-PL-002 PACS Design, Development and Verification Plan  
[RD3] HPL-MA-1248-02-CRS CRISA DSP Module QM User's manual issue 1 from 22 sept 2005

## 3 Starting the software

### 3.1 Starting the software from EEPROM

#### 3.1.1 SUSW self test

After a power-on of the DMC, the LLSW starts, performs a self test and then waits for commands. Allow 15 seconds for the LLSW to finish its start-up procedure.

You should then dump the result of the self test and check that it is correct. The address, size and expected results are (a detailed description of the expected result can be found in [RD3]):

Address (DM)	Content	Expected result
00000000	Reset source	00000001
00000001	Hardware initialization tests result	0007FFFF
00000002	PROM initialization checksum – computed value	55D0
00000003	PROM initialization checksum – expected value	55D0 for SUSW 1.1
00000004	Error detection during command loop execution	00000004
00000005	EDAC double failure last wrong address – PM	00000000
00000006	EDAC double failure last wrong address – DM	00000000
00000007	DSP interrupt pending register value	00000020
00000008	PMPSC interrupt pending register value	00000000
00000009	DMPSC interrupt pending register value	00000000
0000000A	SMCS interrupt pending register value	00000000

##### 3.1.1.1 Note on PROM failures

During the module tests at Crisa, a problem in the contents of the PROM devices was detected. The problem has shown stable from that moment and does not represent a problem for the operation of the DMC SUSW. The only current effect (stabilized) is that the obtained checksum, as part of the boot selftest, is not as expected (55D0) but is 85C6, F557, F0C3, 5D44 or 2841.



A further failure in the same way cannot be discarded. It is possible that, if the failure appear, it has no effect in the operation of the software as the current failure. In this case, the boot software obtained checksum would be different in the report area.

So, the recommended steps to be aware of the problem are:

- verify the boot selftests word 2, PROM Checksum computed value, in each switch-on. In case the checksum is not one of the expected one, dump the complete contents of the PROM by means of the boot software command loop in order to analyse the failure. Note that a modification of a single bit produces an absolutely different checksum word.
- Depending on the failed bit, it would event be not possible to dump the PROM contents.
- If the PROM contents can be obtained, Crisa will analyse the failed bit and the potential effects.
- If the failure does not affect operation, the unit will remain as it was.
- If the failure could affect operation, the failed memory will be replaced.

### 3.1.2 Copy OBS from EEPROM

Then, the OBS must be copied from EEPROM to PRAM. There are 2 segments to copy so 2 commands to send (allow a 500msec interval between the 2 commands) :

- Copy SEG\_INIT:
  - Activity ID : 0x65
  - SID : 5
  - Parameter 1 (mem ID of EEPROM) : 3
  - Parameter 2 (start address in EEPROM) : 0
  - Parameter 3 (mem ID of PRAM) : 1
  - Parameter 4 (start address in PRAM): 0x6EE00
  - Parameter 5 (length): 0x4000
- Copy SEG\_PMCO:
  - Activity ID : 0x65
  - SID : 5
  - Parameter 1 (mem ID of EEPROM) : 3
  - Parameter 2 (start address in EEPROM) : 0x8000
  - Parameter 3 (mem ID of PRAM) : 1
  - Parameter 4 (start address in PRAM): 0x8000
  - Parameter 5 (length): 0x8000



### 3.1.3 Give control to ASW

Then, the next step is to give the control to the application software:

- Give Control to APSW:
  - Activity ID : 0x66
  - SID : 2
  - Parameter 1 (mem ID of PRAM) : 1
  - Parameter 2 (start address in PRAM) : 0x8032

Then, allow 6 seconds to let the OBS start, send the first hk packets and wait for the first command.

## 3.2 Building a new version of the software

Note that this procedure should be used by CSL only. You should not try to rebuild a new version of the software by yourself. It is provided here as a reminder for CSL.

1. In params.c, change the version number
2. Rebuild the executable (delete all object files and build)
3. execute “split.bat” to generate segment files
4. execute “upload\_obs.exe” to generate the uploadable file
  - a. build files for seg\_init
  - b. build files for seg\_pmco
  - c. convert files from binary to ascii
  - d. generate the tcl script file to check the memory load.

## 3.3 Uploading a new version of the software

Each time a new version of the software is available, CSL will provide:

- A set of TC to upload the new software in RAM
- A tcl script to check that the memory load has succeeded

The telecommands must be sent to DMC SUSW. The procedure to upload a new version is:

1. switch-on DMC
2. Let it run for 15 seconds
3. send the TC to upload the new version
4. execute the tcl script to check the memory if all tests are successful, continue the procedure
5. Give control to APSW (same command as in previous section). Do not copy EEPROM into RAM !



6. Let the HLSW start as usual
7. Send the DMC\_COPY\_OBS\_TO\_EEPROM command to copy the software from RAM to EEPROM. This should be done only when the CPU load is low and when no mechanisms are controlled.

### 3.3.1 Summary of HLSW commands and telemetry

#### Trigger Commands:

- 88 DMC\_COPY\_OBS\_TO\_EEPROM

#### Write Commands:

- none

#### HK nominal:

- 243 DMC\_VID
- 196 DMC\_SW\_GLOBAL\_ST

#### HK diag:

- none

## 3.4 Interface with other warm electronics subsystems

### 3.4.1 1355 communication handling by the DMC OBS

The DMC OBS handles 6 1355 links. For each of this link, there is a task that is dedicated to each of the direction. The task that handle reception is generally called 'receiver' and the task that handles the emission is called 'controller', 'sender' or 'encoder'.

For the interface with DPU, there is a 'DPU Receiver' task that receives all telecommands from DPU and another task 'DPU Sender' that is sending the acknowledges to these commands and that is sending the housekeeping packets.

For the interface with DEC, there is a 'DEC Controller' task that configures the DEC by sending commands and there is a 'DEC Receiver' task that receives all the science data packets.

For the interface with BOLC, there is a 'BOLC Controller' task that sends the telecommands to BOLC and there is a 'BOLC Receiver' task that receives all the science data packets.

For the interface with SPU, since the communication is uni-directionnal, there is only a 'Packet Encoder' task for each SPU.



Each of these tasks has a status word in the nominal housekeeping that gives information about the status of the 1355 connection (connected or not). Each of these tasks also has a packet counter to monitor the traffic on the link.

### 3.4.2 Summary of HLSW commands and telemetry

#### Trigger Commands:

- 86 DMC\_START\_RED\_SPU\_LINK
- 87 DMC\_START\_BLUE\_SPU\_LINK
- 89 DMC\_RESET\_SMCS\_CHIP\_2

#### Write Commands:

- 150 DMC\_WRT\_BOL\_REC\_OPT
- 151 DMC\_WRT\_B\_DEC\_REC\_OPT
- 152 DMC\_WRT\_R\_DEC\_REC\_OPT
- 158 DMC\_WRT\_B\_PACKT\_ENC\_LINK
- 159 DMC\_WRT\_R\_PACKT\_ENC\_LINK

#### HK nominal:

- 198 DMC\_DPU\_REC\_STAT
- 199 DMC\_DPU\_SEN\_STAT
- 200 DMC\_DECB\_REC\_STA
- 201 DMC\_DECB\_CTRL\_ST
- 202 DMC\_BLUE\_PAC\_ENC
- 203 DMC\_DECR\_REC\_STA
- 204 DMC\_DECR\_CTRL\_ST
- 205 DMC\_RED\_PAC\_ENC
- 206 DMC\_BOL\_REC\_STAT
- 207 DMC\_BOL\_CTRL\_STA
- 228 DMC\_DECB\_REC\_PAC
- 229 DMC\_DECR\_REC\_PAC
- 230 DMC\_DECB\_CTRL\_PA
- 231 DMC\_DECR\_CTRL\_PA
- 232 DMC\_BLUE\_ENC\_PAC
- 233 DMC\_RED\_ENC\_PAC
- 234 DMC\_BOL\_REC\_PAC
- 235 DMC\_BOL\_CTRL\_PAC
- 236 DMC\_DPU\_REC\_PAC
- 237 DMC\_DPU\_SEND\_PAC



#### **HK diag:**

– none

### **3.4.3 Interface with DPU**

At startup of the ASW, a reset of the SMCS chip 1 (the one connected to DPU and both SPUs) is performed. After that, the ASW does not do anything for 6 seconds and then, initiate the link with DPU as master. If this connection fails, there is no retry.

Afterwards, as soon as a disconnection with DPU is observed, the ASW enters a reconnection loop. Every 9 seconds, the chip is reset and the communication with DPU is started again (as master). The first chip reset occurs only 9 seconds after the disconnection has been detected.

### **3.4.4 Interface with SPUs**

The communication with SPU is initiated only on request (by trigger command). Two commands are available to start the 1355 communication with the SPUs. The master/slave status can be chosen for this commands but it is recommended to use DMC as master in order to complete the nominal PACS switch on procedure.

### **3.4.5 Interface with BOLC**

After a BOLC switch-on, a chip reset of the SMCS 2 should be performed. This will also start the communication with BOLC (DMC as master). If DEC's are already powered on and connected, the chip reset will interrupt the communication. Therefore, a few packets from DEC will be lost. At that time, the DEC receiver and controller will observe the disconnection and will raise an error in their status words.

If an unexpected disconnection is observed on BOLC link, the DMC OBS will simply signal the error in the BOLC receiver and controller tasks. It will not try to reconnect by itself. DPU should send the DMC\_RESET\_SMCS\_CHIP\_2 to try to resume the connection.

### **3.4.6 Interface with DEC's**

When you send a command to power-on a DEC, the power is supplied immediately. The DEC then needs 5 seconds to initialize. The DMC HLSW then resets the SMCS 2 and connects to the DEC that has been powered on and to the BOLC and the other DEC if they were already connected before. At that time, the other DEC receiver and controller and BOLC receiver and controller will observe the disconnection and will raise an error in their status words.





If an unexpected disconnection is observed on DEC link, the DMC OBS will simply signal the error in the DEC receiver and controller tasks. It will not try to reconnect by itself. DPU should send the DMC\_RESET\_SMCS\_CHIP\_2 to try to resume the connection.

### 3.4.7 Master/Slave strategy

For all links, DMC should be the Master. Although it can be configured as slave for the communication with SPUs.

## 4 Commands

### 4.1 Trigger Commands

Below, you will find the list of trigger commands. The format trigger command is described in [AD6]. The commands are categorized as follows by their validity :

- S Command accepted only in sequence files
- T Command accepted only as trigger
- A Command accepted in sequence and as trigger

Validity	Symbol	Activity ID	Parameter Type	Parameter Description	Subsystem
S	DMC_LOOP	0	UINT32	number of repetitions	Sequencer
S	DMC_END_LOOP	1	NONE	Last instruction of a loop.	Sequencer
S	DMC_WAIT	2	UINT32	number of time units to wait for. In spectroscopy mode, time unit is a ramp; in photometry mode, time unit is a readout	Sequencer
S	DMC_END_SEQUENCE	3	NONE	Last instruction of a sequence.	Sequencer
S	DMC_LABEL	4	UINT32	Label ID. 8 bits used to identify the position in the sequence. This, combined with the sequence ID (see below) and the readout id, is included in the data packets sent to the SPU to identify the readout.	Sequencer
T	DMC_START_SEQUENCE	5	NONE	Start the execution of the sequence previously uploaded by the DEC_WRITE_SEQUENCE command.	Sequencer
T	DMC_ABORT_SEQUENCE	6	NONE	Abort the execution of the sequence currently being executed. After an abort, the sequence is ready to start again (at its beginning)	Sequencer
T	DMC_SET_TIME	7	NONE	Set the time previously written by the DEC_WRITE_TIME command.	Time Stamping
T	DMC_SET_OBSID	8	UINT32	Sets the Observation ID	Time Stamping
T	DMC_SET_BBID	9	UINT32	Sets the Building Block ID	Time Stamping
T	DMC_SYNCHRONIZE_ON_DE T	10	UINT32	Select the synchronization source for the Sequencer. Note that this synchro source is also used to trigger the mechanism movement and that the DMC_OBT_COUNT is updated only when this synchro signal is received. PARAM :	Synchro



				<p>In the 8 lsb, set the synchronization source for the Sequencer :</p> <p>1 = Synchronize on blue spectro ramps (and mechanisms use the sync to start their move) 2 = Synchronize on red spectro ramps (and mechanisms use the sync to start their move) 4 = Synchronize on BOL readouts (and mechanisms use the sync to start their move) 9 = Synchronize on blue spectro ramps (and mechanisms don't use the sync to start their move) 10 = Synchronize on red spectro ramps (and mechanisms don't use the sync to start their move) 12 = Synchronize on BOL readouts (and mechanisms don't use the sync to start their move)</p> <p>If bit 11 is set to 0, the timing FPGA will use the default synchronization sources as defined above, If bit 11 is set to 1, the timing FPGA will use one of the following synchronization sources : In bits 8-10, set the synchronization source for the timing FPGA :</p> <p>000 = internal programmable generator (nominal = 256Hz) 001 = Red DEC supply group 1 010 = Red DEC supply group 2 011 = Blue DEC supply group 3 100 = Blue DEC supply group 4 101 = BOLC 110 = internal programmable generator (nominal = 40Hz) 111 = spare (external generator only for ground testing)</p> <p>Note : by default, sequencer synchronizes on the Blue Spectrometer.</p>	
T	DMC_SET_TIMING_FPGA_PARAMETERS	11	NONE	Copy the parameters previously written by the DEC_WRT_TIMING_FPGA_PARAMETERS command in the FPGA registers	Synchro
T	DMC_SWON_B_DEC	12	NONE	Switch on Blue DEC electronic power-supply, wait for 1355 link to initialize (DEC sends packet : valid HK + invalid data (detectors are off) ) DURATION : 8 seconds FAILURE CODE : 0xAA : the other CREs are switched-on	DEC blue
T	DMC_SWOF_B_DEC	13	NONE	Switch off Blue DEC electronic power-supply	DEC blue
T	DMC_SWON_B_SPEC	14	NONE	Switch on detector array power-supply (data are read on the detector) DURATION : 15 seconds FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC blue
T	DMC_SWOF_B_SPEC	15	NONE	Switch off detector array power-supply DURATION : 15 seconds FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC blue
T	DMC_SET_PARAMETERS_B_SPEC	16	NONE	Send complete parameters table to blue DEC	DEC blue



**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 10

				FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	
T	DMC_SET_B_SPEC_HEAT_C	17	UINT32	12bits used to represent the Blue DEC heater current (0=0mA, 4095=20mA) FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC blue
T	DMC_SET_B_SPEC_FLASH_C	18	UINT32	12bits used to represent the Blue DEC flasher current (0=0mA, 4095=20mA) FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC blue
T	DMC_SWON_R_DEC	19	NONE	Switch on Red DEC electronic power-supply, wait for 1355 link to initialize (DEC sends packet : valid HK + invalid data (detectors are off) ) DURATION : 8 seconds FAILURE CODE : 0xAA : the other CREs are switched-on	DEC red
T	DMC_SWOF_R_DEC	20	NONE	Switch off Red DEC electronic power-supply	DEC red
T	DMC_SWON_R_SPEC	21	NONE	Switch on detector array power-supply (data are read on the detector) DURATION : 15 seconds FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
T	DMC_SWOF_R_SPEC	22	NONE	Switch off detector array power-supply DURATION : 15 seconds FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
T	DMC_SET_PAR_R_SPEC	23	NONE	send complete parameters table to red DEC. FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
T	DMC_SET_PAR_BOTH_SPEC	24	NONE	send parameters tables to both DECS with master reset to ensure synchronisation (restrictions apply on the respective parameters values) FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DECS
A	DMC_VAL_SCI_DATA_B	25	NONE	Validate the Blue science data (from DEC and/or BOLC)	Science Data
A	DMC_VAL_SCI_DATA_R	26	NONE	Validate the Red science data (from DEC and/or BOLC)	Science Data
A	DMC_VAL_SCI_DATA_BOTH	27	NONE	Validate the Blue and Red science data (from DEC and/or BOLC)	Science Data
A	DMC_INVALID_SCI_DATA_B	28	NONE	Invalidate the Blue science data (from DEC and/or BOLC)	Science Data
A	DMC_INVALID_SCI_DATA_R	29	NONE	Invalidate the Red science data (from DEC and/or BOLC)	Science Data
A	DMC_INVALID_SCI_DATA_BOTH	30	NONE	Invalidate the Blue and Red science data (from DEC and/or BOLC)	Science Data



**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 11

T	DMC_START_DET_SIMULATOR	31	UINT32	4 MSb : detector id (1 = BLUE_SPEC, 2 = RED_SPEC, 4 = BOLC (can be a combination of bits)), 28 LSb : period. See section "Using the Commands : Simulating detectors"	Detectors
T	DMC_STOP_DET_SIMULATOR	32	NONE	Stops the detector simulator	Detectors
T	DMC_SEND_COMMAND_TO_BOLC	33	UINT32	Send a command to BOLC. The parameter is the command. FAILURE CODE : 0xAA : The connection between DMC and BOLC is not established	BOLC
T	DMC_SET_R_SPEC_HEAT_C	34	UINT32	12bits used to represent the Red DEC heater current (0=0mA, 4095=20mA) FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
T	DMC_SET_R_SPEC_FLASH_C	35	UINT32	12bits used to represent the Red DEC flasher current (0=0mA, 4095=20mA) FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
T	DMC_SPARE_CMD_1	36	UINT32	Spare Command FAILURE CODE : 0xA7 : Invalid trigger ID	
T	DMC_RESET_BOL_READOUT_C	37	NONE	Resets BOLC Readout Counter	Time Stamping
T	DMC_SWON_GRAT_CONT	38	NONE	Switch on power supply (Drive + Inductosyn)	Grating
T	DMC_SWOF_GRAT_CONT	39	NONE	Switch off power supply (Drive + Inductosyn)	Grating
T	DMC_ENABLE_GRAT_CONT	40	NONE	Activate servo-loop, copy current position in target FAILURE CODE : 0xAA : Grating is not switched-on	Grating
T	DMC_DISABLE_GRAT_CONT	41	NONE	Deactivate servo-loop, output = 0 (no torque)	Grating
A	DMC_MOVE_GRAT_ABS	42	INT32	Move grating to absolute position. PARAM : Target position If in closed loop mode : Target position is in DMC_GRAT_CUR_POS units If in open loop mode : Target position is in DMC_GR_DEG_POS units DURATION : Setpoint is incremented until target is reached depending on grating controller RATE parameter value FAILURE CODE : 0xAA : Grating controller is not enabled or homing has not been done	Grating
A	DMC_MOVE_GRAT_REL	43	INT32	Move grating to relative position. PARAM : Target position = relative move from current position. End position = current position + target position If in closed loop mode : Target position is in DMC_GRAT_CUR_POS units If in open loop mode : Target position is in DMC_GR_DEG_POS units DURATION : Setpoint is incremented until target is reached depending on grating controller RATE parameter value	Grating



				FAILURE CODE : 0xAA : Grating controller is not enabled	
T	DMC_HOME_GRAT	44	UINT32	Search for the hard stop and initialize the inductosyn period counter correctly. PARAM : 0 : Move towards negative positions 1 : Move towards positive positions DURATION : max 70 seconds (if the Grating PID rate is 3) depending on the initial position of the grating. FAILURE CODE : 0xAA : Grating controller is not enabled	Grating
T	DMC_ENTER_GRAT_CONT_DEG	45	UINT32	Enter grating degraded mode. PARAM : 0 : Open-loop mode Other modes might come later NOTE : This command must be sent after the controller is switched on FAILURE CODE : 0xAA : Grating controller is enabled	Grating
T	DMC_EXIT_GRAT_CONT_DEG	46	NONE	Exit grating degraded mode. NOTE : This command must be sent when the controller is switched off	Grating
T	DMC_LOCK_GRAT	47	UINT32	Locks the grating. PARAM : 0x2 : activate mechanical launch-lock motor 1 for 40960 ISR period 0x10 : activate mechanical launch-lock motor 2 for 40960 ISR period 0x12 : activate mechanical launch-lock motor 1+2 for 40960 ISR period DURATION : 40960 ISR period (nominally 5 seconds) NOTE : Motor 1 = connected to currently active electronics Motor 2 = connected to currently inactive electronics Nominal operation uses motor 1+2 FAILURE CODE : 0xAA : Grating is not switched-on	Grating
T	DMC_UNLOCK_GRAT	48	UINT32	Unlocks the grating. PARAM : 0x8 : activate mechanical launch-lock motor 1 for 40960 ISR period 0x20 : activate mechanical launch-lock motor 2 for 40960 ISR period 0x28 : activate mechanical launch-lock motor 1+2 for 40960 ISR period DURATION : 40960 ISR period (nominally 5 seconds) NOTE : Motor 1 = connected to currently active electronics Motor 2 = connected to currently inactive electronics Nominal operation uses motor 1+2 DURATION : 40960 ISR period (nominally 5 seconds) FAILURE CODE : 0xAA : Grating is not switched-on	Grating



T	DMC_SWON_CHOP_CONT	49	NONE	Connect chopper to amplifier (release launch lock) Set coils selection relays to nominal = 3 coils used	Chopper
T	DMC_SWOF_CHOP_CONT	50	NONE	disconnect chopper from amplifier (connect damping resistor) Set coils selection relays to power off state	Chopper
T	DMC_ENABLE_CHOP_CONT	51	NONE	Activate servo-loop, copy current position in target FAILURE CODE : 0xAA : Chopper is not switched-on	Chopper
T	DMC_DISABLE_CHOP_CONT	52	NONE	Deactivate servo-loop, output = 0 (no torque)	Chopper
A	DMC_MOVE_CHOP_ABS	53	INT32	Move chopper to absolute position. PARAM : In closed loop : Target position is in DMC_CHOP_CUR_POS units, i.e. -32767 = -10V, 32767 = 10V In open loop : Target is the commanded current in the DAC and is therefore in DMC_CHOP_OUTPUT units, i.e. -32767 = -133 mA, 32767 = 133 mA FAILURE CODE : 0xAA : Chopper controller is not enabled	Chopper
A	DMC_MOVE_CHOP_REL	54	INT32	Move chopper relative. PARAM : In closed loop : Target position is in DMC_CHOP_CUR_POS units, i.e. -32767 = -10V, 32767 = 10V In open loop : Target is the commanded current in the DAC and is therefore in DMC_CHOP_OUTPUT units, i.e. -32767 = -133 mA, 32767 = 133 mA FAILURE CODE : 0xAA : Chopper controller is not enabled	Chopper
A	DMC_MOVE_CHOP_ABS_DITHER	55	INT32	Move chopper to absolute position + dither. PARAM : In closed loop : Target position is in DMC_CHOP_CUR_POS units, i.e. -32767 = -10V, 32767 = 10V In open loop : Target is the commanded current in the DAC and is therefore in DMC_CHOP_OUTPUT units, i.e. -32767 = -133 mA, 32767 = 133 mA FAILURE CODE : 0xAA : Chopper controller is not enabled	Chopper
A	DMC_MOVE_CHOP_REL_DITHER	56	INT32	Move chopper relative + dither. PARAM : In closed loop : Target position is in DMC_CHOP_CUR_POS units, i.e. -32767 = -10V, 32767 = 10V In open loop : Target is the commanded current in the DAC and is therefore in DMC_CHOP_OUTPUT units, i.e. -32767 = -133 mA, 32767 = 133 mA	Chopper



**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 14

				FAILURE CODE : 0xAA : Chopper controller is not enabled	
T	DMC_SET_CHOP_COIL_DRIVE	57	UINT32	Coil Drive Mode (bypass broken sections) + need to update PID parameters !!!!! : PARAM : bits0-7 contain configuration of relays - Normal Mode (0x28) - Bypass coil 1 (0x30) - Bypass coil 3 (0x48) - Bypass coil 1 and coil 3 (0x50) bits8 selects the open-loop mode : - if bit8 is set to 1, open loop mode is active - if bit8 is set to 0, closed loop mode is active FAILURE CODE : 0xAA : Chopper controller is enabled	Chopper
T	DMC_SWON_FW_SPEC	58	NONE	Connect spectro FW to driving amplifier	FW
T	DMC_SWON_FW_PHOTO	59	NONE	Connect photo FW to driving amplifier	FW
T	DMC_SWON_BD_HEATER	60	NONE	Switch on Blue DEC heater FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC blue
T	DMC_SWOF_BD_HEATER	61	NONE	Switch off Blue DEC heater FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC blue
T	DMC_SWON_BD_FLASHER	62	NONE	Switch on Blue DEC flasher FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC blue
T	DMC_SWOF_BD_FLASHER	63	NONE	Switch off Blue DEC flasher FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC blue
T	DMC_MOVE_SPEC_FW_LOC	64	UINT32	Move FW Spec to Filter ID PARAM: 0: Position A (0°) 1: Position B (180°) 2: Position A, opposite direction 3: Position B, opposite direction DURATION : max 18.75 sec if rate is 100 FAILURE CODE : 0xAA : FW Spec is not powered on	FW
T	DMC_MOVE_SPEC_FW_STEP	65	INT32	Move FW Spec by a number of steps PARAM: There are 6*256=1536 steps for 360°. Allowed values for this param is [-1536, +1536] DURATION : 18.75 sec for 360° if rate is 100 FAILURE CODE : 0xAA : FW Spec controller is not powered on	FW
T	DMC_MOVE_PHOTO_FW_LOC	66	UINT32	Move FW Photo to Filter ID PARAM: 0: Position A (0°) 1: Position B (180°) 2: Position A, opposite direction 3: Position B, opposite direction DURATION : max 18.75 sec if rate is 100 FAILURE CODE :	FW



T	DMC_MOVE_PHOTO_FW_STEP	67	INT32	0xAA : FW Spec is not powered on Move FW Photo by a number of steps PARAM: There are 6*256=1536 steps for 360°. Allowed values for this param is [-1536, +1536] DURATION : 18.75 sec for 360° if rate is 100 FAILURE CODE : 0xAA : FW Spec controller is not powered on	FW
T	DMC_SWON_BB_1_CONT	68	NONE	Switch-on the BB1 controller => measure is valid Start measurement in reading only mode	Calibration Sources
T	DMC_SWOF_BB_1_CONT	69	NONE	Switch-off the BB1 controller => measure is invalid	Calibration Sources
T	DMC_SET_TEMP_BB_1	70	UINT32	Modify the BB1 temperature setpoint. PARAM: The setpoint is the value of the resistor of the source. (1 unit = 100µohm)	Calibration Sources
T	DMC_SET_BB_1_VOLTAGE	71	INT32	Directly set supply voltage in heating mode (controller must be disabled) PARAM: The voltage to apply to the BB1: 0 = 0V 32767 = +10V NOTE : Square wave voltage output is applied. FAILURE CODE : 0xAA : BB1 is not powered on or controller is still enabled	Calibration Sources
T	DMC_SWON_BB_2_CONT	72	NONE	Switch-on the BB2 controller => measure is valid Start measurement in reading only mode	Calibration Sources
T	DMC_SWOF_BB_2_CONT	73	NONE	Switch-off the BB2 controller => measure is invalid	Calibration Sources
T	DMC_SET_TEMP_BB_2	74	UINT32	Modify the BB2 temperature setpoint. PARAM: The setpoint is the value of the resistor of the source. (1 unit = 100µohm)	Calibration Sources
T	DMC_SET_BB_2_VOLTAGE	75	INT32	Directly set supply voltage in heating mode (controller must be disabled) PARAM: The voltage to apply to the BB2: 0 = 0V 32767 = +10V NOTE : Square wave voltage output is applied. FAILURE CODE : 0xAA : BB2 is not powered on or controller is still enabled	Calibration Sources
T	DMC_START_DIAG_HK	76	UINT32	Start diagnostic HK. PARAM: the parameter is the period (in ms) between two housekeeping acquisitions with the following special values : 0 = 1 KHz 1 = Synchronize on blue spectrometer readouts 2 = Synchronize on red spectrometer readouts 4 = Synchronize on BOL readouts Maximum value is 65535. NOTE : You must be very careful when using the	HK Diagnostic





**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 16

				1KHz mode, 15 measures acquired at 1KHz consume 20% of CPU workload which is not acceptable if the CPU is already at full load (Both DEC's connected, transmitting to both SPUs and all mechanisms enabled) FAILURE CODE : 0xAA : HK acquisition already running	
T	DMC_STOP_DIAG_HK	77	NONE	Stops diagnostic HK at the end of current interval.	HK Diagnostic
I	DMC_START_HK	78	NONE	Internal command sent at start-up to start the hk acquisition. It validates the core of the OBS	
A	DMC_SWON_RD_HEATER	79	NONE	Switch on Red DEC heater FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
A	DMC_SWOF_RD_HEATER	80	NONE	Switch off Red DEC heater FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
A	DMC_SWON_RD_FLASHER	81	NONE	Switch on Red DEC flasher FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
A	DMC_SWOF_RD_FLASHER	82	NONE	Switch off Red DEC flasher FAILURE CODE : 0xAA : DEC is not switched-on or the connection between DMC and DEC is not established	DEC red
I	DMC_FW_GR_DAC_OUT	83	UINT32	Directly writes in the FW and Grating DAC. Internal command to be used on ground only with no mechanism connected ! PARAM: 16msb: DAC1 16lsb: DAC2 32767 = 550mA	
I	DMC_SPARE_CMD_3	84	NONE	Spare Command FAILURE CODE : 0xA7 : Invalid trigger ID	
I	DMC_SEND_COMMAND_TO_BLUE_DEC	85	UINT32	command to blue DEC	
T	DMC_START_RED_SPU_LINK	86	UINT32	0 = Slave 1 = master	1355
T	DMC_START_BLUE_SPU_LINK	87	UINT32	0 = Slave 1 = master	1355
T	DMC_COPY_OBS_TO_EEPROM	88	NONE	Copy the OBS in EEPROM. DURATION : 10 seconds. Avoid sending other commands during the writing.	OBSW
T	DMC_RESET_SMCS_CHIP_2	89	NONE	Reset the SMCS2.	1355
T	DMC_SELECT_MECH_CTRL_MODE	90	UINT32	Select in which mode each of the mechanism controller will be used PARAM (bit field): bit0: 0 = grating use real position 1 = grating is simulated (pos = setpoint) bit1: 0 = chopper controller use real position 1 = chopper pos is simulated (pos = setpoint) bit2:	Mechanisms



				0 = fw_spec use nominal position 1 = fw_spec use simulated position Bit3: 0 = fw_photo use nominal position 1 = fw_photo use simulated position Bit4: 0 = CS1 use nominal resistor reading 1 = CS1 is simulated (resistor = setpoint) Bit5: 0 = CS2 use nominal resistor reading 1 = CS2 is simulated (resistor = setpoint) Bit6 : 0 = nominal FS is execute 1 = FPGA status register diagnostic mode	
T	DMC_ENABLE_BB_1_CONT	91	NONE	Enable BB1 Controller	Calibration Sources
T	DMC_DISABLE_BB_1_CONT	92	NONE	Disable BB1 Controller	Calibration Sources
T	DMC_ENABLE_BB_2_CONT	93	NONE	Enable BB2 Controller	Calibration Sources
T	DMC_DISABLE_BB_2_CONT	94	NONE	Disable BB2 Controller	Calibration Sources
T	DMC_SWON_TEMP_SENSORS	95	NONE	Switch-on temperature sensors in FPU: Chopper, BB1, FPU1, FPU2, Grating, FWSpec, FWPhoto	Temperature Sensors
T	DMC_SWOF_TEMP_SENSORS	96	NONE	Switch-off temperature sensors in FPU	Temperature Sensors

## 4.2 Write Commands

Below you will find a list of the write commands. Their format is described in [AD6].

### 4.2.1 Parameters arrays formats

Activity ID	Function name	Description	Param ID	Length (words)	Subsystem
128	DMC_WRT_TIME	This buffer contains the time sent from DPU to DEC/MEC. Only 6 bytes are actually used (the first word contains the seconds, the 2 LSB of the second words contain the 1/65535th sec). Note : The change of Time occurs only when the DMC_SET_TIME command is called. At startup, the buffer is initialized with zeros.	0	2	Time Stamping
129	DMC_WRT_SEQ_BUFFER	Sequence Buffer : This buffer can contains maximum 256 commands stored on 2 words : the activity ID and the parameter. Note : The last command of the sequence must always be DMC_END_SEQUENCE. At startup, this buffer is filled by a default sequence (TBC).	1	max 512	Sequencer
130	DMC_WRT_SEQ_BUFFER_0	Sequence Buffer Split 0 : For some memory write commands (the ones coming from ground), the size is limited to 214 bytes. So, if we want to upload a big sequence, we have to split the command in a few write commands. For that purpose, we define ID's allowing us to	2	max 52	Sequencer



**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 18

		access different subset of the sequence buffer. Note : The Sequence Buffer Split Part 0 points to the same address as the Sequence Buffer.			
131	DMC_WRT_SEQ_BUFFER_1	This buffer points to the elements 26 to 51 of the Sequence Buffer.	3	max 52	Sequencer
132	DMC_WRT_SEQ_BUFFER_2	This buffer points to the elements 52 to 77 of the Sequence Buffer.	4	max 52	Sequencer
133	DMC_WRT_SEQ_BUFFER_3	This buffer points to the elements 78 to 103 of the Sequence Buffer.	5	max 52	Sequencer
134	DMC_WRT_SEQ_BUFFER_4	This buffer points to the elements 104 to 129 of the Sequence Buffer.	6	max 52	Sequencer
135	DMC_WRT_SEQ_BUFFER_5	This buffer points to the elements 130 to 155 of the Sequence Buffer.	7	max 52	Sequencer
136	DMC_WRT_SEQ_BUFFER_6	This buffer points to the elements 156 to 181 of the Sequence Buffer.	8	max 52	Sequencer
137	DMC_WRT_SEQ_BUFFER_7	This buffer points to the elements 182 to 207 of the Sequence Buffer.	9	max 52	Sequencer
138	DMC_WRT_SEQ_BUFFER_8	This buffer points to the elements 208 to 233 of the Sequence Buffer.	10	max 52	Sequencer
139	DMC_WRT_SEQ_BUFFER_9	This buffer points to the elements 234 to 255 of the Sequence Buffer.	11	max 44	Sequencer
140	DMC_WRT_NOT_USED_1	Writing one word in this value will not have any influence on the execution but it will not generate any error message.	12	1	
141	DMC_WRT_DIAG_HK_LIST	Housekeeping Diagnostic list : This buffer contains the list of Ids of HK Measures that are requested in the housekeeping diagnostic packet. Each ID is stored in one word (although only 16 bits are useful). The last ID must always be END_OF_HK_LIST (0xFFFF). At startup, the list is empty.	13	max 16	HK Diagnostic
142	DMC_WRT_DIAG_HK_CONF_TAB	Custom Hk Configuration Table : This buffer contains configuration data allowing us to increase the number of available Hk measure without recompiling the application. The table is composed of 10 entries each of them being 5 words long : q the address of the memory area to monitor q the size (in words) of the memory area to monitor q the size (in bytes) of the memory area to monitor q a pointer to a function performing the monitoring (if you want to use this field, it is highly probable that you need to patch your code anyway to upload the new monitoring function). q the validity at startup (0 = invalid, 1 = valid)  All the fields are initialized to zero at startup. (for advanced users only)	14	max 50	HK Diagnostic
143	DMC_WRT_GRAT_CONF_PAR	Parameters to configure the Grating servo loop. Start-up value and parameters description is given below	15	9	Grating
144	DMC_WRT_CHOP_CONF_PA R	Parameters to configure the Chopper servo loop. Start-up value and parameters description is	16	21	Chopper



**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 19

		given below.			
145	DMC_WRT_FW_SPEC_CONF_PAR	Parameters to configure the FW SPEC servo loop. Start-up value and parameters description is given below.	17	6	FW
146	DMC_WRT_FW_PHOT_CONF_PAR	Parameters to configure the FW PHOTO servo loop. Start-up value and parameters description is given below.	18	6	FW
147	DMC_WRT_CS1_CONF_PAR	Parameters to configure the CS1 Temperature regulator. - Kp : Proportional gain of the PI regulator (default value = 1000000) - Ki : Integral gain of the PI regulator (default value = 5000) - Maximum Accumulator Limit : The max value of the PI regulator accumulator (default value = 3277) - Minimum Accumulator Limit : The min value of the PI regulator accumulator (default value = 1857) - Output Threshold : The minimum output of the regulator; below this limit, the regulator is in "measure only" mode and this value is used to make the measure (default value = 327) - Output Limit : The maximum output of the regulator (default value = 0x7FFF) - DAC offset : value added to the output to cancel the DAC offset (default value = 0)	19	7	Calibration Sources
148	DMC_WRT_CS2_CONF_PAR	Parameters to configure the CS2 Temperature regulator. - Kp : Proportional gain of the PI regulator (default value = 1000000) - Ki : Integral gain of the PI regulator (default value = 5000) - Maximum Accumulator Limit : The max value of the PI regulator accumulator (default value = 3277) - Minimum Accumulator Limit : The min value of the PI regulator accumulator (default value = 1857) - Output Threshold : The minimum output of the regulator; below this limit, the regulator is in "measure only" mode and this value is used to make the measure (default value = 327) - Output Limit : The maximum output of the regulator (default value = 0x7FFF) - DAC offset : value added to the output to cancel the DAC offset (default value = 0)	20	7	Calibration Sources
149	DMC_WRT_GRAT_MAX_POWER	Output limit that will trigger the power limit error in case this limit is reached during 5s. This value is also used to trigger the end of the homing (when this limit is reached during 0.8s) Default values is 8855 (150mA) (conversion formula: 32767 = 555mA)	21	1	Grating
150	DMC_WRT_BOL_REC_OPT	BOL Receiver Options Only the 8 LSB are used as a bit field. At startup, its value is 0x04. The following options are defined :	22	1	1355



**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 20

		bit2 : 0 = forward data to Packet Encoder, 1 = don't forward data to Packet Encoder (data are lost)			
151	DMC_WRT_B_DEC_REC_OPT	Blue DEC Receiver Options Only the 8 LSB are used as a bit field. At startup, its value is 0x04. The following options are defined : bit2 : 0 = forward data to Packet Encoder, 1 = don't forward data to Packet Encoder (data are lost)	23	1	1355
152	DMC_WRT_R_DEC_REC_OPT	Red DEC Receiver Options Only the 8 LSB are used as a bit field. At startup, its value is 0x04. The following options are defined : bit2 : 0 = forward data to Packet Encoder, 1 = don't forward data to Packet Encoder (data are lost)	24	1	1355
153	DMC_WRT_MAX_DITHER	Dithering Amplitude : This integer contains the maximum dithering amplitude (in encoder steps). At startup, Dithering Amplitude = 16 (TBC).	25	1	Chopper
154	DMC_WRT_R_SPEC_PAR	Red DEC Parameters : This buffer contains the set of parameters that will be uploaded to red DEC by the SET_PARAM_RED_SPEC_ARRAY command. Start-up value is given below. See format description below	26	6	DEC red
155	DMC_WRT_B_SPEC_PAR	Blue DEC Parameters : This buffer contains the set of parameters that will be uploaded to blue DEC by the SET_PARAM_BLUE_SPEC_ARRAY command. Start-up value is given below. See format description below	27	6	DEC blue
156	DMC_WRT_SPU_TRAN_MODE	SPU Transmission Modes : - Blue SPU transmission mode (default = 0x10) - Red SPU transmission mode (default = 0x10) These words are inserted in the packets sent to the SPU.	28	2	1355
157	DMC_WRT_TIMING_FPGA_PAR	See below	29	max 6	Synchro
158	DMC_WRT_B_PACKET_ENC_LINK	ID of the link on which blue science data must be output - output to blue SPU (default) : 2 - output to red SPU : 3 (on AVM : 5)	30	1	1355
159	DMC_WRT_R_PACKET_ENC_LINK	ID of the link on which red science data must be output - output to blue SPU : 2 - output to red SPU (default) : 3 (on AVM : 5)	31	1	1355
160	DMC_WRT_GRAT_INDUCT_AMPL	Amplitude of the inductosyn excitation signal (0 = 0V, 4096 = 5V)	32	1	Grating
161	DMC_WRT_GRAT_RANGE	This parameter contains the number of encoder steps from one hardstop to the other. See in the section 'Using the grating' to see how to determine it. In the software, the default value is 0xF0000. NOTE : The grating PFM has a range of	33	1	Grating



		0x100000.			
162	DMC_WRT_GRAT_HALL_OFF SET	Parameter used to offset the hall sensors of the grating such that their values are centered on zero. Default value is 3000.	34	1	Grating
163	DMC_WRT_GRAT_DEG_MODE_PARAM	Parameters used for the grating degraded mode. - Rate : number of execution of the ISR between two steps in the sine table (1 step = 13,18 arcsec) (default value = 32 => 256 steps per second) - Maximum Output Current (default value = 8192 = 138,75mA), (conversion formula: 32767 = 555mA )	35	2	Grating
164	DMC_WRT_GRAT_CONF_FILTER	Parameters used for the filter applied on the output of the grating controller. The parameter block is composed of 5 coefficients (N1, N2, N3, D1, D2). They must be entered as integer values and are converted to float values at the time of the grating enable command. There is a 1000000 ratio between integer values and float values (1000000 in integer gives 1.0 in float). Default values: N1 = 1000000 N2, N3, D1, D2 = 0	36	5	Grating

#### 4.2.1.1 Red DEC parameters and Blue DEC parameters

The table below contains the description of the parameter array that can be written in DMC\_WRT\_B\_SPEC\_PAR and DMC\_WRT\_R\_SPEC\_PAR.

This array defines the values for the OBSW 5.016 and later and the DEC FPGAs delivered after the first DMC EM.

word	Parameter name	Range of values	Hardware, at power up	Initial values in data block
0	Clocks_per_readout	32-255	32	32
1	Readouts_per_ramp	2-65535	8	8
2	CRE_ctrl_reg	Bit field (see below)	8Ch	8Ch
3	Bias_r_command (bias applied to the resistor (dummy detector))	0-4095 (4095 = 1V)	0	0
4	Bias_d_command (bias applied to the detector)	0-4095 (4095 = 1V)	0	0
5	Simul_reg	Any (16 bits)	EA60h	EA60h

The table below contains a description of the CRE\_Ctrl\_Reg bit field.



Bit position	name	Active state ( logic 1 ) function	Remarks
0 (lsb)	Power on (don't care)	Hardware applies bias and supplies to CRE. Note: This bit is used by the trigger commands that switch on/off the detector arrays. So, the value of this bit written by the write command is not considered. Its description is given for information purpose only (it is accessible in the HK).	Hardware manages order of applying voltages
1	enable	CRE logic enabled and current sources active	Connects to CRE line "select" and to output lines bias current sources in DEC front end
2	SEL1	Capacitor select line SEL1	Name and number changed with QM CRE ICD, corresponding capacitor values are listed below.
3	SEL2	Capacitor select line SEL2	
4	curing	Puts electronics and CRE in curing mode	Activate CRE SYNC to force reset state + apply bias to detector pixels
5	Spare	Spare	Spare
6	simulation	Hardware put in simulation mode	Enable pixel data simulation (see section 4.4.2)
7	T° sensors control	T° sensors are biased	Apply bias current to 2K and 4K sensors
8	Spare	Spare	Spare
9	Ramp simulation	Hardware simulating ramps	Enable ramp simulation (see section 4.4.2)
10	Switch on/off heater (don't care)	Note: This bit is used by the trigger commands that switch on/off the heater. So, the value of this bit written by the write command is not considered. Its description is given for information purpose only (it is accessible in the HK).	0=OFF 1=ON
11	Switch on/off flasher (don't care)	Note: This bit is used by the trigger commands that switch on/off the flasher. So, the value of this bit written by the write command is not considered. Its description is given for information purpose only (it is accessible in the HK).	0=OFF 1=ON

The table below contains a description of values that can be given to bit 2 and 3 of CRE\_CTRL\_REG to select the capacitors.

Bit3 SEL2	Bit2 SEL1	Integrating capacitor value
0	0	100 fF
1	0	200 fF
0	1	400 fF
1	1	1 pF

#### 4.2.1.2 Grating parameters



The grating controller is a PID controller using the following function :

$$I_{out} = \frac{Kp}{1000} \cdot \varepsilon_t + \frac{Ki}{1000 \cdot F} \cdot \sum_t \varepsilon + \frac{Kd}{1000} \cdot F \cdot (\varepsilon_t - \varepsilon_{t-1})$$

With :

$I_{out}$  = DMC\_GRAT\_OUTPUT

$\varepsilon$  = DMC\_GRAT\_PID\_ERROR

F = Interrupt routine frequency (nominally 8192 Hz)

$\sum_t \varepsilon$  = DMC\_GRAT\_PID\_ACC

The table below contains a description of the parameter array that can be written in *DMC\_WRT\_GRAT\_CONF\_PAR*

word	type	name	Remarks	Default values in OBSW
0	int	Kp	Proportional gain	0x3e8
1	int	Ki	Integral gain	0xc350
2	int	Kd	Differential gain	0x12
3	int	Filter order	The order of the filtering applied on the speed of the grating. 0 means no filter.	0x0
4	int	Rate	Setpoint increment at each execution of the PID controller (each ISR execution). If rate = 3, grating will move by 3*8192=24576 unit/sec (around 1%/sec). The setpoint is incremented using the rate parameter until the commanded target value is reached. Note that the rate must not be higher than 3 for homing operations but can be increased to higher values otherwise. Tests have been performed on grating PFM with a rate of 12 (4%/sec.) successfully.	0x3
5	int	Accumulator Limit	PID controller accumulator limit. Above this value, the accumulator (DMC_GRAT_PID_ACC) will not be updated anymore. This can be used to avoid large overshoot. Attention : the value must never be higher than 0x7fffffff (MaxError*Ki) where MaxError is the maximum error ever expected.	0x51eae1
6	int	OutputLimit	PID controller output limit, maximum commanded current (32767 = 555mA). If the output is equal to this limit during 1 sec, the controller will be disabled (see below: Power Limit Error)	0x5c3f
7	int	Scaling	Hall sensor amplitude scaling. This is used to scale the amplitude of the actuator hall sensors to get an amplitude of 65536. A value of 1024 results in a scaling of 1. See §4.4.8.1 for more details.	0x6E5
8	int	ErrorLimit	Maximum error. If the error gets bigger than this limit, the controller will be disabled (see below: Error Limit Error).	0x5b06

The *DMC\_WRT\_GRAT\_HALL\_OFFSET* must also be changed for each model/temperature. This parameter is used to correct the offset of the actuator hall sensors. See §4.4.8.1 for more details.





The *DMC\_WRT\_GRAT\_INDUCT\_AMPL* must also be changed for each model/temperature. This parameter is used to adjust the maximum amplitude of the inductosyn sine and cosine signals to  $2\pm 0.2$  Vrms. See §4.4.8.1 for more details.

The *DMC\_WRT\_GRAT\_RANGE* must be used to set the range of the used grating. Note that this is not depending of temperature.

The *DMC\_WRT\_GRAT\_CONF\_FILT* must be used to change the output filter. This function is writing integer coefficients of the filter that must be converted into float values. The conversion from integer to float is done in the *DMC\_ENABLE\_GRAT\_CONT*.

The parameters used for the PFM grating during the acceptance test campaign at CSL are given in the table below (TBC). See PACS-CL-TR-019 and PACS-CL-TR-021 for test reports.

Parameter	Nominal circuit			Redundant circuit		
	Ambient	4.2 K		Ambient	4.2 K	
		Normal	Freq. switch		Normal	Freq. switch
Kp	0x38e	0x1388	0x32c8	0x38e	0x1388	0x2af8
Ki	0x7530	0x3d090	0xc350	0x7530	0x3d090	0xc350
Kd	0x12	0x28	0x28	0x12	0x28	0x28
Kf	0x0	0x0	0x0	0x0	0x0	0x0
Rate	0x3	0x3	0x5	0x3	0x3	0x5
AccumulatorLimit	0x10e4311	0x10e4311	0x10e4311	0x10e4311	0x10e4311	0x10e4311
OutputLimit	0x452f	0x452f	0x452f	0x452f	0x452f	0x452f
Scaling	0x8a4	0x71c	0x71c	0x859	0x6c9	0x6c9
ErrorLimit	0x5b06	0x5b06	0x5b06	0x5b06	0x5b06	0x5b06
Hall sensor offset	0x17d	0xd53	0xd53	-0x93	-0xd8b	-0xd8b
Inductosyn ampl.	TBD	TBD	TBD	TBD	TBD	TBD
Grating range	0x100000	0x100000	0x100000	0x100000	0x100000	0x100000

#### 4.2.1.3 Filter wheel parameters

The filter wheels are controlled in open loop as explained in §4.4.11.

The table below contains a description of the parameter array that can be written in *DMC\_WRT\_FW\_SPEC\_CONF\_PAR* or *DMC\_WRT\_FW\_PHOT\_CONF\_PAR*

word	type	name	remarks	Default values in OBSW
0	int	Rate	The number of interrupt count between two steps in the sine table (default = 100 => $100 * 1536 / 8192 = 18.75$ sec for 360°). This will define the frequency of the sine and cosine driving	0x64




			functions sent to the coils of the actuator and therefore determine the speed.	
1	int	Maximum Output Current	Default = 4096 = 69.4mA. Max value supported by the amplifier at ambient $T^\circ = 4133 = 70\text{mA}$ due to high coils impedance; max value at cold temperature = 32767 = 555mA). This actually defines the amplitude of the sine and cosine driving functions sent to the coils of the actuator. For example, if parameter = 4133, sine and cosine of +/-70 mA amplitude will be generated. This determine the torque of the actuator and therefore the acceleration.	0x1000
2	int	Switch A Control Threshold	Conversion formula: 32767 = 10V. Once the Hall Sensor of the position sensors reaches this limit, the FW is considered to be close to position A and no current is sent in the coils anymore. (flagged in bit 30 of the controller status word)	Photo = 6725 Spectro = 8365
3	int	Switch B Control Threshold	Conversion formula: 32767 = 10V. Once the Hall Sensor of the position sensors reaches this limit, the FW is considered to be close to position B and no current is sent in the coils anymore. (flagged in bit 31 of the controller status word)	Photo = 7830 Spectro = 6175
4	int	Switch A Status Threshold	Conversion formula: 32767 = 10V. Once the Hall Sensor of the position sensors is above this limit, the 'position A' bit will be set in the controller status word of the FW (flagged in bit 28 of the controller status word)	0x7d0
5	int	Switch B Status Threshold	Conversion formula: 32767 = 10V. Once the Hall Sensor of the position sensors is above this limit, the 'position B' bit will be set in the controller status word of the FW (flagged in bit 29 of the controller status word)	0x7d0

Maximum Output Current and Rate parameters must be adjusted carefully together in order to avoid high oscillation of the wheel during a move.

#### 4.2.1.4 Chopper parameters

The chopper controller has been defined by Zeiss (refer to PACS-MA-TN-678 for more details) and has the architecture as defined in the figure below. The controller is mainly composed of a PID control acting together with a velocity loop and a current loop feedbacks. Finally, the output of the controller is filtered through a digital filter to damp the resonance frequencies of the chopper structure and rotor. Furthermore, as Zeiss defined a voltage output controller while the DMC electronics specification was to control mechanism with current output amplifiers, a voltage to current conversion is made.

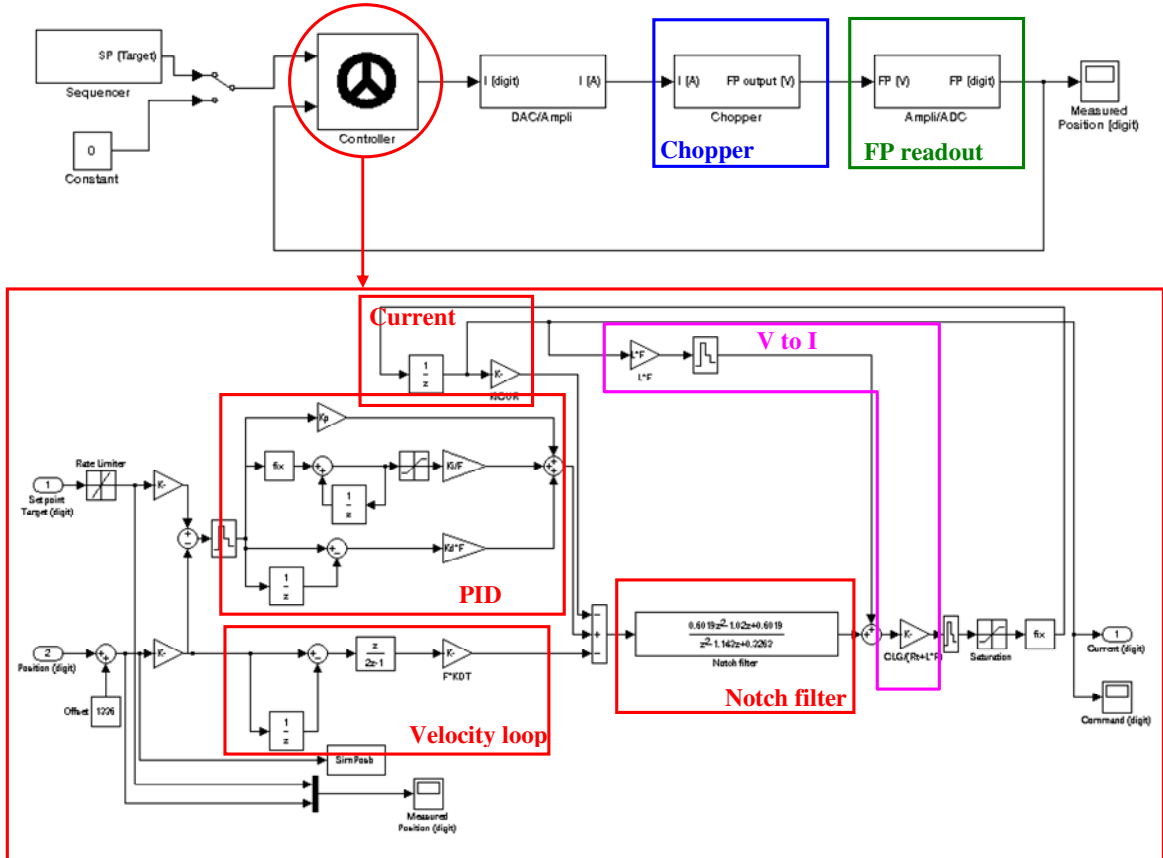

The table below contains a description of the parameter array that can be written in *DMC\_WRT\_CHOP\_CONF\_PAR*

word	type	name	remarks	Default values in OBSW
0	int	Kp	Proportional gain (see below for definition)	0x9F600
1	int	Ki	Integral gain (see below for definition)	0x4618560
2	int	Kd	Differential gain (see below for definition)	0x270
3	int	Kf	Velocity loop gain (see below for definition)	0x9C4
4	int	Rate	Determine how Setpoint is incremented at each execution of the PID controller (each ISR execution). This parameter determines the speed of the chopper during transition and therefore the transition time. The rate can be computed using the following formula : Rate = Amplitude / (Ttrans * Freq) where Amplitude = movement amplitude in setpoint units Ttrans = transition time in seconds Freq = sampling frequency (= interrupt routine frequency, usually 8192 Hz) For example, chopping with an amplitude of 26000 at a chopping frequency of 10 Hz with a transition time of 10 ms (20%) will be done using Rate = 26000/(0.01*8192) = 317.	0x148



			<p>The actual setpoint is incremented using a sine function related to the Rate parameter as shown in the figure below.</p>	
5	int	Accumulator Limit	<p>PID controller accumulator limit. Above this value, the accumulator (DMC_CHOP_PID_ACC) will not be updated anymore. This can be used to avoid large overshoot.</p> <p>Attention : the value must never be higher than 0x7ffffff- MaxError where MaxError is the maximum error ever expected (0xFFFF).</p>	0x3ffffff
6	int	OutputLimit	<p>PID controller output limit, maximum commanded current (32767 = 133mA). <b><u>This value must be carefully adjusted for different coils configurations used.</u></b></p> <p>In order to avoid any damage of the chopper, it is recommended to limit the output at 43 mA (0x2962) in nominal operation (3 coils) and increase the limit to 86 mA (0x52c4) (TBC) for 2 coils operation and to 133 mA (0x7fff) for 1 coil operation. Actually, the 3 coils are not identicals (2 small + 1 big) and therefore, consistent limits must be determined by test. See PACS-MA-TN-678.</p>	0x7fff
7	int	PosLimit	<p>Position limit. If the chopper goes further than this position, the controller is disabled and the ERR_CHOPPER_CONTROLLER_POSITION_ERROR is signalled. If it is set to 0x7FFFFFFF, it disables the position limit detection</p>	0x7FFFFFFF
8	int	ErrorLimit	<p>If the error is bigger than this value, the 'following error' is signalled (but no autonomous action is taken). If it is set to 0x7FFFFFFF, it disables the following error detection.</p>	0x7FFFFFFF
9	Int	PosOffset	<p>Offset added to the position readout to get 0 at the mechanical rest position of the chopper. Offset must be determined by recording the position of the chopper with no driving current.</p>	0x819
10	Int	KiCurr	<p>Current loop gain (see below for definition)</p>	0x668a0
11	int	SelectFieldPlateLUT	<p>Select the field plate lookup-table used to linearize the field plate output:</p> <ul style="list-style-type: none"> <li>0 = FM nominal field plate (to use with nominal FM chopper)</li> <li>1 = FM redundant field plate (to use with redundant FM chopper)</li> <li>2 = FS nominal field plate (to use with nominal FS chopper)</li> <li>3 = FS redundant field plate (to use with redundant FS chopper)</li> </ul> <p>Other values = no lookup-table is used (same as with version 6.017 and before)</p>	0x0
12	Int	Spare	<p>Not used anymore</p>	0x0
13	Int	FilterN1	<p>Filter factor (see below for definition)</p>	0x21F
14	Int	FilterN2	<p>Filter factor (see below for definition)</p>	0x345



15	Int	FilterN3	Filter factor (see below for definition)	0x21F
16	Int	FilterD1	Filter factor (see below for definition)	0x3EB
17	Int	FilterD2	Filter factor (see below for definition)	0xFB
18	Int	Inductance	Chopper inductance used in V to I conversion. Units are in mH.	0x97
19	Int	Resistance	Chopper resistance used in V to I conversion. Units are in mΩ.	0x3C1E
20	Int	ControlLoop Gain	Control loop gain (see below for definition)	0x3E8

The chopper controller parameters are usually defined by Zeiss and can be converted to DMC units as shown hereunder. The parameter conversion is each time given as example for the FM chopper for the case at cold temperature (8K), 3 coils configuration, 4.1 degrees, 10 Hz rectangle (see PACS-MA-TN-678 §5.1).

– Kp : proportional gain

Obtained using Zeiss parameters **KP**, **FPMult**, **FPMPS/FPMNS** (usually identical, if not take (FPMPS+FPMNS)/2) by the following formula :

$$Kp = KP * 75180 * FPMult * (FPMPS + FPMNS) / 2 * 34.35 / 50$$

Example : Kp = 389431 (0x5f137)

– Ki : integral gain

Obtained using Zeiss parameters **KI**, **FPMult**, **FPMPS/FPMNS** (usually identical, if not take (FPMPS+FPMNS)/2) by the following formula :

$$Ki = KI * 75180 * FPMult * (FPMPS + FPMNS) / 2 * 34.35 / 50$$

Example : Ki = 36696373 (0x22ff135)

– Kd : differential gain

Obtained using Zeiss parameters **KD**, **FPMult**, **FPMPS/FPMNS** (usually identical, if not take (FPMPS+FPMNS)/2) by the following formula :

$$Kd = KD * 75180 * FPMult * (FPMPS + FPMNS) / 2 * 34.35 / 50$$

Example : Kd = 614 (0x266)

– Kf : velocity loop gain

Obtained using Zeiss parameters **KDT**, **FPMult**, **FPMPS/FPMNS** (usually identical, if not take (FPMPS+FPMNS)/2) by the following formula :

$$Kf = KDT * 75180 * FPMult * (FPMPS + FPMNS) / 2 * 34.35 / 50$$

Example : Kf = 1198 (0x4ae)

– KiCurr : current loop gain

Obtained using Zeiss parameters **KICUR** by the following formula :



KiCurr = KICUR\*100000

Example : KiCurr = 237000 (0x39dc8)

– FilterN1, FilterN2, FilterN3, FilterD1, FilterD2

These parameters are defining the output filter. Any kind of filter can be used as soon as it can be defined based on the formula :

$$Y = \frac{\frac{FilterN1}{1e6} \cdot z^2 - \frac{FilterN2}{1e6} \cdot z + \frac{FilterN3}{1e6}}{z^2 - \frac{FilterD1}{1e6} \cdot z + \frac{FilterD2}{1e6}} \cdot X$$

Example 1: Notch filter

Obtained using Zeiss Notch filter parameters **F1, DA** and by discretisation of the Zeiss Notch filter function using the Matlab “c2d” function as following :

```
Nfzeiss=tf([1 0 (2*pi*F1)^2],[1 DA*2*pi*F1 (2*pi*F1)^2]);  
Nfzeissd=c2d(Nfzeiss,1/8192,'matched');
```

```
Command Window  
>> Nfzeiss  
  
Transfer function:  
      s^2 + 3.198e007  
-----  
s^2 + 1.131e004 s + 3.198e007  
  
>> Nfzeissd  
  
Transfer function:  
0.5429 z^2 - 0.8372 z + 0.5429  
-----  
      z^2 - 1.003 z + 0.2514  
  
Sampling time: 0.00012207  
>> |
```

Therefore :

FilterN1 = 542900 (0x848b4)


FilterN2 = 837200 (0xcc650)

FilterN3 = 542900 (0x848b4)



FilterD1 = 1003000 (0xf4df8)  
FilterD2 = 251400 (0x3d608)

The figure below shows the two functions Nfzeiss and Nfzeissd in a Bode diagram. Validity of the discretisation can be assessed.

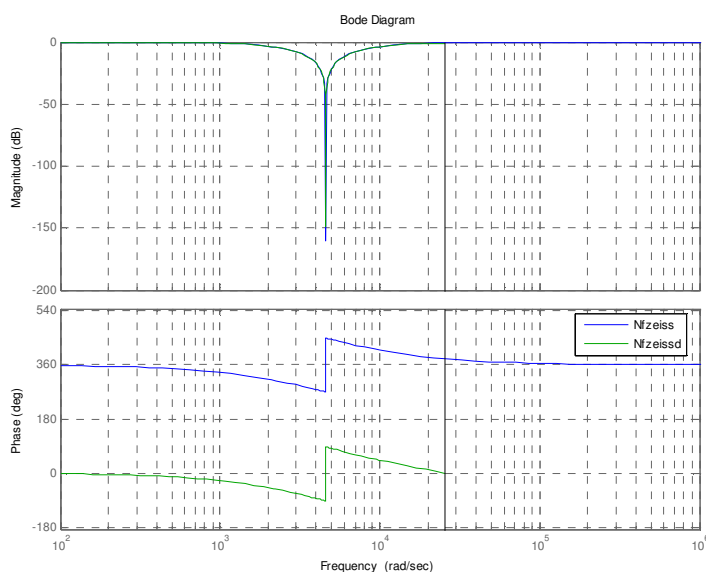

### Example 2 : Elliptic low pass filter

An elliptic filter of order N can be defined using the Matlab "ellip" function as following :

```
[N,D]=ellip(N,Rp,Rs,Wn);  
lpfilter=tf(N,D,1/8192);
```

where

Rp = maximum ripple amplitude allowed in passband (in dB)

Rs = minimum attenuation in stopband (in dB)

Wn = normalised cutoff frequency (= cutoff frequency (in Hz) divided by half of the sampling frequency (= 4096))

The example is using :

N=2, Rp=3, Rs=20, Wn=400/4096



```
Command Window
>> [N,D]=ellip(2,6,20,400/4096)

N =

    0.1010    -0.1719    0.1010

D =

    1.0000   -1.8396    0.8999

>> lpfilter=tf(N,D,1/8192)

Transfer function:
0.101 z^2 - 0.1719 z + 0.101
-----
z^2 - 1.84 z + 0.8999


Sampling time: 0.00012207
>>
```

Therefore :

- FilterN1 = 101880 (0x18df8)
- FilterN2 = 156500 (0x26354)
- FilterN3 = 101880 (0x18df8)
- FilterD1 = 1768200 (0x1afb08)
- FilterD2 = 834956 (0xcbd8c)

The figure below shows the low pass filter lpfilter compared with the notch filter Nfzeissd (as defined in example 1) in a Bode diagram.



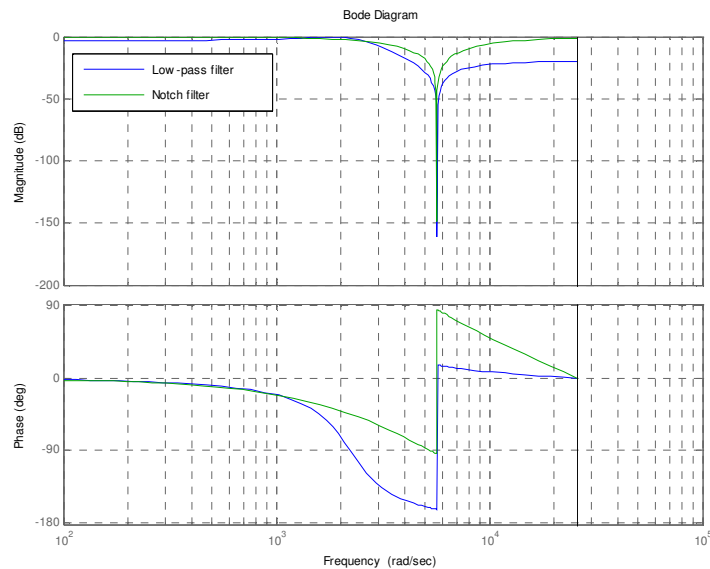

– ControlLoopGain : control loop gain

Obtained using Zeiss parameters **CLG** by the following formula :

$$\text{ControlLoopGain} = \text{CLG} * 1000$$

Example : ControlLoopGain = 1000 (0x3e8)

#### 4.2.1.5 Calibration source parameters

The calibration source controller is a PI controller using the following function :

$$V_{out} = K_p \cdot \varepsilon_t + \frac{K_i}{F} \cdot \sum_t \varepsilon$$

With :

$$V_{out} = \text{DMC\_CS1\_OUTPUT} / \text{DMC\_CS2\_OUTPUT}$$

$$\varepsilon = (\text{DMC\_CS1\_TARGET} - \text{DMC\_CS1\_RES\_VALUE}) / 1000000 \\ + (\text{DMC\_CS2\_TARGET} - \text{DMC\_CS2\_RES\_VALUE}) / 1000000$$

F = Calibration source controller frequency (0.05 Hz)

$\sum_t \varepsilon / F$  = Calibration source accumulator (no HK variable for it)

The table below contains a description of the parameter array that can be written in *DMC\_WRT\_CS1\_CONF\_PAR* / *DMC\_WRT\_CS2\_CONF\_PAR*.



word	type	name	remarks	Default values in OBSW
0	int	Kp	Proportional gain	0xf4240
1	int	Ki	Integral gain	0x1388
2	int	Maximum Accumulator Limit	Upper limitation to the controller accumulator. This is used to avoid large overshoot when heating the source for a long time. The integral part of the controller should be acting only when the setpoint is almost reached. Value is multiplied by 1000 to increase resolution. Division by 1000 is done by OBSW before use.	0xccd
3	int	Minimum Accumulator Limit	Lower limitation to the controller accumulator. This is used to avoid large undershoot when cooling the source for a long time. The integral part of the controller should be acting only when the setpoint is almost reached. Value is multiplied by 1000 to increase resolution. Division by 1000 is done by OBSW before use.	0x741
4	int	Output Threshold	The minimum output of the regulator; below this limit, the regulator switch to the "reading only" mode and this value is used for the measurement step. See §4.4.13 for details	0x147
5	int	OutputLimit	PID controller output limit, maximum commanded voltage. Currently not used.	0x7fff
6	int	DAC Offset	Value added to the output to cancel an eventual DAC offset. Currently not used.	0x0

#### 4.2.1.6 Timing FPGA parameters

The table below contains a description of the parameter array that can be written in DMC\_WRT\_TIMING\_FPGA\_PAR.

word	Parameter name	Parameter function	Range of values	Hardware, at power up	Initial values in data block (spectro)	Suggested values for photo mode
0	Sync_src_sel_reg	Obsolete: Synchronisation source selector (this parameter is now accessible only through the DMC_SYNCHRONIZE_ON_DET trigger command). The value is not used.	NA	0	0	0
1	Phase_shift_reg	Delay between external sync edge and software signal triggering the move of the mechanism (expressed in number of interrupt routine) Note: when phase_shift_reg != 0, the actual delay is actually given by phase_shift_reg+1 (it is therefore impossible to set an actual phase shift	0 to number of ISR per readout -1 (207 for photo, 31 for spectro)	0	0	0



		of 1)				
2	Bolc_freq_div	BOLC frequency divider (for debug/advanced users only)	0 to 31	0	0	0
3	Pd5_reg	Programmable divider 5 (for debug/advanced users only)	0 to 511	26	26	26
4	Phase_inc	Phase increment	See below	0x095217C B	0x095217CB	0x0977602 A
5	Control_register	Control register	See below	0xB	0xB	0x22 and 0x32 (see section 4.4.3)

The Phase\_inc parameter shall only contain one of the recommended values given for each mode. Entering an invalid value (like 0 or something bigger than 0x7FFFFFFF) might completely block the DMC.

The table below contains the description of all the bits of Control\_register. Note that bits 2, 22, 23, 24 are modified by DMC OBS and are therefore not modifiable by DPU command.

Bit (lsb=0)	ID	Power on value	When bit = 0	When bit = 1
0	Not used	0	NA	
1	PERIOD_COUNT_ENB Period count enable: enable period measurement. The period is the interval between 2 synchro signals (received from DEC's or BOLC). When enabled, the DMC_OBT_COUNT is updated every time a synchro signal is received.	0	Period measurement circuit disabled	Period measurement circuit enabled
2	Not used	0	NA	
3	RESET_PLL_BY_OBT When enabled, the PLL locks on the OBT. Otherwise, the PLL is in free run.	0	OBT is not connected to PLL. PLL is free running	PLL is locked on OBT. (for SPECTRO mode)
4	PLL_PD_SYNC Resets all internal counters at next synchro. This should be done only once. It ensures that the mechanism movement will be synchronized with the synchro signal.	0	Timing registers free	Timing registers reset at SYNC time
5	RESET_PLL_BY_BOLC When enabled, the PLL locks on BOLC sync. Otherwise, the PLL is in free run.	0	BOLC not connected to PLL. PLL is free running	PLL is locked on BOLC. (for PHOTO mode)
6-16	Not used	0	NA	
17	SAMPLE and IRQ frequency selection	00	Sample frequency in spectro mode	



18			00 = 8192 Hz 01 = 4096 Hz 10 = 2048 Hz 11 = 1024 Hz Note: 01 means bit18=0 and bit17=1
19	CRE clock frequency	00	CRE CLOCK frequency 00 = 8192 Hz 01 = 4096 Hz 10 = 2048 Hz 11 = 1024 Hz Note: 10 means bit18=1 and bit17=0
20			
21-31	Not used	0	NA

### 4.3 Dump/Check commands

The format of dump and check commands is defined in [AD6].

The activity IDs for these commands are :

Dump : 200

Check : 210

#### 4.3.1 Dump addresses

In order to be able to issue a dump command, one should know the start address and length of the memory area to dump.

These addresses are subject to change for every new version of the software and every patch. These addresses will be listed in this document but it is also possible to obtain them directly from the software. By dumping DM at address 0x60000, you will get the first column of the table below.

These addresses can also be used to program the custom hk entries: In exemple, if you want to monitor the DMC\_CHOP\_IA continuously, you should:

- Get the address of this variable from the table below: 0x346ab
- Get the length in words from the table below: 1
- Get the length in bytes from the HK table: 2
- Configure the custom hk entry 1 to monitor CHOP\_IA by writing 5 words in DMC\_WRT\_DIAG\_HK\_CONF\_TAB:
  - Address = 0x546ad
  - Size in words = 1
  - Size in bytes = 2
  - Function = 0



- Validity = 1

Note: the table below is given for information only and is applicable for version 6.026 only, always use the dump command each time you change the software

Address in DM	Content	Length (in words)
0x00054490	DMC_WRT_TIME	2
0x00054494	DMC_WRT_SEQ_BUFFER	max 512
0x00054494	DMC_WRT_SEQ_BUFFER_0	max 52
0x000544c8	DMC_WRT_SEQ_BUFFER_1	max 52
0x000544fc	DMC_WRT_SEQ_BUFFER_2	max 52
0x00054530	DMC_WRT_SEQ_BUFFER_3	max 52
0x00054564	DMC_WRT_SEQ_BUFFER_4	max 52
0x00054598	DMC_WRT_SEQ_BUFFER_5	max 52
0x000545cc	DMC_WRT_SEQ_BUFFER_6	max 52
0x00054600	DMC_WRT_SEQ_BUFFER_7	max 52
0x00054634	DMC_WRT_SEQ_BUFFER_8	max 52
0x00054668	DMC_WRT_SEQ_BUFFER_9	max 44
0x000036a3	DMC_WRT_GRAT_MAX_POWER	1
0x00054479	DMC_WRT_DIAG_HK_LIST	max 16
0x00002d2e	DMC_WRT_DIAG_HK_CONF_TAB	max 50
0x0000436b	DMC_WRT_GRAT_CONF_PAR	9
0x0000439b	DMC_WRT_CHOP_CONF_PAR	21
0x000543c3	DMC_WRT_FW_SPEC_CONF_PAR	6
0x000543d7	DMC_WRT_FW_PHOT_CONF_PAR	6
0x000543fe	DMC_WRT_CS1_CONF_PAR	7
0x0005443a	DMC_WRT_CS2_CONF_PAR	7
0x00004386	DMC_WRT_NOT_USED_2	1
0x00003d74	DMC_WRT_BOL_REC_OPT	1
0x00003aee	DMC_WRT_B_DEC_REC_OPT	1
0x00003c2d	DMC_WRT_R_DEC_REC_OPT	1
0x0005513f	DMC_WRT_MAX_DITHER	1
0x00003d61	DMC_WRT_R_SPEC_PAR	6
0x00003c22	DMC_WRT_B_SPEC_PAR	6
0x0005475f	DMC_WRT_SPU_TRAN_MODE	2
0x0005471b	DMC_WRT_TIMING_FPGA_PAR	max 6
0x00054761	DMC_WRT_B_PACKT_ENC_LINK	1
0x00054762	DMC_WRT_R_PACKT_ENC_LINK	1
0x00004376	DMC_WRT_GRAT_INDUCT_AMPL	1
0x00004375	DMC_WRT_GRAT_RANGE	1
0x00004377	DMC_WRT_GRAT_HALL_OFFSET	1
0x00004378	DMC_WRT_GRAT_DEG_MODE_PARAM	2



0x00004388	DMC_WRT_GRAT_CONF_FILT	5
0x00054763	DMC_DMP_MEM_SCR_STAT Memory Scrubbing Status: - Last DM address checked - Last PM address checked - Index where the next Single Failure in DM will be stored in DMC_DMP_MEM_SCR_SF_DM - Index where the next Single Failure in PM will be stored in DMC_DMP_MEM_SCR_SF_PM - Index where the next Double Failure in DM will be stored in DMC_DMP_MEM_SCR_SF_DM - Index where the next Double Failure in PM will be stored in DMC_DMP_MEM_SCR_SF_PM	6
0x00054769	DMC_DMP_MEM_SCR_SF_DM Array containing the DM addresses where a single failure has been detected. The last failing address is given by the index-1 (the index can be found in DMC_DMP_MEM_SCR_STAT)	256
0x00054869	DMC_DMP_MEM_SCR_SF_PM Array containing the PM addresses where a single failure has been detected. The last failing address is given by the index-1 (the index can be found in DMC_DMP_MEM_SCR_STAT)	256
0x00054969	DMC_DMP_MEM_SCR_DF_DM Array containing the DM addresses where a double failure has been detected. The last failing address is given by the index-1 (the index can be found in DMC_DMP_MEM_SCR_STAT)	256
0x00054a69	DMC_DMP_MEM_SCR_DF_PM Array containing the PM addresses where a double failure has been detected. The last failing address is given by the index-1 (the index can be found in DMC_DMP_MEM_SCR_STAT)	256
0x0000427a	BOLC_HK_1	1
0x0000427b	BOLC_HK_2	1
0x0000427c	BOLC_HK_3	1
0x0000427d	BOLC_HK_4	1
0x0000427e	BOLC_HK_5	1
0x0000427f	BOLC_HK_6	1
0x00004280	BOLC_HK_7	1
0x00004281	BOLC_HK_8	1
0x00004282	BOLC_HK_9	1
0x00004283	BOLC_HK_10	1
0x00004284	BOLC_HK_11	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 38

0x00004285	BOLC_HK_12	1
0x00004286	BOLC_HK_13	1
0x00004287	BOLC_HK_14	1
0x00004288	BOLC_HK_15	1
0x00004289	BOLC_HK_16	1
0x0000428a	BOLC_HK_17	1
0x0000428b	BOLC_HK_18	1
0x0000428c	BOLC_HK_19	1
0x0000428d	BOLC_HK_20	1
0x0000428e	BOLC_HK_21	1
0x0000428f	BOLC_HK_22	1
0x00004290	BOLC_HK_23	1
0x00004291	BOLC_HK_24	1
0x00004292	BOLC_HK_25	1
0x00004293	BOLC_HK_26	1
0x00004294	BOLC_HK_27	1
0x00004295	BOLC_HK_28	1
0x00004296	BOLC_HK_29	1
0x00004297	BOLC_HK_30	1
0x00004298	BOLC_HK_31	1
0x00004299	BOLC_HK_32	1
0x0000429a	BOLC_HK_33	1
0x0000429b	BOLC_HK_34	1
0x0000429c	BOLC_HK_35	1
0x0000429d	BOLC_HK_36	1
0x0000429e	BOLC_HK_37	1
0x0000429f	BOLC_HK_38	1
0x000042a0	BOLC_HK_39	1
0x000042a1	BOLC_HK_40	1
0x000042a2	BOLC_HK_41	1
0x000042a3	BOLC_HK_42	1
0x000042a4	BOLC_HK_43	1
0x000042a5	BOLC_HK_44	1
0x000042a6	BOLC_HK_45	1
0x000042a7	BOLC_HK_46	1
0x000042a8	BOLC_HK_47	1
0x000042a9	BOLC_HK_48	1
0x000042aa	BOLC_HK_49	1
0x000042ab	BOLC_HK_50	1
0x000042ac	BOLC_HK_51	1
0x000042ad	BOLC_HK_52	1
0x000042ae	BOLC_HK_53	1
0x000042af	BOLC_HK_54	1
0x000042b0	BOLC_HK_55	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 39

0x000042b1	BOLC_HK_56	1
0x000042b2	BOLC_HK_57	1
0x000042b3	BOLC_HK_58	1
0x000042b4	BOLC_HK_59	1
0x000042b5	BOLC_HK_60	1
0x000042b6	BOLC_HK_61	1
0x000042b7	BOLC_HK_62	1
0x000042b8	BOLC_HK_63	1
0x000042b9	BOLC_HK_64	1
0x000042ba	BOLC_HK_65	1
0x000042bb	BOLC_HK_66	1
0x000042bc	BOLC_HK_67	1
0x000042bd	BOLC_HK_68	1
0x000042be	BOLC_HK_69	1
0x000042bf	BOLC_HK_70	1
0x000042c0	BOLC_HK_71	1
0x000042c1	BOLC_HK_72	1
0x000042c2	BOLC_HK_73	1
0x000042c3	BOLC_HK_74	1
0x000042c4	BOLC_HK_75	1
0x000042c5	BOLC_HK_76	1
0x000042c6	BOLC_HK_77	1
0x000042c7	BOLC_HK_78	1
0x000042c8	BOLC_HK_79	1
0x000042c9	BOLC_HK_80	1
0x000042ca	BOLC_HK_81	1
0x000042cb	BOLC_HK_82	1
0x000042cc	BOLC_HK_83	1
0x000042cd	BOLC_HK_84	1
0x000042ce	BOLC_HK_85	1
0x000042cf	BOLC_HK_86	1
0x000042d0	BOLC_HK_87	1
0x000042d1	BOLC_HK_88	1
0x000042d2	BOLC_HK_89	1
0x000042d3	BOLC_HK_90	1
0x000042d4	BOLC_HK_91	1
0x000042d5	BOLC_HK_92	1
0x000042d6	BOLC_HK_93	1
0x000042d7	BOLC_HK_94	1
0x000042d8	BOLC_HK_95	1
0x000042d9	BOLC_HK_96	1
0x000042da	BOLC_HK_97	1
0x000042db	BOLC_HK_98	1
0x000042dc	BOLC_HK_99	1





Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 40

0x000042dd	BOLC_HK_100	1
0x000042de	BOLC_HK_101	1
0x000042df	BOLC_HK_102	1
0x000042e0	BOLC_HK_103	1
0x000042e1	BOLC_HK_104	1
0x000042e2	BOLC_HK_105	1
0x000042e3	BOLC_HK_106	1
0x000042e4	BOLC_HK_107	1
0x000042e5	BOLC_HK_108	1
0x000042e6	BOLC_HK_109	1
0x000042e7	BOLC_HK_110	1
0x000042e8	BOLC_HK_111	1
0x000042e9	BOLC_HK_112	1
0x000042ea	BOLC_HK_113	1
0x000042eb	BOLC_HK_114	1
0x000042ec	BOLC_HK_115	1
0x000042ed	BOLC_HK_116	1
0x000042ee	BOLC_HK_117	1
0x000042ef	BOLC_HK_118	1
0x000042f0	BOLC_HK_119	1
0x000042f1	BOLC_HK_120	1
0x000042f2	BOLC_HK_121	1
0x000042f3	BOLC_HK_122	1
0x000042f4	BOLC_HK_123	1
0x000042f5	BOLC_HK_124	1
0x000042f6	BOLC_HK_125	1
0x000042f7	BOLC_HK_126	1
0x000042f8	BOLC_HK_127	1
0x000042f9	BOLC_HK_128	1
0x000042fa	BOLC_HK_129	1
0x000042fb	BOLC_HK_130	1
0x000042fc	BOLC_HK_131	1
0x000042fd	BOLC_HK_132	1
0x000042fe	BOLC_HK_133	1
0x000042ff	BOLC_HK_134	1
0x00004300	BOLC_HK_135	1
0x00004301	BOLC_HK_136	1
0x00004302	BOLC_HK_137	1
0x00004303	BOLC_HK_138	1
0x00004304	BOLC_HK_139	1
0x00004305	BOLC_HK_140	1
0x00004306	BOLC_HK_141	1
0x00004307	BOLC_HK_142	1
0x00004308	BOLC_HK_143	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 41

0x00004309	BOLC_HK_144	1
0x0000430a	BOLC_HK_145	1
0x0000430b	BOLC_HK_146	1
0x0000430c	BOLC_HK_147	1
0x0000430d	BOLC_HK_148	1
0x0000430e	BOLC_HK_149	1
0x0000430f	BOLC_HK_150	1
0x00004310	BOLC_HK_151	1
0x00004311	BOLC_HK_152	1
0x00004312	BOLC_HK_153	1
0x00004313	BOLC_HK_154	1
0x00004314	BOLC_HK_155	1
0x00004315	BOLC_HK_156	1
0x00004316	BOLC_HK_157	1
0x00004317	BOLC_HK_158	1
0x00004318	BOLC_HK_159	1
0x00004319	BOLC_HK_160	1
0x0000431a	BOLC_HK_161	1
0x0000431b	BOLC_HK_162	1
0x0000431c	BOLC_HK_163	1
0x0000431d	BOLC_HK_164	1
0x0000431e	BOLC_HK_165	1
0x0000431f	BOLC_HK_166	1
0x00004320	BOLC_HK_167	1
0x00004321	BOLC_HK_168	1
0x00004322	BOLC_HK_169	1
0x00004323	BOLC_HK_170	1
0x00004324	BOLC_HK_171	1
0x00004325	BOLC_HK_172	1
0x00004326	BOLC_HK_173	1
0x00004327	BOLC_HK_174	1
0x00004328	BOLC_HK_175	1
0x00004329	BOLC_HK_176	1
0x0000432a	BOLC_HK_177	1
0x0000432b	BOLC_HK_178	1
0x0000432c	BOLC_HK_179	1
0x0000432d	BOLC_HK_180	1
0x0000432e	BOLC_HK_181	1
0x0000432f	BOLC_HK_182	1
0x00004330	BOLC_HK_183	1
0x00004331	BOLC_HK_184	1
0x00004332	BOLC_HK_185	1
0x00004333	BOLC_HK_186	1
0x00004334	BOLC_HK_187	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 42

0x00004335	BOLC_HK_188	1
0x00004336	BOLC_HK_189	1
0x00004337	BOLC_HK_190	1
0x00004338	BOLC_HK_191	1
0x00004339	BOLC_HK_192	1
0x0000433a	BOLC_HK_193	1
0x0000433b	BOLC_HK_194	1
0x0000433c	BOLC_HK_195	1
0x0000433d	BOLC_HK_196	1
0x0005475e	DMC_SW_GLOBAL_ST	1
0x0005448a	DMC_SEQ_STATUS	1
0x00003d6b	DMC_DPU_REC_STAT	1
0x00003d6d	DMC_DPU_SEN_STAT	1
0x00003aed	DMC_DECB_REC_STA	1
0x00003c16	DMC_DECB_CTRL_ST	1
0x0000435a	DMC_BLUE_PAC_ENC	1
0x00003c2c	DMC_DECR_REC_STA	1
0x00003d55	DMC_DECR_CTRL_ST	1
0x0000435d	DMC_RED_PAC_ENC	1
0x00003d73	DMC_BOL_REC_STAT	1
0x00003d6f	DMC_BOL_CTRL_STA	1
0x0000436a	DMC_GRAT_CTRL_ST	1
0x0000439a	DMC_CHOP_CTRL_ST	1
0x000543c2	DMC_FW_SPEC_CTRL	1
0x000543d6	DMC_FW_PHOT_CTRL	1
0x000036a3	DMC_CHECKSUM	1
0x000543ea	DMC_CS1_CTRL_STA	1
0x00054426	DMC_CS2_CTRL_STA	1
0x0005448b	DMC_SEQ_OPTIONS	1
0x00054493	DMC_SEQ_POINTER	1
0x00054695	DMC_SEQ_LOOP_ID0	1
0x00054696	DMC_SEQ_LOOP_ID1	1
0x00054697	DMC_SEQ_LOOP_ID2	1
0x00054698	DMC_SEQ_LOOP_ID3	1
0x00054699	DMC_SEQ_LOOP_ID4	1
0x0005469a	DMC_SEQ_WAIT_IND	1
0x00054492	DMC_SEQ_LABEL	1
0x0005448c	DMC_OBSID	1
0x0005448d	DMC_BBID	1
0x0005448e	DMC_TIME_1	1
0x0005448f	DMC_TIME_2	1
0x00003aef	DMC_DECB_REC_PAC	1
0x00003c2e	DMC_DECR_REC_PAC	1
0x00003c17	DMC_DECB_CTRL_PA	1



**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 43

0x00003d56	DMC_DECR_CTRL_PA	1
0x0000435c	DMC_BLUE_ENC_PAC	1
0x0000435f	DMC_RED_ENC_PAC	1
0x00003d75	DMC_BOL_REC_PAC	1
0x00003d70	DMC_BOL_CTRL_PAC	1
0x00003d6c	DMC_DPU_REC_PAC	1
0x00003d6e	DMC_DPU_SEND_PAC	1
0x00003af0	DMC_B_SPEC_READ	1
0x00003c2f	DMC_R_SPEC_READ	1
0x0005469e	DMC_BOL_READ_CNT	1
0x0005475d	DMC_CPU_LOAD	1
0x0005469c	DMC_IRS_CNT	1
0x00003aec	DMC_VID	1
0x00004392	DMC_CHOP_CUR_POS	1
0x00004396	DMC_CHOP_SETPOIN	1
0x00004399	DMC_CHOP_TARGET	1
0x00004394	DMC_CHOP_PID_ERR	1
0x00004395	DMC_CHOP_PID_ACC	1
0x0005513f	DMC_CHOP_MAX_DIT	1
0x00004362	DMC_GRAT_CUR_POS	1
0x00004366	DMC_GRAT_SETPOIN	1
0x00004369	DMC_GRAT_TARGET	1
0x00004364	DMC_GRAT_PID_ERR	1
0x00004365	DMC_GRAT_PID_ACC	1
0x000543d3	DMC_FWSP_CUR_POS	1
0x00003acd	DMC_FWGRAT_HALLA	1
0x00003ace	DMC_FWGRAT_HALLB	1
0x00004393	DMC_CHOP_OUTPUT	1
0x0005469d	DMC_ISR_STAT	1
0x000543e7	DMC_FWPH_CUR_POS	1
0x000036a3	DMC_SPARE1	1
0x000036a3	DMC_SPARE2	1
0x00054b6a	DMC_PLL_RES_LO	1
0x00054b6b	DMC_PLL_RES_HI	1
0x00003b26	DMC_DECB_VDDD_3	1
0x00003b2c	DMC_DECB_VSS_3	1
0x00003b2d	DMC_DECB_VGND_3	1
0x00003b2a	DMC_DECB_VCAN1_3	1
0x00003b29	DMC_DECB_VCAN2_3	1
0x00003b2e	DMC_DECB_V0BIAS3	1
0x00003b2f	DMC_DECB_VBI_R_3	1
0x00003b24	DMC_DECB_V0V_3	1
0x00003b28	DMC_DECB_VSCP_3	1
0x00003b2b	DMC_DECB_VDDR_3	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 44

0x00003b27	DMC_DECB_VDDA_3	1
0x00003b25	DMC_DECB_VWELL_3	1
0x00003b31	DMC_DECB_IDDA_3	1
0x00003b30	DMC_DECB_IDDD_3	1
0x00003b32	DMC_DECB_ISS_3	1
0x00003b33	DMC_DECB_IGND_3	1
0x00003b15	DMC_DECB_HEAT_C	1
0x00003b16	DMC_DECB_HEAT_V	1
0x00003b14	DMC_DECB_REF_0V3	1
0x00003b1d	DMC_DECB_DCDC_T3	1
0x000036a3	DMC_DECB_SPARE5	1
0x00003b20	DMC_DECB_DCDC_P5	1
0x00003b21	DMC_DECB_AC_CUR	1
0x00003b4a	DMC_DECB_TS_ST_3	1
0x00003af2	DMC_DECB_CL_RO_3	1
0x00003af4	DMC_DECB_RO_RA_3	1
0x00003af6	DMC_DECB_CR_ST_3	1
0x00003af8	DMC_DECB_BR_CM_3	1
0x00003afa	DMC_DECB_ZB_CM_3	1
0x00003afc	DMC_DECB_SR_RB_3	1
0x00003b48	DMC_DECB_TS_1_3	1
0x00003b49	DMC_DECB_TS_2_3	1
0x00003b02	DMC_DECB_RO_CO_3	1
0x00003b82	DMC_DECB_RA_CO_3	1
0x00003b5d	DMC_DECB_VDDD_4	1
0x00003b63	DMC_DECB_VSS_4	1
0x00003b64	DMC_DECB_VGND_4	1
0x00003b61	DMC_DECB_VCAN1_4	1
0x00003b60	DMC_DECB_VCAN2_4	1
0x00003b65	DMC_DECB_V0BIAS4	1
0x00003b66	DMC_DECB_VBI_R_4	1
0x00003b5b	DMC_DECB_V0V_4	1
0x00003b5f	DMC_DECB_VSCP_4	1
0x00003b62	DMC_DECB_VDDR_4	1
0x00003b5e	DMC_DECB_VDDA_4	1
0x00003b5c	DMC_DECB_VWELL_4	1
0x00003b68	DMC_DECB_IDDA_4	1
0x00003b67	DMC_DECB_IDDD_4	1
0x00003b69	DMC_DECB_ISS_4	1
0x00003b6a	DMC_DECB_IGND_4	1
0x00003b4c	DMC_DECB_FLASH_C	1
0x00003b4d	DMC_DECB_FLASH_V	1
0x00003b4b	DMC_DECB_REF_0V4	1
0x00003b54	DMC_DECB_DCDC_T4	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 45

0x000036a3	DMC_DEC_B_SPARE5B	1
0x00003b57	DMC_DEC_B_DCDC_P15	1
0x00003b58	DMC_DEC_B_DCDC_N15	1
0x00003b81	DMC_DEC_B_TS_ST_4	1
0x00003af3	DMC_DEC_B_CL_RO_4	1
0x00003af5	DMC_DEC_B_RO_RA_4	1
0x00003af7	DMC_DEC_B_CR_ST_4	1
0x00003af9	DMC_DEC_B_BR_CM_4	1
0x00003afb	DMC_DEC_B_ZB_CM_4	1
0x00003afd	DMC_DEC_B_SR_RB_4	1
0x00003b7f	DMC_DEC_B_TS_1_4	1
0x00003b80	DMC_DEC_B_TS_2_4	1
0x00003b03	DMC_DEC_B_RO_CO_4	1
0x00003b83	DMC_DEC_B_RA_CO_4	1
0x00003c65	DMC_DEC_B_VDDD_1	1
0x00003c6b	DMC_DEC_B_VSS_1	1
0x00003c6c	DMC_DEC_B_VGND_1	1
0x00003c69	DMC_DEC_B_VCAN1_1	1
0x00003c68	DMC_DEC_B_VCAN2_1	1
0x00003c6d	DMC_DEC_B_V0BIAS1	1
0x00003c6e	DMC_DEC_B_VBI_R_1	1
0x00003c63	DMC_DEC_B_V0V_1	1
0x00003c67	DMC_DEC_B_VSCP_1	1
0x00003c6a	DMC_DEC_B_VDDR_1	1
0x00003c66	DMC_DEC_B_VDDA_1	1
0x00003c64	DMC_DEC_B_VWELL_1	1
0x00003c70	DMC_DEC_B_IDDA_1	1
0x00003c6f	DMC_DEC_B_IDDD_1	1
0x00003c71	DMC_DEC_B_ISS_1	1
0x00003c72	DMC_DEC_B_IGND_1	1
0x00003c54	DMC_DEC_B_HEAT_C	1
0x00003c55	DMC_DEC_B_HEAT_V	1
0x00003c53	DMC_DEC_B_REF_0V_1	1
0x00003c5c	DMC_DEC_B_DCDC_T1	1
0x000036a3	DMC_DEC_B_SPARE5	1
0x00003c5f	DMC_DEC_B_DCDC_P5	1
0x00003c60	DMC_DEC_B_AC_CUR	1
0x00003c89	DMC_DEC_B_TS_ST_1	1
0x00003c31	DMC_DEC_B_CL_RO_1	1
0x00003c33	DMC_DEC_B_RO_RA_1	1
0x00003c35	DMC_DEC_B_CR_ST_1	1
0x00003c37	DMC_DEC_B_BR_CM_1	1
0x00003c39	DMC_DEC_B_ZB_CM_1	1
0x00003c3b	DMC_DEC_B_SR_RB_1	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 46

0x00003c87	DMC DECR TS 1 1	1
0x00003c88	DMC DECR TS 2 1	1
0x00003c41	DMC DECR RO CO 1	1
0x00003cc1	DMC DECR RA CO 1	1
0x00003c9c	DMC DECR VDDD 2	1
0x00003ca2	DMC DECR VSS 2	1
0x00003ca3	DMC DECR VGND 2	1
0x00003ca0	DMC DECR VCAN1 2	1
0x00003c9f	DMC DECR VCAN2 2	1
0x00003ca4	DMC DECR V0BIAS2	1
0x00003ca5	DMC DECR VBI R 2	1
0x00003c9a	DMC DECR V0V 2	1
0x00003c9e	DMC DECR VSCP 2	1
0x00003ca1	DMC DECR VDDR 2	1
0x00003c9d	DMC DECR VDDA 2	1
0x00003c9b	DMC DECR VWELL 2	1
0x00003ca7	DMC DECR IDDA 2	1
0x00003ca6	DMC DECR IDDD 2	1
0x00003ca8	DMC DECR ISS 2	1
0x00003ca9	DMC DECR IGND 2	1
0x00003c8b	DMC DECR FLASH C	1
0x00003c8c	DMC DECR FLASH V	1
0x00003c8a	DMC DECR REF 0V2	1
0x00003c93	DMC DECR DCDC T2	1
0x000036a3	DMC DECR SPARE5B	1
0x00003c96	DMC DECR DCDC P15	1
0x00003c97	DMC DECR DCDC N15	1
0x00003cc0	DMC DECR TS ST 2	1
0x00003c32	DMC DECR CL RO 2	1
0x00003c34	DMC DECR RO RA 2	1
0x00003c36	DMC DECR CR ST 2	1
0x00003c38	DMC DECR BR CM 2	1
0x00003c3a	DMC DECR ZB CM 2	1
0x00003c3c	DMC DECR SR RB 2	1
0x00003cbe	DMC DECR TS 1 2	1
0x00003cbf	DMC DECR TS 2 2	1
0x00003c42	DMC DECR RO CO 2	1
0x00003cc2	DMC DECR RA CO 2	1
0x000036a3	DMC SPARE4	1
0x000036a3	DMC SPARE5	1
0x000036a3	DMC SPARE6	1
0x00054755	DMC FPU T SENS ST	1
0x0005475b	DMC FW SPEC TEMP	1
0x0005475c	DMC FW PHOT TEMP	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 47

0x00054756	DMC_CHOPPER_TEMP	1
0x0005475a	DMC_GRATING_TEMP	1
0x000546a4	DMC_PSC_V1	1
0x000546ac	DMC_PSC_V2	1
0x000546b4	DMC_PSC_V3	1
0x000546bc	DMC_PSC_V4	1
0x000546a8	DMC_DCDC_TEMP	1
0x000546a9	DMC_DSP_TEMP	1
0x000036a3	DMC_SPARE10	1
0x000036a3	DMC_SPARE11	1
0x000036a3	DMC_SPARE12	1
0x000036a3	DMC_SPARE13	1
0x000546b1	DMC_SPU_PSU_P15V	1
0x000546aa	DMC_SPU_SWL_TEMP	1
0x000546b2	DMC_SPU_LWL_TEMP	1
0x000546ba	DMC_SPU_PS_TEMP	1
0x000546b0	DMC_SPU_VCC_CUR	1
0x000546bf	DMC_SPU_VCC_VOL	1
0x000546c1	DMC_SPU_VP_CUR	1
0x00054758	DMC_FPU_T1_T	1
0x00054759	DMC_FPU_T2_T	1
0x000546d0	DMC_REF_VOLT_0V	1
0x00054757	DMC_CAL_SRC_TEMP	1
0x000546c0	DMC_REF_VOLT_5V	1
0x000036a3	DMC_SPARE16	1
0x000036a3	DMC_SPARE17	1
0x0005469b	DMC_CUSTOM_ENT_1	1
0x000038a5	DMC_CUSTOM_ENT_2	1
0x000038a6	DMC_CUSTOM_ENT_3	1
0x000038a7	DMC_CUSTOM_ENT_4	1
0x000038a8	DMC_CUSTOM_ENT_5	1
0x000038a9	DMC_CUSTOM_ENT_6	1
0x000038aa	DMC_CUSTOM_ENT_7	1
0x000038ab	DMC_CUSTOM_ENT_8	1
0x000038ac	DMC_CUSTOM_ENT_9	1
0x000038ad	DMC_CUSTOM_ENT10	1
0x00004360	DMC_DET_SIM_STAT	1
0x00004361	DMC_DET_SIM_PER	1
0x00054405	DMC_CS1_RES_VALUE	1
0x000543eb	DMC_CS1_OUTPUT	1
0x00054441	DMC_CS2_RES_VALUE	1
0x00054427	DMC_CS2_OUTPUT	1
0x00004279	DMC_BOLC_STATUS	1
0x0005475f	DMC_BSPU_TR_MODE	1





Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 48

0x00054760	DMC_RSPU_TR_MODE	1
0x00004363	DMC_GRAT_OUTPUT	1
0x0005469f	DMC_OBT_COUNT	1
0x000546a1	DMC_MIM_ST	1
0x00054765	DMC_DM_SF_IND	1
0x00054766	DMC_PM_SF_IND	1
0x00054767	DMC_DM_DF_IND	1
0x00054768	DMC_PM_DF_IND	1
0x000543ee	DMC_CS1_TARGET	1
0x0005442a	DMC_CS2_TARGET	1
0x00054475	DMC_HK_CTRL_STAT	1
0x00054476	DMC_HK_DIAG_STAT	1
0x00054477	DMC_HK_DIAG_PERI	1
0x000024b7	DMC_LAST_ERR_ID	1
0x000024a7	DMC_LAST_ER_BF1	1
0x000024a8	DMC_LAST_ER_BF2	1
0x000024a9	DMC_LAST_ER_BF3	1
0x000024aa	DMC_LAST_ER_BF4	1
0x000024ab	DMC_LAST_ER_BF5	1
0x000024ac	DMC_LAST_ER_BF6	1
0x000024ad	DMC_LAST_ER_BF7	1
0x000024ae	DMC_LAST_ER_BF8	1
0x000024af	DMC_LAST_ER_BF9	1
0x000024b0	DMC_LAST_ER_BF10	1
0x000024b1	DMC_LAST_ER_BF11	1
0x000024b2	DMC_LAST_ER_BF12	1
0x000024b3	DMC_LAST_ER_BF13	1
0x000024b4	DMC_LAST_ER_BF14	1
0x000024b5	DMC_LAST_ER_BF15	1
0x000024b6	DMC_LAST_ER_BF16	1
0x0000433e	BOLC_HK_197	1
0x0000433f	BOLC_HK_198	1
0x00004340	BOLC_HK_199	1
0x00004341	BOLC_HK_200	1
0x00004342	BOLC_HK_201	1
0x00004343	BOLC_HK_202	1
0x00004344	BOLC_HK_203	1
0x00004345	BOLC_HK_204	1
0x00004346	BOLC_HK_205	1
0x00004347	BOLC_HK_206	1
0x00004348	BOLC_HK_207	1
0x00004349	BOLC_HK_208	1
0x0000434a	BOLC_HK_209	1
0x0000434b	BOLC_HK_210	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 49

0x0000434c	BOLC_HK_211	1
0x0000434d	BOLC_HK_212	1
0x0000434e	BOLC_HK_213	1
0x0000434f	BOLC_HK_214	1
0x00004350	BOLC_HK_215	1
0x00004351	BOLC_HK_216	1
0x00004352	BOLC_HK_217	1
0x00004353	BOLC_HK_218	1
0x00004354	BOLC_HK_219	1
0x00004355	BOLC_HK_220	1
0x00004356	BOLC_HK_221	1
0x00004357	BOLC_HK_222	1
0x00004358	BOLC_HK_223	1
0x00004359	BOLC_HK_224	1
0x000036a3	LAST_NOMINAL_HK_VALUE	1
0x000036a3	SPARE1_NOMINAL_HK_VALUE	1
0x000036a3	SPARE2_NOMINAL_HK_VALUE	1
0x00054708	DMC_GR_IND_READ	1
0x00054703	DMC_GR_TURN_CAR	1
0x00054707	DMC_GR_PER_CAR	1
0x00004382	DMC_GR_DEG_POS	1
0x000036a3	DMC_SPARE_DIAG7	1
0x000036a3	DMC_SPARE_DIAG8	1
0x000036a3	DMC_SPARE_DIAG1	1
0x000036a3	DMC_SPARE_DIAG2	1
0x000036a3	DMC_SPARE_DIAG3	1
0x000036a3	DMC_SPARE_DIAG4	1
0x0005440e	DMC_CS1_VOLT_0V	1
0x0005440f	DMC_CS1_VOLT_N5V	1
0x00054410	DMC_CS1_VOLT_P5V	1
0x00054411	DMC_CS1_VOLT_DAC_OUT	1
0x00054412	DMC_CS1_VOLT_SG	1
0x00054413	DMC_CS1_VOLT_BG	1
0x00054414	DMC_CS1_CUR_SG	1
0x00054415	DMC_CS1_CUR_BG	1
0x000036a3	DMC_CS1_SPARE1	1
0x000036a3	DMC_CS1_SPARE2	1
0x000036a3	DMC_CS1_SPARE3	1
0x000036a3	DMC_CS1_SPARE4	1
0x000036a3	DMC_CS1_SPARE5	1
0x000036a3	DMC_CS1_SPARE6	1
0x000036a3	DMC_CS1_SPARE7	1
0x000036a3	DMC_CS1_SPARE8	1
0x0005444a	DMC_CS2_VOLT_0V	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 50

0x0005444b	DMC_GR_IND_SINE	1
0x0005444c	DMC_GR_IND_COS	1
0x0005444d	DMC_CS2_VOLT_DAC_OUT	1
0x0005444e	DMC_CS2_VOLT_SG	1
0x0005444f	DMC_CS2_VOLT_BG	1
0x00054450	DMC_CS2_CUR_SG	1
0x00054451	DMC_CS2_CUR_BG	1
0x000546be	DMC_GR_LL1_CUR	1
0x000036a3	DMC_CS2_SPARE2	1
0x000036a3	DMC_CS2_SPARE3	1
0x000036a3	DMC_CS2_SPARE4	1
0x000036a3	DMC_CS2_SPARE5	1
0x000036a3	DMC_CS2_SPARE6	1
0x000036a3	DMC_CS2_SPARE7	1
0x000036a3	DMC_CS2_SPARE8	1
0x000546a3	DMC_PSU_5V_VOLT	1
0x000546a5	DMC_FWSPEC_POS_A	1
0x000546a6	DMC_FW_GR_VMOTA	1
0x000546a7	DMC_CHOP_VA	1
0x000546ab	DMC_PSU_P15V_V	1
0x000546ad	DMC_FWSPEC_POS_B	1
0x000546ae	DMC_FW_GR_IMOTA	1
0x000546af	DMC_CHOP_IA	1
0x000546b3	DMC_PSU_N15V_V	1
0x000546b5	DMC_FWPHOT_POS_A	1
0x000546b6	DMC_FW_GR_VMOTB	1
0x000546b7	DMC_CHOP_VB	1
0x000546b8	DMC_ADC_VOLT	1
0x000546b9	DMC_FW_GR_IMOTB	1
0x000546bb	DMC_PSU_P28V_V	1
0x000546bd	DMC_FWPHOT_POS_B	1
0x000546c2	DMC_GR_LL2_CUR	1
0x000546c4	DMC_T_SE_SRC1_LG	1
0x000546c3	DMC_T_SE_SRC1_HG	1
0x000546d1	DMC_T_SE_SRC1_V1	1
0x000546d2	DMC_T_SE_SRC1_V2	1
0x000546cc	DMC_T_SE_SRC2_LG	1
0x000546cb	DMC_T_SE_SRC2_HG	1
0x000546c9	DMC_T_SE_SRC2_V1	1
0x000546ca	DMC_T_SE_SRC2_V2	1
0x00003b1b	DMC_DB_TS12CBS_3	1
0x00003b1c	DMC_DB_TS12CSS_3	1
0x00003b17	DMC_DECB_TS1_V_3	1
0x00003b19	DMC_DECB_TS2_V_3	1



Herschel PACS  
DEC/MEC User Manual

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 51

0x00003b18	DMC_DECB_PS_GEN3	1
0x00003b1a	DMC_DECB_NS_GEN3	1
0x00003b1e	DMC_DECB_D5V_3	1
0x00003b1f	DMC_DECB_D2_5V_3	1
0x00003b22	DMC_DECB_A5V_3	1
0x00003b23	DMC_DECB_R5V_3	1
0x00003b52	DMC_DB_TS12CBS_4	1
0x00003b53	DMC_DB_TS12CSS_4	1
0x00003b4e	DMC_DECB_TS1_V_4	1
0x00003b50	DMC_DECB_TS2_V_4	1
0x00003b4f	DMC_DECB_PS_GEN4	1
0x00003b51	DMC_DECB_NS_GEN4	1
0x00003b55	DMC_DB_DC_P15V_4	1
0x00003b56	DMC_DB_DC_N15V_4	1
0x00003b59	DMC_DECB_A5V_4	1
0x00003b5a	DMC_DECB_R5V_4	1
0x00003c5a	DMC_DR_TS12CBS_1	1
0x00003c5b	DMC_DR_TS12CSS_1	1
0x00003c56	DMC_DECR_TS1_V_1	1
0x00003c58	DMC_DECR_TS2_V_1	1
0x00003c57	DMC_DECR_PS_GEN1	1
0x00003c59	DMC_DECR_NS_GEN1	1
0x00003c5d	DMC_DECR_D5V_1	1
0x00003c5e	DMC_DECR_D2_5V_1	1
0x00003c61	DMC_DECR_A5V_1	1
0x00003c62	DMC_DECR_R5V_1	1
0x00003c91	DMC_DR_TS12CBS_2	1
0x00003c92	DMC_DR_TS12CSS_2	1
0x00003c8d	DMC_DECR_TS1_V_2	1
0x00003c8f	DMC_DECR_TS2_V_2	1
0x00003c8e	DMC_DECR_PS_GEN2	1
0x00003c90	DMC_DECR_NS_GEN2	1
0x00003c94	DMC_DR_DCDC_P15V_2	1
0x00003c95	DMC_DR_DCDC_N15V_2	1
0x00003c98	DMC_DECR_A5V_2	1
0x00003c99	DMC_DECR_R5V_2	1
0x000546ce	DMC_TS_FW_SPEC_V	1
0x000546cf	DMC_TS_FW_PHOT_V	1
0x000546cd	DMC_TS_GRAT_V	1
0x000546c5	DMC_TS_CHOP_V	1
0x000546c7	DMC_TS_FPU_T1_V	1
0x000546c8	DMC_TS_FPU_T2_V	1
0x000546c6	DMC_TS_BB_V	1



Reminder note for DMC developpers:

Procedure to obtain this table from SimDPU: It is not possible to dump more than one packet at a time from SimDPU so, this should be done in 3 packets:

Dump from 0x60000, size 240, rename dump.dat into dump1.dat

Dump from 0x600F0, size 240, rename dump.dat into dump2.dat

Dump from 0x601E0, size 240, rename dump.dat into dump3.dat

## 4.4 Using the commands

### 4.4.1 Detector software simulator

#### 4.4.1.1 Simulating readouts

You can ask each of the detector receiver tasks to forward a simulated readout instead of the real readouts provided by the real detectors. This can be done quite easily thanks to the *DMC\_START\_DET\_SIMULATOR* command with the following arguments :

- the 4 MSB identifying the detector to be simulated
- the 28 LSB set to 0.

Each time a readout is received, only the scientific data are replaced by the simulated readout. The header remains the same.

You can simulate the readouts of the Blue and Red DEC in the same time (by setting 3 as the detector identifier of the *DMC\_START\_DET\_SIMULATOR* command).

To stop the simulation, send the *DMC\_STOP\_DET\_SIMULATOR* command (without arguments).  
Note : this command stops the simulation of all the detectors.

#### 4.4.1.2 Simulating readouts and timing

You can also ask one of the detector receiver tasks to forward a simulated readout with a timing different from the one provided by the real detectors. This is very useful during software development (when real detectors are not available). It may not be useful in flight (TBC).

A task is dedicated to the simulation of one of the detectors (Blue DEC, Red DEC or BOLC). It can simulate any detector. The detector being simulated must be powered-off so it does not send anything on its Spacewire link.

To simulate a detector, the following steps must be followed :

1. Start with DEC/MEC and all detectors powered off.
2. power-on DEC/MEC as usual but don't power-on the detector you want to simulate.
3. Send a trigger command *DMC\_START\_DET\_SIMULATOR* with
  - the 4 MSB indentifying the detector to be simulated
  - the 28 LSB is the period (in ms) between two readouts (period must be greater than 24 when BOLC is simulated and greater than 3 otherwise).



4. Send a trigger command *DMC\_STOP\_DET\_SIMULATOR* when finished.

Then, if you want to use the real detectors, you need to switch-off DEC/MEC and restart it.

#### 4.4.2 Detector hardware simulation

2 bits of *Cre\_ctrl\_reg* are used for read-out/ramp simulation:

Bit6: Simulation	Bit9: Ramp simulation	
0	0	Nominal behaviour, no simulation
0	1	Nominal behaviour, no simulation
1	0	Every pixel of every readout has the same value and is equal to <i>simul_reg</i> . All analog HK is equal to 0xAA55 or 0x55AA. The digital HK is representative.
1	1	Ramps are simulated. In the first readout of the ramp, all the pixel values are equal to <i>Simul_reg</i> . In the following readouts, this value is decremented by 0x20 at each readout. All analog HK is equal to 0xAA55 or 0x55AA. The digital HK is representative.

#### 4.4.3 Switching between Spectrometry/Photometry modes

At start-up, the DEC/MEC OBS is not configured in any mode. That means that no data from the DEC's or BOLC are forwarded to the SPU.

To switch from Spectrometry to Photometry, one should :

1. Stop forwarding the data from Blue DEC to SPU (set bit 2 of *DMC\_WRT\_B\_DEC\_REC\_OPT* to 1)
2. Stop forwarding the data from Red DEC to SPU (set bit 2 of *DMC\_WRT\_R\_DEC\_REC\_OPT* to 1)
3. Upload the *DMC\_WRT\_TIMING\_FPGA\_PAR* with: {0, 0, 0, 26, 0x0977602A, 0x32}
4. Apply the new parameters: *DMC\_SET\_TIMING\_FPGA\_PAR*
5. Change the synchronisation signal that is used by the sequencer (*DMC\_SYNCHRONIZE\_ON\_DET* with 4 as argument)
6. Wait 1 second to make sure that DMC has received at least one synchro signal from BOLC and has reset all its internal counters (it will ensure that the mechanisms movement will be synchronized with the synchro signal)
7. Upload the *DMC\_WRT\_TIMING\_FPGA\_PAR* with: {0, 0, 0, 26, 0x0977602A, 0x22}
8. Apply the new parameters: *DMC\_SET\_TIMING\_FPGA\_PAR*



9. Start forwarding the data from BOL to SPU (set bit 2 of *DMC\_WRT\_BOL\_REC\_OPT* to 0)

To switch from Photometry to Spectrometry, one should :

1. Stop forwarding the data from BOL to SPU (set bit 2 of *DMC\_WRT\_B\_DEC\_REC\_OPT* to 1)
2. Upload the *DMC\_WRT\_TIMING\_FPGA\_PAR* with: {0, 0, 0, 26, 0x095217CB, 0xB}
3. Apply the new parameters: *DMC\_SET\_TIMING\_FPGA\_PAR*
4. Change the synchronisation signal that is used by the sequencer (*DMC\_SYNCHRONIZE\_ON\_DET* with 1 or 2 as argument)
5. Start forwarding the data from Blue DEC to SPU (set bit 2 of *DMC\_WRT\_B\_DEC\_REC\_OPT* to 0)
6. Start forwarding the data from Red DEC to SPU (set bit 2 of *DMC\_WRT\_R\_DEC\_REC\_OPT* to 0)

Note that, in Spectrometry mode, each detector can also be used separately (in this case, the other one has the Bit 2 of its option field set to 1).

#### 4.4.4 Using the spectroscopy detectors

To start using the blue spectroscopy detectors, one should :

1. Switch on the blue DEC (*DMC\_SWON\_B\_DEC*)
2. Switch on the blue spectro array (*DMC\_SWON\_B\_SPEC*)
3. Configure the detector timing (*DMC\_WRT\_B\_SPEC\_PAR* and then *DMC\_SET\_PAR\_B\_SPEC*)
4. Start forwarding the data to SPU (set bit 2 of *DMC\_WRT\_B\_DEC\_REC\_OPT* to 0)
5. When done, before switching off the spectro arrays, configure the readouts/ramp to a value smaller than TBD. We recommend to use the default parameters. (*DMC\_WRT\_B\_SPEC\_PAR* and then *DMC\_SET\_PAR\_B\_SPEC*).
6. switch off the blue spectro array (*DMC\_SWOF\_B\_SPEC*)
7. switch off the blue DEC (*DMC\_SWOF\_B\_DEC*)

Note:

Everytime you switch-on a DEC, a master reset is performed. The master reset interrupts the clock provided to DEC FPGAs and resets them. It means that, if a master-reset is performed while CREs are ON, they are switched-off brutally which is not recommended.

To avoid it, it is forbidden to switch-on a DEC while the other CREs are already ON.

Typical switch-on would then be:

- switch-on blue DEC (includes a master reset)
- switch-on red DEC (includes a master reset)
- switch-on blue CREs
- switch-on red CREs



- send\_param\_both

If you are using blue DEC only and then, want to switch-on red DEC, you would then need to:

- switch-off blue CREs
- switch-on red DEC
- switch-on blue CREs
- switch-on red CREs
- send\_param\_both

#### 4.4.4.1 Switching-on the CREs


In the text below, we present the procedure to switch-on blue CREs array. The same procedure can easily be adapted to red CREs array.

1. DMC\_SWON\_B\_DEC to switch on the DEC
2. Wait 5 seconds to get the 1355 connection between DEC and CPU board
3. Send the complete set of default parameters. First send a DMC\_WRT\_B\_SPEC\_PAR command with these values (in hex: 20-8-18C-0-0-EA60). Then, send a DMC\_SET\_PAR\_B\_SPEC to really send the parameters to the DEC.
4. DMC\_SWON\_B\_SPEC to switch on the detector array
5. Wait 15 seconds to let the switch on procedure run and all voltages become stables
6. Then, to activate the CREs (signal SELECT on the CREs), send the first 3 parameters. First send a DMC\_WRT\_B\_SPEC\_PAR command with these values (length: 3, values in hex : 20-8-18E). Then, send a DMC\_SET\_PAR\_B\_SPEC to really send the parameters to the DEC. Note: with this command, we set bit1 to 1 (activate CRE). Bit0 has been set to 1 by the DMC\_SWON\_B\_SPEC command but, bit0 is not commandable through the DMC\_WRT\_B\_SPEC\_PAR. The only way to switch on/off the detector array is to use the trigger commands.
7. Then, you should set the bias voltages by writing the first 4 or 5 parameters of the block. Make sure to copy the latest values you use for the first 3 parameters.

#### 4.4.4.2 CRE bias commanding

The schematic below explains the meaning of R Bias, D Bias commands and shows how the Bias housekeeping is acquired.



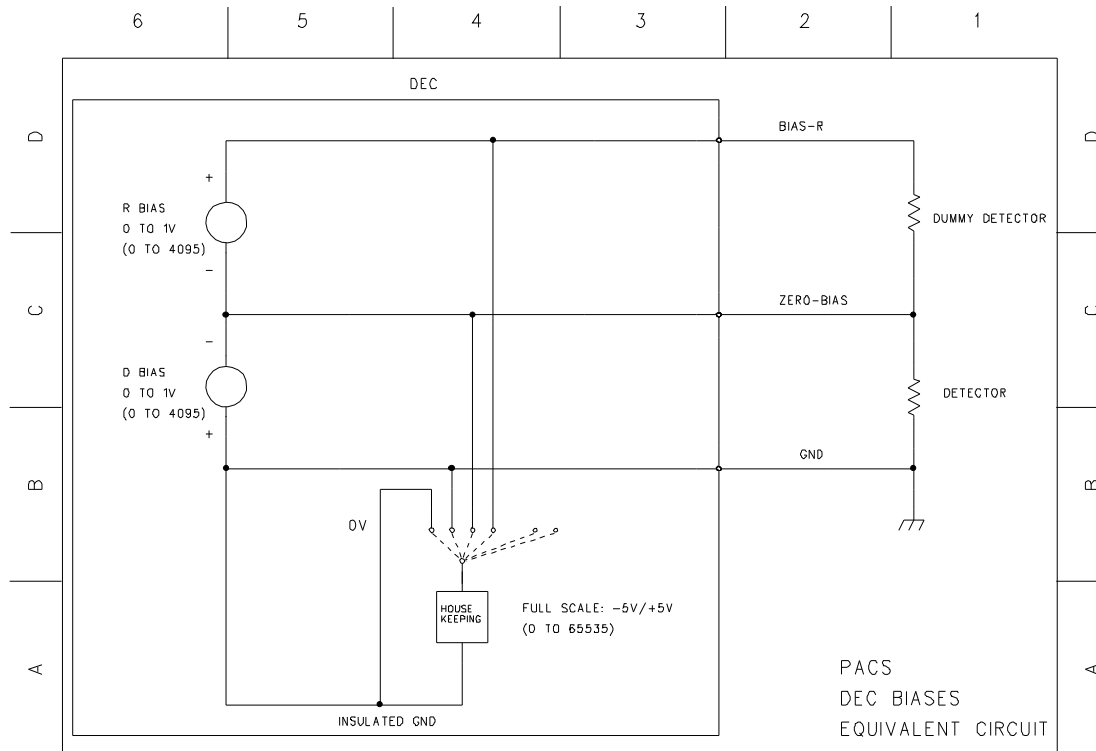

#### 4.4.4.3 CRE housekeeping

CRE hk is related to GND (not to VSS as in IMEC ICD)

#### 4.4.4.4 Heater and Flasher

To control heater and flasher, the DEC must be switched ON. Then, 12 trigger commands are used to switch them on/off and to set their currents. Nothing is done through write commands.

Each heater and flasher must be switched on separately through one of these commands:

DMC\_SWON\_BD\_HEATER  
DMC\_SWON\_BD\_FLASHER  
DMC\_SWON\_RD\_HEATER  
DMC\_SWON\_RD\_FLASHER

When switching on the heater or flasher, its current is automatically set to zero.

Then, you should set the current in each of the heater or flasher through one of these commands:

DMC\_SET\_B\_SPEC\_HEATER\_C



DMC\_SET\_B\_SPEC\_FLASHER\_C  
DMC\_SET\_R\_SPEC\_HEATER\_C  
DMC\_SET\_R\_SPEC\_FLASHER\_C

Then, each heater and flasher must be switched off separately through one of these commands:

DMC\_SWOFF\_BD\_HEATER  
DMC\_SWOFF\_BD\_FLASHER  
DMC\_SWOFF\_RD\_HEATER  
DMC\_SWOFF\_RD\_FLASHER

When switching off the heater or flasher, its current is automatically set to zero.

#### 4.4.4.5 CRE output conversion

The science packet contains measures of the CRE output voltage. The conversion is given by: 65535 corresponds to a span of 6.27 V at the CRE output (1 LSB = 94.91  $\mu$ V).

If the CRE output is equal to  $V_{DDA} + 0.727V$ , the measure gives 65535.

If the CRE output is equal to  $V_{SS} + 0.627V$ , the measure gives 6553.

If the CRE output is below  $V_{SS} + 0.627V$ , the measure is non linear (but we should never have measure within this range).

#### History:

The aim was to be able to measure the complete range between  $V_{SS}$  and  $V_{DDA}$  at the CRE output (span: 5.5V).

The sensitivity of the converter itself is:

0 corresponds to 0V at the converter input

65535 corresponds to 5V at the converter input

The input amplifier in front of the converter can not reach 0V at its output; the first half volt can be non linear.

The gain of the input amplifier has been set to 26.7/33.2 (0.804) in such a way a span of 5.597V at the CRE output corresponds to a span of 4.5V at the converter input (between 0.5V and 5V)

Originally,

If the CRE output was equal to  $V_{DDA}$ , the measure gave 65535.

If the CRE output was equal to  $V_{SS}$ , the measure gave 6553.

Following a request of MPE to be able to measure a CRE output a bit higher than  $V_{DDA}$ :

If the CRE output is equal to  $V_{DDA} + 0.727V$ , the measure gives 65535.



If the CRE output is equal to  $VSS + 0.627V$ , the measure gives 6553.

#### 4.4.4.6 Summary of commands and telemetry

##### **Trigger Commands:**

- 12 DMC\_SWON\_B\_DEC
- 13 DMC\_SWOF\_B\_DEC
- 14 DMC\_SWON\_B\_SPEC
- 15 DMC\_SWOF\_B\_SPEC
- 16 DMC\_SET\_PAR\_B\_SPEC
- 17 DMC\_SET\_B\_SPEC\_HEAT\_C
- 18 DMC\_SET\_B\_SPEC\_FLASH\_C
- 19 DMC\_SWON\_R\_DEC
- 20 DMC\_SWOF\_R\_DEC
- 21 DMC\_SWON\_R\_SPEC
- 22 DMC\_SWOF\_R\_SPEC
- 23 DMC\_SET\_PAR\_R\_SPEC
- 24 DMC\_SET\_PAR\_BOTH\_SPEC
- 34 DMC\_SET\_R\_SPEC\_HEAT\_C
- 35 DMC\_SET\_R\_SPEC\_FLASH\_C
- 60 DMC\_SWON\_BD\_HEATER
- 61 DMC\_SWOF\_BD\_HEATER
- 62 DMC\_SWON\_BD\_FLASHER
- 63 DMC\_SWOF\_BD\_FLASHER
- 79 DMC\_SWON\_RD\_HEATER
- 80 DMC\_SWOF\_RD\_HEATER
- 81 DMC\_SWON\_RD\_FLASHER
- 82 DMC\_SWOF\_RD\_FLASHER

##### **Write Commands:**

- 151 DMC\_WRT\_B\_DEC\_REC\_OPT
- 152 DMC\_WRT\_R\_DEC\_REC\_OPT
- 154 DMC\_WRT\_R\_SPEC\_PAR
- 155 DMC\_WRT\_B\_SPEC\_PAR
- 158 DMC\_WRT\_B\_PACKET\_ENC\_LINK
- 159 DMC\_WRT\_R\_PACKET\_ENC\_LINK

##### **HK nominal:**

- 265-400 copy of HK from DEC



- 200 DMC\_DECB\_REC\_STA
- 201 DMC\_DECB\_CTRL\_ST
- 202 DMC\_BLUE\_PAC\_ENC
- 203 DMC\_DECR\_REC\_STA
- 204 DMC\_DECR\_CTRL\_ST
- 205 DMC\_RED\_PAC\_ENC
- 228 DMC\_DECB\_REC\_PAC
- 229 DMC\_DECR\_REC\_PAC
- 230 DMC\_DECB\_CTRL\_PA
- 231 DMC\_DECR\_CTRL\_PA
- 232 DMC\_BLUE\_ENC\_PAC
- 233 DMC\_RED\_ENC\_PAC

**HK diag:**

- 579-618 copy of HK from DEC

#### 4.4.5 Using the photometry detectors

To start using the photometry detectors:

1. Spacecraft should switch-on BOLC power
2. Establish the communication between DMC and BOLC (*DMC\_RESET\_SMCS\_CHIP\_2*)
3. Send commands to BOLC (*DMC\_SEND\_COMMAND\_TO\_BOLC*) to configure it
4. Start forwarding the data to SPU (set bit 2 of *DMC\_WRT\_BOL\_REC\_OPT* to 0)

##### 4.4.5.1 Summary of HLSW commands and telemetry

**Trigger Commands:**

- 33 DMC\_SEND\_COMMAND\_TO\_BOLC
- 89 DMC\_RESET\_SMCS\_CHIP\_2

**Write Commands:**

- 150 DMC\_WRT\_BOL\_REC\_OPT
- 158 DMC\_WRT\_B\_PACKT\_ENC\_LINK
- 159 DMC\_WRT\_R\_PACKT\_ENC\_LINK

**HK nominal:**

- 0-195 copy of HK from BOLC
- 206 DMC\_BOL\_REC\_STAT



- 207 DMC\_BOL\_CTRL\_STA
- 234 DMC\_BOL\_REC\_PAC
- 235 DMC\_BOL\_CTRL\_PAC
- 240 DMC\_BOL\_READ\_CNT
- 449 DMC\_BOLC\_STATUS
- 481-508 copy of HK from BOLC

**HK diag:**

- none

#### 4.4.6 The chopper : general description

Hereunder are given a schematic and a picture of the chopper, showing its main elements.

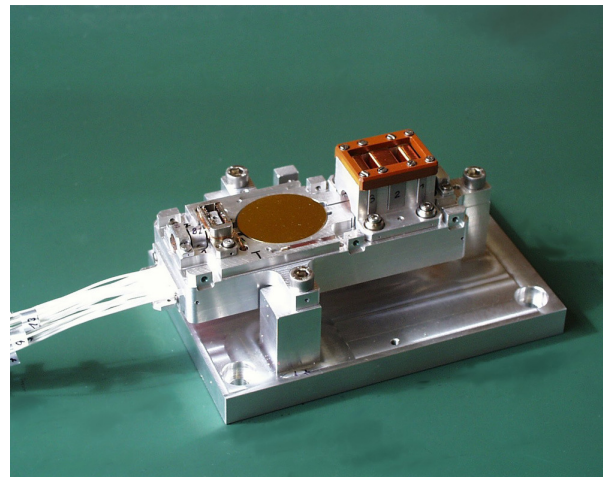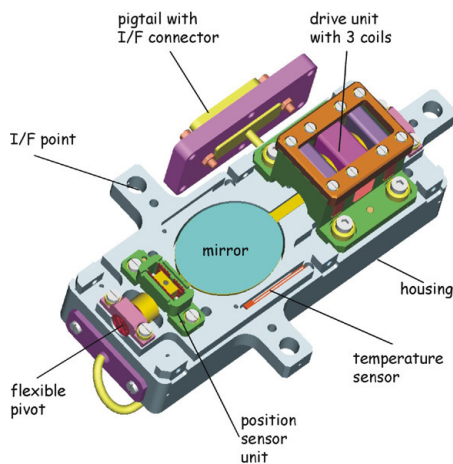


An important characteristic of the chopper is that the rotor (including the mirror) is mounted on spring bearings (named flexible pivots). This means that the chopper has an equilibrated rest position (at zero drive current) and that a constant current is required to maintain the chopper at a specified angle (as large the angle, as high the required current). Normally, the chopper should be mechanically aligned so that the rest position is corresponding to the zero optical position of the chopper.

##### 4.4.6.1 The chopper actuator

The chopper actuator is composed of three coils (1 big coil surrounded by two small coils) which can be independently commanded from the DMC using a set of relays. Indeed, there is no redundancy for the chopper actuator but all the three coils are connected to both nominal and redundant MIM boards and degraded mode operation (using one or two coils) can be used in case of problems.

The complexity lies in the fact that the chopper actuator is the only non-redundant device while everything else must be redundant, including the chopper control electronics. Therefore, the connection scheme shown in the figure below has been implemented in the DMC. On this figure, the default state (switch off state) of the relays is represented. In this configuration, coil 1 and coil 3 are disconnected from the electronics (red and black lines) and coil 2 is connected to a short-circuit resistor (used as a launch-lock) through the redundant MIM board (violet and blue lines).

How the relays must be commanded to use the chopper will be explained in details in §4.4.7.1.

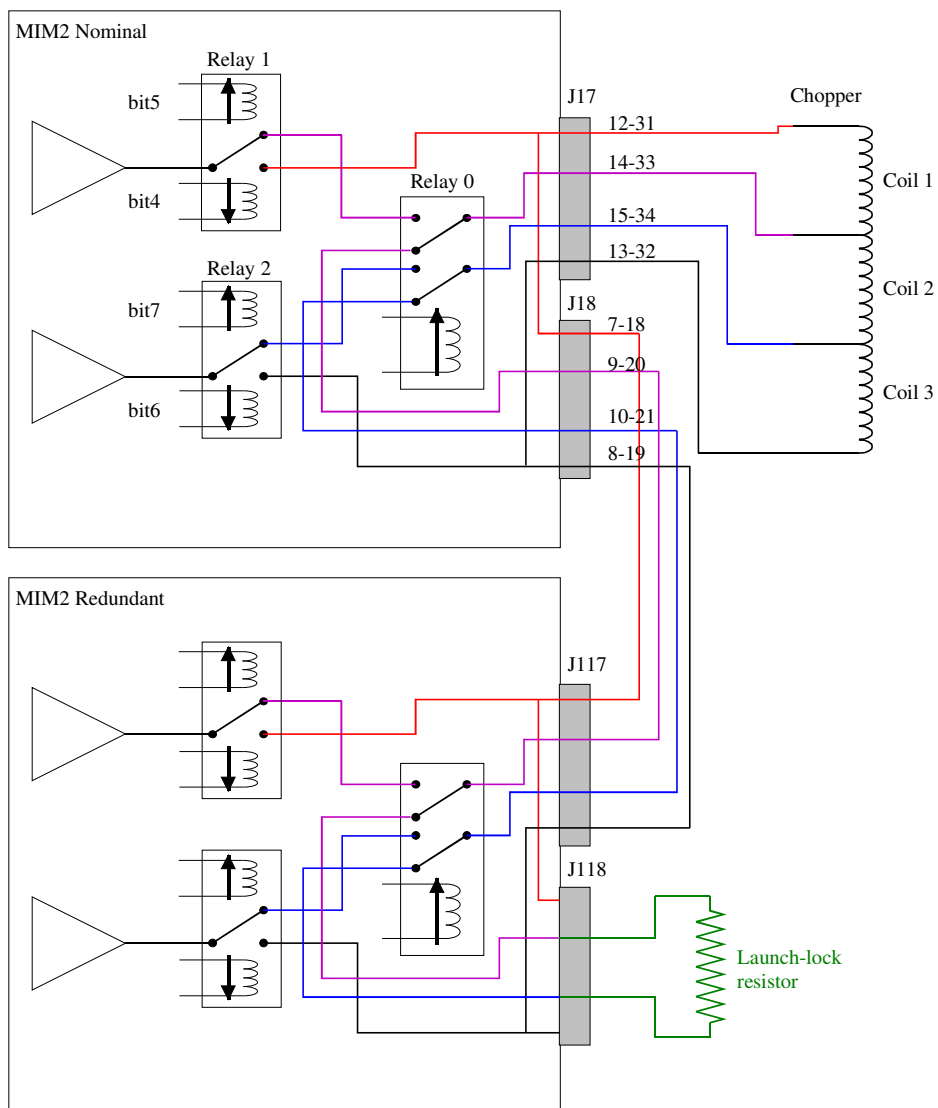




#### 4.4.6.2 Field plates position sensor

The chopper position sensor is a double differential magneto resistor named field plates. Two sensors are available, one connected to nominal DMC electronics (referred as FP1) and one connected to redundant electronics (referred as FP2).

Each sensor has a response curve w.r.t chopper angle shaping as shown in the figure hereunder. This curve is not linear and not symmetrical and may have an offset w.r.t the chopper zero (rest) position. Therefore, an accurate calibration curve is required to translate the readout voltage in angle units.

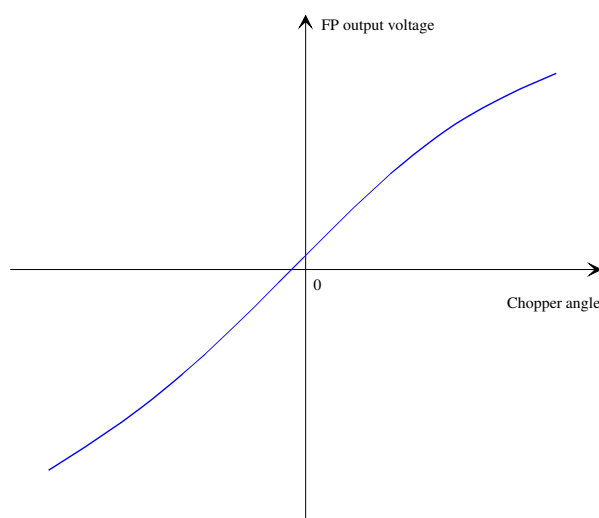


The FP signal is amplified before analog to digital conversion by a factor of 50 (actual gain value must be measured with accuracy on DMC hardware). The readout units of DMC\_CHOP\_CUR\_POS are then in volts where  $\pm 10$  V corresponds to  $\pm 32767$  digits.

FP1 (nominal) amplification gain for DMC FM : 50.091

FP2 (redundant) amplification gain for DMC FM : 50.607

The Field plates calibration curves have been measured by Zeiss and are reported in chopper documentation (for the FM unit, see PACS-MA-TN-678). The measurement has been done in Zeiss test cryostat with an amplification of the FM signal by 34.35. The figure below shows how to use a Zeiss calibration curve and convert it in DMC units.

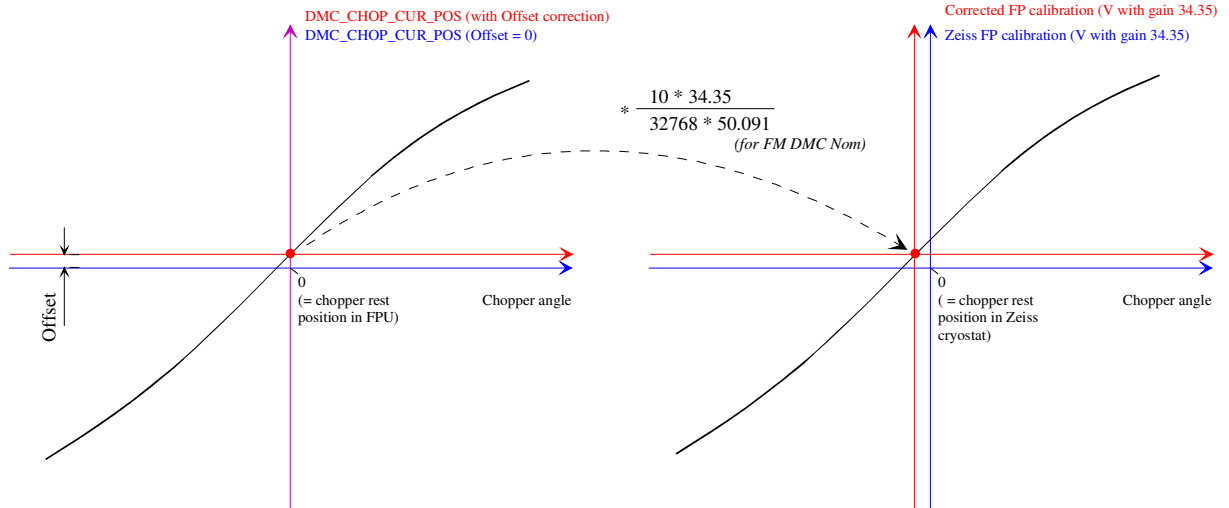


The process is as following :

1. Set chopper Offset parameter to 0
2. Measure DMC\_CHOP\_CUR\_POS with controller Disabled and OFF to be sure that no current is flowing trough the coils. The chopper is then in its mechanical rest position, which by alignment is supposed to be the optical zero position in FPU.
3. Set Offset = - DMC\_CHOP\_CUR\_POS (as measured in 2.)
4. Make the following calculation to find the zero position in Zeiss voltage units :  
Zero\_Zeiss = -Offset\*(10\*34.35)/(32768\*50.091) (50.091 valid for FM DMC nominal only)
5. Take this Zero\_Zeiss point as the origin of the axes for defining a corrected calibration curve from the original documented by Zeiss.
6. Then conversion from DMC units to Corrected FP calibration units is done simply by using the scaling factor (10\*34.35 FP1 (nominal) amplification gain for DMC FM : 50.091) (50.091 valid for FM DMC nominal only)

The FP signal is non-linear w.r.t chopper angular deflection and asymmetric w.r.t the neutral position. Therefore, a same angular increment will lead to different FP readout amplitude depending of the position of the chopper. This is shown in the figure hereunder where the FP response curve is compared with an ideal linear characteristic (fitted to the FP curve for low angles).



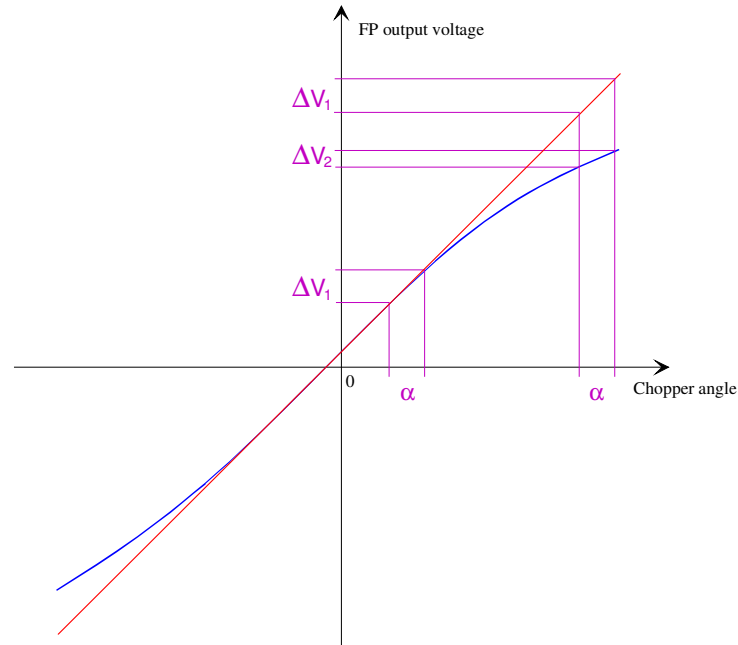


This change of FP sensitivity w.r.t the chopper position induces that a given controller parameters set will produce different performance depending on the chopper position. Especially, parameters optimised for the nominal operating range ( $\pm 4.1^\circ$ ) will not be optimum for larger angles ( $\sim \pm 9^\circ$ ) used to aim the calibration sources. Also, the asymmetry of the FP response curve induces that the controller performance will be different for positive or negative deflection and therefore, optimisation of parameters is always a compromise.

The OBSW can use the FP calibration curve to linearise the position readout before to be used by the controller. A virtual linear response curve is used, having the same sensitivity than the FP curve for the small angles (like shown in red in the figure above). In order to convert the FP readout to a virtually linear readout, a conversion look up table is used. The conversion is internal to the controller software and is not applied to the FP readout as seen in the Housekeeping (DMC\_CHOP\_CUR\_POS).

The parameter `SelectFieldPlateLUT` allows selecting between the following FP readout conversions :

- |  |  |
|--|--|
| <code>SelectFieldPlateLUT = 0</code>                 | Look up table for linearisation of FP1 |
| <code>SelectFieldPlateLUT = 1</code>                 | Look up table for linearisation of FP2 |
| <code>SelectFieldPlateLUT <math>\geq</math> 2</code> | No conversion                          |

The figure below is a plot of the look up tables used for FP1 and FP2 of the chopper FM.

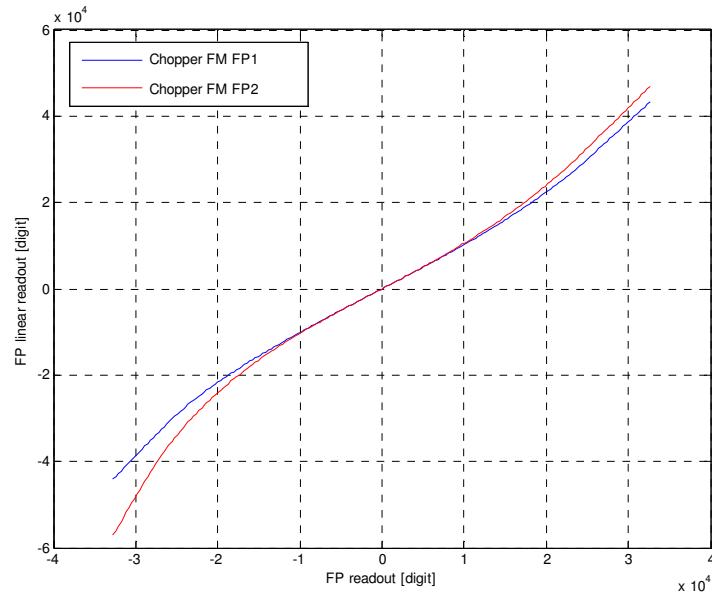

#### 4.4.7 Using the chopper

##### 4.4.7.1 Selecting chopper actuator coils

For an understanding of the following explanation, refer to the figure presented above in §4.4.6.1.

The driving amplifier is connected to the chopper coils using a set of 3 relays. One relay (relay 0) has a stable power off state (which is as shown in the figure) and its coil must be continuously powered to switch to the other position. The two other relays (relay 1 and 2) are bi-stable relays, meaning that no power is required to keep them in any position and a power pulse must be sent to the correct relay coil to switch from one stable position to the other. Therefore, they have no default power off position by hardware but the software commands them in their default position (as represented in the figure) when power off of the chopper is commanded using *DMC\_SWOF\_CHOP\_CONT*. It is important to note that all the relays of the non used nominal or redundant electronics must be in their default position. If it is not the case, the currently used electronics will not be able to command the chopper properly. Therefore, a correct switch off of the chopper by commanding *DMC SWOF CHOP CONT* must be done before switching from nominal to redundant electronics or inversely.

At switch on of the chopper controller using *DMC\_SWON\_CHOP\_CONT*, the relay 0 is powered which disconnects the chopper from the launch-lock resistor. It stays powered until the switch off command *DMC\_SWOF\_CHOP\_CONT* is sent.

The other two bi-stable relays can then be commanded using the *DMC\_SET\_CHOP\_COIL\_DRIVE* command with a parameter in which bit 4 to 7 define the position of the relays. In the figure, the



arrow indicates the direction of activation when the corresponding bit is set to 1. There are 4 different configurations as shown in the table.

Chopper coils used	bit 7	bit 6	bit 5	bit 4	Parameter value
Coils 1-2-3 (nominal)	0	1	0	1	0x28
Coils 1-2 (bypass 3)	1	0	0	1	0x48
Coils 2-3 (bypass 1)	0	1	1	0	0x30
Coil 2 (bypass 1&3)	1	0	1	0	0x50

At switch on of the chopper controller (*DMC\_SWON\_CHOP\_CONT*), the nominal configuration is automatically selected. In case the nominal configuration is used, it is therefore not necessary to use *DMC\_SET\_CHOP\_COIL\_DRIVE* command with parameter 0x28 after a switch on.

Note that changing the chopper coils configuration can be done only when the controller is disabled and that chopper controller parameters must be adapted for each configuration.

#### 4.4.7.2 Nominal mode operation

To start using the chopper, one should :

1. Switch-on the chopper controller (*DMC\_SWON\_CHOP\_CONT*)
2. If not operating in nominal coils configuration (3 coils used), change the coils configuration (*DMC\_SET\_CHOP\_COIL\_DRIVE*) and update controller parameters
3. Enable the chopper controller (*DMC\_ENABLE\_CHOP\_CONT*)
4. Then, any of the 4 move commands can be sent
5. When done, disable the chopper controller (*DMC\_DISABLE\_CHOP\_CONT*)
6. Switch-off the chopper controller (*DMC\_SWOF\_CHOP\_CONT*)

#### 4.4.7.3 Changing the controller parameters

The chopper parameters are defined by Zeiss for the different coils configurations and temperature conditions. The way to translate the Zeiss parameters in DMC units is detailed in §4.2.1.4.

You should only use those provided controller parameters. Setting a wrong value in any of these parameters could damage the chopper or its driver electronics.

An important parameter is the OutputLimit parameter which defines the maximum output current which can be commanded to the chopper coils. Indeed, the driving amplifier is designed to output a maximum current of  $\pm 133$  mA (when *DMC\_CHOP\_OUTPUT* =  $\pm 32767$ ). This current is required in degraded mode when using only one coil in order to reach the extreme angle deflection of the chopper. However, in nominal (three coils) or two coils configuration, the current must be limited to the appropriate value to avoid any over travel outside of the operational range of the chopper and damage while knocking the hard stops.

Another important parameter is the PosLimit parameters which defines a maximum deflexion of the chopper above which the controller will be disabled. This must be set slightly above the



operational range in order that any non nominal event which would drive the chopper at an angle higher than the nominal operational range will trigger the disabling of the controller while passing through the PosLimit value.

#### 4.4.7.4 Open loop mode operation

The chopper can be operated in open-loop mode. That means that a specified current can be applied to the actuator directly.

When commanding the chopper in open loop, there is of course no damping of the natural vibration frequency of the chopper (the mass-spring frequency of rotor on flex pivots is about 30 Hz). Therefore, if a current step is applied, the chopper will oscillate for 5-10 seconds before to stabilise. To avoid excitation of the chopper oscillation frequency, the current can be applied slowly by using a very small Rate parameter. In that way, the current will be applied using a low frequency sinus function until the specified target is reached.

Selecting the open-loop mode is done via the command (*DMC\_SET\_CHOP\_COIL\_DRIVE*) with bit 8 set to 1 (If changing only the open/close loop mode without changing the coils configuration, bits 0-7 can be set to zero). To go back to closed loop mode, send this command with bit8 set to 0. This must be done when chopper controller is switched-on and when the chopper controller is disabled.

Then any of the 4 move commands can be sent but the parameter is now the driving current rather than the angle setpoint. The units are in mA where  $\pm 32767 = \pm 133$  mA.

#### 4.4.7.5 Summary of commands and telemetry

##### **Trigger Commands:**

- 49 DMC\_SWON\_CHOP\_CONT
- 50 DMC\_SWOFF\_CHOP\_CONT
- 51 DMC\_ENABLE\_CHOP\_CONT
- 52 DMC\_DISABLE\_CHOP\_CONT
- 53 DMC\_MOVE\_CHOP\_ABS
- 54 DMC\_MOVE\_CHOP\_REL
- 55 DMC\_MOVE\_CHOP\_ABS\_DITHER
- 56 DMC\_MOVE\_CHOP\_REL\_DITHER
- 57 DMC\_SET\_CHOP\_COIL\_DRIVE

##### **Write Commands:**

- 144 DMC\_WRT\_CHOP\_CONF\_PAR
- 153 DMC\_WRT\_MAX\_DITHER

##### **HK nominal:**

- 209 DMC\_CHOP\_CTRL\_ST

- 244 DMC\_CHOP\_CUR\_POS
- 245 DMC\_CHOP\_SETPOIN
- 246 DMC\_CHOP\_TARGET
- 247 DMC\_CHOP\_PID\_ERR
- 248 DMC\_CHOP\_PID\_ACC
- 249 DMC\_CHOP\_MAX\_DIT
- 258 DMC\_CHOP\_OUTPUT


**HK diag:**


- 557 DMC\_CHOP\_VA
- 561 DMC\_CHOP\_IA
- 565 DMC\_CHOP\_VB

#### 4.4.8 The Grating : general description

The two pictures hereunder show the grating mechanism and the most interesting elements which are used for its control, i.e. :

- The grating main actuator
- The inductosyn position sensor
- The hard stops
- The launch-lock mechanism
- The temperature sensors

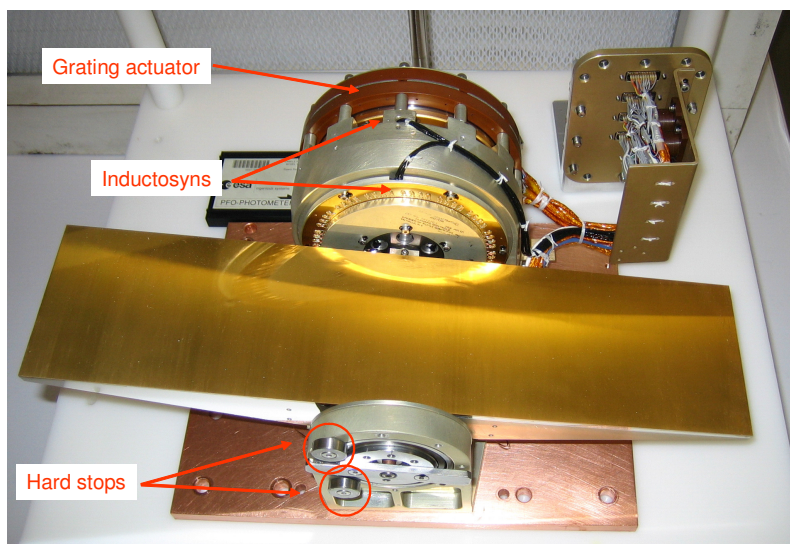

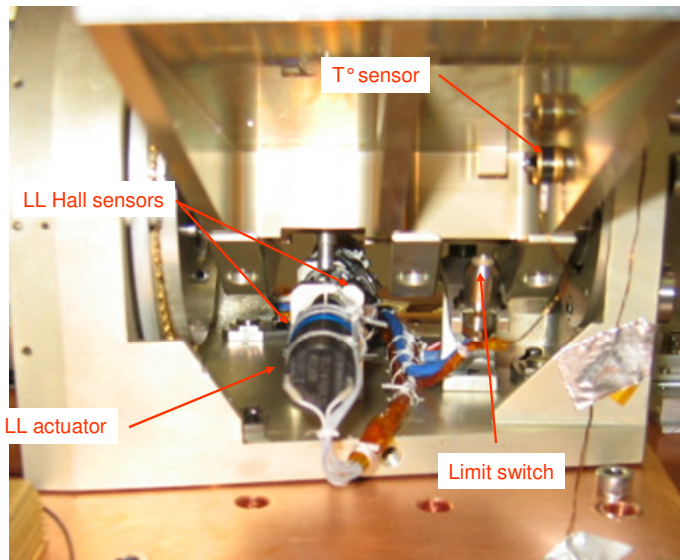


#### 4.4.8.1 The grating actuator

A detailed description of the grating actuator can be found in document PACS/GA-SP-001-TTL, which is included in the Grating PFM end item data package PACS-CL-DP-004.


There are two electrical circuits in the actuator, one nominal and one redundant, each composed of one pair of coils and two hall sensors.

The actuator is composed of a turning rotor part and a fixed stator part (see figure below for description).

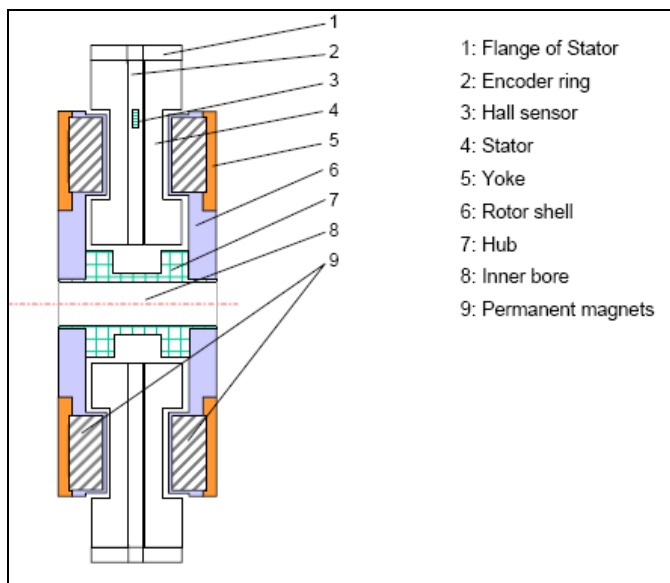

The rotor part is composed of 12 pair of magnets uniformly distributed on the circumference (i.e. one pair of magnets each  $30^\circ$ ), and with alternating magnetic field. The stator part is composed of two coils (phase 1 and phase 2) placed between the magnets (in the magnetic field) and dephased of  $15^\circ$  (i.e. 1/4 of period) one to the other.


To turn the rotor, the current in the coils must be commanded as shown in the sketch hereunder.

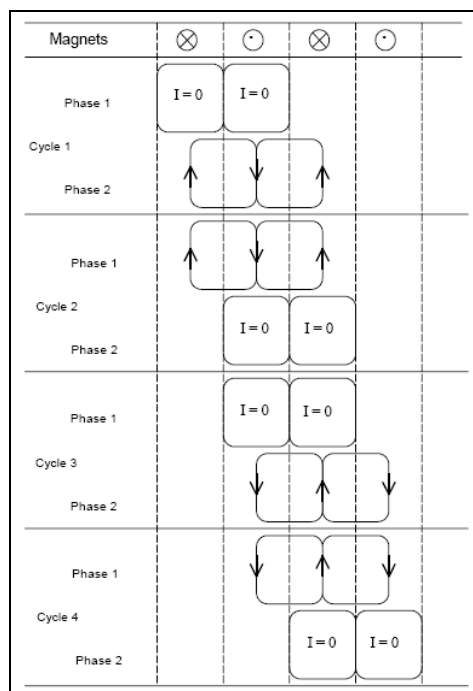

This means that to turn the actuator continuously, sine and cosine current modulation must be sent in each coil, with an angular period of  $60^\circ$ . This is done using two hall sensors which are aligned with the coils and which have the property to output a signal proportional to the magnetic field. Therefore, by reading the two hall sensors, the sine and cosine distribution of the current in the coils can be determined.

As the total grating angular range is about  $40^\circ$ , only 2/3 of a period of the hall sensors can be measured while moving the grating from one hard stop to the other. An example of hall sensors signals on the whole grating range is shown in the figure hereunder.



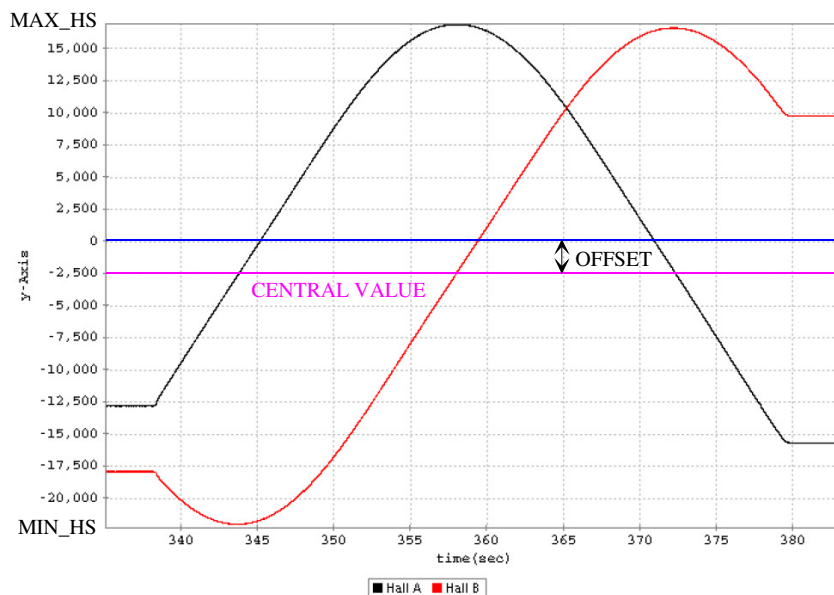

In order to make the current repartition correctly, the software requires that the hall sensors signals are sinusoids with an amplitude of 65535 (i.e. between -32767 to 32767). As shown in the figure, this is of course not the case and also the amplitude of the signals is changing with temperature. Therefore, a scaling parameter is used which is defined as following (refer to the picture) :

$$\text{SCALING} = 1024 * 65535 / (\text{MAX\_HS} - \text{MIN\_HS})$$


At ambient temperature, the hall sensors signals are symmetrical around 0. However, at cold temperature, an offset appears as it is the case in the figure (meaning that the signal is different from 0 even if there is no magnetic field). An offset parameter is then also used to recover symmetrical signals before to be used by the software. It can be set using the command *DMC\_WRT\_GRAT\_HALL\_OFFSET*.

See §4.2.1.2 to see how are defined and how to change these parameters.

#### 4.4.8.2 The inductosyn position sensor

The inductosyn position sensor is an inductive sensor composed of two facing disks, one fixed (stator) and one turning with the grating (rotor). On the rotor disk, there is one printed circuit shaped like a square wave and used as an excitation coil, with 128 periods on the total circumference. On the stator disk, there are two similar printed circuits used as secondary coils and dephased of 1/2 period one to the other (see the picture below). The excitation signal (and therefore the two readout signals) is a sine with a frequency of 16384 Hz. The two readout signals are in phase with each other but when the grating is turning, their amplitudes are varying just like sine and cosine functions with a period corresponding to an angle of  $360^\circ/128$ .



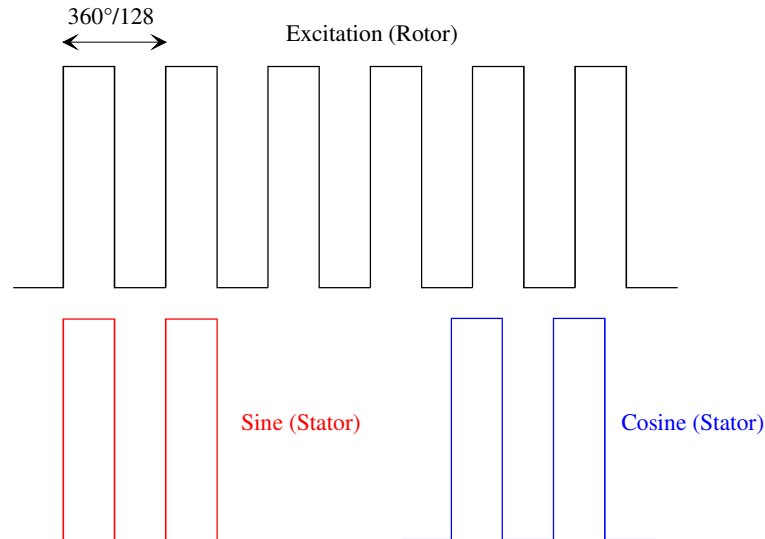

From the sine and cosine readout signals, the electronics output a 16 bits value which is an absolute position reading within a period of the printed circuit. There is an additional counter which increment or decrement when there is a transition of the position readout from 0xFFFF to 0x0 or from 0x0 to 0xFFFF respectively. This period counter is an 8 bits integer. Therefore, the position readout is a 24 bits signed integer.

At switch on of the grating controller using the command *DMC\_SWOF\_GRAT\_CONT*, the grating is in an arbitrary position and the period counter must be reset by placing the grating in a well known reference position. This is the reason why a homing process is required and two hard stops at extreme positions of the grating are used as reference.

#### 4.4.8.3 The launch-lock

The launch-lock is composed of two actuators (one nominal and one redundant) which are each connected to one DMC MIM3 board (respectively to nominal and redundant MIM3). However, to increase the reliability and decrease the required driving current, the two actuators can be operated together, whatever the nominal or the redundant electronics is in use. Each actuator is driven with a maximum current of 400 mA.

The launch-lock is equipped with hall sensors indicating the unlocked and locked positions. In order to minimise the dissipated power, these hall sensors are powered only when the actuators are driven. Therefore, the reading of the launch-lock position is only possible during a launch-lock activation operation.

#### 4.4.9 Using the grating

The grating and the filter wheels are driven by the same extension board and power supply. So, only one of these mechanisms can be used at a time. Switching-on one of these mechanism controllers will automatically switch-off the one that is currently on.



There is only one command to switch-off the controller that is currently on : *DMC\_SWOF\_GRAT\_CONT*.

The grating position encoder (inductosyn) will be powered-off only when the *DMC\_SWOF\_GRAT\_CONT* is received. By this way, it is possible to move the grating, then a filter wheel and then the grating again without losing the grating position. This can be achieved if you use only *DMC\_SWON\_FW\_SPEC*, *DMC\_SWON\_FW\_PHOTO* and *DMC\_SWON\_GRAT\_CONT* to toggle between the mechanism controllers and never use *DMC\_SWOF\_GRAT\_CONT* (see section 4.4.11 for details).

It is recommended to disable the grating controller before any switching from the grating to one of the filter wheels. This is done by sending the command *DMC\_DISABLE\_GRAT\_CONT*.

#### 4.4.9.1 Hardware settings for position readout

The inductosyn readout electronics needs a very accurate tuning of its parameters (on MIM1 and MIM3 boards) depending on which inductosyn sensor is connected and in which temperature conditions it is used. The DMC is adjusted to operate the grating at cold conditions and with nominal MIM boards connected to nominal inductosyn and redundant MIM boards connected to redundant inductosyn.

In all other conditions, the inductosyn signal may be very noisy and not accurate. That means in particular that the grating cannot be operated in closed loop at ambient conditions, i.e. the grating controller cannot be enabled. Command *DMC\_ENABLE\_GRAT\_CONT* is therefore only allowed in cold conditions. However, open loop mode can be used in any conditions.

The MIM3 hardware settings are corresponding to an adjustment of the amplitude of the excitation and hence of the sine and cosine readout signals. The MIM1 hardware settings are corresponding to an adjustment of the phase of sine and cosine signals with a reference signal, which is required for the converter A/D (AD2S80) to operate correctly. The MIM1 settings are realised by adjusting the value of fixed resistors while a software command allows some adjustment of the amplitude of the excitation.

The amplitude of the excitation can be adapted by using the command *DMC\_WRT\_GRAT\_INDUCT\_AMPL* with a parameter defining the amplitude of the excitation. This parameter is a 12 bits integer and therefore, the maximum sine and cosine amplitude will be realised with an amplitude command of 4095.


Two HK diagnostic variables *DMC\_GR\_IND\_SINE* and *DMC\_GR\_IND\_COS* allow having a readout of the sine and cosine amplitude. The amplitude of the excitation must be adjusted to get a maximum amplitude of sine and cosine signals of 2 V<sub>rms</sub> ( $\pm 10\%$ ). This is done as following :

- Start HK diag at 20 Hz for *DMC\_GR\_IND\_SINE* and *DMC\_GR\_IND\_COS*
- Move the grating relative by 0x30000 at 1°/sec. (rate = 3)



- Analyse HK diag records. Figure hereunder shows how it looks like. The goal of the process is to obtain a maximum amplitude for these signals of 14486 ( $\pm 500$ ) digits. If the maximum amplitude is different, adjust the excitation amplitude and restart the measurement. This must be repeated until the target of 14486 is reached.

DMC\_GR\_IND\_SINE  
DMC\_GR\_IND\_COS

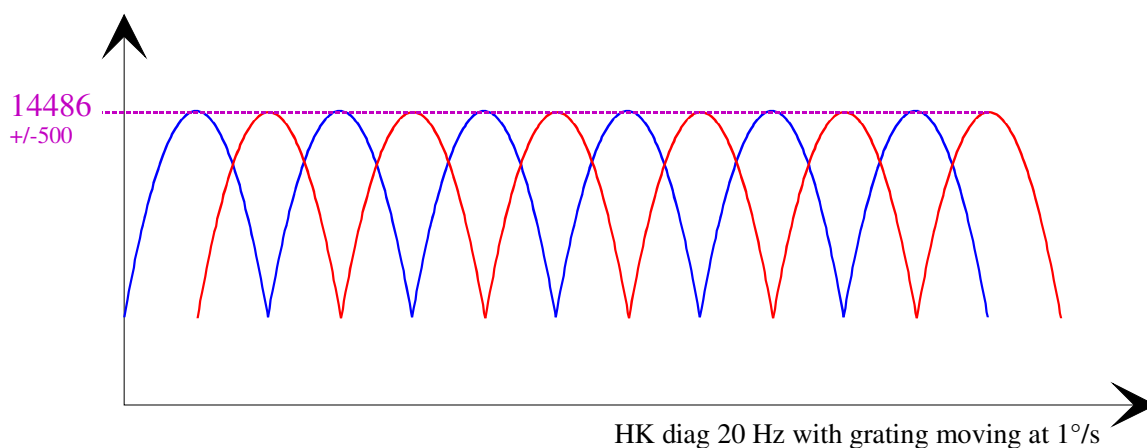

ATTENTION : this process is done by operating the grating in closed loop. It is therefore only allowed when the inductosyn amplitude is already set to a value not too far from the target, i.e. for some periodical adjustment if required. If it is not the case, this will lead to instability of the controller and open loop mode must be used to move the grating for recording HK diag data. In any case, changing the amplitude of the inductosyn signals must be done carefully and by experienced users only.

Also note that, since the sine/cosine measure circuit is using some spare channels of the calibrations sources circuit, they can not be measured while the calibration sources are operated. Both calibration sources must be switched off to be able to make this measure.

#### 4.4.9.2 Changing the controller parameters

You should only use controller parameters provided by CSL. Setting a wrong value in any of these parameters could damage the grating or its driver electronics.

#### 4.4.9.3 Operating the launch-lock

The nominal operating mode is by driving the two launch-lock actuators simultaneously. Commanding only one actuator must be used only for testing or for degraded mode operation if required.



When launch-lock activation is commanded, the driving current is applied during about 5 s, regardless the value of the position sensors. The launch-lock position sensors are powered on only when the launch-lock motor is operated. Since the HK period is 2 seconds, the status bit of the position sensors will appear only in 2 or 3 HK packets.

#### Unlocking:

You should first switch-on the grating controller *DMC\_SWON\_GRAT\_CONT*. Then send the *DMC\_UNLOCK\_GRAT* with parameter 28 (for the open-loop mode with two actuators). Then, the grating can be used as usual.

#### Locking:

The grating controller should be powered-on but disabled. Before disabling the grating controller, you should first move the grating to a central position (~500000). Then, Send the *DMC\_LOCK\_GRAT* command with parameter 12 (for the open-loop with two actuators).

Note that the launch-lock can be operated nominally at any temperature conditions, assuming that the grating is in horizontal position.

#### 4.4.9.4 Grating position readout

As explained in §4.4.8.2, there are 128 periods for for 360° with a position readout on 16 bits in one period. Therefore conversion from *DMC\_GRAT\_CUR\_POS* to angle is made as following :

$$\text{Angle [deg.]} = \text{DMC\_GRAT\_CUR\_POS} * 360 / (128 * 65535)$$

(For exemple *DMC\_GRAT\_CUR\_POS* = 23301 corresponds to 1°)

In degraded mode, the grating position is given by *DMC\_GR\_DEG\_POS* (available in diagnostic hk only). This position is actually the index in the sine array that is used to generate the command of the grating (see §4.4.9.10 for details about the degraded mode). This value is updated only when you move and when you switch-on the controller. This value is not reflecting the actual position but the command that is applied to the grating; this means that if the grating oscillates, you will not see it here, if it is not at the commanded position, you will not see it here as well (the only information about the real position of the grating can be retrieved from the hall sensors).

#### 4.4.9.5 Changing the inductosyn sign


From version 6.000, this command has been disabled since both FM inductosyn have the same orientation. Version 6.000 is not compatible with the redundant circuit of the QM grating !

#### 4.4.9.6 Homing the grating

As explained in §4.4.9.4, the period counter of the inductosyn must be reset with grating being positioned at one of the two hard stops. Just before reaching the hard stop, a limit switch is pressed to asses that the grating is well blocked against the hard stop and not inside its operational

range due to an eventual problem. The limit switch position can be found in the HK in DMC\_GRAT\_CTRL\_ST variable (bit 23), see §5.3.2.

The schematic below shows the position of the two hard stops and limit switches related to the inductosyn position direction.

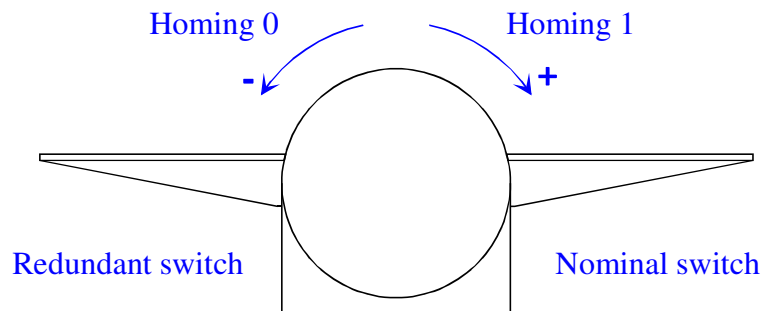

**View of the grating when facing the main actuator**

Two different homings can be done by sending the homing command *DMC\_HOME\_GRAT* with parameter 0 or 1 (see §4.1), respectively using the hard stop at zero and full range positions. The period counter is reset in such a way that an absolute position readout after a homing process is independent of the used homing command. Here is an example to explain how the inductosyn homing is done for each different homing (numbers are given for example only and are not related to any real situation) :

Consider that parameter *RANGE* = 0x00100000 and *X* is an arbitrary hexadecimal value (0...F)

	<i>Position at switch on</i>	<i>Position at hard stop (zero side)</i>	<i>Position at hard stop after homing</i> ⇒ <i>Period counter set to 0</i>	<i>Position at other hard stop (full range side) after homing</i>
<b>Homing 0</b>	0XXXXXXXXX	0XXXXX5DF5	0x00005D5F	0x001050C7

	<i>Position at switch on</i>	<i>Position at hard stop (full range side)</i>	<i>Position at hard stop after homing</i> ⇒ <i>Period counter set to RANGE</i>	<i>Position at other hard stop (zero side) after homing</i>
<b>Homing 1</b>	0XXXXXXXXX	0XXXXX50C7	0x001050C7	0x00005D5F

However, each limit switch is connected to a given electronics, i.e. either to nominal or to redundant MIM boards. Therefore, the limit switch can be seen only at one of the two hard stops. The limit switch indication is available for nominal circuit when homing to 1 and for redundant circuit when homing to 0 (as shown on the sketch above).



#### 4.4.9.7 Determining the grating range parameter

This operation shall be repeated once for each model (and once for the nominal and once for the redundant).

Start HK diag monitoring the *DMC\_GR\_IND\_READ*. Move the grating to both hardstops. From the diagnostic data, extract the *min\_pos* and *max\_pos* (minimum and maximum values of *DMC\_GR\_IND\_READ* during the move).

The range is = (*max\_pos* &<sup>1</sup> 0xFFFF0000) - (*min\_pos* & 0xFFFF0000).

Note that the range for the Grating PFM is supplied by CSL and should nominally not be measured again. See §4.2.1.2.

#### 4.4.9.8 Nominal mode operation

To start using the grating, one should:

1. Switch-on the grating controller (*DMC\_SWON\_GRAT\_CONT*). Note : this will switch-off the filter wheels controllers.
2. If necessary, unlock the grating (*DMC\_UNLOCK\_GRAT*)
3. If necessary, write the parameters blocks:
  - *DMC\_WRT\_GRAT\_CONF\_PAR*
  - *DMC\_WRT\_GRAT\_INDUCT\_AMPL*
  - *DMC\_WRT\_GRAT\_RANGE*
  - *DMC\_WRT\_GRAT\_HALL\_OFFSET*
  - *DMC\_WRT\_GRAT\_CONF\_FILT*
4. Enable the grating controller (*DMC\_ENABLE\_GRAT\_CONT*)
5. Home the grating (*DMC\_HOME\_GRAT*). This command takes around 60 seconds.
6. Then, any of the 2 move commands can be sent
7. When done, disable the grating controller (*DMC\_DISABLE\_GRAT\_CONT*)
8. Switch-off the grating controller (*DMC\_SWOF\_GRAT\_CONT*). Note : this command switches off the currently active controller (Grating or one of the filter wheel) and switches off the inductosyn power supply. So if you want to use the grating again, you will need to perform a *DMC\_HOME\_GRAT*.

#### 4.4.9.9 Using the grating in degraded mode

In the case of a failure of the inductosyn (and also for functional testing at ambient conditions), the grating can be used in degraded mode. This mode is an open loop mode (based on the operation of the filter wheels) : sine and cosine waveforms are sent in the motor coils. In this mode, the performance is lowered (settling time is longer, accuracy is lower, and stability is lower).


---

<sup>1</sup> & is the bitwise AND operator



To use the grating in degraded mode, you must enter the grating degraded mode (*DMC\_ENTER\_GRAT\_CONT\_DEG*). This must be done after switching on the grating (*DMC\_SWON\_GRAT\_CONT*). Once you have switched on the grating, you must not enable the controller (in open-loop, the controller is inactive).

The software uses a sine table with 16384 entries for one sine period. When entering the degraded mode, a reading of the hall sensors is done to know the position of the rotor and therefore the starting position in the sine table to determine sine and cosine values of the current to be sent in the motor coils (see schematic hereunder). There is only one table, the index for the second coil being the index for the first coil dephased by a quarter of the table (4096).

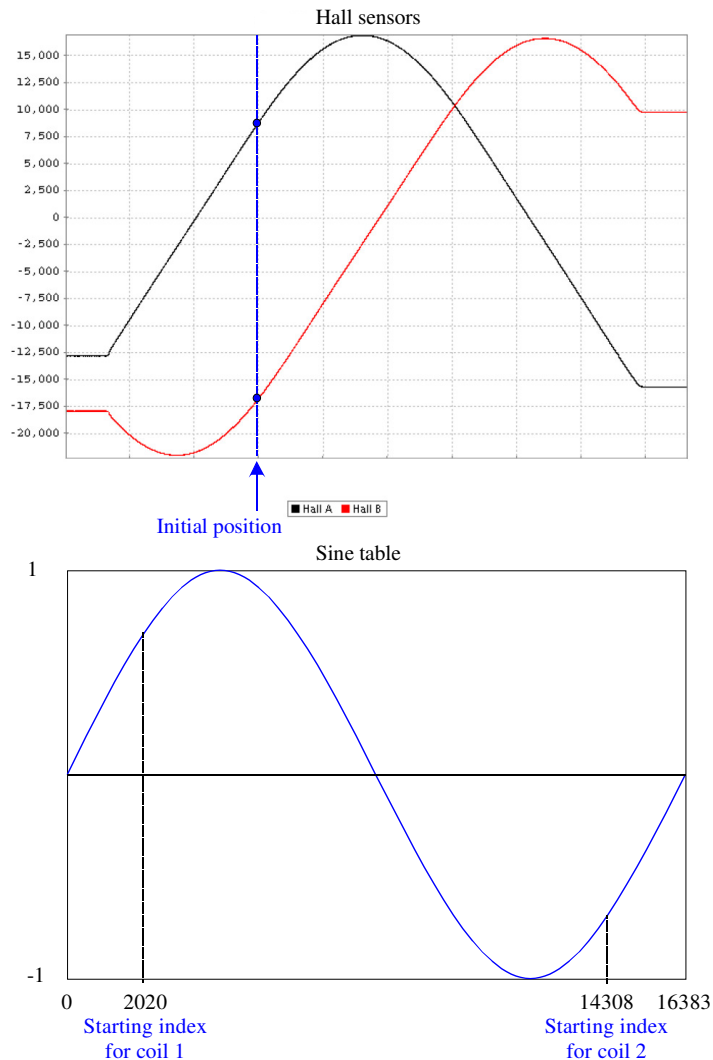

Two different moves can then be commanded, using relative and absolute move commands. When commanding a relative move, the position specified is the relative index position w.r.t to the current index in the sine table (in the sketch above, a relative move of 2000 will move the grating



from index 2020 to 4020). When commanding an absolute move, the position specified is the absolute index position in the table (in the sketch above, the same results than a relative move of 2000 can be obtained with an absolute move of 4020). At the end of a move, the starting index for the next move becomes the new current index. The current is maintained in the coils to hold the grating at the commanded position.

As already mentioned above, the value given in DMC\_GR\_DEG\_POS is the current index in the sine table and is not obtained from any physical readout from the grating. One unit represents one step in the sine table. As the sine table has 16384 entries and as there are 6 periods for 1 turn, one units represents an angle of  $360^\circ / (6 * 16384) = 13,18$  arcsec.

In order to determine the relation between a degraded mode position and a physical optical position of the grating, a calibration should be done to link the degraded mode position with an absolute inductosyn readout position. Actually, this can be done by plotting Hall sensors signals (DMC\_FWGRAT\_HALL\_A and DMC\_FWGRAT\_HALL\_B) w.r.t inductosyn position (DMC\_GRAT\_CUR\_POS).

In open loop mode, the speed of the grating is determined by the degraded mode rate defined in DMC\_WRT\_GRAT\_DEG\_MODE\_PARAM (that is not the same parameter as the nominal rate) . In this case, the degraded mode rate is the number of interrupt count between two steps in the sine table (for example, Rate = 32 =>  $32 * 16384 / 8192 = 64$  sec for  $60^\circ$ ). This will define the frequency of the sine and cosine driving functions sent to the coils of the actuator and therefore determine the speed.

#### 4.4.9.10 Working with the redundant grating

The grating is fully redundant and has two exactly identical electrical circuits for all its components. Therefore, there is no difference in operating the grating with redundant electronics than with nominal electronics.

The only difference will be in the optical calibration of the grating w.r.t its inductosyn position. Indeed, as the nominal and redundant inductosyns are physically different sensors, their mechanical alignment is not accurate enough to ensure that the same position readout is obtained for the same physical position of the grating. Actually, there will be an offset between the two inductosyns which must be measured by using a known physical reference. The hard stops can be used in that purpose; the offset being the difference in the position obtained using nominal and redundant inductosyns, with the grating against the hard stop after a homing has been done.

It is however recommended for better accuracy to make a wavelength calibration of the redundant circuit as well.

#### 4.4.9.11 Error detection

To prevent any damage to the grating mechanism or to its driver electronics, two protections have been implemented in the software.

Error limit:





If the error gets larger than the error limit, the controller is disabled and the output is set to zero. The grating will then be free running. In this case, an error is signalled in the grating controller status (but not in the software global status). Since the controller is disabled, it is no longer possible to move the grating until the controller is enabled again.

#### Power limit:

If the output of the controller is bigger than 100mA for more than 5 seconds, the controller will be disabled. This is to prevent warming of the driver electronics.

If you send the grating to or near the operating range limits, it will have to push the limit switch and its power consumption will increase. If the grating stays at this position for a too long period, this protection will trigger.

#### 4.4.9.12 Grating Health Check

The grating health check is done by acquiring 9 hk measures at high frequency :

- DMC\_GRAT\_CUR\_POS
- DMC\_GRAT\_PID\_ERR
- DMC\_GRAT\_OUTPUT
- DMC\_FWGRAT\_HALL\_A
- DMC\_FWGRAT\_HALL\_B
- DMC\_FW\_GR\_VMOTA
- DMC\_FW\_GR\_VMOTB
- DMC\_FW\_GR\_IMOTA
- DMC\_FW\_GR\_IMOTB

The acquisition shall be performed during a move from one hard stop to the other to cover the complete range. It shall first be performed on ground to set references and then at a TBD interval during flight. Values shall be compared to the reference to identify ageing problems.

The health check in cold conditions can be done in nominal operating mode. However, as the inductosyn signal at ambient is not nominal and as the controller cannot be enabled, the health check at ambient can be done only in degraded mode (open loop) operation.

To ease the interpretation of data, these charts shall be produced :

- Hall sensors signals related to inductosyn position (DMC\_FWGRAT\_HALL\_A & DMC\_FW\_GRAT\_HALL\_B vs DMC\_GRAT\_CUR\_POS)
- Error and commanded output current related to position (DMC\_GRAT\_PID\_ERR & DMC\_GRAT\_OUTPUT vs DMC\_GRAT\_CUR\_POS)
- Measured current and voltages in motor coils related to position (DMC\_FW\_GR\_IMOTA & DMC\_FW\_GR\_IMOTB & DMC\_FW\_GR\_VMOTA & DMC\_FW\_GR\_VMOTB vs DMC\_GRAT\_CUR\_POS)



#### 4.4.9.13 Summary of commands and telemetry

##### **Trigger Commands:**

- 38 DMC\_SWON\_GRAT\_CONT
- 39 DMC\_SWOFF\_GRAT\_CONT
- 40 DMC\_ENABLE\_GRAT\_CONT
- 41 DMC\_DISABLE\_GRAT\_CONT
- 42 DMC\_MOVE\_GRAT\_ABS
- 43 DMC\_MOVE\_GRAT\_REL
- 44 DMC\_MOVE\_HOME\_GRAT
- 45 DMC\_ENTER\_GRAT\_CONT\_DEG
- 46 DMC\_EXIT\_GRAT\_CONT\_DEG
- 47 DMC\_LOCK\_GRAT
- 48 DMC\_UNLOCK\_GRAT

##### **Write Commands:**

- 143 DMC\_WRT\_GRAT\_CONF\_PAR
- 160 DMC\_WRT\_GRAT\_INDUCT\_AMPL
- 161 DMC\_WRT\_GRAT\_RANGE
- 162 DMC\_WRT\_GRAT\_HALL\_OFFSET
- 163 DMC\_WRT\_GRAT\_DEG\_MODE\_PARAM
- 164 DMC\_WRT\_GRAT\_CONF\_FILT

##### **HK nominal:**

- 208 DMC\_GRAT\_CTRL\_ST
- 250 DMC\_GRAT\_CUR\_POS
- 251 DMC\_GRAT\_SETPOIN
- 252 DMC\_GRAT\_TARGET
- 253 DMC\_GRAT\_PID\_ERR
- 254 DMC\_CHOP\_PID\_ACC
- 256 DMC\_FWGRAT\_HALLA
- 257 DMC\_FWGRAT\_HALLB
- 452 DMC\_GRAT\_OUTPUT


##### **HK diag:**

- 512 DMC\_GR\_IND\_READ
- 513 DMC\_GR\_TURN\_CAR
- 514 DMC\_GR\_PER\_CAR
- 515 DMC\_GR\_DEG\_POS
- 556 DMC\_FW\_GR\_VMOTA

- 560 DMC\_FW\_GR\_IMOTA
- 564 DMC\_FW\_GR\_VMOTB
- 567 DMC\_FW\_GR\_IMOTB
- 570 DMC\_LL\_CUR

#### 4.4.10 The filter wheels : general description


Hereunder are shown pictures of a dummy filter wheel (STM) and of one QM/FM model.

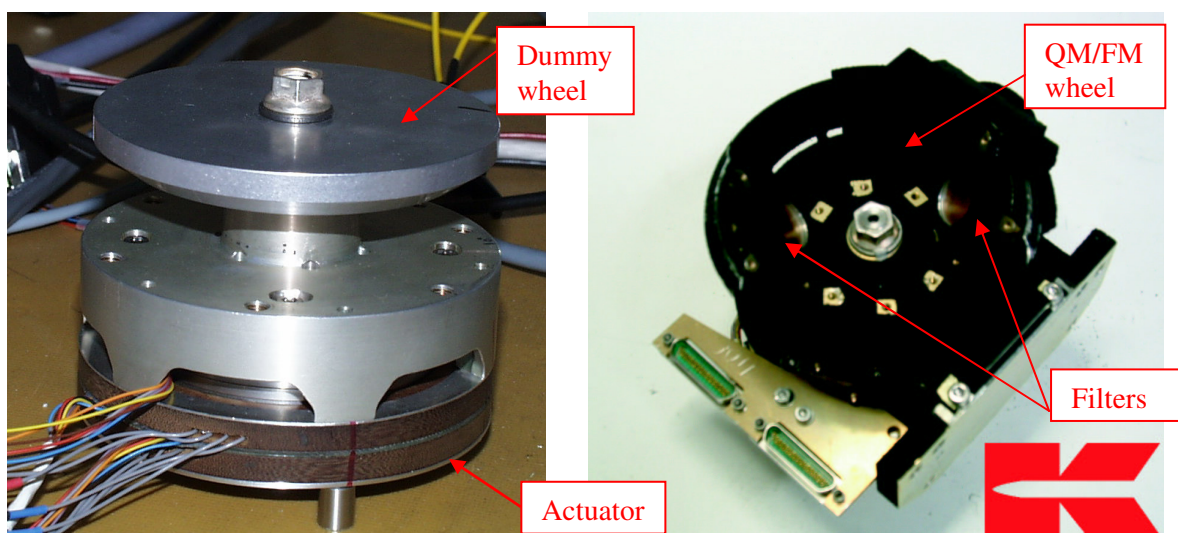


There are two filter wheels, one for the spectrometer and one for the photometer, but with identical design.

The actuator of the filter wheel is the same type as the actuator of the grating. It is built exactly like the grating actuator but with smaller size and different electrical characteristics. However, the operation of the filter wheel actuator is identical (see §4.4.8.1).

The filter wheel has two operating positions (corresponding to the two filters), which are locked by magnets as shown on the figure below. The magnets are also inducing a signal in the position indicator hall sensors by creating a magnetic field through the sensor when the wheel is in the right locked position.

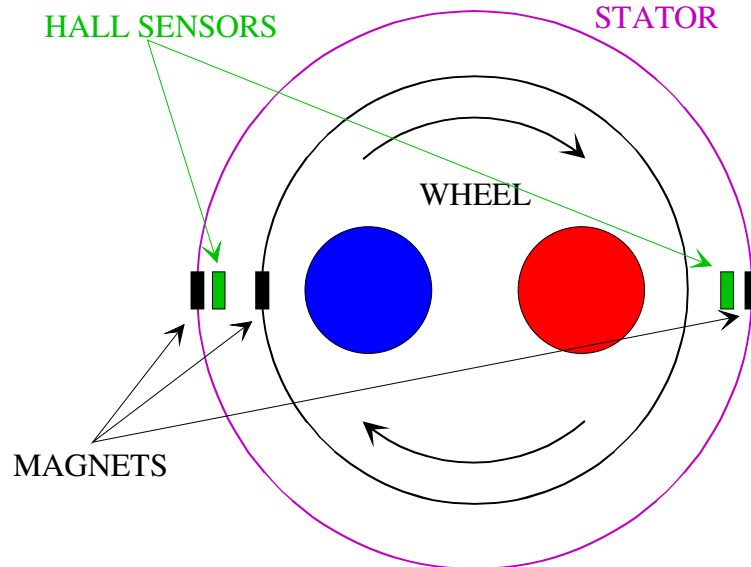

The position hall sensor signal while the wheel is moving close to a locked position is like shown in the figure below. A control threshold parameter (see §4.2.1.3) is set for the software to determine when the filter wheel has reached the commanded position. That means that the current is reset to 0 as soon as the hall sensor signal is higher than the control threshold and then the wheel is free running and should be locked at right position by the magnet (see §4.4.11.1 for moving operations). If the magnet force is not sufficient to ensure positioning accuracy, the control threshold can be set close to the maximum of the hall sensor response to recover a good positioning accuracy and repeatability. A different status threshold parameter is used to switch the positioning status bit in DMC\_FW\_SPEC\_CTRL / DMC\_FW\_PHOT\_CTRL. This parameter must be set to a lower value in order to ensure that any back movement of the wheel when the current is reset will not produce an effect on the position status.

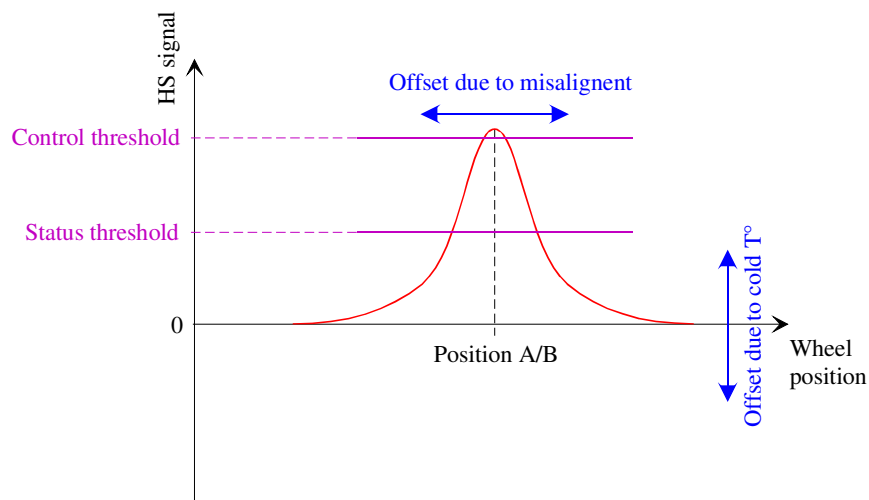



There are two effects which makes that the hall sensor signal is actually not as perfect as shown in the figure and this must be taken into account for adjusting the threshold parameter. First, the hall sensor can be not perfectly aligned with the magnet, inducing that the response curve will not be exactly centered on the locked position of the wheel. Secondly, the hall sensors have an offset at cold temperature, which can be either positive or negative depending of the sensor, inducing that the signal will not be 0 outside of the magnetic field. This will produce a vertical offset of the response curve.

Therefore, each hall sensor will have a different response curve and a pair of threshold parameters (status + control) is available for each position of the wheel (see §4.2.1.3).

#### 4.4.11 Using the filter wheels

The filters wheels use the same driving electronics than the grating. The output of the driving amplifiers is switched between Grating, Spectro FW and Photo FW using a set of relays. Therefore, only one mechanism can also be commanded at a time.

For using a filter wheel, apply the following procedure :

1. If enabled, the grating controller must be disabled (*DMC\_DISABLE\_GRAT\_CONT*).
2. Switch-on the spectro filter wheel controller (*DMC\_SWON\_FW\_SPEC*) or the photo filter wheel controller (*DM\_SWON\_FW\_PHOTO*). Note : this will activate the relays such that the output of the driving amplifiers are connected to the selected FW and therefore, the grating controller and the other filter wheel controller are switched off.
3. Then, the FW can be moved by any of the two moving commands (see §4.4.11.2).
4. Switch-off the controller (*DMC\_SWOF\_GRAT\_CONT*). Note : this command switches off the currently active controller (Grating or one of the filter wheels)

##### 4.4.11.1 Moving a filter wheel

The filter wheels are operated by using the same principle than for the open loop (degraded) mode of the grating (see §4.4.9.9). There are however three small differences :

- At the end of a movement, the current output is set to zero and the filter wheel is maintained to its position only by the locking effect of the magnets if being at an operating position or is free running if positioned elsewhere.
- For that reason, the position of the filter wheel at the beginning of the next move is not exactly known. Therefore, a reading of the hall sensors (determining the starting index in the sine table) is made each time a move command is sent.
- The size of the sine table is different, one period corresponding to 256 (0x100) points. Therefore, a complete turn corresponds to a movement of 1536 (0x600) steps in the sine table.



There are two moving commands for the filter wheel, named closed loop or open loop commands. Using closed loop command (*DMC\_MOVE\_SPEC\_FW\_LOC* or *DMC\_MOVE\_PHOTO\_FW\_LOC*), the wheel is moved until the commanded position is reached (i.e. the hall sensor signal is higher than the specified control threshold). The wheel will turn in the commanded direction. If the control threshold value is never reached by the sensor signal (due to a defect or a wrong parameter setting), the wheel will make by default 1.5 turn.

Using open loop command (*DMC\_MOVE\_SPEC\_FW\_STEP* or *DMC\_MOVE\_PHOTO\_FW\_STEP*), the wheel is moved by a specified number of steps in the sine table, just like for the degraded mode operation of the grating. The direction of the wheel is determined by the sign of the command parameter. This mode can be used in case of a failure of a position hall sensor or if the wheel must be positioned to an intermediate position (not on a filter) for being used as a shutter in light path for example.

#### 4.4.11.2 Changing the filter wheel position between two acquisitions

Consider that the grating is powered on and that an acquisition sequence has ended. To change the filter wheel position now:

1. Disable the grating controller (*DMC\_DISABLE\_GRAT\_CONT*)
2. Switch-on the spectro filter wheel controller (*DMC\_SWON\_FW\_SPEC*). Note : this will switch-off the grating controller and the photo filter wheel controller but the grating position encoder will remain powered-on and will then continue reading the position.
3. Then, any of the 2 move commands can be sent
4. Then, switch-on the grating controller again (*DMC\_SWON\_GRAT\_CONT*)
5. Enable the grating controller again (*DMC\_ENABLE\_GRAT\_CONT*)
6. Start the new acquisition sequence.

#### 4.4.11.3 Filter wheels Health Check

To acquire all housekeeping related to the spectro filter wheel, start a diagnostic housekeeping acquisition with the following measures:

HK ID (dec)	HK ID (hex)	HK ID
210	D2	DMC_FW_SPEC_CTRL
256	100	DMC_FWGRAT_HALL_A
257	101	DMC_FWGRAT_HALL_B
556	22C	DMC_FW_GR_VMOTA
564	234	DMC_FW_GR_VMOTB
560	230	DMC_FW_GR_IMOTA
567	237	DMC_FW_GR_IMOTB
555	22B	DMC_FWSPEC_POS_A
559	23F	DMC_FWSPEC_POS_B
65535	FFFF	END_OF_HK_LIST_ID



Switch-on the spectro filter wheel controller (*DMC\_SWON\_FW\_SPEC*).  
Make a complete turn (*DMC\_MOVE\_SPEC\_FW\_STEP* with parameter = 0x600)  
Stop the housekeeping acquisition.

To acquire all housekeeping related to the photo filter wheel, start a diagnostic housekeeping acquisition with the following measures:

HK ID (dec)	HK ID (hex)	HK ID
211	D3	DMC_FW_PHOT_CTRL
256	100	DMC_FWGRAT_HALL_A
257	101	DMC_FWGRAT_HALL_B
556	22C	DMC_FW_GR_VMOTA
564	234	DMC_FW_GR_VMOTB
560	230	DMC_FW_GR_IMOTA
567	237	DMC_FW_GR_IMOTB
563	233	DMC_FWPHOT_POS_A
569	239	DMC_FWPHOT_POS_B
65535	FFFF	END_OF_HK_LIST_ID

Switch-on the spectro filter wheel controller (*DMC\_SWON\_FW\_PHOTO*).  
Make a complete turn (*DMC\_MOVE\_PHOTO\_FW\_STEP* with parameter = 0x600)  
Stop the housekeeping acquisition.

#### 4.4.11.4 Summary of commands and telemetry

##### Trigger Commands:

- 39 DMC\_SWOFF\_GRAT\_CONT
- 58 DMC\_SWON\_FW\_SPEC
- 64 DMC\_MOVE\_SPEC\_FW\_LOC
- 65 DMC\_MOVE\_SPEC\_FW\_STEP

##### Write Commands:

- 145 DMC\_WRT\_FW\_SPEC\_CONF\_PAR

##### HK nominal:

- 210 DMC\_FW\_SPEC\_CTRL
- 255 DMC\_FWSP\_CUR\_POS
- 256 DMC\_FWGRAT\_HALLA
- 257 DMC\_FWGRAT\_HALLB

##### HK diag:

- 555 DMC\_FW\_SPEC\_POSA





- 559 DMC\_FW\_SPEC\_POSB
- 563 DMC\_FW\_PHOT\_POSA
- 559 DMC\_FW\_PHOT\_POSB
- 556 DMC\_FW\_GR\_VMOTA
- 560 DMC\_FW\_GR\_IMOTA
- 564 DMC\_FW\_GR\_VMOTB
- 567 DMC\_FW\_GR\_IMOTB

#### 4.4.12 The calibration sources : general description

The calibration source is a small sphere with high reflectivity coating at the center of which is placed the light source element. A drawing and a picture of the calibration source is shown hereunder. The light source is actually a platinum resistance (PT500) hold at the center of the sphere by small isolating feet and a set of Kevlar wires. Hence, the heat losses from the heater to the environment is minimised as well as the required energy for heating. However, this also induces that the time needed for cooling down the heater is more important.


The resistance measurement of the heater is also used to determine its temperature. That is why the heater is connected in 4-wires configuration. A calibration curve is required to translate the resistance measurement to temperature.

There are two heaters, one nominal and one redundant, each connected to nominal and redundant MIM boards respectively.

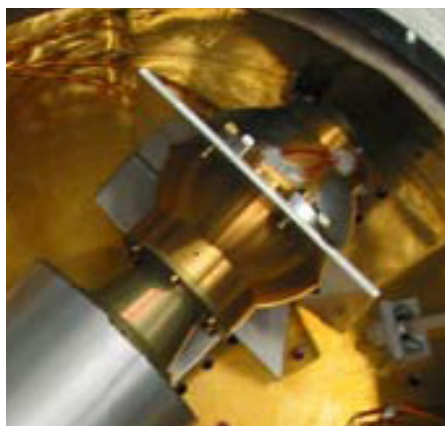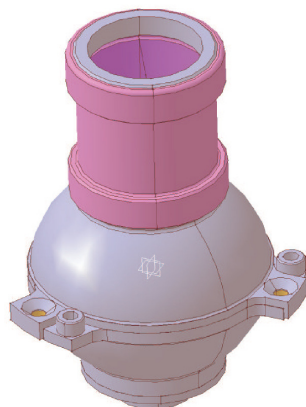

The calibration sources must be controlled in order to ensure high temperature stability for long time periods. Therefore, for control and verification, the temperature readings must be done also with high resolution ( $\sim 1$  mK). For that purpose, a particular control electronics has been implemented in the DMC, as shown in the picture below.



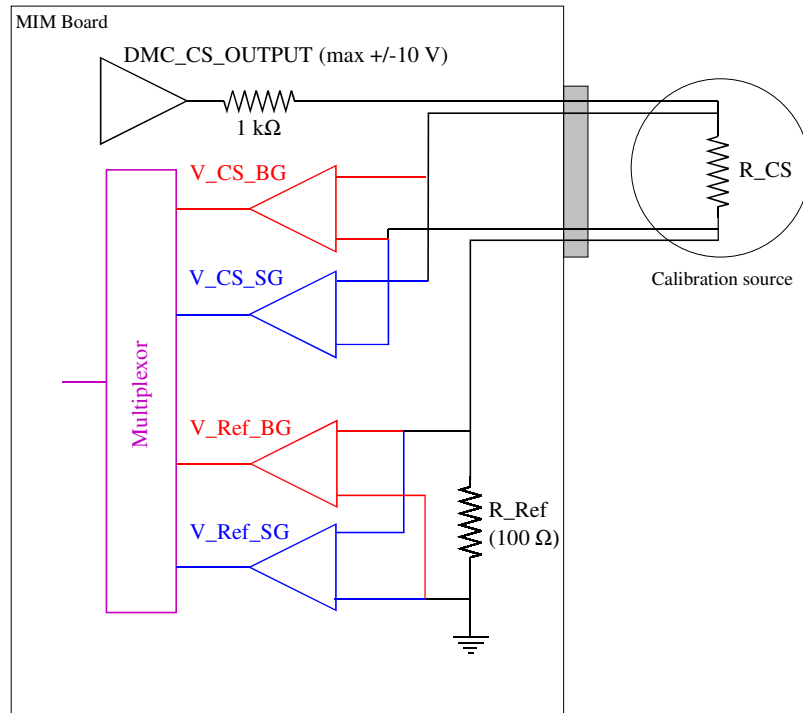

The controller commands a voltage amplifier having a maximum output of +/-10 V. As the maximum allowed current through the calibration source is 10 mA, a resistance of 1 kΩ is placed in the line, ensuring that the current will never be higher than 10 mA whatever the resistance of the calibration source. A 100 Ω reference resistance (R\_Ref) is placed serially with the calibration source in the DMC electronics to measure the current flowing through the source. As the resistance of the source vary from about 1 to 120 Ω (depending on the temperature), the maximum current is limited to a value going from 8.2 to 9.1 mA.

The stability and repeatability in time of the calibration source measurement is important. Therefore, the excitation of the source is made using an alternative (square wave) signal and voltage measurements are made by differential measurement between positive and negative values. This allows being independent of any offset and derivation of the power and readout amplifiers. There are two modes of excitation of the source, depending if we are in a heating phase of the source or if only readout of the temperature is required (without heating power). See the figure below to illustrate the following explanations.

The excitation is an alternative square wave with a frequency of 1 Hz. In heating mode of the source, the excitation is applied continuously while its amplitude is updated at each controller step. Readouts of the calibration source temperature are made at a frequency of 0.05 Hz, which is therefore also the frequency of the controller (a controller step is done after each readout). In reading only mode, the power through the source must be reduced to a minimum and therefore, the source is only excited when a readout is required. Moreover, the amplitude of the excitation is



small ( $100 \text{ mV} \Rightarrow$  current through the source  $< 100 \mu\text{A}$ ). The reading mode is selected when the output of the controller is lower than  $327 (= 32767/100 \Rightarrow 100 \text{ mV})$  and a fortiori when the output is negative, i.e. when cooling of the source is required. This mode is also used when the controller is disabled. This threshold to switch from heating to reading only mode can also be modified by changing the value of Output Threshold parameter of the calibration source controller (see §4.2.1.5).



Determining the calibration source temperature is done by acquiring 4 values during the positive and negative parts of the square excitation. This is represented in the lower part of the figure. Actually, 8 values are acquired but only the represented values are required for the temperature measurement, the other being for housekeeping only. Therefore, only the 4 interesting data are represented for clarity. Refer also to the figure above to see where these data are measured.

The voltages through the source and through the reference resistance are measured to determine the calibration source resistance. In order to have high resolution for large voltage values (mainly in heating mode and at high temperature) as well as for small voltage values (reading mode and at low temperature), each voltage is measured through two amplifiers. These two amplifiers have different gain factors and are named “big gain” (BG) and “small gain” (SG). The full scale conversions for the two amplifier gains are as following :

$$\text{BG} \rightarrow \pm 32767 = \pm 0.025 \text{ V}$$

$$\text{SG} \rightarrow \pm 32767 = \pm 2.5 \text{ V}$$

With a total of 8 measured data, the calculation of the calibration source resistance is done as following. The 4 voltages ( $V_{\text{CS\_BG}}$ ,  $V_{\text{CS\_SG}}$ ,  $V_{\text{Ref\_BG}}$ ,  $V_{\text{Ref\_SG}}$ ) are obtained by subtraction of the positive and negative measurements, resulting in positive numbers in the range 0-65535. For example,  $V_{\text{CS\_BG}} = V_{\text{CS\_BG(P)}} - V_{\text{CS\_BG(N)}}$ .

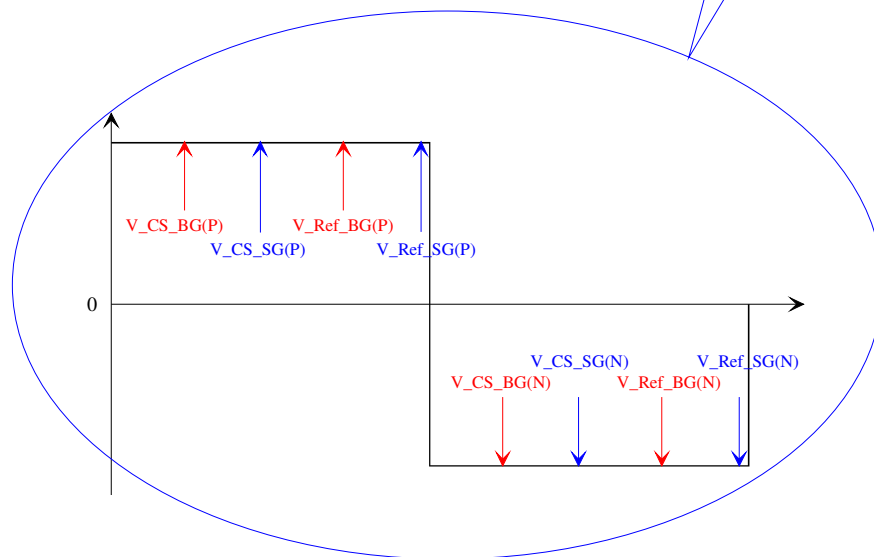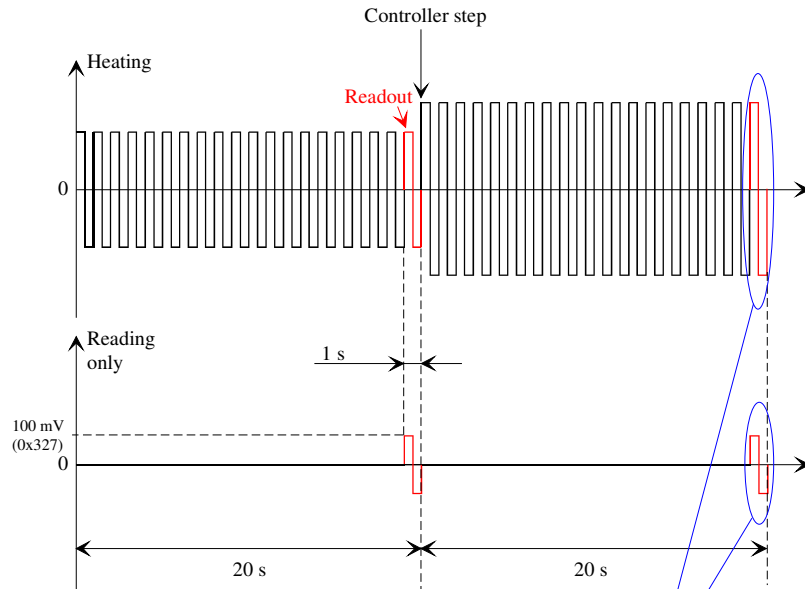

Then a selection between the two amplification gains is done automatically to benefit from the highest resolution. The criteria are as following :

*Switching from BG to SG if*

$(V\_CS\_BG > 64000) \text{ OR } (V\_Ref\_BG > 64000) \Rightarrow V\_CS = V\_CS\_SG \text{ AND } V\_Ref = V\_Ref\_SG$

*Switching from SG to BG if*

$(V\_CS\_SG < 620) \text{ AND } (V\_Ref\_SG < 620) \Rightarrow V\_CS = V\_CS\_BG \text{ AND } V\_Ref = V\_Ref\_BG$

At switch on, the BG is selected by default.



Finally, the resistance of the calibration source is :

$$R_{CS} = (V_{CS}/V_{Ref}) * R_{Ref}$$

For clarity of the above explanation and schematics, explicit simple names have been used for all the data. However, all these data can be found in the DMC housekeeping (either nominal or diagnostic) with the following labels :

V_CS_BG	→	DMC_CS1_VOLT_BG / DMC_CS2_VOLT_BG	(diag)
V_CS_SG	→	DMC_CS1_VOLT_SG / DMC_CS2_VOLT_SG	(diag)
V_Ref_BG	→	DMC_CS1_CUR_BG / DMC_CS2_CUR_BG	(diag)
V_Ref_SG	→	DMC_CS1_CUR_SG / DMC_CS2_CUR_SG	(diag)
R_CS	→	DMC_CS1_RES_VALUE / DMC_CS2_RES_VALUE	(nom)
Controller output	→	DMC_CS1_OUTPUT / DMC_CS2_OUTPUT	(nom)

All data are 16 bits integers with conversion given above and in §5.3 excepted the resistance of the calibration source (DMC\_CS1\_RES\_VALUE / DMC\_CS2\_RES\_VALUE) for which the housekeeping value is directly the resistance measurement with 1 digit = 0.1 mΩ.

#### 4.4.13 Using the calibration sources

The controller is switched on by sending the command *DMC\_SWON\_BB\_1(2)\_CONT*, resulting in starting the calibration source resistance measurement in reading mode only. The resistance is then updated in the housekeeping each time a readout is done, i.e. every 20 s. It is switched off using the command *DMC\_SWOF\_BB\_1(2)\_CONT*.

##### 4.4.13.1 Nominal mode operation

The controller can be enabled using the following command *DMC\_ENABLE\_BB\_1(2)\_CONT* and disabled using *DMC\_DISABLE\_BB\_1(2)\_CONT*. The source is then commanded by specifying a resistance value (conversion from T to R must be done by the user) with the command *DMC\_SET\_TEMP\_BB\_1(2)*. Commanding units are the same than reading units, i.e. 1 digit = 0.1 mOhm. Then switching to heating mode occurs if required and the amplitude of the output is calculated through a PI regulator (no derivative term) with limited integral accumulator (see §4.2.1.5 for details on the controller parameters).

##### 4.4.13.2 Open loop operation

The calibration source can be also operated in open loop, i.e. by commanding a specified heating power through the source, with no regulation anymore. However, the square wave output strategy is still used but with the commanded amplitude. Commanding an output of 2V (= 6554 digits) witch results in a square power output of ±2V (±6554 digits)

Open loop output power can be commanded using the command *DMC\_SET\_BB\_1(2)\_VOLTAGE*.



#### 4.4.13.3 Summary of commands and telemetry

##### **Trigger Commands:**

- 68 DMC\_SWON\_BB1\_CONT
- 69 DMC\_SWOFF\_BB1\_CONT
- 91 DMC\_ENABLE\_BB1\_CONT
- 92 DMC\_DISABLE\_BB1\_CONT
- 70 DMC\_SET\_BB1\_TEMP
- 71 DMC\_SET\_BB1\_VOLTAGE
- 72 DMC\_SWON\_BB2\_CONT
- 73 DMC\_SWOFF\_BB2\_CONT
- 93 DMC\_ENABLE\_BB2\_CONT
- 94 DMC\_DISABLE\_BB2\_CONT
- 74 DMC\_SET\_BB2\_TEMP
- 75 DMC\_SET\_BB2\_VOLTAGE

##### **Write Commands:**

- 147 DMC\_WRT\_CS1\_CONF\_PAR
- 148 DMC\_WRT\_CS2\_CONF\_PAR

##### **HK nominal:**

- 213 DMC\_CS1\_CTRL\_STA
- 459 DMC\_CS1\_TARGET
- 445 DMC\_CS1\_RES\_VALUE
- 446 DMC\_CS1\_OUTPUT
- 214 DMC\_CS2\_CTRL\_STA
- 460 DMC\_CS2\_TARGET
- 447 DMC\_CS2\_RES\_VALUE
- 448 DMC\_CS2\_OUTPUT

##### **HK diag:**

- **Reference voltages**
- 522 DMC\_CS1\_VOLT\_0V
- 523 DMC\_CS1\_VOLT\_N5V
- 524 DMC\_CS1\_VOLT\_P5V
- 538 DMC\_CS2\_VOLT\_0V
- **Measures**
- 525 DMC\_CS1\_VOLT\_DAC\_OUT
- 526 DMC\_CS1\_VOLT\_SG
- 527 DMC\_CS1\_VOLT\_BG



- 528 DMC\_CS1\_CUR\_SG
- 529 DMC\_CS1\_CUR\_BG
- 541 DMC\_CS2\_VOLT\_DAC\_OUT
- 542 DMC\_CS2\_VOLT\_SG
- 543 DMC\_CS2\_VOLT\_BG
- 544 DMC\_CS2\_CUR\_SG
- 545 DMC\_CS2\_CUR\_BG

#### 4.4.14 Using the FPU temperature sensors

There are 7 FPU temperature sensors:

- One on the chopper
- One on the grating
- One on the spectro FW
- One on the photo FW
- Two in the FPU
- One on the calibration source housing

To avoid power dissipation, the temperature sensors are not measured at switch-on of DMC. You must send the command *DMC\_SWON\_TEMP\_SENSORS* to start the measure.

Each measure cycle takes around 1 minute (the hk values are updated every minute but are sent in every nominal hk packet).

All the measures are not updated at the same time in the cycle.

There are two amplifier circuits that can be used to make the measure depending on the current resistor value of the sensor. They are called 'high gain' and 'low gain'. In *DMC\_FPU\_T\_SENS\_ST*, you can find out which gain has been used for the measure. No matter the gain that has been used, the temperature sensor measure will always be expressed in the same units (ohms) but the error of the measure will be different.

The resistor measure made by DMC is not calibrated (there is an error of around 1%). Two calibrations must be done on ground (one for each of the gain) in order to provide a correction table. Note that once the FPU is cold, all measures will be done with the low gain and thus, only one correction table is mandatory to operate the instrument in cold.

Furthermore, DMC has two different circuits to make the measures, the first one is measuring:

- *DMC\_CHOPPER\_TEMP*
- *DMC\_CAL\_SRC\_TEMP*
- *DMC\_FPU\_T1\_TEMP*



- DMC\_FPU\_T2\_TEMP
- The second one is measuring:
- DMC\_GRATING\_TEMP
  - DMC\_FW\_SPEC\_TEMP
  - DMC\_FW\_PHOT\_TEMP

Each of the circuit must have its own correction table.

#### 4.4.14.1 Summary of commands and telemetry

##### **Trigger Commands:**

- 95 DMC\_SWON\_TEMP\_SENSORS
- 96 DMC\_SWOF\_TEMP\_SENSORS

##### **Write Commands:**

- none

##### **HK nominal:**

- 404 DMC\_FPU\_T\_SENS\_ST
- 405 DMC\_FW\_SPEC\_TEMP
- 406 DMC\_FW\_PHOT\_TEMP
- 407 DMC\_CHOPPER\_TEMP
- 408 DMC\_GRATING\_TEMP
- 426 DMC\_FPU\_T1\_T
- 427 DMC\_FPU\_T2\_T
- 429 DMC\_CAL\_SRC\_TEMP

##### **HK diag:**

- 571 DMC\_T\_SE\_SRC1\_LG
- 572 DMC\_T\_SE\_SRC1\_HG
- 573 DMC\_T\_SE\_SRC1\_V1
- 574 DMC\_T\_SE\_SRC1\_V2
- 575 DMC\_T\_SE\_SRC2\_LG
- 576 DMC\_T\_SE\_SRC2\_HG
- 577 DMC\_T\_SE\_SRC2\_V1
- 578 DMC\_T\_SE\_SRC2\_V2
- 619 DMC\_TS\_FW\_SPEC\_V
- 620 DMC\_TS\_FW\_PHOT\_V
- 621 DMC\_TS\_GRAT\_V
- 622 DMC\_TS\_CHOP\_V
- 623 DMC\_TS\_FPU\_T1\_V



- 624 DMC\_TS\_FPU\_T2\_V
- 625 DMC\_TS\_BB\_V

#### 4.4.15 Using the CRE temperature sensors

As soon as a DEC is switched on, all the temperature sensors connected to it are operated. All the computation is performed in the DEC BASE FPGA. The operation is the same as for the FPU temperature sensors.

##### 4.4.15.1 Summary of commands and telemetry

###### Trigger Commands:

- none

###### Write Commands:

- none

###### HK nominal:

- 288 DMC\_DECB\_TS\_ST\_3
- 295 DMC\_DECB\_TS\_1\_3
- 296 DMC\_DECB\_TS\_2\_3
- 322 DMC\_DECB\_TS\_ST\_4
- 329 DMC\_DECB\_TS\_1\_4
- 330 DMC\_DECB\_TS\_2\_4
- 356 DMC\_DECR\_TS\_ST\_1
- 363 DMC\_DECR\_TS\_1\_1
- 364 DMC\_DECR\_TS\_2\_1
- 390 DMC\_DECR\_TS\_ST\_2
- 397 DMC\_DECR\_TS\_1\_2
- 398 DMC\_DECR\_TS\_2\_2

###### HK diag:

- 579 DMC\_DB\_TS12CBS\_3
- 580 DMC\_DB\_TS12CSS\_3
- 581 DMC\_DECB\_TS1\_V\_3
- 582 DMC\_DECB\_TS2\_V\_3
- 589 DMC\_DB\_TS12CBS\_4
- 590 DMC\_DB\_TS12CSS\_4
- 591 DMC\_DECB\_TS1\_V\_4
- 592 DMC\_DECB\_TS2\_V\_4
- 599 DMC\_DR\_TS12CBS\_1





- 600 DMC\_DR\_TS12CSS\_1
- 601 DMC\_DECR\_TS1\_V\_1
- 602 DMC\_DECR\_TS2\_V\_1
- 609 DMC\_DR\_TS12CBS\_2
- 610 DMC\_DR\_TS12CSS\_2
- 611 DMC\_DECR\_TS1\_V\_2
- 622 DMC\_DECR\_TS2\_V\_2

#### 4.4.16 Warm electronic temperature sensors

There are 4 temperature sensors in the warm electronic area:

- 1 on each DEC DC/DC
- 1 on the DMC DC/DC
- 1 on the CPU board

They are measured all the time as long as DMC or DEC's are powered on. Their value is given by a voltage and must be converted to degrees according to TBD conversion formula.

##### 4.4.16.1 Summary of commands and telemetry

###### **Trigger Commands:**

- none

###### **Write Commands:**

- none

###### **HK nominal:**

- 284 DMC\_DECB\_DCDC\_T3
- 352 DMC\_DECR\_DCDC\_T1
- 413 DMC\_DCDC\_TEMP
- 414 DMC\_DSP\_TEMP

###### **HK diag:**

- none

#### 4.4.17 SPU housekeeping

There are 7 sensors located in the SPU that are connected to DMC. They are measured all the time as long as DMC and SPU are powered on.



#### 4.4.17.1 Summary of commands and telemetry

##### **Trigger Commands:**

- none

##### **Write Commands:**

- none

##### **HK nominal:**

- 419 DMC\_SPU\_PSU\_15V
- 420 DMC\_SPU\_SWL\_TEMP
- 421 DMC\_SPU\_LWL\_TEMP
- 422 DMC\_SPU\_PS\_TEMP
- 423 DMC\_SPU\_VCC\_CUR
- 424 DMC\_SPU\_VCC\_VOL
- 425 DMC\_SPU\_VP\_CUR

##### **HK diag:**

- none

#### **4.4.18 Using diagnostic housekeeping**

To start using the diagnostic housekeeping, one should:

1. Upload the list of measures to be monitored (*DMC\_WRITE\_DIAG\_HK\_LIST*). Make sure that the last value of the list is *END\_OF\_HK\_LIST\_ID* (0xFFFF).
2. Start the diagnostic housekeeping (*DMC\_START\_DIAG\_HK*)
3. When done, stop the diagnostic housekeeping (*DMC\_STOP\_DIAG\_HK*)

#### 4.4.18.1 Summary of commands and telemetry

##### **Trigger Commands:**

- 76 DMC\_START\_DIAG\_HK
- 77 DMC\_STOP\_DIAG\_HK

##### **Write Commands:**

- 141 DMC\_WRT\_DIAG\_HK\_LIST

##### **HK nominal:**

- 462 DMC\_HK\_DIAG\_STAT
- 463 DMC\_HK\_DIAG\_PERI

##### **HK diag:**

- none



#### 4.4.19 Using the sequencer

##### 4.4.19.1 Selecting the synchronization source

The synchronization source selection has two effects:

- It determines the synchronization signal for the execution of the sequence commands
- It determines the instant where the mechanisms start moving.

The DMC\_SYNCHRONIZE\_ON\_DET trigger commands allows you to select the synchronization source. It has 3 nominal values:

- Blue DEC: the sequencer WAIT statements are waiting for the end of ramps from Blue DEC (the sequencer waits for the reception of the penultimate 1355 packet of the ramp). The mechanisms start moving when the destructive readout synchronization signal is received (by default, we take the signal coming from the Blue DEC group 3)
- Red DEC: the sequencer WAIT statements are waiting for the end of ramps from Red DEC (the sequencer waits for the reception of the penultimate 1355 packet of the ramp). The mechanisms start moving when the destructive readout synchronization signal is received (by default, we take the signal coming from the Red DEC group 1)
- BOLC: the sequencer WAIT statements are waiting a readout from BOLC (the sequencer waits for the reception of the 1355 packet whose blockNum = 0). The mechanisms start moving when the destructive readout synchronization signal is received

When the DMC\_SYNCHRONIZE\_ON\_DET is received, it modifies these 2 values:

- DMC\_SEQ\_OPTIONS
- The word 0 of DMC\_WRT\_TIMING\_FPGA\_PAR: sync\_src\_sel\_reg (note that this value is no more modifiable through the write command but only through the trigger command).

At power-up, the sequencer is synchronized on the blue DEC and the mechanisms use the internal synchronization source (256Hz signal generated in the timing FPGA).

##### 4.4.19.2 Executing a sequence

To execute a sequence, you should:


- Have at least one synchronization source switched-on and sending data
- Send a DMC\_SYNCHRONIZE\_ON\_DET command
- Upload a sequence

Once the execution has started, the Sequencer executes all the command one after the other (usually, the execution of such commands takes only a few micro-seconds). The DMC\_SEQ\_POINTER shows which command the sequencer is currently executing.

The DMC\_WAIT command is used to synchronize the Sequencer with the science data (and thus, synchronize the movement of a mechanism with the science data).



The drawing below shows how the synchronization works in the spectroscopy mode. Note that, in these diagrams, the number of ISR, the time needed for command execution, ... are not representative. The diagram just shows the sequencing of events.

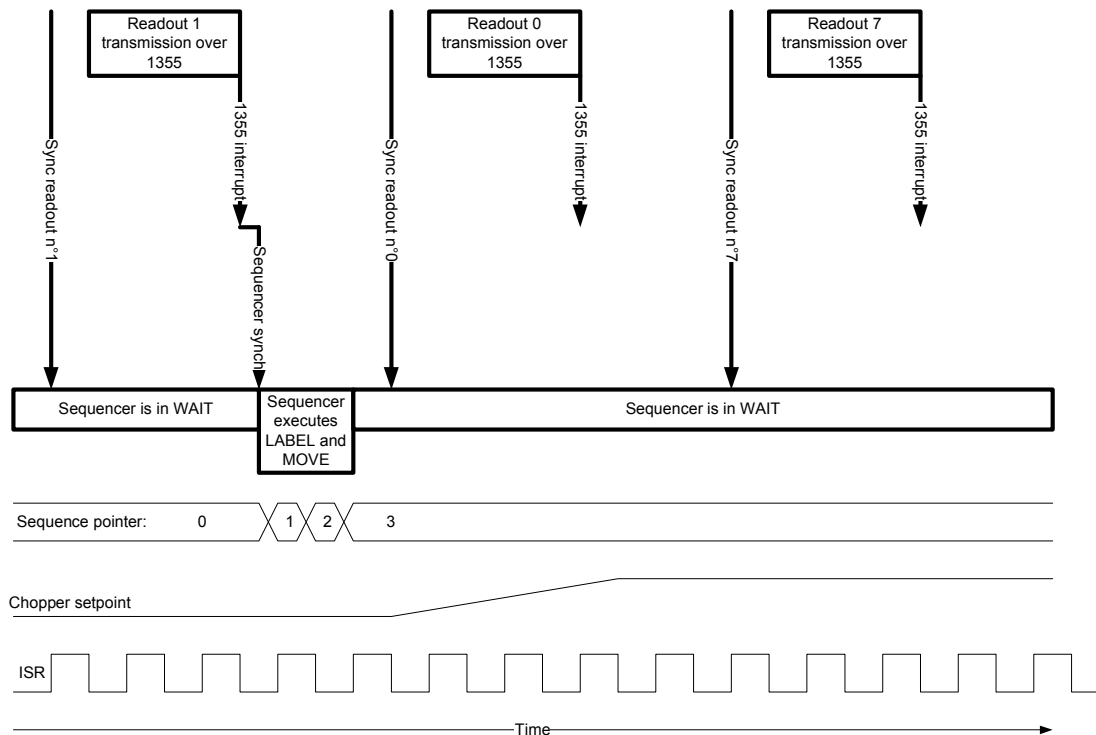

Everytime the DMC receives the penultimate readout of a ramp, the Sequencer receives a 'Sequence synchro'. At that time, the Sequencer checks whether it has to wait for another ramp or if it can execute the next commands. In the second case, the Sequencer executes all the commands until it reaches another DMC\_WAIT statement.

In our example, the Sequencer has been given the following sequence:

```
DMC_WAIT(1)
DMC_LABEL(2)
DMC_MOVE_CHOPPER_REL(1000)
DMC_WAIT(1)
```


During the first ramp, the Sequence pointer is 0 (the Sequencer is waiting for the first ramp). Once the readout n°1 of the ramp is received, the Sequencer executes the DMC\_LABEL command (it is only a few instructions so the Sequence pointer will be 1 for only a few micro-seconds) and then, the DMC\_MOVE\_CHOPPER.



The DMC\_MOVE\_CHOPPER command is only programming the ISR to start a move of the chopper at the next synchro signal. This is also only a few commands so, very quickly, the sequencer moves to the position 3 where it waits for the next ramp.


The ISR is executing at 8KHz and is always checking if a synchro has been received. As soon as it gets one, it will start to modify the setpoint of the chopper (and thus, the chopper will also start moving).

In the drawing below, we show the same process in the case a phase\_shift has been set to 3 (by setting the phase\_shift\_reg to 2!) (Phase\_shift is one of the parameters of DMC\_WRT\_TIMING\_FPGA\_PAR). The phase\_shift is the delay (expressed in number of ISR execution) between the reception of the synchronization signal from the detectors and the start of the movement of the mechanism.

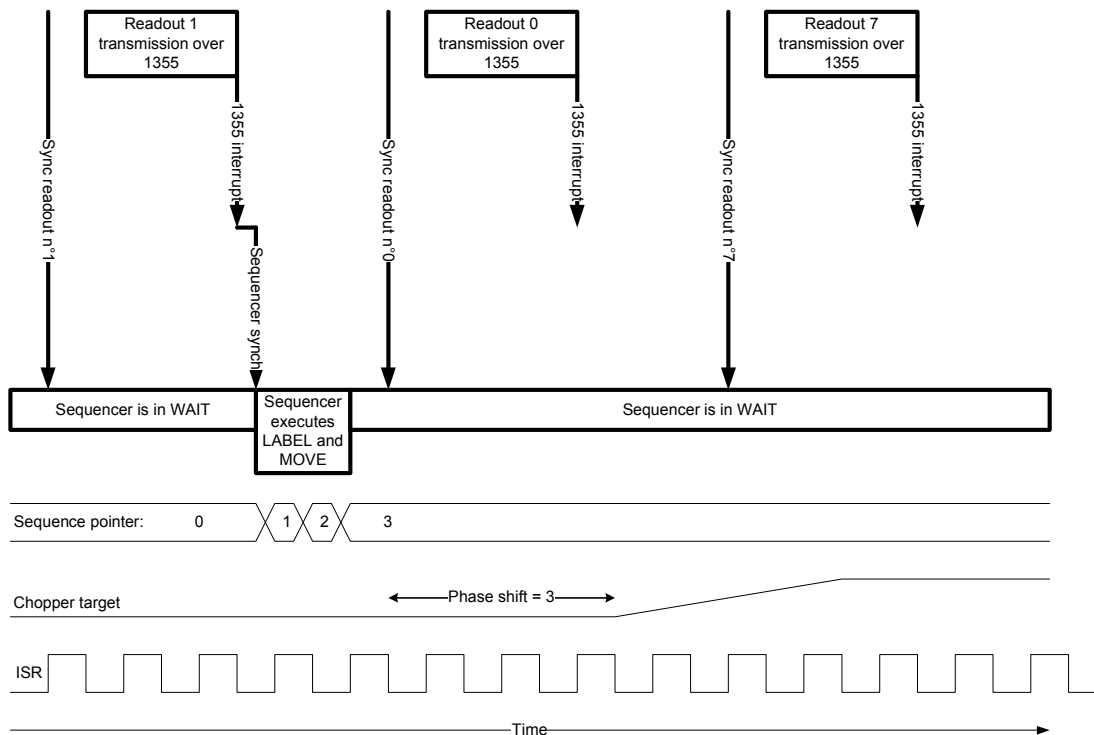

The diagram below shows the execution of a sequence in photometry mode (with phase shift = 0). The Sequencer has been given the following sequence:

```
DMC_WAIT(1)
DMC_LOOP(4)
DMC_MOVE_CHOPPER_REL(500)
DMC_WAIT(1)
DMC_END_LOOP()
```

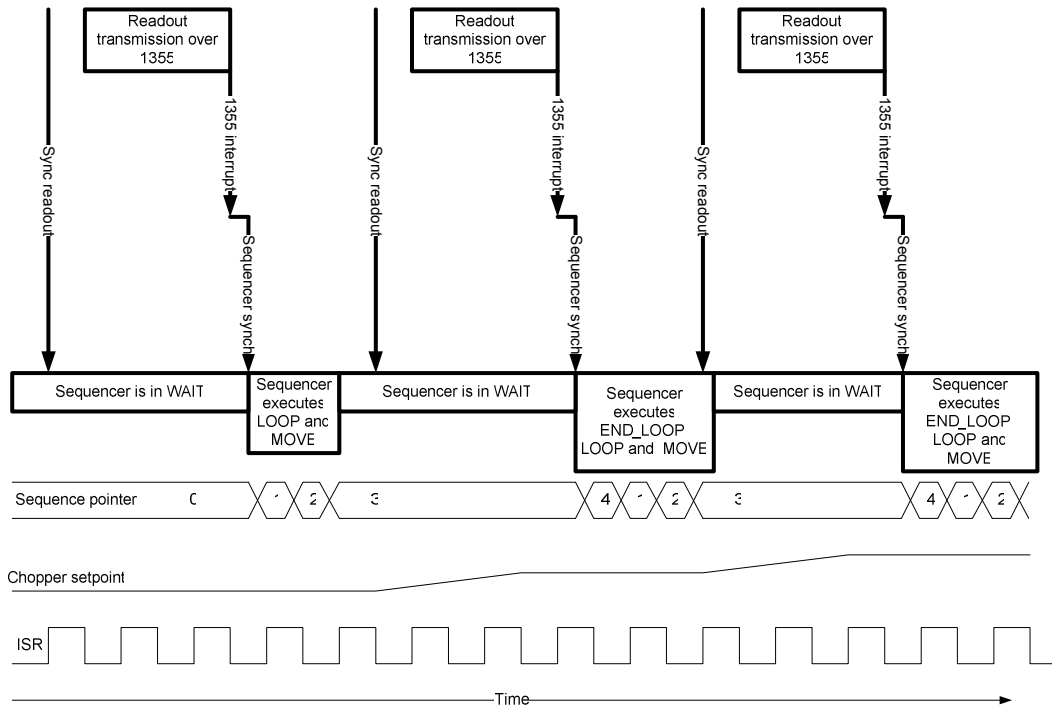

#### 4.4.19.3 Summary of commands and telemetry

##### Trigger Commands:

- 0 DMC\_LOOP
- 1 DMC\_END\_LOOP
- 2 DMC\_WAIT
- 3 DMC\_END\_SEQUENCE
- 4 DMC\_LABEL
- 5 DMC\_START\_SEQUENCE
- 6 DMC\_ABORT\_SEQUENCE
- 10 DMC\_SYNCHRONIZE\_ON\_DET

##### Write Commands:

- 129 DMC\_WRT\_SEQ\_BUFFER
- 130-139 DMC\_WRT\_SEQ\_BUFFER\_0-9

##### HK nominal:

- 197 DMC\_SEQ\_STATUS
- 215 DMC\_SEQ\_OPTIONS
- 216 DMC\_SEQ\_POINTER
- 217 DMC\_SEQ\_LOOP\_ID0



- 218 DMC\_SEQ\_LOOP\_ID1
- 219 DMC\_SEQ\_LOOP\_ID2
- 220 DMC\_SEQ\_LOOP\_ID3
- 221 DMC\_SEQ\_LOOP\_ID4
- 222 DMC\_SEQ\_WAIT\_IND
- 223 DMC\_SEQ\_LABEL

**HK diag:**

- none


#### 4.4.20 Adjusting the timing parameters

At regular interval during the mission, the `phase_inc` parameter shall be adjusted to take into account the frequency drift of OBT and/or DSP clock. This is mandatory to ensure that the mechanisms move in phase with the readouts.

##### 4.4.20.1 Adjusting `phase_inc` in photometry

- Switch-on BOLC and set the photometry timing mode (keep the default 40Hz readout frequency for BOLC).
- Get `DMC_PLL_RES_HI` and `DMC_PLL_RES_LO` from nominal HK.
- Compute `DMC_PLL_RES` by appending `DMC_PLL_RES_RES_HI` and `DMC_PLL_RES_LO` to form a 48bit number
- Compute the  $PLL\_ERROR = 0x40FFFFFFE6420 - DMC\_PLL\_RES$
- Compute  $correction = PLL\_ERROR / 450000$
- Compute new  $phase\_inc = phase\_inc + correction$ . If `DMC_PLL_RES_HI`  $\geq 0x4100$ , the new `phas_inc` shall be smaller than the old one. If `DMC_PLL_RES_HI`  $< 0x4100$ , the new `phase_inc` shall be bigger than the old one.
- Apply the new parameters using the nominal procedure

In photometry mode, the PLL internal frequency is the DSP clock (18MHz). It means that the PLL residue is incremented by `phase_inc` at every DSP clock. Every time a synchronization signal is received from BOLC, the current PLL residue value is stored in the `DMC_PLL_RES_HI` and `DMC_PLL_RES_LO`. You can not see the PLL residue incrementing, you can only see a snapshot of its value taken when the sync arrives.

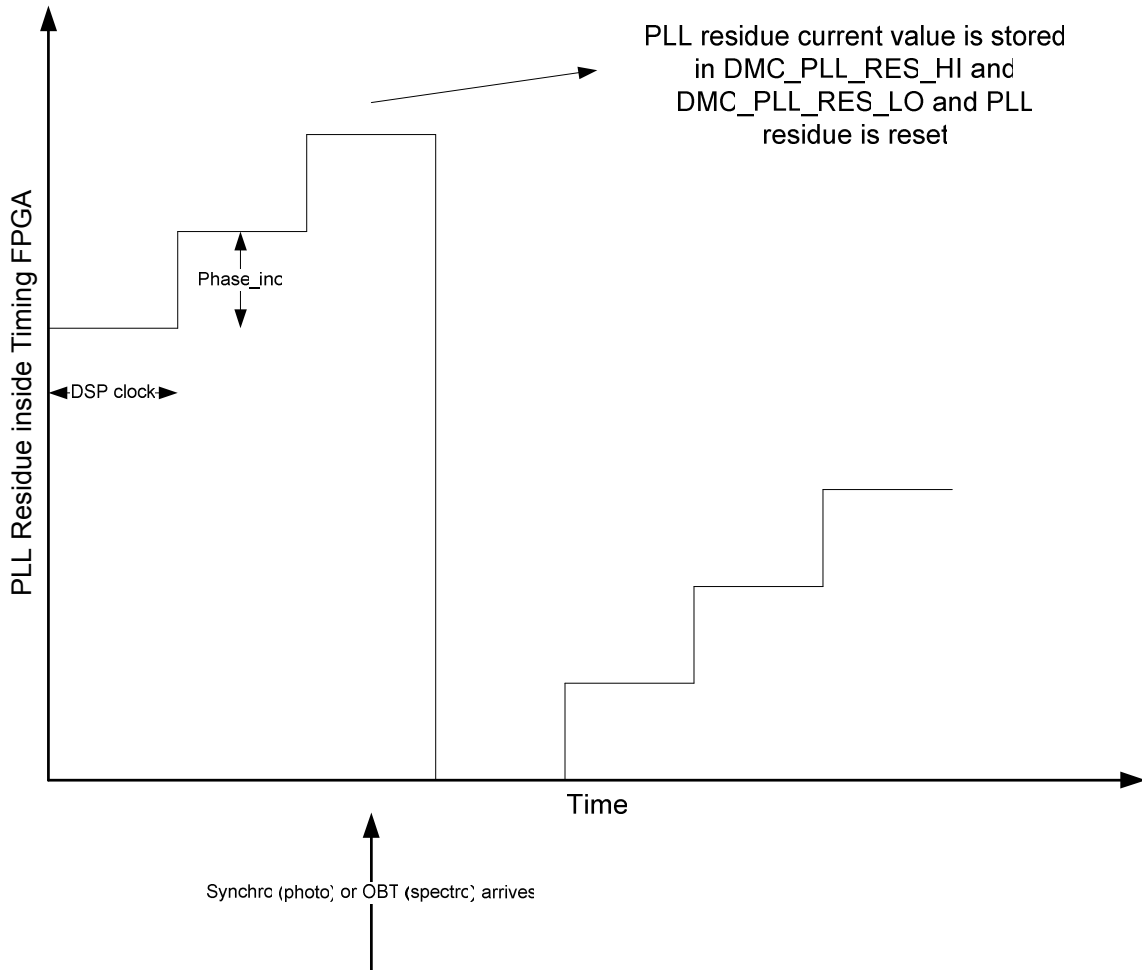

So, if BOLC is working at a perfect 40Hz, with a phase\_inc of 158818346 (nominal value), the PLL residue shall be =  $18000000 * 158818346 / 40 = 0x40FFFFE6420$ . This is a 48bits number that is stored in 2 HK values (DMC\_PLL\_RES\_HI = 0x40FF and DMC\_PLL\_RES\_LO = 0xFFFFE6420). This value can be considered as the 'ideal value' for BOLC at 40 Hz.

DMC\_PLL\_RES\_HI can be viewed as a counter counting at 665600Hz. The PLL residue can never deviate by more than a period of this counter. So, the DMC\_PLL\_RES\_HI accepted value can only be 0x40FF or 0x4100. If the PLL residue is out of this range, you will have additional delays on the mechanisms movement but you could also observe bad behaviours in the analog housekeeping and/or in the calibration source operation.

So, as soon as the PLL deviate by more than half of a period, you should adapt the phase\_inc as explained above. So:

Minimum PLL residue : 0x40FF80000000





Maximum PLL residue : 0x41007FFFFFFF

If the PLL residue stays within these limits, the influence of the PLL on internal timings will never be bigger than half a period of 665600Hz (= 0,75 $\mu$ s)

#### 4.4.20.2 Adjusting phase\_inc in spectrometry

- Set the spectrometry timing mode.
- Get DMC\_PLL\_RES\_HI and DMC\_PLL\_RES\_LO from nominal HK.
- Compute DMC\_PLL\_RES by appending DMC\_PLL\_RES\_HI and DMC\_PLL\_RES\_LO to form a 48bit number
- Compute the PLL\_ERROR = 0x4FFFFFFF7 – DMC\_PLL\_RES
- Compute correction = DMC\_PLL\_ERROR/137
- Compute new phase\_inc = phase\_inc + correction. If DMC\_PLL\_RES\_HI >= 5, the new phase\_inc shall be bigger than the old one. If DMC\_PLL\_RES\_HI < 5, the new phase\_inc shall be smaller than the old one.
- Apply the new parameters using the nominal procedure

In spectrometry mode, the PLL internal frequency is also the DSP clock (18MHz). It means that the PLL residue is incremented by phase\_inc at every DSP clock. At every OBT clock, the current PLL residue value is stored in the DMC\_PLL\_RES\_HI and DMC\_PLL\_RES\_LO.

So, if OBT is at a perfect 131072Hz, with a phase\_inc of 156374987 (nominal value), the PLL residue shall be =  $18000000 * 156374987 / 131072 = 0x4FFFFFFF7$ . This is a 48bits number that is stored in 2 HK values (DMC\_PLL\_RES\_HI = 0x4 and DMC\_PLL\_RES\_LO = 0xFFFFFF7). This value can be considered as the 'ideal value' for OBT at 131072Hz.

DMC\_PLL\_RES\_HI can be viewed as a counter counting at 655360Hz. The PLL residue can never deviate by more than a period of this counter. So, the DMC\_PLL\_RES\_HI accepted value can only be 0x4 or 0x5. If the PLL residue is out of this range, you will have additional delays on the mechanisms movement but you could also observe bad behaviours in the analog housekeeping and/or in the calibration source operation.

So, as soon as the PLL deviate by more than half of a period, you should adapt the phase\_inc as explained above. So:

Minimum PLL residue : 0x48000000

Maximum PLL residue : 0x57FFFFFF

If the PLL residue stays within these limits, the influence of the PLL on internal timings will never be bigger than half a period of 655360Hz (= 0,76 $\mu$ s)



#### 4.4.21 FPGA status register diagnostic mode

OBS 6.028 contains a dedicated diagnostic mode to study the sampling of the FPGA status register.

In this mode, the ISR is replaced by a completely different piece of code that is sampling the FPGA status register 5 times along a period of 60  $\mu$ s.

When outside of this mode, v6.028 has full flight capability.

While in the diagnostic mode, the nominal ISR is not executed anymore. This means that:

- Chopper, grating, FW controllers are not executed anymore
- Analog HK, temperature sensors and calibration sources are not working anymore
- PLL residue is not updated
- DMC\_SYNC\_COUNT and CRDCCP are updated 5 times faster

So, it is mandatory to disable all controllers before using the diagnostic mode. Controllers should be enabled again only when you have exited the diagnostic mode.

The diagnostic mode concentrates on the sampling of bit 8 and 9 of the FPGA status register:

Each measure of Bit8 and 9 of the FPGA status register will be recorded (this means that we have a non-steady sampling frequency of 40KHz).

The recorded values of these bits will be stored in the photometer science data (blockId = 1) as follows:

Each 32bits word of science data will contain: "0000 0000 000a bcde 0000 0000 000f ghij" where:

a is the first sampling of bit 8 in the ISR

b is the second .....

c

d

e is the fifth

f is the first sampling of bit 9 in the ISR

g is the second .....

h

i

j

First pixel contains the sampling performed at the first interrupt following the reception of the first packet of a readout

Second pixel .... at the second interrupt ....

Since there are 208 ISR between two readouts, there should be 208 pixels used in each packet.

Note that there might be a jitter in the position of pixels in the packet but we will do our best to minimize it (probably between 0 and 1 position). However, what we want to observe in this test is the value of the register varying during the ISR execution; this would not be affected by this jitter.



The data should be all zeroes except for:

- 1 pixel where the 10 bits shall be set to 1 if `phase_shift == 0`
- 2 pixels where 5 bits shall be set to 1 if `phase_shift > 0`
- any other value should trigger our attention. That should be quite easy for you to detect.

BOLC must be configured to send science data. The content of `blockID = 1` will be replaced by the samples.

#### 4.4.22 Using the mechanisms and calibration sources in simulation mode

Each of the mechanisms and calibration source can be simulated by the software. This mode can be used when the mechanisms are connected or not. However, extra caution must be taken when the mechanisms are connected to make sure not to send high real currents in the coils.

Entering the simulation mode is made thanks to `DMC_SELECT_MECH_CTRL_MODE`. When the mechanisms are connected, their controllers parameters must also be modified.

In simulation mode, each of the mechanisms has a “perfect” behaviour. This means that their position exactly follows the setpoint.

##### 4.4.22.1 The chopper

To use the chopper in simulation mode, you should:

- `DMC_SELECT_MECH_MODE(2)`
- `DMC_WRT_CHOP_CONF_PAR` with all parameters set to zero except the rate, the `posLimit` and the `ErrorLimit` that must keep their default values
- Then, you can use the chopper normally
- When you are done: `DMC_SELECT_MECH_MODE(0)`

##### 4.4.22.2 The FW spectro

- `DMC_SELECT_MECH_MODE(4)`
- `DMC_WRT_FW_SPEC_CONF` with the maximum output current set to zero and all other parameters to their default values
- Then, you can use the FW normally
- When you are done: `DMC_SELECT_MECH_MODE(0)`

##### 4.4.22.3 The FW photo

- `DMC_SELECT_MECH_MODE(8)`
- `DMC_WRT_FW_PHOT_CONF` with the maximum output current set to zero and all other parameters to their default values
- Then, you can use the FW normally



- When you are done: DMC\_SELECT\_MECH\_MODE(0)

#### 4.4.22.4 The Grating

- DMC\_SELECT\_MECH\_MODE(1)
- DMC\_WRT\_GRAT\_CONF\_PAR with Kp, Ki and Kd set to zero and the OutputLimit that must be set to 1. All other parameters must keep their default values.
- Then, you can use the Grating normally
- When you are done: DMC\_SELECT\_MECH\_MODE(0)

Note that the OutputLimit can not be set to zero because, in this case, the OutputLimitError would trigger and disable the grating.

#### 4.4.22.5 The CS1 calibration source

- DMC\_SELECT\_MECH\_MODE(16)
- DMC\_WRT\_FW\_CS1\_CONF\_PAR with all parameters set to zero
- Then, you can use the CS1 normally
- When you are done: DMC\_SELECT\_MECH\_MODE(0)

#### 4.4.22.6 The CS2 calibration source

- DMC\_SELECT\_MECH\_MODE(32)
- DMC\_WRT\_FW\_CS2\_CONF\_PAR with all parameters set to zero
- Then, you can use the CS2 normally
- When you are done: DMC\_SELECT\_MECH\_MODE(0)

## 5 Housekeeping

Note : Housekeeping acquisition are not performed inside critical section and are not protected by any other synchronisation mechanism. That means that, any task may be modifying a variable while the housekeeping task is copying it into the Hk Buffer. So, a few inconsistencies may appear in the housekeeping measures. They shall be very seldom.

Protection against these inconsistencies is not recommended since it would affect the real-time behaviour of the onboard software.



## 5.1 Offset and gain correction of analog housekeeping

Many of the housekeeping measure represents analog measures perform by ADC. The offset and gain errors of the ADC can be corrected by comparing the measure with a “zero volt” and a “reference” channel.

To have the best measure, the “zero volt” channel value should be subtracted from each measurement from the corresponding ADC such that the measure of 0V really displays 0V. Once this is done, if a measurement from a trusted fixed voltage reference is available, its value can be used to compensate each channel reading.

True value = (readout value – zero volt reference readout value) \* theoretical reference / reference readout value

Subsystem and particular HK IDs	Zero volt reference channel to use	Fixed Reference channel to use	Theoretical reference
FPU_TEMP (V and I measures only) HK SPU_HK GRAT (except HK ID 539 and 540) CHOP FW	DMC_REF_VOLT_0V	DMC_REF_VOLT_5V	5V
CS + HK ID 539 and 540	DMC_CS1_VOLT_0V	DMC_CS1_VOLT_N5V DMC_CS1_VOLT_P5V	-4V +4V
DEC group 1 (HK ID 333 – 347)	DMC_DECR_V0V_1	None	
DEC group 1 (HK ID 348 – 354, 599 - 608)	DMC_DECR_REF_0V1	DMC_DECR_R5V_1	+5V
DEC group 2 (HK ID 367 – 381)	DMC_DECR_V0V_2	None	
DEC group 2 (HK ID 382 – 388, 609 - 618)	DMC_DECR_REF_0V2	DMC_DECR_R5V_2	+5V
DEC group 3 (HK ID 265 - 280)	DMC_DECB_V0V_3	None	
DEC group 3 (HK ID 281 – 287, 579 - 588)	DMC_DECB_REF_0V3	DMC_DECB_R5V_3	+5V
DEC group 4 (HK ID 299 – 314)	DMC_DECB_V0V_4	None	
DEC group 4 (HK ID 315 – 321, 589 - 598)	DMC_DECB_REF_0V4	DMC_DECB_R5V_4	+5V

In example to get an accurate value of DMC\_FW\_GR\_IMOTA, you should compute:

$$IMOTA = (DMC\_FW\_GR\_IMOTA - DMC\_REF\_VOLT\_0V) * 5 / DMC\_REF\_VOLT\_5V$$



Or, to get DMC\_DECR\_V0BIAS1, you should compute:

$$V0BIAS = (DMC\_DECR\_V0BIAS1 - DMC\_DECR\_V0V\_1)$$

**Important note:**

- These correction can be applied only on voltage and current measures
- You should correct the hk measure only if you want the best accuracy. In most of the case, it is not necessary
- For FPU temperature sensors and the CS resistor value, the offset error is already cancelled since we take a negative and a positive measure.

## 5.2 Internal sampling frequency of housekeeping values

### 5.2.1 MEC analog housekeeping values

All of them are sampled at 128Hz except the ones that are used in the mechanisms controller interrupt routine. These values are sampled at 8KHz:

- DMC\_CHOP\_CUR\_POS,
- DMC\_GRAT\_CUR\_POS,
- DMC\_FWGRAT\_HALLA,
- DMC\_FWGRAT\_HALLB

## 5.3 List of available measures

In the following table, we present the set of measures that are implemented in the current version of the onboard software.

The IDs lower than 512 are included in the Nominal HK packet. The IDs higher or equal to 512 are available in Diagnostic HK only.

A special ID is used to mark the end of a diagnostic HK list : END\_OF\_HK\_LIST\_ID = 0xFFFF.

### 5.3.1 How to use the list of HK measures

In the next section, the list of HK measures is presented. This section tells you how to use this information.

464	DMC_LAST_ERR_ID	OBSW
	SCOS 2000 Display:	Decimal
	Validity at startup:	Valid



Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	1 (4bits)
<u>Description:</u> Last Error Buffer Index : Indicates the current position in the Last Errors Buffer. Index is 0 based and indicates the next position to be filled. (Note: index 0 is DMC_LAST_ER_BF1)	

- 464 is the numerical identifier of the measure and is also its position in the nominal HK packet that is sent every 2 seconds to DPU.
- DMC\_LAST\_ERR\_ID is the alphanumeric identifier of the measure. This is the name that will appear in SCOS2000 display.
- OBSW is identifying the subsystem to which this measure is related. The list of subsystem is:
  - BOLC: the HK coming from BOLC and the status words of the tasks related to BOLC
  - CHOP: chopper
  - COM: communication with DPU and SPU
  - CS: calibration sources
  - DEC: the HK coming from DEC and the status words of the tasks related to DEC
  - FPU\_TEMP: FPU temperature sensors
  - FW: filter wheels
  - GRAT: grating
  - GRAT\_FW: some measures are common to grating and filter wheels
  - HK: various analog housekeeping
  - OBSW: On board software status variables
  - SEQ: Sequencer
  - SPARE: all spare measures
  - SPU\_HK: analog housekeeping from SPU
  - TIME: timing and time-stamping
- SCOS2000 display: how the value should be displayed and converted in SCOS2000
- Validity at start-up:
  - Valid: the value is meaningful as soon as DMC is switched on
  - Invalid: the value is meaningful only after some operation has been performed (switch-on of a device ...). Since it is invalid, the measure will contain 0xFFFFFFFF
- Validity during execution: gives you the operation to perform to make this measure meaningful.
- Available in:



- Nominal HK only: This measure is only available in the nominal housekeeping. It can not be included in a diagnostic list.
- Diag HK only: This measure is not included in the nominal hk packet and can be included in a diagnostic list
- All HK modes: This measure is available in both nominal and diagnostic hk.
- Useful size (in bytes):
  - In nominal HK, all measure are transmitted in a 32bits slot.
  - In diag HK, they are transmitted only using the 'useful size' number of bytes.
  - For some measures, we also mention the number of bits that are really useful. DPU can then 'compress' the hk using these numbers.





### 5.3.2 List of Nominal housekeeping Measure

<b>0</b>	<b>BOLC_HK_1</b>	<b>BOLC</b>
	SCOS 2000 Display:	DISPLAY_HEX
	Validity at startup:	invalid
	Validity during execution:	Valid only when BOLC is ON and the connection between DMC and BOLC is established
	Available in:	All HK modes
	Useful size (in bytes):	4
<u>Description:</u> BOLC HK entry 1		
...		
<b>195</b>	<b>BOLC_HK_196</b>	<b>BOLC</b>
	SCOS 2000 Display:	DISPLAY_HEX
	Validity at startup:	invalid
	Validity during execution:	Valid only when BOLC is ON and the connection between DMC and BOLC is established
	Available in:	All HK modes
	Useful size (in bytes):	4
<u>Description:</u> BOLC HK entry 196		
<b>196</b>	<b>DMC_SW_GLOBAL_ST</b>	<b>OBSW</b>
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4 (19bits)
<u>Description:</u> DMC Software global status : summary of the status of all the tasks of the software. If an error occurs in any other task, the DMC_SW_ERR will be =1 and the DMC_SW_ERROR will contain a copy of the task error code. Note that these fields remain only for 1 hk packet.		
bits 0-15	<b>DMC_SW_ERROR</b>	Error code
bit 16	<b>DMC_SW_ALIVE</b>	1 = DMC OBS is alive 0 = DMC OBS is dead (no HK should be received then)
bit 17	<b>DMC_SW_ERR</b>	1 = Any error in DMC OBS (see bits 0-15 for the error code) 0 = No error in DMC OBS
bit 18	<b>DMC_SW_COPY_OBS</b>	1 = The OBS is being copied in EEPROM right now 0 = no copy is being performed now
bits 19-31	<b>DMC_SW_SPARE13</b>	Spare
<b>197</b>	<b>DMC_SEQ_STATUS</b>	<b>SEQ</b>
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4 (22bits)
<u>Description:</u> DMC Sequencer status. The Sequencer is the task in charge of the execution of the sequences and trigger commands. This is one of the vital tasks of the DMC OBS.		
bits 0-15	<b>DMC_SEQ_ERROR</b>	Error code
bit 16	<b>DMC_SEQ_TASK_AL</b>	1 = Sequencer task is running 0 = Sequencer task is not running
bit 17	<b>DMC_SEQ_TASK_WR</b>	1 = Any error occurred in the Sequencer task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in Sequencer task
bit 18	<b>DMC_SEQ_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet



bit 19	<b>DMC_SEQ_SPARE1</b>	0 = No error waiting to be signaled Spare
bit 20	<b>DMC_SEQ_IDLE</b>	1 = Sequencer in idle mode (no sequence running) 0 = Sequencer not in idle mode
bit 21	<b>DMC_SEQ_RUNNING</b>	1 = A sequence is being executed 0 = No sequence is being executed
bits 22-31	<b>DMC_SEQ_SPARE10</b>	Spare
<b>198 DMC_DPU_REC_STAT</b>		<b>COM</b>
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4 (20bits)
<u>Description:</u>		
DPU Receiver status. This task is in charge of the reception of commands from DPU and the execution of memory commands (write - dump - check - load). This is one of the vital tasks of the DMC OBS.		
bits 0-15	<b>DMC_DPUR_ERROR</b>	Error code
bit 16	<b>DMC_DPUR_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_DPUR_TASK_WR</b>	1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_DPUR_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_DPUR_LINK</b>	1 = Waiting connection with DPU 0 = Connection established with DPU
bits 20-31	<b>DMC_DPUR_SPARE12</b>	Spare
<b>199 DMC_DPU_SEN_STAT</b>		<b>COM</b>
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4 (20bits)
<u>Description:</u>		
DPU Sender status. This task is in charge of the emission of packet to DPU (HK packets, commands ack). This is one of the vital tasks of the DMC OBS.		
bits 0-15	<b>DMC_DPUS_ERROR</b>	Error code
bit 16	<b>DMC_DPUS_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_DPUS_TASK_WR</b>	1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_DPUS_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_DPUS_LINK</b>	1 = Waiting connection with DPU 0 = Connection established with DPU
bits 20-31	<b>DMC_DPUS_SPARE12</b>	Spare
<b>200 DMC_DECB_REC_STA</b>		<b>DEC</b>
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid



Available in:	All HK modes
Useful size (in bytes):	4 (22bits)
<b>Description:</b>	
Blue DEC Receiver task status. This task is receiving the packets from the Blue DEC. In case the Detector simulator has been started; it can also replace the readouts by simulated ones or can even generate readouts if not connected to DEC)	
bits 0-15	<b>DMC_DBR_ERROR</b> Error code
bit 16	<b>DMC_DBR_TASK_AL</b> 1 = this task is running 0 = this task is not running
bit 17	<b>DMC_DBR_TASK_WR</b> 1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_DBR_ERR_NS</b> 1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_DBR_LINK</b> 1 = Waiting connection with Blue DEC 0 = Connection established with Blue DEC
bit 20	<b>DMC_DBR_SENDING</b> 1 = using simulated readouts 0 = using real readouts
bit 21	<b>DMC_DBR_SIM_TIME</b> 1 = using simulated timing (the detector simulator is running and generating the timing) 0 = using real timing (valid only when bit 20 is set; replaces the science data received from DEC by simulated readouts)
bits 22-31	<b>DMC_DBR_SPARE10</b> Spare
<b>201</b>	<b>DMC_DECB_CTRL_ST</b> <b>DEC</b>
SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (21bits)
<b>Description:</b>	
Blue DEC Controller task status. This task is sending the commands to Blue DEC and control the power on/off.	
bits 0-15	<b>DMC_DBC_ERROR</b> Error code
bit 16	<b>DMC_DBC_TASK_AL</b> 1 = this task is running 0 = this task is not running
bit 17	<b>DMC_DBC_TASK_WR</b> 1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_DBC_ERR_NS</b> 1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_DBC_LINK</b> 1 = Waiting connection with Blue DEC 0 = Connection established with Blue DEC
bit 20	<b>DMC_DBC_POWER</b> 1 = Blue DEC is powered ON 0 = Blue DEC is OFF
bits 21-31	<b>DMC_DBC_SPARE11</b> Spare
<b>202</b>	<b>DMC_BLUE_PAC_ENC</b> <b>COM</b>
SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (20bits)
<b>Description:</b>	



Blue Packet Encoder task status. This task is sending the science packet to the Blue SPU.

bits 0-15	<b>DMC_BPE_ERROR</b>	Error code
bit 16	<b>DMC_BPE_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_BPE_TASK_WR</b>	1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_BPE_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_BPE_LINK</b>	1 = Waiting connection with Blue SPU 0 = Connection established with Blue SPU
bits 20-31	<b>DMC_BPE_SPARE12</b>	Spare

**203 DMC DECR REC STA**

**DEC**

SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4(22bits)

Description:

Red DEC Receiver task status. This task is receiving the packets from the Red DEC. In case the Detector simulator has been started; it can also replace the readouts by simulated ones or can even generate readouts if not connected to DEC)

bits 0-15	<b>DMC_DRR_ERROR</b>	Error code
bit 16	<b>DMC_DRR_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_DRR_TASK_WR</b>	1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_DRR_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_DRR_LINK</b>	1 = Waiting connection with Red DEC 0 = Connection established with Red DEC
bit 20	<b>DMC_DRR_SENDING</b>	1 = using simulated readouts 0 = using real readouts
bit 21	<b>DMC_DRR_SIM_TIME</b>	1 = using simulated timing (the detector simulator is running and generating the timing) 0 = using real timing (valid only when bit 20 is set; replaces the science data received from DEC by simulated readouts)
bits 22-31	<b>DMC_DRR_SPARE10</b>	Spare

**204 DMC DECR CTRL ST**

**DEC**

SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (21bits)

Description:

Red DEC Controller task status. This task is sending the commands to Red DEC and control the power on/off.

bits 0-15	<b>DMC_DRC_ERROR</b>	Error code
bit 16	<b>DMC_DRC_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_DRC_TASK_WR</b>	1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless



bit 18	<b>DMC_DRC_ERR_NS</b>	bit 18 is set) 0 = No error in this task 1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet
bit 19	<b>DMC_DRC_LINK</b>	0 = No error waiting to be signaled 1 = Waiting connection with Red DEC
bit 20	<b>DMC_DRC_POWER</b>	0 = Connection established with Red DEC 1 = Red DEC is powered ON
bits 21-31	<b>DMC_DRC_SPARE11</b>	0 = Red DEC is OFF Spare
<b>205 DMC_RED_PAC_ENC</b>		<b>COM</b>
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4 (20bits)
<u>Description:</u>		
Red Packet Encoder task status. This task is sending the science packet to the Red SPU.		
bits 0-15	<b>DMC_RPE_ERROR</b>	Error code
bit 16	<b>DMC_RPE_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_RPE_TASK_WR</b>	1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set)
bit 18	<b>DMC_RPE_ERR_NS</b>	0 = No error in this task 1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet
bit 19	<b>DMC_RPE_LINK</b>	0 = No error waiting to be signaled 1 = Waiting connection with Red SPU
bits 20-31	<b>DMC_RPE_SPARE12</b>	0 = Connection established with Red SPU Spare
<b>206 DMC_BOL_REC_STAT</b>		<b>BOLC</b>
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4 (22bits)
<u>Description:</u>		
BOL Receiver task status. This task is receiving the packets from the BOLC. In case the Detector simulator has been started; it can also replace the readouts by simulated ones or can even generate readouts if not connected to BOLC)		
bits 0-15	<b>DMC_BR_ERROR</b>	Error code
bit 16	<b>DMC_BR_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_BR_TASK_WR</b>	1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set)
bit 18	<b>DMC_BR_ERR_NS</b>	0 = No error in this task 1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet
bit 19	<b>DMC_BR_LINK</b>	0 = No error waiting to be signaled 1 = Waiting connection with Red DEC
bit 20	<b>DMC_BR_SENDING</b>	0 = Connection established with Red DEC 1 = using simulated readouts 0 = using real readouts



bit 21	<b>DMC_BR_SIM_TIME</b>	1 = using simulated timing (the detector simulator is running and generating the timing) 0 = using real timing (valid only when bit 20 is set; replaces the science data received from DEC by simulated readouts)
bits 22-31	<b>DMC_BR_SPARE10</b>	Spare
<b>207 DMC_BOL_CTRL_STA</b> <span style="float: right;"><b>BOLC</b></span>		
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4 (20bits)
<u>Description:</u> BOL Controller task status. This task is sending the commands to BOLC.		
bits 0-15	<b>DMC_BC_ERROR</b>	Error code
bit 16	<b>DMC_BC_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_BC_TASK_WR</b>	1 = Any error occurred in this task, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_BC_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_BC_LINK</b>	1 = Waiting connection with Red DEC 0 = Connection established with Red DEC
bits 20-31	<b>DMC_BC_SPARE12</b>	Spare
<b>208 DMC_GRAT_CTRL_ST</b> <span style="float: right;"><b>GRAT</b></span>		
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Bits 16, 19 and 21-31 are updated only while the Grating is powered on
	Available in:	All HK modes
	Useful size (in bytes):	4
<u>Description:</u> Grating Controller status.		
bits 0-15	<b>DMC_GC_ERROR</b>	Error code
bit 16	<b>DMC_GC_LL_SC</b>	Spare (will be Launch Lock Short-Circuit)
bit 17	<b>DMC_GC_TASK_WR</b>	1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_GC_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_GC_LL_MOVING</b>	1 = Launch lock is moving 0 = Launch lock is not moving
bit 20	<b>DMC_GC_POWER</b>	1 = Grating is powered ON 0 = Grating is powered OFF
bit 21	<b>DMC_GC_PID</b>	1 = Grating controller is enabled 0 = Grating controller is disabled
bit 22	<b>DMC_GC_COMMUT</b>	1 = Grating controller commutation is enabled (obsolete) 0 = Grating controller commutation is disabled
bit 23	<b>DMC_GC_LS</b>	1 = Limit switch is pressed 0 = Limit switch is not pressed
Remark: During a homing, the grating will stay only around 1 second on the limit switch. So, it might happen that you do not		



bit 24	<b>DMC_GC_DEGRADED</b>	see this bit set to 1 in the nominal HK. 1 = Grating is in degraded mode 0 = Grating is in nominal mode
bit 25	<b>DMC_GC_UP</b>	1 = Moving UP 0 = Not moving UP
bit 26	<b>DMC_GC_DOWN</b>	1 = Moving DOWN 0 = Not moving DOWN
bit 27	<b>DMC_GC_SYNCHRO</b>	1 = Using synchro (movement starts only right after a synchro pulse) 0 = Not using synchro (movements starts anytime)
bit 28	<b>DMC_GC_HOM_PROG</b>	1 = Homing is in progress 0 = No homing in progress (not started or completed)
bit 29	<b>DMC_GC_HOM_COMP</b>	1 = Homing has completed 0 = Homing has not (yet) completed
bit 30	<b>DMC_GC_LL_LOCKED</b>	1 = Launch lock is locked 0 = Launch lock is not locked
bit 31	<b>DMC_GC_LL_UNLOCKED</b>	1 = Launch lock is unlocked 0 = Launch lock is not unlocked
Remark : The Launch lock position indicators are powered only when the launch lock actuator(s) is(are) powered. Status is therefore only valid during that time (nominally 5 sec., i.e. for 2 or 3 nominal HK packets maximum)		
<b>209 DMC_CHOP_CTRL_ST</b>		<b>CHOP</b>
SCOS 2000 Display:		Bit Field (see description)
Validity at startup:		Valid
Validity during execution:		Always Valid
Available in:		All HK modes
Useful size (in bytes):		4 (28bits)
<u>Description:</u>		
Chopper Controller status.		
bits 0-15	<b>DMC_CC_ERROR</b>	Error code
bit 16	<b>DMC_CC_SPARE1A</b>	Spare
bit 17	<b>DMC_CC_TASK_WR</b>	1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_CC_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_CC_SPARE1B</b>	Spare
bit 20	<b>DMC_CC_POWER</b>	1 = Chopper is powered ON 0 = Chopper is OFF
bit 21	<b>DMC_CC_PID</b>	1 = Chopper controller is enabled 0 = Chopper controller is disabled
bit 22	<b>DMC_CC_COMMUT</b>	1 = Chopper controller commutation is enabled 0 = Chopper controller commutation is disabled
bit 23	<b>DMC_CC_LOOP</b>	1 = Open loop mode 0 = Closed loop mode
bit 24	<b>DMC_CC_SPARE1C</b>	spare
bit 25	<b>DMC_CC_UP</b>	1 = Moving UP 0 = Not moving UP
bit 26	<b>DMC_CC_DOWN</b>	1 = Moving DOWN 0 = Not moving DOWN
bit 27	<b>DMC_CC_SYNCHRO</b>	1 = Using synchro (movement starts only right after a synchro pulse) 0 = Not using synchro (movements starts anytime)
bits 28-31	<b>DMC_CC_SPARE4</b>	Spare
<b>210 DMC_FW_SPEC_CTRL</b>		<b>FW</b>





SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (30bits)
<b>Description:</b>	
Filter Wheel Spectro Controller status.	
bits 0-15	<b>DMC_FWSC_ERROR</b> Error code
bit 16	<b>DMC_FWSC_SPARE1A</b> Spare
bit 17	<b>DMC_FWSC_TASK_WR</b> 1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_FWSC_ERR_NS</b> 1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_FWSC_SPARE1B</b> Spare
bit 20	<b>DMC_FWSC_POWER</b> 1 = Filter Wheel Spectro is powered ON 0 = Filter Wheel Spectro is OFF
bit 21-24	<b>DMC_FWSC_SPARE4</b> Spare
bit 25	<b>DMC_FWSC_MOVING</b> 1 = Currently moving (actually = FW controller is currently sending current in the coils) 0 = Currently not moving
bit 26	<b>DMC_FWSC_SEARCH_A</b> 1 = Searching position A 0 = Not searching position A
bit 27	<b>DMC_FWSC_SEARCH_B</b> 1 = Searching position B 0 = Not searching position B
bit 28	<b>DMC_FWSC_POS_A</b> 1 = Currently at position A 0 = Currently not at position A
bit 29	<b>DMC_FWSC_POS_B</b> 1 = Currently at position B 0 = Currently not at position B
bit 30	<b>DMC_FWSC_POSC_A</b> 1 = Control threshold has been reached for position A 0 = sensor < control threshold for position A
bit 31	<b>DMC_FWSC_POSC_B</b> 1 = Control threshold has been reached for position B 0 = sensor < control threshold for position B
<b>211</b>	<b>DMC_FW_PHOT_CTRL</b> <b>FW</b>
SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (30bits)
<b>Description:</b>	
Filter Wheel Photo Controller status.	
bits 0-15	<b>DMC_FWPC_ERROR</b> Error code
bit 16	<b>DMC_FWPC_SPARE1A</b> Spare
bit 17	<b>DMC_FWPC_TASK_WR</b> 1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_FWPC_ERR_NS</b> 1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_FWPC_SPARE1B</b> Spare
bit 20	<b>DMC_FWPC_POWER</b> 1 = Filter Wheel Photo is powered ON 0 = Filter Wheel Photo is OFF
bit 21-24	<b>DMC_FWPC_SPARE4</b> Spare
bit 25	<b>DMC_FWPC_MOVING</b> 1 = Currently moving (actually = FW controller is currently sending current in the coils)





bit 26	<b>DMC_FWPC_SEARCH_A</b>	0 = Currently not moving 1 = Searching position A
bit 27	<b>DMC_FWPC_SEARCH_B</b>	0 = Not searching position A 1 = Searching position B
bit 28	<b>DMC_FWPC_POS_A</b>	0 = Not searching position B 1 = Currently at position A
bit 29	<b>DMC_FWPC_POS_B</b>	0 = Currently not at position A 1 = Currently at position B
bit 30	<b>DMC_FWSC_POSC_A</b>	0 = Currently not at position B 1 = Control threshold has been reached for position A
bit 31	<b>DMC_FWSC_POSC_B</b>	0 = sensor < control threshold for position A 1 = Control threshold has been reached for position B
<b>212 DMC_CHECKSUM</b>		<b>SPARE</b>
	SCOS 2000 Display:	Hex
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4
<b>Description:</b> The checksum on the hk packet. Computed this way: crc=0xFFFFFFFF; for (i = 2; i < DMC_SPARE_3; i++) {crc = Crc32(gHkPacketBuffer[i], crc);} for (i = DMC_SPARE_3+1; i < length; i++) {crc=Crc32(gHkPacketBuffer[i], crc);}		
<b>213 DMC_CS1_CTRL_STA</b>		<b>CS</b>
	SCOS 2000 Display:	Bit Field (see description)
	Validity at startup:	Valid
	Validity during execution:	Always Valid
	Available in:	All HK modes
	Useful size (in bytes):	4 (28bits)
<b>Description:</b> Calibratin Source 1 Controller status (currently not implemented).		
bits 0-15	<b>DMC_CS1C_ERROR</b>	Error code
bit 16	<b>DMC_CS1C_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17	<b>DMC_CS1C_TASK_WR</b>	1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18	<b>DMC_CS1C_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19	<b>DMC_CS1C_SPARE1</b>	Spare
bit 20	<b>DMC_CS1C_POWER</b>	1 = Calibration Source 1 is powered ON 0 = Calibration Source 1 is OFF
bit 21	<b>DMC_CS1C_PID</b>	1 = Calibration Source 1 controller is enabled 0 = Calibration Source 1 controller is disabled
bit 22	<b>DMC_CS1C_COMMUT</b>	1 = Calibration Source 1 controller commutation is enabled 0 = Calibration Source 1 controller commutation is disabled
bit 23	<b>DMC_CS1C_LOOP</b>	1 = Cpen loop mode 0 = Closed loop mode
bit 24	<b>DMC_CS1C_SPARE1B</b>	spare
bit 25	<b>DMC_CS1C_UP</b>	1 = Moving UP 0 = Not moving UP
bit 26	<b>DMC_CS1C_DOWN</b>	1 = Moving DOWN 0 = Not moving DOWN
bit 27	<b>DMC_CS1C_SYNCHRO</b>	1 = Using synchro (movement starts only right after a synchro pulse) 0 = Not using synchro (movements starts anytime)



bits 28-31	<b>DMC_CS1C_SPARE4</b>	Spare	
<b>214</b>	<b>DMC_CS2_CTRL_STA</b>		<b>CS</b>
	SCOS 2000 Display:	Bit Field (see description)	
	Validity at startup:	Valid	
	Validity during execution:	Always Valid	
	Available in:	All HK modes	
	Useful size (in bytes):	4 (28bits)	
<u>Description:</u>			
Calibratin Source 2 Controller status (currently not implemented).			
bits 0-15	<b>DMC_CS2C_ERROR</b>	Error code	
bit 16	<b>DMC_CS2C_TASK_AL</b>	1 = this task is running 0 = this task is not running	
bit 17	<b>DMC_CS2C_TASK_WR</b>	1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task	
bit 18	<b>DMC_CS2C_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled	
bit 19	<b>DMC_CS2C_SPARE1</b>	Spare	
bit 20	<b>DMC_CS2C_POWER</b>	1 = Calibration Source 2 is powered ON 0 = Calibration Source 2 is OFF	
bit 21	<b>DMC_CS2C_PID</b>	1 = Calibration Source 2 controller is enabled 0 = Calibration Source 2 controller is disabled	
bit 22	<b>DMC_CS2C_COMMUT</b>	1 = Calibration Source 2 controller commutation is enabled 0 = Calibration Source 2 controller commutation is disabled	
bit 23	<b>DMC_CS2C_LOOP</b>	1 = Cpen loop mode 0 = Closed loop mode	
bit 24	<b>DMC_CS2C_SPARE1B</b>	spare	
bit 25	<b>DMC_CS2C_UP</b>	1 = Moving UP 0 = Not moving UP	
bit 26	<b>DMC_CS2C_DOWN</b>	1 = Moving DOWN 0 = Not moving DOWN	
bit 27	<b>DMC_CS2C_SYNCHRO</b>	1 = Using synchro (movement starts only right after a synchro pulse) 0 = Not using synchro (movements starts anytime)	
bits 28-31	<b>DMC_CS2C_SPARE4</b>	Spare	
<b>215</b>	<b>DMC_SEQ_OPTIONS</b>		<b>SEQ</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Valid	
	Validity during execution:	Always Valid	
	Available in:	All HK modes	
	Useful size (in bytes):	1 (4bits)	
<u>Description:</u>			
Sequencer options : select the synchronization signal used to execute the sequences			
1 = synchronize on Blue DEC ramps			
2 = synchronize on Red DEC ramps			
4 = synchronize on BOL readouts			
<b>216</b>	<b>DMC_SEQ_POINTER</b>		<b>SEQ</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Valid	
	Validity during execution:	Always Valid	
	Available in:	All HK modes	
	Useful size (in bytes):	2 (8bits)	
<u>Description:</u>			
Sequence Pointer : Indicates the current position in the sequence (0 based index showing the 'line number' in the sequence)			



<b>217</b>	<b>DMC_SEQ_LOOP_ID0</b>	<b>SEQ</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u>		
Sequence Loop 0 Index : Current index in the highest level loop (decrementing counter gives the number of iteration left)		
<b>218</b>	<b>DMC_SEQ_LOOP_ID1</b>	<b>SEQ</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u>		
...		
<b>219</b>	<b>DMC_SEQ_LOOP_ID2</b>	<b>SEQ</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u>		
...		
<b>220</b>	<b>DMC_SEQ_LOOP_ID3</b>	<b>SEQ</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u>		
...		
<b>221</b>	<b>DMC_SEQ_LOOP_ID4</b>	<b>SEQ</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u>		
Sequence Loop 4 Index : Current index in the lowest level loop		
<b>222</b>	<b>DMC_SEQ_WAIT_IND</b>	<b>SEQ</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u>		
Current index in the current 'WAIT' command (decrementing counter gives the number of wait remaining)		
<b>223</b>	<b>DMC_SEQ_LABEL</b>	<b>SEQ</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	1	
<u>Description:</u>		
Sequence label		
<b>224</b>	<b>DMC_OBSID</b>	<b>TIME</b>
SCOS 2000 Display:	?	



Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> OBSID	
<b>225 DMC_BBID</b>	<b>TIME</b>
SCOS 2000 Display:	?
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> BBID	
<b>226 DMC_TIME_1</b>	<b>TIME</b>
SCOS 2000 Display:	?
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> Contains the seconds of the time. (number which reflects the amount of seconds elapsed since 1-Jan-1958 0:00:00 UT).	
<b>227 DMC_TIME_2</b>	<b>TIME</b>
SCOS 2000 Display:	?
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Contains the fraction of seconds of the time in 65536th units.	
<b>228 DMC_DECB_REC_PAC</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Blue DEC Receiver packet counter. Counts the number of packets received from Blue DEC since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing). These are the 16 lsb of CRDC in science header	
<b>229 DMC_DECR_REC_PAC</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Red DEC Receiver packet counter. Counts the number of packets received from Red DEC since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing). These are the 16 lsb of CRDC in science header	
<b>230 DMC_DECB_CTRL_PA</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Blue DEC Controller packet counter. Counts the number of packets (commands) sent to Blue DEC since the	



software has been started (since it is only 16 bits, it is only meant to see that it is incrementing).	
<b>231 DMC_DECR_CTRL_PA</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Red DEC Controller packet counter. Counts the number of packets (commands) sent to Red DEC since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing).	
<b>232 DMC_BLUE_ENC_PAC</b>	<b>COM</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Blue Packet Encoder packet counter. Counts the number of packet sent to Blue SPU since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing)	
<b>233 DMC_RED_ENC_PAC</b>	<b>COM</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Red Packet Encoder packet counter. Counts the number of packet sent to Red SPU since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing)	
<b>234 DMC_BOL_REC_PAC</b>	<b>BOLC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> BOL Receiver packet counter. Counts the number of packets received from BOLC since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing)	
<b>235 DMC_BOL_CTRL_PAC</b>	<b>BOLC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> BOL Controller packet counter. Counts the number of packets (commands) sent to BOLC since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing).	
<b>236 DMC_DPU_REC_PAC</b>	<b>COM</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> DPU Receiver packet counter. Counts the number of packets received from DPU since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing).	
<b>237 DMC_DPU_SEND_PAC</b>	<b>COM</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid



**Herschel PACS**  
**DEC/MEC User Manual**

Doc. PACS-CL-SR-002  
Date: 29 September, 2010  
Issue: 5.0  
Page: 125

Available in:	All HK modes
Useful size (in bytes):	2
<b>Description:</b> DPU Sender packet counter. Counts the number of packets sent to DPU since the software has been started (since it is only 16 bits, it is only meant to see that it is incrementing).	
<b>238 DMC_B_SPEC_READ DEC</b>	
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<b>Description:</b> Counts the readout from Blue DEC received by the DEC/MEC since the last setting of Time.	
<b>239 DMC_R_SPEC_READ DEC</b>	
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<b>Description:</b> Counts the readout from Red DEC received by the DEC/MEC since the last setting of Time.	
<b>240 DMC_SYNC_COUNT SYNC</b>	
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<b>Description:</b> Counts the currently selected synchro. This counter is positioned before the delay circuit while the CRDCCP counter is positioned after the delay circuit.	
<b>241 DMC_CPU_LOAD OBSW</b>	
SCOS 2000 Display:	Decimal : divide value by 10 to get the percents
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2 (10bits)
<b>Description:</b> Cpu workload : Values between [0, 1000]. Each unit represents 0.1%	
<b>242 DMC_IRS_CNT OBSW</b>	
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<b>Description:</b> Servo IRQ Counter : Counts the number of call to the interrupt routine containing the Chopper Controller, the Grating Controller, the Filter Wheel Controller and the analog HK acquisition routine. This should increment by 8192/sec in spectro and 8320/sec in photo with nominal configuration of the timing FPGA	
<b>243 DMC_VID OBSW</b>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<b>Description:</b> Software Version Number : Note that this variable is only modifiable by patching (and not by a write command). The MSB is the main version number and the 3 other bytes are used for intermediate numbering. (example: 0x05020300 for version 5.2.3.0)	
<b>244 DMC_CHOP_CUR_POS CHOP</b>	



SCOS 2000 Display:	Decimal (+/- 32767= +/- 10V)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (16bits)
<u>Description:</u> Chopper : actual position. This is corresponding to the Field Plates output voltage with an amplification gain of 50.243 (!valid only for QM DEC/MEC!)	
<b>245 DMC_CHOP_SETPOIN</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only while chopper controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4 (16bits)
<u>Description:</u> Chopper : position servo setpoint. Same units as position (DMC_CHOP_CUR_POS).	
<b>246 DMC_CHOP_TARGET</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only while chopper controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4 (16bits)
<u>Description:</u> Chopper : final position for move. Same units as position (DMC_CHOP_CUR_POS).	
<b>247 DMC_CHOP_PID_ERR</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only while chopper controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4 (16bits)
<u>Description:</u> Chopper : current error between position and setpoint (=DMC_CHOP_SETPOINT-DMC_CHOP_CUR_POS). Same units as position (DMC_CHOP_CUR_POS)	
<b>248 DMC_CHOP_PID_ACC</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal (to be displayed in raw values)
Validity at startup:	Invalid
Validity during execution:	Valid only while chopper controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4 (32bits)
<u>Description:</u> Chopper : integral accumulator of servo PID algorithm. Same units as position (DMC_CHOP_CUR_POS)	
<b>249 DMC_CHOP_MAX_DIT</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (16bits)
<u>Description:</u> Chopper : Maximum Dither Value. Same units as position (DMC_CHOP_CUR_POS)	
<b>250 DMC_GRAT_CUR_POS</b>	<b>GRAT</b>
SCOS 2000 Display:	Decimal or deg min sec
Validity at startup:	Invalid
Validity during execution:	Valid only while Grating is powered on
Available in:	All HK modes
Useful size (in bytes):	4 (24bits)
<u>Description:</u> Grating : actual position from readout by HK, in arbitrary units ( signed int ). 1 unit = $(360*3600)/(128*65536) = 0.1545$ arcsec.	
<b>251 DMC_GRAT_SETPOIN</b>	<b>GRAT</b>



SCOS 2000 Display:	Decimal or deg min sec
Validity at startup:	Invalid
Validity during execution:	Valid only while Grating controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4 (24bits)
<u>Description:</u>	
Grating : position servo setpoint, same units as actual position (DMC_GRAT_CUR_POS)	
<b>252 DMC_GRAT_TARGET</b>	<b>GRAT</b>
SCOS 2000 Display:	Decimal or deg min sec
Validity at startup:	Invalid
Validity during execution:	Valid only while Grating controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4 (24bits)
<u>Description:</u>	
Grating : final position for move, same units as actual position (DMC_GRAT_CUR_POS)	
<b>253 DMC_GRAT_PID_ERR</b>	<b>GRAT</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only while Grating controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4 (24bits)
<u>Description:</u>	
Grating : current error between position and setpoint (=DMC_GRAT_SETPOINT-DMC_GRAT_CUR_POS). Same units as actual position (DMC_GRAT_CUR_POS).	
<b>254 DMC_GRAT_PID_ACC</b>	<b>GRAT</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only while Grating controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u>	
Grating : integral accumulator of servo PID algorithm. Same units as actual position (DMC_GRAT_CUR_POS).	
<b>255 DMC_FWSP_CUR_POS</b>	<b>FW</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	It is updated only while the FW is powered on.
Available in:	All HK modes
Useful size (in bytes):	1 (4bits)
<u>Description:</u>	
FW Spectro current position: -1 : unknown (between the two position or the FW has not been powered on yet so we don't know where it is) 0 : position A 1 : position B	
<b>256 DMC_FWGRAT_HALLA</b>	<b>FW</b>
SCOS 2000 Display:	Decimal (for grating hall sensors: +/-32767 = +/-49mV, for FW hall sensors: +/-32767 = +/-102mV)
Validity at startup:	Invalid
Validity during execution:	Valid only while FW or Grating is powered on
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
Value of the Hall A sensor of the currently active mechanism (FW or grating). Output voltage of the hall sensor under 0.7 mA excitation with an amplifier gain of 206. (+32767 = +10 V and -32767 = -10 V)	
<b>257 DMC_FWGRAT_HALLB</b>	<b>FW</b>
SCOS 2000 Display:	Decimal (for grating hall sensors: +/-32767 = +/-49mV, for FW hall sensors: +/-32767 = +/-102mV)
Validity at startup:	Invalid
Validity during execution:	Valid only while FW or Grating is powered on
Available in:	All HK modes





Useful size (in bytes):	2
<u>Description:</u> Value of the Hall B sensor of the currently active mechanism (FW or grating). Output voltage of the hall sensor under 0.7 mA excitation with an amplifier gain of 206. (+32767 = +10 V and -32767 = -10 V)	
<b>258 DMC_CHOP_OUTPUT</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal (+/-32767 = +/-130 mA)
Validity at startup:	Invalid
Validity during execution:	Valid only while chopper controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> Current commanded in chopper coils = output of the controller.	
<b>259 DMC_ISR_STAT</b>	<b>OBSW</b>
SCOS 2000 Display:	Bit field
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (2bits)
<u>Description:</u> Interrupt routine status	
bit 0	<b>DMC_ISR_SPARE_1</b> Don't care
bit 1	<b>DMC_ISR_SYNC_RES</b> 1 = sync received (reset to zero when software 'consumes' it) TBC
bits 2 - 31	<b>DMC_ISR_SPARE_30</b> 0 = no sync Spares
<b>260 DMC_FWPH_CUR_POS</b>	<b>FW</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	It is updated only while the FW is powered on.
Available in:	All HK modes
Useful size (in bytes):	1 (4bits)
<u>Description:</u> FW Photo current position: -1 : unknown (between the two position or the FW has not been powered on yet so we don't know where it is) 0 : position A 1 : position B	
<b>261 DMC_SPARE1</b>	<b>SPARE</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>262 DMC_SPARE2</b>	<b>SPARE</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>263 DMC_PLL_RES_LO</b>	<b>OBSW</b>
SCOS 2000 Display:	Decimal ( $2^{32} = 1$ period) should be interpreted as a signed number
Validity at startup:	Valid
Validity during execution:	Valid only when locked on OBT or BOLC (not valid in free run)
Available in:	All HK modes



Useful size (in bytes):	4
<u>Description:</u> Timing FPGA PLL residue (Low word). Phase difference measured at each period of the selected synchronization signal.	
<u>Limit checking :</u> See section 'adjusting the timing parameters'	
<b>264 DMC_PLL_RES_HI</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Valid only when locked on OBT or BOLC (not valid in free run)
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Timing FPGA PLL residue (High word). Number of reference frequency periods	
<b>265 DMC_DECB_VDDD_3</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> VDDD Voltage Power Supply Group 3	
<u>Limit checking :</u> See section 'adjusting the timing parameters'	
<b>266 DMC_DECB_VSS_3</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> VSS Voltage Power Supply Group 3	
<b>267 DMC_DECB_VGND_3</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> GND Voltage Power Supply Group 3	
<b>268 DMC_DECB_VCAN1_3</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Cascode N1 Voltage Power Supply Group 3	
<b>269 DMC_DECB_VCAN2_3</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Cascode N2 Voltage Power Supply Group 3	
<b>270 DMC_DECB_VOBIAS3</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid



Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Zero Bias Voltage Power Supply Group 3	
<b>271 DMC_DEC_B_VBI_R_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Bias R Voltage Power Supply Group 3	
<b>272 DMC_DEC_B_VOV_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> 0V reference Voltage Power Supply Group 3	
<b>273 DMC_DEC_B_VSCP_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Cascode P Voltage Power Supply Group 3	
<b>274 DMC_DEC_B_VDDR_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Current Mirror Voltage Power Supply Group 3	
<b>275 DMC_DEC_B_VDDA_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> VDDA Voltage Power Supply Group 3	
<b>276 DMC_DEC_B_VWELL_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Well Voltage Power Supply Group 3	
<b>277 DMC_DEC_B_IDDA_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2



<u>Description:</u> VDDA Current Power Supply Group 3		
<b>278</b>	<b>DMC_DECB_IDDD_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VDDD Current Power Supply Group 3		
<b>279</b>	<b>DMC_DECB_ISS_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VSS Current Power Supply Group 3		
<b>280</b>	<b>DMC_DECB_IGND_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> GND Current Power Supply Group 3		
<b>281</b>	<b>DMC_DECB_HEAT_C</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -25mA, 32767 = 25mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Blue DEC Heater Current		
<b>282</b>	<b>DMC_DECB_HEAT_V</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -37.5V, 32767 = 37.5V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Heater Voltage		
<b>283</b>	<b>DMC_DECB_REF_0V3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -5V, 32767 = 5V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> 0V Reference voltage for DEC Base Group 3 ADC		
<b>284</b>	<b>DMC_DECB_DCDC_T3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0=0ohms, -32767 = 100Kohms)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> DC/DC temperature The temperature can be computed with: $T(K) = 1/(a0 + a1*\ln(R) + a3*(\ln(R))^3)$		



Where  $a0 = 1,2835e-3$

$a1 = 2,3646e-4$

$a3 = 9,1416e-8$

Limit checking :

Warning when T(K) out of [243.15, 343.15]

Switch-off DMC when T(K) out of [218.15, 353.15]

<b>285 DMC_DEC_B_SPARE5</b>	<b>DEC</b>
SCOS 2000 Display:	none
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>286 DMC_DEC_B_DCDC_P5</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-1700mA, 32767=1700mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Current from +5V power supply	
<b>287 DMC_DEC_B_AC_CUR</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-349.57mA, 32767=349.57mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> AC Current	
<b>288 DMC_DEC_B_TS_ST_3</b>	<b>DEC</b>
SCOS 2000 Display:	bit field
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2 (4bits)
<u>Description:</u> Bit field showing the status of each of the detector array temperature sensors. 2bits for each sensors:	
00	Sensor inactive (measure is invalid)
01	Measure has been done using Low Gain Current Measure
10	Measure has been done using High Gain Current Measure
11	Error in measure (measure is invalid)
bits 0-1	<b>DMC_DEC_B_TS_1_ST_3</b> temperature sensor 1 status
bits 2-3	<b>DMC_DEC_B_TS_2_ST_3</b> temperature sensor 2 status
bits 4-15	<b>DMC_DEC_B_TS_SP_3</b> spare
<b>289 DMC_DEC_B_CL_RO_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Number of CRE clocks per readout	
<b>290 DMC_DEC_B_RO_RA_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal



Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<b>Description:</b>	
Number of readouts per ramp	
<b>291 DMC_DECB_CR_ST_3</b>	<b>DEC</b>
SCOS 2000 Display:	bit field
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<b>Description:</b>	
CRE group 3 status word. Note, bit 0-14 are command readback. Bit 15 is the real status of the CRE power.	
bit 0 <b>DMC_DECB_CR3_ST_POW</b>	1 = CRE power on command readback 0 = CRE power off command readback
bit 1 <b>DMC_DECB_CR3_ST_SEL</b>	1 = CRE Active 0 = CRE inactive
bit 2-3 <b>DMC_DECB_CR3_ST_CS</b>	Capacitor select read back 00 = 100fF 10 = 200fF 01 = 400fF 11 = 1pF
bit 4 <b>DMC_DECB_CR3_ST_CUR</b>	1 = curing 0 = not curing
bit 5 <b>DMC_DECB_CR3_ST_SP1</b>	Spare
bit 6 <b>DMC_DECB_CR3_ST_SIM</b>	1 = simulation mode 0 = nominal mode
bit 7 <b>DMC_DECB_CR3_ST_TE</b>	1 = temperature sensors enabled 0 = temperature sensors disabled
bit 8 <b>DMC_DECB_CR3_ST_NDS</b>	1 = Non destructive sync is 2 CRE Clock width 0 = Non destructive sync is 1 CRE Clock width
bit 9 <b>DMC_DECB_CR3_ST_RA</b>	1 = ramp simulation ON 0 = ramp simulation OFF
bit 10 <b>DMC_DECB_CR3_ST_FL</b>	1 = Flasher is ON 0 = Flasher is OFF
bit 11 <b>DMC_DECB_CR3_ST_HE</b>	1 = Heater is ON 0 = Heater is OFF
bit 12-14 <b>DMC_DECB_CR3_ST_SP2</b>	Spare
bit 15 <b>DMC_DECB_CR3_ST_CRPO W</b>	1 = CRE powered on 0 = CRE powered off
<b>292 DMC_DECB_BR_CM_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal ( 0 = 0V, 4095 = +1V )
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2 (12bits)
<b>Description:</b>	
Bias R command readback	
<b>293 DMC_DECB_ZB_CM_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal ( 0 = 0V, 4095 = +1V )
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2 (12bits)
<b>Description:</b>	
Zero Bias command readback	
<b>294 DMC_DECB_SR_RB_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal



Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> simulation register readback	
<b>295 DMC_DECB_TS_1_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (1 unit = 1 ohm)
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Temperature Sensor 1 resistor value	
<b>296 DMC_DECB_TS_2_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (1 unit = 1 ohm)
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Temperature Sensor 2 resistor value	
<b>297 DMC_DECB_RO_CO_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> readout ID, counts from readouts_per_ramp-1 to 0	
<b>298 DMC_DECB_RA_CO_3</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> ramp counter, increments until reset	
<b>299 DMC_DECB_VDDD_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> VDDD Voltage Power Supply Group 4	
<b>300 DMC_DECB_VSS_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> VSS Voltage Power Supply Group 4	
<b>301 DMC_DECB_VGND_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes



Useful size (in bytes):	2
<u>Description:</u> GND Voltage Power Supply Group 4	
<b>302 DMC_DECB_VCAN1_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Cascode N1 Voltage Power Supply Group 4	
<b>303 DMC_DECB_VCAN2_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Cascode N2 Voltage Power Supply Group 4	
<b>304 DMC_DECB_VOBIAS4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Zero Bias Voltage Power Supply Group 4	
<b>305 DMC_DECB_VBI_R_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Bias R Voltage Power Supply Group 4	
<b>306 DMC_DECB_VOV_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> OV reference Voltage Power Supply Group 4	
<b>307 DMC_DECB_VSCP_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Cascode P Voltage Power Supply Group 4	
<b>308 DMC_DECB_VDDR_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Current Mirror Voltage Power Supply Group 4	





<b>309 DMC_DEC_B_VDDA_4</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VDDA Voltage Power Supply Group 4		
<b>310 DMC_DEC_B_VWELL_4</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Well Voltage Power Supply Group 4		
<b>311 DMC_DEC_B_IDDA_4</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VDDA Current Power Supply Group 4		
<b>312 DMC_DEC_B_IDDD_4</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VDDD Current Power Supply Group 4		
<b>313 DMC_DEC_B_ISS_4</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VSS Current Power Supply Group 4		
<b>314 DMC_DEC_B_IGND_4</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> GND Current Power Supply Group 4		
<b>315 DMC_DEC_B_FLASH_C</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -25mA, 32767 = 25mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Blue DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Dec Blue Flasher Current		
<b>316 DMC_DEC_B_FLASH_V</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -37.5V, 32767 = 37.5V)	
Validity at startup:	Invalid	



Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Dec Blue Flasher Voltage	
<b>317 DMC_DECB_REF_0V4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -5V, 32767 = 5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> 0V Reference voltage for DEC Base Group 4 ADC	
<b>318 DMC_DECB_DCDC_T4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (TBD)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> DC/DC temperature (not connected, spare sensor)	
<b>319 DMC_DECB_SPARE5B</b>	<b>DEC</b>
SCOS 2000 Display:	none
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>320 DMC_DECB_DCDC_P15</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-144mA, 32767=144mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Current from +15V power supply	
<b>321 DMC_DECB_DCDC_N15</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-144mA, 32767=144mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Current from -15V power supply	
<b>322 DMC_DECB_TS_ST_4</b>	<b>DEC</b>
SCOS 2000 Display:	bit field
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2 (4bits)
<u>Description:</u> Bit field showing the status of each of the detector array temperature sensors. 2bits for each sensors:	
00	Sensor inactive (measure is invalid)
01	Measure has been done using Low Gain Current Measure
10	Measure has been done using High Gain Current Measure



11	Error in measure (measure is invalid)		
bits 0-1	<b>DMC_DECB_TS_1_ST_4</b>	temperature sensor 1 status	
bits 2-3	<b>DMC_DECB_TS_2_ST_4</b>	temperature sensor 2 status	
bits 4-15	<b>DMC_DECB_TS_SP_4</b>	spare	
<b>323</b>	<b>DMC_DECB_CL_RO_4</b>		<b>DEC</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Invalid	
	Validity during execution:	Valid only when Blue DEC is powered ON	
	Available in:	All HK modes	
	Useful size (in bytes):	2	
<u>Description:</u>			
Number of CRE clocks per readout			
<b>324</b>	<b>DMC_DECB_RO_RA_4</b>		<b>DEC</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Invalid	
	Validity during execution:	Valid only when Blue DEC is powered ON	
	Available in:	All HK modes	
	Useful size (in bytes):	2	
<u>Description:</u>			
Number of readouts per ramp			
<b>325</b>	<b>DMC_DECB_CR_ST_4</b>		<b>DEC</b>
	SCOS 2000 Display:	bit field	
	Validity at startup:	Invalid	
	Validity during execution:	Valid only when Blue DEC is powered ON	
	Available in:	All HK modes	
	Useful size (in bytes):	2	
<u>Description:</u>			
CRE group 4 status word. Note, bit 0-14 are command readback. Bit 15 is the real status of the CRE power.			
bit 0	<b>DMC_DECB_CR4_ST_POW</b>	1 = CRE power on command readback 0 = CRE power off command readback	
bit 1	<b>DMC_DECB_CR4_ST_SEL</b>	1 = CRE Active 0 = CRE inactive	
bit 2-3	<b>DMC_DECB_CR4_ST_CS</b>	Capacitor select read back 00 = 100fF 10 = 200fF 01 = 400fF 11 = 1pF	
bit 4	<b>DMC_DECB_CR4_ST_CUR</b>	1 = curing 0 = not curing	
bit 5	<b>DMC_DECB_CR4_ST_SP1</b>	Spare	
bit 6	<b>DMC_DECB_CR4_ST_SIM</b>	1 = simulation mode 0 = nominal mode	
bit 7	<b>DMC_DECB_CR4_ST_TE</b>	1 = temperature sensors enabled 0 = temperature sensors disabled	
bit 8	<b>DMC_DECB_CR4_ST_NDS</b>	1 = Non destructive sync is 2 CRE Clock width 0 = Non destructive sync is 1 CRE Clock width	
bit 9	<b>DMC_DECB_CR4_ST_RA</b>	1 = ramp simulation ON 0 = ramp simulation OFF	
bit 10	<b>DMC_DECB_CR4_ST_FL</b>	1 = Flasher is ON 0 = Flasher is OFF	
bit 11	<b>DMC_DECB_CR4_ST_HE</b>	1 = Heater is ON 0 = Heater is OFF	
bit 12-14	<b>DMC_DECB_CR4_ST_SP2</b>	Spare	
bit 15	<b>DMC_DECB_CR4_ST_CRPOW</b>	1 = CRE powered on 0 = CRE powered off	
<b>326</b>	<b>DMC_DECB_BR_CM_4</b>		<b>DEC</b>
	SCOS 2000 Display:	Decimal ( 0 = 0V, 4095 = +1V )	
	Validity at startup:	Invalid	



Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2 (12bits)
<u>Description:</u> Bias R command readback	
<b>327 DMC DEC_B ZB_CM_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal ( 0 = 0V, 4095 = +1V )
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2 (12bits)
<u>Description:</u> Zero Bias command readback	
<b>328 DMC DEC_B SR_RB_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> simulation register readback	
<b>329 DMC DEC_B TS_1_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (1 unit = 1 ohm)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Temperature Sensor 1 resistor value	
<b>330 DMC DEC_B TS_2_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (1 unit = 1 ohm)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Temperature Sensor 2 resistor value	
<b>331 DMC DEC_B RO_CO_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> readout ID, counts from readouts_per_ramp-1 to 0	
<b>332 DMC DEC_B RA_CO_4</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> ramp counter, increments until reset	
<b>333 DMC DECR_VDDD_1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2



<u>Description:</u> VDDD Voltage Power Supply Group 1		
<b>334</b>	<b>DMC DECR VSS 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VSS Voltage Power Supply Group 1		
<b>335</b>	<b>DMC DECR VGND 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> GND Voltage Power Supply Group 1		
<b>336</b>	<b>DMC DECR VCAN1 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Cascode N1 Voltage Power Supply Group 1		
<b>337</b>	<b>DMC DECR VCAN2 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Cascode N2 Voltage Power Supply Group 1		
<b>338</b>	<b>DMC DECR VOBIA1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Zero Bias Voltage Power Supply Group 1		
<b>339</b>	<b>DMC DECR VBI R 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Bias R Voltage Power Supply Group 1		
<b>340</b>	<b>DMC DECR VOV 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> OV reference Voltage Power Supply Group 1		
<b>341</b>	<b>DMC DECR VSCP 1</b>	<b>DEC</b>



SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
Cascode P Voltage Power Supply Group 1	
<b>342 DMC DECR VDDR 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
Current Mirror Voltage Power Supply Group 1	
<b>343 DMC DECR VDDA 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
VDDA Voltage Power Supply Group 1	
<b>344 DMC DECR VWELL 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
Well Voltage Power Supply Group 1	
<b>345 DMC DECR IDDA 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
VDDA Current Power Supply Group 1	
<b>346 DMC DECR IDDD 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
VDDD Current Power Supply Group 1	
<b>347 DMC DECR ISS 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
VSS Current Power Supply Group 1	
<b>348 DMC DECR IGND 1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON



Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> GND Current Power Supply Group 1	
<b>349 DMC DECR HEAT C</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (-32767 = -25mA, 32767 = 25mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Red DEC Heater Current	
<b>350 DMC DECR HEAT V</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (-32767 = -37.5V, 32767 = 37.5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Red DEC Heater Voltage	
<b>351 DMC DECR REF 0V 1</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (-32767 = -5V, 32767 = 5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> 0V Reference voltage for DEC Base Group 1 ADC	
<b>352 DMC DECR DCDC T1</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Decimal (0=0ohms, -32767 = 100Kohms)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> DC/DC temperature. The temperature can be computed with: $T(K) = 1/(a0 + a1*\ln(R) + a3*(\ln(R))^3)$ Where $a0 = 1,2835e-3$ $a1 = 2,3646e-4$ $a3 = 9,1416e-8$ <u>Limit checking :</u> Warning when T(K) out of [243.15, 343.15] Switch-off DMC when T(K) out of [218.15, 353.15]	
<b>353 DMC DECR SPARES</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	none
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>354 DMC DECR DCDC P5</b> <span style="float: right;"><b>DEC</b></span>	
SCOS 2000 Display:	Dec (-32767=-1700mA, 32767=1700mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Current from +5V power supply	



<b>355 DMC_DECR_AC_CUR</b>		<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-349.57mA, 32767=349.57mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> AC Current		
<b>356 DMC_DECR_TS_ST_1</b>		<b>DEC</b>
SCOS 2000 Display:	bit field	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2 (4bits)	
<u>Description:</u> Bit field showing the status of each of the detector array temperature sensors. 2bits for each sensors:		
00	Sensor inactive (measure is invalid)	
01	Measure has been done using Low Gain Current Measure	
10	Measure has been done using High Gain Current Measure	
11	Error in measure (measure is invalid)	
bits 0-1	<b>DMC_DECR_TS_1_ST_1</b>	temperature sensor 1 status
bits 2-3	<b>DMC_DECR_TS_2_ST_1</b>	temperature sensor 2 status
bits 4-15	<b>DMC_DECR_TS_SP_1</b>	spare
<b>357 DMC_DECR_CL_RO_1</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Number of CRE clocks per readout		
<b>358 DMC_DECR_RO_RA_1</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Number of readouts per ramp		
<b>359 DMC_DECR_CR_ST_1</b>		<b>DEC</b>
SCOS 2000 Display:	bit field	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> CRE group 1 status word. Note, bit 0-14 are command readback. Bit 15 is the real status of the CRE power.		
bit 0	<b>DMC_DECR_CR1_ST_POW</b>	1 = CRE power on command readback 0 = CRE power off command readback
bit 1	<b>DMC_DECR_CR1_ST_SEL</b>	1 = CRE Active 0 = CRE inactive
bit 2-3	<b>DMC_DECR_CR1_ST_CS</b>	Capacitor select read back 00 = 100fF 10 = 200fF 01 = 400fF





bit 4	<b>DMC_DECR_CR1_ST_CUR</b>	11 = 1pF 1 = curing 0 = not curing
bit 5	<b>DMC_DECR_CR1_ST_SP1</b>	Spare
bit 6	<b>DMC_DECR_CR1_ST_SIM</b>	1 = simulation mode 0 = nominal mode
bit 7	<b>DMC_DECR_CR1_ST_TE</b>	1 = temperature sensors enabled 0 = temperature sensors disabled
bit 8	<b>DMC_DECR_CR1_ST_NDS</b>	1 = Non destructive sync is 2 CRE Clock width 0 = Non destructive sync is 1 CRE Clock width
bit 9	<b>DMC_DECR_CR1_ST_RA</b>	1 = ramp simulation ON 0 = ramp simulation OFF
bit 10	<b>DMC_DECB_CR1_ST_FL</b>	1 = Flasher is ON 0 = Flasher is OFF
bit 11	<b>DMC_DECB_CR1_ST_HE</b>	1 = Heater is ON 0 = Heater is OFF
bit 12-14	<b>DMC_DECR_CR1_ST_SP2</b>	Spare
bit 15	<b>DMC_DECR_CR1_ST_CRPO W</b>	1 = CRE powered on 0 = CRE powered off
<b>360 DMC_DECR_BR_CM_1</b>		<b>DEC</b>
	SCOS 2000 Display:	Decimal ( 0 = 0V, 4095 = +1V )
	Validity at startup:	Invalid
	Validity during execution:	Valid only when Red DEC is powered ON
	Available in:	All HK modes
	Useful size (in bytes):	2 (12bits)
<u>Description:</u> Bias R command readback		
<b>361 DMC_DECR_ZB_CM_1</b>		<b>DEC</b>
	SCOS 2000 Display:	Decimal ( 0 = 0V, 4095 = +1V )
	Validity at startup:	Invalid
	Validity during execution:	Valid only when Red DEC is powered ON
	Available in:	All HK modes
	Useful size (in bytes):	2 (12bits)
<u>Description:</u> Zero Bias command readback		
<b>362 DMC_DECR_SR_RB_1</b>		<b>DEC</b>
	SCOS 2000 Display:	Decimal
	Validity at startup:	Invalid
	Validity during execution:	Valid only when Red DEC is powered ON
	Available in:	All HK modes
	Useful size (in bytes):	2
<u>Description:</u> simulation register readback		
<b>363 DMC_DECR_TS_1_1</b>		<b>DEC</b>
	SCOS 2000 Display:	Decimal (1 unit = 1 ohm)
	Validity at startup:	Invalid
	Validity during execution:	Valid only when Red DEC is powered ON
	Available in:	All HK modes
	Useful size (in bytes):	2
<u>Description:</u> Temperature Sensor 1 resistor value		
<b>364 DMC_DECR_TS_2_1</b>		<b>DEC</b>
	SCOS 2000 Display:	Decimal (1 unit = 1 ohm)
	Validity at startup:	Invalid
	Validity during execution:	Valid only when Red DEC is powered ON
	Available in:	All HK modes
	Useful size (in bytes):	2
<u>Description:</u>		



Temperature Sensor 2 resistor value		
<b>365</b>	<b>DMC_DECR_RO_CO_1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> readout ID, counts from readouts_per_ramp-1 to 0		
<b>366</b>	<b>DMC_DECR_RA_CO_1</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	4	
<u>Description:</u> ramp counter, increments until reset		
<b>367</b>	<b>DMC_DECR_VDDD_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VDD Voltage Power Supply Group 2		
<b>368</b>	<b>DMC_DECR_VSS_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> VSS Voltage Power Supply Group 2		
<b>369</b>	<b>DMC_DECR_VGND_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> GND Voltage Power Supply Group 2		
<b>370</b>	<b>DMC_DECR_VCAN1_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Cascode N1 Voltage Power Supply Group 2		
<b>371</b>	<b>DMC_DECR_VCAN2_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Cascode N2 Voltage Power Supply Group 2		
<b>372</b>	<b>DMC_DECR_VOBIAS2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)	



Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Zero Bias Voltage Power Supply Group 2	
<b>373 DMC_DECR_VBI_R_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Bias R Voltage Power Supply Group 2	
<b>374 DMC_DECR_VOV_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> OV reference Voltage Power Supply Group 2	
<b>375 DMC_DECR_VSCP_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Cascode P Voltage Power Supply Group 2	
<b>376 DMC_DECR_VDDR_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Current Mirror Voltage Power Supply Group 2	
<b>377 DMC_DECR_VDDA_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> VDDA Voltage Power Supply Group 2	
<b>378 DMC_DECR_VWELL_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -6V, 65535 = 6V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Well Voltage Power Supply Group 2	
<b>379 DMC_DECR_IDDA_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes



Useful size (in bytes):	2
<u>Description:</u> VDDA Current Power Supply Group 2	
<b>380 DMC_DECR_IDDD_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> VDDD Current Power Supply Group 2	
<b>381 DMC_DECR_ISS_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> VSS Current Power Supply Group 2	
<b>382 DMC_DECR_IGND_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (0 = -0.6mA, 65535 = 0.6mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> GND Current Power Supply Group 2	
<b>383 DMC_DECR_FLASH_C</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -25mA, 32767 = 25mA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Red DEC Flasher Current	
<b>384 DMC_DECR_FLASH_V</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -37.5V, 32767 = 37.5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Red DEC Flasher Voltage	
<b>385 DMC_DECR_REF_0V2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (-32767 = -5V, 32767 = 5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> 0V Reference voltage for DEC Base Group 4 ADC	
<b>386 DMC_DECR_DCDC_T2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (TBD)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> DC/DC temperature (not connected, spare sensor)	



<b>387</b>	<b>DMC_DECR_SPARE5B</b>	<b>DEC</b>
SCOS 2000 Display:	none	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>388</b>	<b>DMC_DECR_DCDC_P15</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-144mA, 32767=144mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Current from +15V power supply		
<b>389</b>	<b>DMC_DECR_DCDC_N15</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-144mA, 32767=144mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Current from -15V power supply		
<b>390</b>	<b>DMC_DECR_TS_ST_2</b>	<b>DEC</b>
SCOS 2000 Display:	bit field	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2 (4bits)	
<u>Description:</u> Bit field showing the status of each of the detector array temperature sensors. 2bits for each sensors: 00 Sensor inactive (measure is invalid) 01 Measure has been done using Low Gain Current Measure 10 Measure has been done using High Gain Current Measure 11 Error in measure (measure is invalid) bits 0-1 <b>DMC_DECR_TS_1_ST_2</b> temperature sensor 1 status bits 2-3 <b>DMC_DECR_TS_2_ST_2</b> temperature sensor 2 status bits 4-15 <b>DMC_DECR_TS_SP_2</b> spare		
<b>391</b>	<b>DMC_DECR_CL_RO_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Number of CRE clocks per readout		
<b>392</b>	<b>DMC_DECR_RO_RA_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Number of readouts per ramp		



393 DMC_DECR_CR_ST_2		DEC
SCOS 2000 Display:	bit field	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u>		
CRE group 2 status word. Note, bit 0-14 are command readback. Bit 15 is the real status of the CRE power.		
bit 0	<b>DMC_DECR_CR2_ST_POW</b>	1 = CRE power on command readback 0 = CRE power off command readback
bit 1	<b>DMC_DECR_CR2_ST_SEL</b>	1 = CRE Active 0 = CRE inactive
bit 2-3	<b>DMC_DECR_CR2_ST_CS</b>	Capacitor select read back 00 = 100fF 10 = 200fF 01 = 400fF 11 = 1pF
bit 4	<b>DMC_DECR_CR2_ST_CUR</b>	1 = curing 0 = not curing
bit 5	<b>DMC_DECR_CR2_ST_SP1</b>	Spare
bit 6	<b>DMC_DECR_CR2_ST_SIM</b>	1 = simulation mode 0 = nominal mode
bit 7	<b>DMC_DECR_CR2_ST_TE</b>	1 = temperature sensors enabled 0 = temperature sensors disabled
bit 8	<b>DMC_DECR_CR2_ST_NDS</b>	1 = Non destructive sync is 2 CRE Clock width 0 = Non destructive sync is 1 CRE Clock width
bit 9	<b>DMC_DECR_CR2_ST_RA</b>	1 = ramp simulation ON 0 = ramp simulation OFF
bit 10	<b>DMC_DECB_CR2_ST_FL</b>	1 = Flasher is ON 0 = Flasher is OFF
bit 11	<b>DMC_DECB_CR2_ST_HE</b>	1 = Heater is ON 0 = Heater is OFF
bit 12-14	<b>DMC_DECR_CR2_ST_SP2</b>	Spare
bit 15	<b>DMC_DECR_CR2_ST_CRPOW</b>	1 = CRE powered on 0 = CRE powered off
<b>394 DMC_DECR_BR_CM_2</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal ( 0 = 0V, 4095 = +1V )	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2 (12bits)	
<u>Description:</u>		
Bias R command readback		
<b>395 DMC_DECR_ZB_CM_2</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal ( 0 = 0V, 4095 = +1V )	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2 (12bits)	
<u>Description:</u>		
Zero Bias command readback		
<b>396 DMC_DECR_SR_RB_2</b>		<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u>		
simulation register readback		



<b>397</b>	<b>DMC_DECR_TS_1_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (1 unit = 1 ohm)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Temperature Sensor 1 resistor value (not connected)		
<b>398</b>	<b>DMC_DECR_TS_2_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal (1 unit = 1 ohm)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> Temperature Sensor 2 resistor value (not connected)		
<b>399</b>	<b>DMC_DECR_RO_CO_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> readout ID, counts from readouts_per_ramp-1 to 0		
<b>400</b>	<b>DMC_DECR_RA_CO_2</b>	<b>DEC</b>
SCOS 2000 Display:	Decimal	
Validity at startup:	Invalid	
Validity during execution:	Valid only when Red DEC is powered ON	
Available in:	All HK modes	
Useful size (in bytes):	4	
<u>Description:</u> ramp counter, increments until reset		
<b>401</b>	<b>DMC_SPARE4</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>402</b>	<b>DMC_SPARE5</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>403</b>	<b>DMC_SPARE6</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>404</b>	<b>DMC_FPU_T_SENS_ST</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Bit field	
Validity at startup:	Valid	



Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2 (14bits)
<u>Description:</u>	
Bit field showing the status of each of the FPU temperature sensors. 2bits for each sensors:	
00	Sensor inactive (measure is invalid)
01	Measure has been done using Low Gain Current Measure
10	Measure has been done using High Gain Current Measure
11	Error in measure (measure is invalid)
bits 0-1	<b>DMC_FPU_CH_TS_ST</b> Chopper temperature sensor status
bits 2-3	<b>DMC_FPU_CS_TS_ST</b> CS temperature sensor status
bits 4-5	<b>DMC_FPU_S1_TS_ST</b> FPU temperature sensor 1 status
bits 6-7	<b>DMC_FPU_S2_TS_ST</b> FPU temperature sensor 2 status
bits 8-9	<b>DMC_FPU_GR_TS_ST</b> Grating temperature sensor status
bits 10-11	<b>DMC_FPU_FWS_TS_ST</b> FW Spec temperature sensor status
bits 12-13	<b>DMC_FPU_FWP_TS_ST</b> FW Photo temperature sensor status
bits 14-15	<b>DMC_FPU_SPARE</b> Spare
<b>405</b>	<b>DMC_FW_SPEC_TEMP</b> <span style="float: right;"><b>FPU_TEMP</b></span>
SCOS 2000 Display:	Decimal (1 unit = 1ohm)
Validity at startup:	Invalid
Validity during execution:	Valid only when FPU T° measures enabled
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
FW SPEC Temperature sensor resistor value	
<b>406</b>	<b>DMC_FW_PHOT_TEMP</b> <span style="float: right;"><b>FPU_TEMP</b></span>
SCOS 2000 Display:	Decimal (1 unit = 1ohm)
Validity at startup:	Invalid
Validity during execution:	Valid only when FPU T° measures enabled
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
FW PHOTO Temperature sensor resistor value	
<b>407</b>	<b>DMC_CHOPPER_TEMP</b> <span style="float: right;"><b>FPU_TEMP</b></span>
SCOS 2000 Display:	Decimal (1 unit = 1ohm)
Validity at startup:	Invalid
Validity during execution:	Valid only when FPU T° measures enabled
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
Chopper Temperature sensor resistor value	
<b>408</b>	<b>DMC_GRATING_TEMP</b> <span style="float: right;"><b>FPU_TEMP</b></span>
SCOS 2000 Display:	Decimal (1 unit = 1ohm)
Validity at startup:	Invalid
Validity during execution:	Valid only when FPU T° measures enabled
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u>	
Grating Temperature sensor resistor value	
<b>409</b>	<b>DMC_PSC_V1</b> <span style="float: right;"><b>HK</b></span>
SCOS 2000 Display:	Decimal(+/-32767 = +/-5.2A)
Validity at startup:	Valid





Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Power Supply V1 current	
<b>410 DMC_PSC_V2</b> <span style="float: right;"><b>HK</b></span>	
SCOS 2000 Display:	Decimal(+/-32767 = +/-833mA)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Power Supply V2 current	
<b>411 DMC_PSC_V3</b> <span style="float: right;"><b>HK</b></span>	
SCOS 2000 Display:	Decimal(+/-32767 = +/-833mA)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Power Supply V3 current	
<b>412 DMC_PSC_V4</b> <span style="float: right;"><b>HK</b></span>	
SCOS 2000 Display:	Decimal(+/-32767 = +/-1.03A)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Power Supply V4 current	
<b>413 DMC_DCDC_TEMP</b> <span style="float: right;"><b>HK</b></span>	
SCOS 2000 Display:	Decimal (0=0ohms, -32767 = 100Kohms)
Validity at startup:	Valid
Validity during execution:	Always valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Temperature of DMC DC/DC converters. The temperature can be computed with: $T(K) = 1/(a_0 + a_1 \cdot \ln(R) + a_3 \cdot (\ln(R))^3)$ Where $a_0 = 1,2835e-3$ $a_1 = 2,3646e-4$ $a_3 = 9,1416e-8$	
<u>Limit checking :</u> Warning when T(K) out of [273.15, 343.15] (in raw values: [-287, -5350]) Switch-off DMC when T(K) > 353.15 (in raw values: <-206)	
<b>414 DMC_DSP_TEMP</b> <span style="float: right;"><b>HK</b></span>	
SCOS 2000 Display:	Decimal (0=0ohms, -32767 = 200Kohms)
Validity at startup:	Valid
Validity during execution:	Always valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> DMC DSP temperature. The temperature can be computed with: $T(K) = 1/(a_0 + a_1 \cdot \ln(R) + a_3 \cdot (\ln(R))^3)$ Where $a_0 = 8,79425e-4$ $a_1 = 2,46538e-4$ $a_3 = 1,16987e-7$ Note that the maximum resistor value DMC can measure is 100kOhms	
<u>Limit checking :</u> Warning when T(K) out of [273.15, 353.15] (in raw values: [-363, -7270])	



Switch-off DMC when T(K) > 373.15 (in raw values: <-205)	
<b>415 DMC_SPARE10</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>416 DMC_SPARE11</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>417 DMC_SPARE12</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>418 DMC_SPARE13</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>419 DMC_SPU_PSU_P15V</b>	<b>SPU_HK</b>
SCOS 2000 Display:	Decimal(+/-32767 = +/-50V)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> SPU PSU +15V	
<b>420 DMC_SPU_SWL_TEMP</b>	<b>SPU_HK</b>
SCOS 2000 Display:	Decimal (0=0ohms, -32767 = 200Kohms)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> SPU SWL DSP board temperature. The temperature can be computed with: $T(K) = 1/(a0 + a1*\ln(R) + a3*(\ln(R))^3)$ Where $a0 = 8,79425e-4$ $a1 = 2,46538e-4$ $a3 = 1,16987e-7$	
<b>421 DMC_SPU_LWL_TEMP</b>	<b>SPU_HK</b>
SCOS 2000 Display:	Decimal (0=0ohms, -32767 = 200Kohms)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2



<u>Description:</u> SPU LWL DSP board temperature. The temperature can be computed with: $T(K) = 1/(a0 + a1*\ln(R) + a3*(\ln(R)^3))$ Where $a0 = 8,79425e-4$ $a1 = 2,46538e-4$ $a3 = 1,16987e-7$		
<b>422</b>	<b>DMC_SPU_PS_TEMP</b>	<b>SPU_HK</b>
SCOS 2000 Display:	Decimal (0=0ohms, -32767 = 200Kohms)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> SPU Power supply temperature sensor. The temperature can be computed with: $T(K) = 1/(a0 + a1*\ln(R) + a3*(\ln(R)^3))$ Where $a0 = 8,79425e-4$ $a1 = 2,46538e-4$ $a3 = 1,16987e-7$		
<b>423</b>	<b>DMC_SPU_VCC_CUR</b>	<b>SPU_HK</b>
SCOS 2000 Display:	Decimal(0 = 0mA, 32767 = 6.66A)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> SPU 5V power supply current		
<b>424</b>	<b>DMC_SPU_VCC_VOL</b>	<b>SPU_HK</b>
SCOS 2000 Display:	Decimal(-32767 = -12.5V, 0 = 0V, 32767 = 12.5V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> SPU 5V power supply voltage		
<b>425</b>	<b>DMC_SPU_VP_CUR</b>	<b>SPU_HK</b>
SCOS 2000 Display:	Decimal(-32767 = -180mA, 0 = 0mA, 32767 = 180mA)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> SPU 15V power supply current		
<b>426</b>	<b>DMC_FPU_T1_T</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal (1 unit = 1ohm)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when FPU T° measures enabled	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> FPU Internal temperature sensor 1 resistor value		
<b>427</b>	<b>DMC_FPU_T2_T</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal (1 unit = 1ohm)	
Validity at startup:	Invalid	
Validity during execution:	Valid only when FPU T° measures enabled	
Available in:	All HK modes	
Useful size (in bytes):	2	
<u>Description:</u> FPU Internal temperature sensor 2 resistor value		
<b>428</b>	<b>DMC_REF_VOLT_OV</b>	<b>HK</b>



SCOS 2000 Display:	Decimal(-32767 = -10V, 0 = 0V, 32767 = 10V)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Internal Reference voltage (0V)	
<b>429 DMC_CAL_SRC_TEMP</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal (1 unit = 1ohm)
Validity at startup:	Invalid
Validity during execution:	Valid only when FPU T° measures enabled
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Calibration Source 1 housing temperature sensor resistor value. Note, if you are using redundant DMC, this value is the CS 2 temperature sensor resistor value	
<b>430 DMC_REF_VOLT_5V</b>	<b>HK</b>
SCOS 2000 Display:	Decimal(-32767 = -10V, 0 = 0V, 32767 = 10V)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> Internal Reference voltage (5V)	
<b>431 DMC_SPARE16</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>432 DMC_SPARE17</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>433 DMC_CUSTOM_ENT_1</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software. By default, this entry is referencing the CRDCCP	
<b>434 DMC_CUSTOM_ENT_2</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.	



<b>435</b>	<b>DMC_CUSTOM_ENT_3</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	4	
<u>Description:</u>		
These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.		
<b>436</b>	<b>DMC_CUSTOM_ENT_4</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	4	
<u>Description:</u>		
These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.		
<b>437</b>	<b>DMC_CUSTOM_ENT_5</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	4	
<u>Description:</u>		
These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.		
<b>438</b>	<b>DMC_CUSTOM_ENT_6</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	4	
<u>Description:</u>		
These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.		
<b>439</b>	<b>DMC_CUSTOM_ENT_7</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	4	
<u>Description:</u>		
These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.		
<b>440</b>	<b>DMC_CUSTOM_ENT_8</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	
Useful size (in bytes):	4	
<u>Description:</u>		
These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.		
<b>441</b>	<b>DMC_CUSTOM_ENT_9</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	All HK modes	



Useful size (in bytes):	4
<b>Description:</b> These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.	
<b>442 DMC_CUSTOM_ENT10</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<b>Description:</b> These entries are customisable by configuring the Custom Hk Configuration Table. By this way, we can easily have additional Hk measures that were not foreseen when implementing the onboard software.	
<b>443 DMC_DET_SIM_STAT</b>	<b>OBSW</b>
SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (25bits)
<b>Description:</b> Detector Simulator task status.	
bits 0-15 <b>DMC_DSIM_ERROR</b>	Error code
bit 16 <b>DMC_DSIM_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17 <b>DMC_DSIM_TASK_WR</b>	1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18 <b>DMC_DSIM_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19 <b>DMC_DSIM_SPARE1A</b>	Spare
bit 20 <b>DMC_DSIM_B_SIMUL</b>	1 = Simulating Blue DEC 0 = Not simulating Blue DEC
bit 21 <b>DMC_DSIM_R_SIMUL</b>	1 = Simulating Red DEC 0 = Not simulating Red DEC
bit 22 <b>DMC_DSIM_BOL_SIM</b>	1 = Simulating BOLC 0 = Not simulating BOLC
bit 23 <b>DMC_DSIM_SPARE1B</b>	Spare
bit 24 <b>DMC_DSIM_TIME</b>	1 = using simulated timing (the detector simulator is running and generating the timing) 0 = using real timing (replaces the science data received from DEC/BOLC by simulated readouts)
bits 25-31 <b>DMC_DSIM_SPARE7</b>	Spare
<b>444 DMC_DET_SIM_PER</b>	<b>OBSW</b>
SCOS 2000 Display:	Decimal (ms)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<b>Description:</b> Detector simulator period	
<b>445 DMC_CS1_RES_VALUE</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (1 unit = 100µohms)
Validity at startup:	Invalid
Validity during execution:	Valid only when CS1 is switched on



Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> CS1 current resistor value	
<b>446 DMC_CS1_OUTPUT</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -10V, 32767 = 10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when CS1 is switched on
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> CS1 controller commanded output voltage	
<b>447 DMC_CS2_RES_VALUE</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (1 unit = 100µohms)
Validity at startup:	Invalid
Validity during execution:	Valid only when CS2 is switched on
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> CS2 current resistor value	
<b>448 DMC_CS2_OUTPUT</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -10V, 32767 = 10V)
Validity at startup:	Valid
Validity during execution:	Valid only when CS2 is switched on
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> CS2 controller commanded output voltage	
<b>449 DMC_BOLC_STATUS</b>	<b>BOLC</b>
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	2
<u>Description:</u> BOLC Status word contained in the last packet received before HK sampling	
<b>450 DMC_BSPU_TR_MODE</b>	<b>SPU</b>
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> Blue Spu Transmission Mode	
<b>451 DMC_RSPU_TR_MODE</b>	<b>SPU</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> Red Spu Transmission Mode	
<b>452 DMC_GRAT_OUTPUT</b>	<b>GRAT</b>
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Valid only while Grating controller is enabled
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u>	



The commanded current output computed by the grating servo loop. (32767 = 555 mA and -32767 = -555 mA)

<b>453 DMC_OBT_COUNT</b>	<b>OBSW</b>
SCOS 2000 Display:            Decimal Validity at startup:           Valid Validity during execution:    Always Valid Available in:                  All HK modes Useful size (in bytes):       4	
<u>Description:</u> A counter which counts the OBT. This is the counter that is included in photometry packet header	
<b>454 DMC_MIM_ST</b>	<b>OBSW</b>
SCOS 2000 Display:           Hexadecimal Validity at startup:           Valid Validity during execution:    Always Valid Available in:                  All HK modes Useful size (in bytes):       4	
<u>Description:</u> The MIM extension board status word. Bit field TBD.	
<b>455 DMC_DM_SF_IND</b>	<b>OBSW</b>
SCOS 2000 Display:           Decimal Validity at startup:           Valid Validity during execution:    Always Valid Available in:                  All HK modes Useful size (in bytes):       1	
<u>Description:</u> DMC Data Memory Single Failure Index : See section 'Detecting memory errors'	
<b>456 DMC_PM_SF_IND</b>	<b>OBSW</b>
SCOS 2000 Display:           Decimal Validity at startup:           Valid Validity during execution:    Always Valid Available in:                  All HK modes Useful size (in bytes):       1	
<u>Description:</u> DMC Program Memory Single Failure Index : See section 'Detecting memory errors'	
<b>457 DMC_DM_DF_IND</b>	<b>OBSW</b>
SCOS 2000 Display:           Decimal Validity at startup:           Valid Validity during execution:    Always Valid Available in:                  All HK modes Useful size (in bytes):       1	
<u>Description:</u> DMC Data Memory Double Failure Index : See section 'Detecting memory errors'	
<b>458 DMC_PM_DF_IND</b>	<b>OBSW</b>
SCOS 2000 Display:           Decimal Validity at startup:           Valid Validity during execution:    Always Valid Available in:                  All HK modes Useful size (in bytes):       1	
<u>Description:</u> DMC Program Memory Double Failure Index : See section 'Detecting memory errors'	
<b>459 DMC_CS1_TARGET</b>	<b>CS</b>
SCOS 2000 Display:           Decimal (1 unit = 100µohms) Validity at startup:           Invalid Validity during execution:    Valid only when CS1 is switched on Available in:                  All HK modes	





Useful size (in bytes):	4
<u>Description:</u> CS1 target resistor value	
<b>460 DMC_CS2_TARGET</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (1 unit = 100µohms)
Validity at startup:	Invalid
Validity during execution:	Valid only when CS2 is switched on
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> CS2 target resistor value	
<b>461 DMC_HK_CTRL_STAT</b>	<b>OBSW</b>
SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (19bits)
<u>Description:</u> Nominal HK Controller task status.	
bits 0-15 <b>DMC_HKCO_ERROR</b>	Error code
bit 16 <b>DMC_HKCO_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17 <b>DMC_HKCO_TASK_WR</b>	1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18 <b>DMC_HKCO_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bits 19-31 <b>DMC_HKCO_SPARE13</b>	Spare
<b>462 DMC_HK_DIAG_STAT</b>	<b>OBSW</b>
SCOS 2000 Display:	Bit Field (see description)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	All HK modes
Useful size (in bytes):	4 (21bits)
<u>Description:</u> Diagnostic HK Controller task status.	
bits 0-15 <b>DMC_HKD_ERROR</b>	Error code
bit 16 <b>DMC_HKD_TASK_AL</b>	1 = this task is running 0 = this task is not running
bit 17 <b>DMC_HKD_TASK_WR</b>	1 = Any error occurred in the controller, the error code is copied in bits 0-15. The bit is cleared after each HK acquisition (unless bit 18 is set) 0 = No error in this task
bit 18 <b>DMC_HKD_ERR_NS</b>	1 = Error not signaled yet. (This bit is used internally to make sure that all errors are signaled in HK packets at least once). If this bit is set, the error will also appear in the next HK packet 0 = No error waiting to be signaled
bit 19 <b>DMC_HKD_SPARE1</b>	Spare
bit 20 <b>DMC_HKD_DIAGMODE</b>	1 = Currently acquiring diagnostic HK 0 = no diagnostic HK acquired now
bits 21-31 <b>DMC_HKD_SPARE11</b>	Spare
<b>463 DMC_HK_DIAG_PERI</b>	<b>OBSW</b>
SCOS 2000 Display:	Decimal (units = ms)
Validity at startup:	Valid
Validity during execution:	Always Valid



Available in:	All HK modes
Useful size (in bytes):	4
<b>Description:</b> Period of acquisition of diagnostic housekeeping. When diagnostic hk is synchronized on a detector, the period is 0.	
<b>464 DMC_LAST_ERR_ID</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Decimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	1 (4bits)
<b>Description:</b> Last Error Buffer Index : Indicates the current position in the Last Errors Buffer. Index is 0 based and indicates the next position to be filled. (Note: index 0 is DMC_LAST_ER_BF1)	
<b>465 DMC_LAST_ER_BF1</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<b>Description:</b> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>466 DMC_LAST_ER_BF2</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<b>Description:</b> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>467 DMC_LAST_ER_BF3</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<b>Description:</b> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>468 DMC_LAST_ER_BF4</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<b>Description:</b> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>469 DMC_LAST_ER_BF5</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<b>Description:</b> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	



<b>470</b>	<b>DMC_LAST_ER_BF6</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Nominal HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).		
<b>471</b>	<b>DMC_LAST_ER_BF7</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Nominal HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).		
<b>472</b>	<b>DMC_LAST_ER_BF8</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Nominal HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).		
<b>473</b>	<b>DMC_LAST_ER_BF9</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Nominal HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).		
<b>474</b>	<b>DMC_LAST_ER_BF10</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Nominal HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).		
<b>475</b>	<b>DMC_LAST_ER_BF11</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Nominal HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).		
<b>476</b>	<b>DMC_LAST_ER_BF12</b>	<b>OBSW</b>
SCOS 2000 Display:	Hexadecimal	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Nominal HK Only	



Useful size (in bytes):	2
<u>Description:</u> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>477 DMC_LAST_ER_BF13</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<u>Description:</u> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>478 DMC_LAST_ER_BF14</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<u>Description:</u> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>479 DMC_LAST_ER_BF15</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<u>Description:</u> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>480 DMC_LAST_ER_BF16</b> <span style="float: right;"><b>OBSW</b></span>	
SCOS 2000 Display:	Hexadecimal
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Nominal HK Only
Useful size (in bytes):	2
<u>Description:</u> Last Error Buffer : A 16 words circular buffer containing the last 16 errors generated by all the tasks. Each word contains 1 error codes (16 bits each).	
<b>481 BOLC_HK_197</b> <span style="float: right;"><b>BOLC</b></span>	
SCOS 2000 Display:	DISPLAY_HEX
Validity at startup:	AVM : Valid, Further models : invalid
Validity during execution:	AVM : Always valid. Further models : Valid only when BOLC is ON and the connection between DMC and BOLC is established
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> BOLC HK entry 197	
...	
<b>508 BOLC_HK_224</b> <span style="float: right;"><b>BOLC</b></span>	
SCOS 2000 Display:	DISPLAY_HEX
Validity at startup:	AVM : Valid, Further models : invalid
Validity during execution:	AVM : Always valid. Further models : Valid only when BOLC is ON and the connection between DMC and BOLC is established
Available in:	All HK modes
Useful size (in bytes):	4
<u>Description:</u> BOLC HK entry 224	



### 5.3.3 List of Diagnostic housekeeping Measure

<b>512</b>	<b>DMC_GR_IND_READ</b>		<b>GRAT</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Invalid	
	Validity during execution:	Valid only while Grating is powered on	
	Available in:	Diag HK Only	
	Useful size (in bytes):	4	
<u>Description:</u>			
The position as read by the inductosyn (before all transformation and correction by software)			
<b>513</b>	<b>DMC_GR_TURN_CAR</b>		<b>GRAT</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Invalid	
	Validity during execution:	Valid only while Grating is powered on	
	Available in:	Diag HK Only	
	Useful size (in bytes):	4	
<u>Description:</u>			
Inductosyn big jumps (on complete turn) carry counter			
<b>514</b>	<b>DMC_GR_PER_CAR</b>		<b>GRAT</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Invalid	
	Validity during execution:	Valid only while Grating is powered on	
	Available in:	Diag HK Only	
	Useful size (in bytes):	4	
<u>Description:</u>			
Inductosyn small jumps (one period) carry counter			
<b>515</b>	<b>DMC_GR_DEG_POS</b>		<b>GRAT</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Invalid	
	Validity during execution:	Valid only while Grating is powered on	
	Available in:	Diag HK Only	
	Useful size (in bytes):	4	
<u>Description:</u>			
Grating absolute position in degraded mode. Note: this variable is updated only when entering the degraded mode (if grating is switched on) and during a degraded move. Unit = index in the sine table (0 - 16383), 1 unit = 13.18 arcsec			
<b>516</b>	<b>DMC_SPARE_DIAG7</b>		<b>SPARE</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Invalid	
	Validity during execution:	Always Invalid	
	Available in:	Diag HK Only	
	Useful size (in bytes):	2	
<u>Description:</u>			
spare			
<b>517</b>	<b>DMC_SPARE_DIAG8</b>		<b>SPARE</b>
	SCOS 2000 Display:	Decimal	
	Validity at startup:	Invalid	
	Validity during execution:	Always Invalid	
	Available in:	Diag HK Only	
	Useful size (in bytes):	2	
<u>Description:</u>			
spare			
<b>518</b>	<b>DMC_SPARE_DIAG1</b>		<b>SPARE</b>
	SCOS 2000 Display:	Decimal	



Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>519 DMC_SPARE_DIAG2 SPARE</b>	
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>520 DMC_SPARE_DIAG3 SPARE</b>	
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>521 DMC_SPARE_DIAG4 SPARE</b>	
SCOS 2000 Display:	Decimal
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>522 DMC_CS1_VOLT_0V CS</b>	
SCOS 2000 Display:	Decimal (-32767 = -6.25V, 32767 = 6.25V)
Validity at startup:	Invalid
Validity during execution:	Valid only while CS1 is powered on
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> 0V reference	
<b>523 DMC_CS1_VOLT_N5V CS</b>	
SCOS 2000 Display:	Decimal (-32767 = -6.25V, 32767 = 6.25V)
Validity at startup:	Invalid
Validity during execution:	Valid only while CS1 is powered on
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> -4V reference	
<b>524 DMC_CS1_VOLT_P5V CS</b>	
SCOS 2000 Display:	Decimal (-32767 = -6.25V, 32767 = 6.25V)
Validity at startup:	Invalid
Validity during execution:	Valid only while CS1 is powered on
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> +4V reference	
<b>525 DMC_CS1_VOLT_DAC_OUT CS</b>	
SCOS 2000 Display:	Decimal (-32767 = -12.5V, 32767 = 12.5V)
Validity at startup:	Invalid
Validity during execution:	Valid only while CS1 is powered on
Available in:	Diag HK Only



Useful size (in bytes):	2
<u>Description:</u> Calibration source DAC output = measured real output voltage to calibration source.	
<b>526 DMC_CS1_VOLT_SG</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -2.5V, 32767 = 2.5V)
Validity at startup:	Invalid
Validity during execution:	Valid only while CS1 is powered on
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Small Gain sensor voltage	
<b>527 DMC_CS1_VOLT_BG</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -25mV, 32767 = 25mV)
Validity at startup:	Invalid
Validity during execution:	Valid only while CS1 is powered on
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Big Gain sensor voltage	
<b>528 DMC_CS1_CUR_SG</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -25mA, 32767 = 25mA)
Validity at startup:	Invalid
Validity during execution:	Valid only while CS1 is powered on
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Small Gain sensor current. Note, this value is coming from the voltage measured on a 100ohm reference resistor. If this resistor is not exactly 100 ohms, the conversion must be adjusted	
<b>529 DMC_CS1_CUR_BG</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -250µA, 32767 = 250µA)
Validity at startup:	Invalid
Validity during execution:	Valid only while CS1 is powered on
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Big Gain sensor current. Note, this value is coming from the voltage measured on a 100ohm reference resistor. If this resistor is not exactly 100 ohms, the conversion must be adjusted	
<b>530 DMC_CS1_SPARE1</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>531 DMC_CS1_SPARE2</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> spare	
<b>532 DMC_CS1_SPARE3</b>	<b>SPARE</b>
SCOS 2000 Display:	0
Validity at startup:	Invalid
Validity during execution:	Always Invalid
Available in:	Diag HK Only
Useful size (in bytes):	2



<u>Description:</u> spare		
<b>533</b>	<b>DMC_CS1_SPARE4</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>534</b>	<b>DMC_CS1_SPARE5</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>535</b>	<b>DMC_CS1_SPARE6</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>536</b>	<b>DMC_CS1_SPARE7</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>537</b>	<b>DMC_CS1_SPARE8</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>538</b>	<b>DMC_CS2_VOLT_0V</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -6.25V, 32767 = 6.25V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only while CS2 is powered on	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> 0V reference		
<b>539</b>	<b>DMC_GR_IND_SINE</b>	<b>GRAT</b>
SCOS 2000 Display:	Decimal (-32767 = -5V, 32767 = 5V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Grating inductosyn sine amplitude (zero to peak) Note : this is not directly a measurement of the amplitude, conversion using calibration is needed.		





<b>540</b>	<b>DMC_GR_IND_COS</b>	<b>GRAT</b>
SCOS 2000 Display:	Decimal (-32767 = -5V, 32767 = 5V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Grating inductosyn cos amplitude (zero to peak)		
Note : this is not directly a measurement of the amplitude, conversion using calibration is needed.		
<b>541</b>	<b>DMC_CS2_VOLT_DAC_OUT</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -12.5V, 32767 = 12.5V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only while CS2 is powered on	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Calibration source DAC output = measured real output voltage to calibration source.		
<b>542</b>	<b>DMC_CS2_VOLT_SG</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -2.5V, 32767 = 2.5V)	
Validity at startup:	Invalid	
Validity during execution:	Valid only while CS2 is powered on	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Small Gain sensor voltage		
<b>543</b>	<b>DMC_CS2_VOLT_BG</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -25mV, 32767 = 25mV)	
Validity at startup:	Invalid	
Validity during execution:	Valid only while CS2 is powered on	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Big Gain sensor voltage		
<b>544</b>	<b>DMC_CS2_CUR_SG</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -25mA, 32767 = 25mA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only while CS2 is powered on	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Small Gain sensor current. Note, this value is coming from the voltage measured on a 100ohm reference resistor. If this resistor is not exactly 100 ohms, the conversion must be adjusted		
<b>545</b>	<b>DMC_CS2_CUR_BG</b>	<b>CS</b>
SCOS 2000 Display:	Decimal (-32767 = -250µA, 32767 = 250µA)	
Validity at startup:	Invalid	
Validity during execution:	Valid only while CS2 is powered on	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Big Gain sensor current. Note, this value is coming from the voltage measured on a 100ohm reference resistor. If this resistor is not exactly 100 ohms, the conversion must be adjusted		
<b>546</b>	<b>DMC_GR_LL1_CUR</b>	<b>SPARE</b>
SCOS 2000 Display:	Decimal (+/-32767 = +/-502mA)	
Validity at startup:	Valid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u>		
Grating Launch Lock Motor 1 Current		



<b>547</b>	<b>DMC_CS2_SPARE2</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>548</b>	<b>DMC_CS2_SPARE3</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>549</b>	<b>DMC_CS2_SPARE4</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>550</b>	<b>DMC_CS2_SPARE5</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>551</b>	<b>DMC_CS2_SPARE6</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>552</b>	<b>DMC_CS2_SPARE7</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>553</b>	<b>DMC_CS2_SPARE8</b>	<b>SPARE</b>
SCOS 2000 Display:	0	
Validity at startup:	Invalid	
Validity during execution:	Always Invalid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> spare		
<b>554</b>	<b>DMC_PSU_5V_VOLT</b>	<b>HK</b>
SCOS 2000 Display:	Decimal(-32767 = -10V, 0 = 0V, 32767 = 10V)	
Validity at startup:	Valid	



Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Power Supply Voltage (+5V)	
<b>555 DMC_FWSPEC_POS_A</b>	<b>FW</b>
SCOS 2000 Display:	Decimal(-32767 = -102mV, 0 = 0mV, 32767 = 102mV)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> FW Spec Position sensor A	
<b>556 DMC_FW_GR_VMOTA</b>	<b>FW</b>
SCOS 2000 Display:	Decimal(+/-32767 = +/-30V for FM and +/- 10V for QM)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> FW-Grat Amplifier voltage phase A	
<b>557 DMC_CHOP_VA</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal(+/-32767 = +/-19.2V)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Chopper amplifier voltage side A	
<b>558 DMC_PSU_P15V_V</b>	<b>HK</b>
SCOS 2000 Display:	Decimal(-32767 = -20V, 0 = 0V, 32767 = 20V)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Power Supply Voltage (+15V)	
<b>559 DMC_FWSPEC_POS_B</b>	<b>FW</b>
SCOS 2000 Display:	Decimal(-32767 = -102mV, 0 = 0mV, 32767 = 102mV)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> FW Spec Position sensor B	
<b>560 DMC_FW_GR_IMOTA</b>	<b>GRAT_FW</b>
SCOS 2000 Display:	Decimal(+/-32767 = +/-554mA)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> FW-Grat Amplifier current phase A (note: not read on EM hardware)	
<b>561 DMC_CHOP_IA</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal(+/-32767 = -147mA)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2



<u>Description:</u> Chopper amplifier current side A (note: not read on EM hardware)		
<b>562</b>	<b>DMC PSU N15V V</b>	<b>HK</b>
SCOS 2000 Display:	Decimal(-32767 = -20V, 0 = 0V, 32767 = 20V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Power Supply Voltage (-15V)		
<b>563</b>	<b>DMC FWPHOT POS A</b>	<b>FW</b>
SCOS 2000 Display:	Decimal(-32767 = -102mV, 0 = 0mV, 32767 = 102mV)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> FW Photo Position sensor A		
<b>564</b>	<b>DMC FW GR VMOTB</b>	<b>GRAT FW</b>
SCOS 2000 Display:	Decimal(+/-32767 = +/-30V for FM and +/- 10V for QM)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> FW-Grat Amplifier voltage phase B		
<b>565</b>	<b>DMC CHOP VB</b>	<b>CHOP</b>
SCOS 2000 Display:	Decimal(+/-32767 = -19.2V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Chopper amplifier voltage side B		
<b>566</b>	<b>DMC ADC VOLT</b>	<b>HK</b>
SCOS 2000 Display:	Decimal(-32767 = -10V, 0 = 0V, 32767 = 10V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> ADC Voltage (+2.5V)		
<b>567</b>	<b>DMC FW GR IMOTB</b>	<b>GRAT FW</b>
SCOS 2000 Display:	Decimal(+/-32767 = +/-554mA)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> FW-Grat amplifier current phase B (note: not read on EM hardware)		
<b>568</b>	<b>DMC PSU P28V V</b>	<b>HK</b>
SCOS 2000 Display:	Decimal(-32767 = -20V, 0 = 0V, 32767 = 20V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Power Supply Voltage (+28V). Note, the 28V is actually made of a -14V and a +14V. The +14V is measured here.		



<b>569</b>	<b>DMC_FWPHOT_POS_B</b>	<b>FW</b>
SCOS 2000 Display:	Decimal(-32767 = -102mV, 0 = 0mV, 32767 = 102mV)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> FW Photo Position sensor B		
<b>570</b>	<b>DMC_GR_LL2_CUR</b>	<b>GRAT</b>
SCOS 2000 Display:	Decimal (+/-32767 = +/-502mA)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Grating Launch Lock Motor 2 Current		
<b>571</b>	<b>DMC_T_SE_SRC1_LG</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal(-32767 = -113µA, 0 = 0µA, 32767 = 113µA)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Current through the first chain of FPU T° sensors (low gain)		
<b>572</b>	<b>DMC_T_SE_SRC1_HG</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal(-32767 = -4.58µA, 0 = 0µA, 32767 = 4.58µA)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Current through the first chain of FPU T° sensors (high gain)		
<b>573</b>	<b>DMC_T_SE_SRC1_V1</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal(-32767 = -10V, 0 = 0V, 32767 = 10V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Voltage applied to the first chain of FPU T° sensors (negative)		
<b>574</b>	<b>DMC_T_SE_SRC1_V2</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal(+/-32767 = +/-9.97V)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Voltage applied to the second chain of FPU T° sensors (positive)		
<b>575</b>	<b>DMC_T_SE_SRC2_LG</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal(-32767 = -113µA, 0 = 0µA, 32767 = 113µA)	
Validity at startup:	Valid	
Validity during execution:	Always Valid	
Available in:	Diag HK Only	
Useful size (in bytes):	2	
<u>Description:</u> Current through the second chain of FPU T° sensors (low gain)		
<b>576</b>	<b>DMC_T_SE_SRC2_HG</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal(-32767 = -4.58µA, 0 = 0µA, 32767 = 4.58µA)	
Validity at startup:	Valid	



Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Current through the second chain of FPU T° sensors (high gain)	
<b>577 DMC T_SE_SRC2_V1</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal(+/-32767 = -9.97V)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Voltage applied to the second chain of FPU T° sensors (negative)	
<b>578 DMC T_SE_SRC2_V2</b>	<b>FPU_TEMP</b>
SCOS 2000 Display:	Decimal(+/-32767 = -9.97V)
Validity at startup:	Valid
Validity during execution:	Always Valid
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Voltage applied to the first chain of FPU T° sensors (positive)	
<b>579 DMC DB_TS12CBS_3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (32767 = -2.222µA, 32767 = 2.222µA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Current in temperature sensors 1 and 2 Power Supply Group 3. Same measure as next one but with a bigger scale.	
<b>580 DMC DB_TS12CSS_3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767 = -55.555µA, 32767 = 55.555µA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Current in temperature sensors 1 and 2 Power Supply Group 3. Same measure as previous one but with a smaller scale. If value is out of [-2µA, 2µA], use the other value.	
<b>581 DMC DEC_B_TS1_V_3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767 = -7.143mV, 32767 = 7.143mV)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Voltage in temperature sensor 1 Power Supply Group 3	
<b>582 DMC DEC_B_TS2_V_3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767 = -7.143mV, 32767 = 7.143mV)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Voltage in temperature sensor 2 Power Supply Group 3	
<b>583 DMC DEC_B_PS_GEN3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767 = -5V, 32767 = +5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON



Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u>	
Sensor Generator (+) Power Supply Group 3	
<b>584 DMC_DECBS_NS_GEN3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-5V, 32767=+5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u>	
Sensor Generator (-) Power Supply Group 3	
<b>585 DMC_DECBS_D5V_3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u>	
Digital +5V	
<b>586 DMC_DECBS_D2_5V_3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-5V, 32767=+5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u>	
Digital +2.5V	
<b>587 DMC_DECBS_A5V_3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u>	
Analog +5V	
<b>588 DMC_DECBS_R5V_3</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u>	
Reference +5V	
<b>589 DMC_DB_TS12CBS_4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (32767 = -2.222µA, 32767 = 2.222µA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u>	
Current in temperature sensors 1 and 2 Power Supply Group 4. Same measure as next one but with a bigger scale.	
<b>590 DMC_DB_TS12CSS_4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767 = -55.555µA, 32767 = 55.555µA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2



<u>Description:</u> Current in temperature sensors 1 and 2 Power Supply Group 4. Same measure as previous one but with a smaller scale. If value is out of [-2µA, 2µA], use the other value.	
<b>591 DMC_DECB_TS1_V_4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767= -7.143mV, 32767 = 7.143mV)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Voltage in temperature sensor 1 Power Supply Group 4	
<b>592 DMC_DECB_TS2_V_4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767= -7.143mV, 32767 = 7.143mV)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Voltage in temperature sensor 2 Power Supply Group 4	
<b>593 DMC_DECB_PS_GEN4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-5V, 32767=+5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Sensor Generator (+) Power Supply Group 4	
<b>594 DMC_DECB_NS_GEN4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-5V, 32767=+5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Sensor Generator (-) Power Supply Group 4	
<b>595 DMC_DB_DC_P15V_4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-25V, 32767=+25V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> DC/DC +15V	
<b>596 DMC_DB_DC_N15V_4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-25V, 32767=+25V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> DC/DC -15V	
<b>597 DMC_DECB_A5V_4</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Blue DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Analog +5V	





<b>598 DMC_DECB_R5V_4</b>	<b>DEC</b>
SCOS 2000 Display: Dec (-32767=-10V, 32767=+10V) Validity at startup: Invalid Validity during execution: Valid only when Blue DEC is powered ON Available in: Diag HK Only Useful size (in bytes): 2	
<u>Description:</u> Reference +5V	
<b>599 DMC_DR_TS12CBS_1</b>	<b>DEC</b>
SCOS 2000 Display: Dec (32767 = -2.222µA, 32767 = 2.222µA) Validity at startup: Invalid Validity during execution: Valid only when Red DEC is powered ON Available in: Diag HK Only Useful size (in bytes): 2	
<u>Description:</u> Current in temperature sensors 1 and 2 Power Supply Group 1. Same measure as next one but with a bigger scale.	
<b>600 DMC_DR_TS12CSS_1</b>	<b>DEC</b>
SCOS 2000 Display: Dec (-32767 = -55.555µA, 32767 = 55.555µA) Validity at startup: Invalid Validity during execution: Valid only when Red DEC is powered ON Available in: Nominal HK Only Useful size (in bytes): 2	
<u>Description:</u> Current in temperature sensors 1 and 2 Power Supply Group 1. Same measure as previous one but with a smaller scale. If value is out of [-2µA, 2µA], use the other value.	
<b>601 DMC_DECR_TS1_V_1</b>	<b>DEC</b>
SCOS 2000 Display: Dec (-32767= -7.143mV, 32767 = 7.143mV) Validity at startup: Invalid Validity during execution: Valid only when Red DEC is powered ON Available in: Nominal HK Only Useful size (in bytes): 2	
<u>Description:</u> Voltage in temperature sensor 1 Power Supply Group 1	
<b>602 DMC_DECR_TS2_V_1</b>	<b>DEC</b>
SCOS 2000 Display: Dec (-32767= -7.143mV, 32767 = 7.143mV) Validity at startup: Invalid Validity during execution: Valid only when Red DEC is powered ON Available in: Nominal HK Only Useful size (in bytes): 2	
<u>Description:</u> Voltage in temperature sensor 2 Power Supply Group 1	
<b>603 DMC_DECR_PS_GEN1</b>	<b>DEC</b>
SCOS 2000 Display: Dec (-32767=-5V, 32767=+5V) Validity at startup: Invalid Validity during execution: Valid only when Red DEC is powered ON Available in: Diag HK Only Useful size (in bytes): 2	
<u>Description:</u> Sensor Generator (+) Power Supply Group 1	
<b>604 DMC_DECR_NS_GEN1</b>	<b>DEC</b>
SCOS 2000 Display: Dec (-32767=-5V, 32767=+5V) Validity at startup: Invalid Validity during execution: Valid only when Red DEC is powered ON Available in: Diag HK Only Useful size (in bytes): 2	
<u>Description:</u> Sensor Generator (-) Power Supply Group 1	
<b>605 DMC_DECR_D5V_1</b>	<b>DEC</b>



SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Digital +5V	
<b>606 DMC DECR D2_5V_1</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-5V, 32767=+5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Digital +2.5V	
<b>607 DMC DECR A5V_1</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Analog +5V	
<b>608 DMC DECR R5V_1</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Reference +5V	
<b>609 DMC DR TS12CBS_2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (32767 = -2.222µA, 32767 = 2.222µA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Current in temperature sensors 1 and 2 Power Supply Group 2. Same measure as next one but with a bigger scale.	
<b>610 DMC DR TS12CSS_2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767 = -55.555µA, 32767 = 55.555µA)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Current in temperature sensors 1 and 2 Power Supply Group 2. Same measure as previous one but with a smaller scale. If value is out of [-2µA, 2µA], use the other value.	
<b>611 DMC DECR TS1_V_2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767= -7.143mV, 32767 = 7.143mV)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Voltage in temperature sensor 1 Power Supply Group 2	
<b>612 DMC DECR TS2_V_2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767= -7.143mV, 32767 = 7.143mV)



Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Voltage in temperature sensor 2 Power Supply Group 2	
<b>613 DMC_DECR_PS_GEN2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-5V, 32767=+5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Sensor Generator (+) Power Supply Group 2	
<b>614 DMC_DECR_NS_GEN2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-5V, 32767=+5V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Sensor Generator (-) Power Supply Group 2	
<b>615 DMC_DR_DCDC_P15V_2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-25V, 32767=+25V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> DC/DC +15V	
<b>616 DMC_DR_DCDC_N15V_2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-25V, 32767=+25V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> DC/DC -15V	
<b>617 DMC_DECR_A5V_2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Analog +5V	
<b>618 DMC_DECR_R5V_2</b>	<b>DEC</b>
SCOS 2000 Display:	Dec (-32767=-10V, 32767=+10V)
Validity at startup:	Invalid
Validity during execution:	Valid only when Red DEC is powered ON
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Reference +5V	
<b>619 DMC_TS_FW_SPEC_V</b>	
SCOS 2000 Display:	Decimal (+/-32767=-14,54mV)
Validity at startup:	Valid
Validity during execution:	Spare
Available in:	Diag HK Only



Useful size (in bytes):	2
<u>Description:</u> FW SPEC temperature sensor voltage	
<b>620 DMC_TS_FW_PHOT_V</b>	
SCOS 2000 Display:	Decimal (+/-32767=-14,45mV)
Validity at startup:	Valid
Validity during execution:	Spare
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> FW PHOTO temperature sensor voltage	
<b>621 DMC_TS_GRAT_V</b>	
SCOS 2000 Display:	Decimal (+/-32767=-14,50mV)
Validity at startup:	Valid
Validity during execution:	Spare
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Grating temperature sensor voltage	
<b>622 DMC_TS_CHOP_V</b>	
SCOS 2000 Display:	Decimal (+/-32767=-14,51mV)
Validity at startup:	Valid
Validity during execution:	Spare
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> Chopper temperature sensor voltage	
<b>623 DMC_TS_FPU_T1_V</b>	
SCOS 2000 Display:	Decimal (+/-32767=-14,50mV)
Validity at startup:	Valid
Validity during execution:	Spare
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> FPU T1 temperature sensor voltage	
<b>624 DMC_TS_FPU_T2_V</b>	
SCOS 2000 Display:	Decimal (+/-32767=-14,55mV)
Validity at startup:	Valid
Validity during execution:	Spare
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> FPU T2 temperature sensor voltage	
<b>625 DMC_TS_BB_V</b>	
SCOS 2000 Display:	Decimal (+/-32767=-14,50mV)
Validity at startup:	Valid
Validity during execution:	Spare
Available in:	Diag HK Only
Useful size (in bytes):	2
<u>Description:</u> BB temperature sensor voltage	



## 5.4 Error Management

When an error occurs in any of the tasks of the DMC OBS, the following actions are performed:

- The error code is stored in the 16lsb of the task status word.
- The error code is stored in the 16lsb of the DMC\_SW\_GLOBAL\_ST and the bit17 is raised.
- The error code is stored in the DMC\_LAST\_ER\_BF array at the position given by DMC\_LAST\_ERR\_ID
- DMC\_LAST\_ERR\_ID is incremented.

The error codes are stored in the tasks status word and in DMC\_SW\_GLOBAL\_ST only during one HK packet (unless if the bit 18 is set, in this case, the error code can stay during 2 HK packets).

The DMC\_LAST\_ER\_BF is a circular buffer that contains the 16 last errors that have been signaled in DMC\_SW\_GLOBAL\_ST. The current position in the circular buffer is given by DMC\_LAST\_ERR\_ID that contains the next position to be filled.

### 5.4.1 Error code table

The table below presents all the error codes that may appear in the 16 LSB of the task status.

Note :

- Error codes (and the “Task in error” bit in the status of the task) are reset after each nominal housekeeping acquisition.
- The error codes are available in “error.h”.
- We make a difference between
  - general errors that can be caused by an external process (most of the errors); i.e. device not working properly, received a bad packet, ... General errors code have the form 0x??0?
  - internal errors are caused by the application itself (shall not appear once development is finished but, who knows ...); i.e internal bug, lack of resource, ... Internal errors code have the form 0x??1?

Error Code	Comment
0x0200	<b>ERR_LINK_SPU_BLUE</b> Any error occurred in relation with the spacewire link to the Blue SPU
0x0201	<b>ERR_LINK_SPU_RED</b> Any error occurred in relation with the spacewire link to the Red SPU
0x0202	<b>ERR_LINK_DPU</b>



	Any error occurred in relation with the spacewire link to the DPU
0x0203	<b>ERR_LINK_BOL</b> Any error occurred in relation with the spacewire link to the BOL
0x0204	<b>ERR_LINK_DEC_BLUE</b> Any error occurred in relation with the spacewire link to the Blue DEC
0x0205	<b>ERR_LINK_DEC_RED</b> Any error occurred in relation with the spacewire link to the Red DEC
0x0210	<b>ERR_SMCS_DRIVER_COULD_NOT_CREATE_TIMER</b> Internal error : Could not create the timer for the SMCS driver.
0x0300	<b>ERR_SEQUENCER_UNKNOWN_COMMAND</b> Sequencer tries to execute a command (trigger command or inside a sequence) with an invalid ID.
0x0301	<b>ERR_SEQUENCER_INVALID_PARAMETERS</b> Sequencer tries to execute a command (trigger command or inside a sequence) with invalid parameters.
0x0302	<b>ERR_SEQUENCER_COMMAND_NOT_AVAILABLE_IN_THIS_MODE</b> Sequencer tries to execute a trigger command while a sequence is being executed (and this command can not be executed during the execution of a sequence) or, inside a sequence, it tries to execute a command that is only available as a trigger command.
0x0303	<b>ERR_SEQUENCER_SYNC_TIME_OUT</b> Sequencer has been waiting too long for the synchronisation signal (timing signal issues when a ramp is finished (in spectroscopy) or when a readout arrives (in photometry)).
0x0304	<b>ERR_SEQUENCER_TOO_MANY_NESTED_LOOPS</b> Too many nested loops in a sequence (maximum is 5)
0x0305	<b>ERR_SEQUENCER_LOOP_END_OF_LOOP_MISMATCH</b> There are more END_OF_LOOP as LOOP commands in the sequence.
0x0306	<b>ERR_SEQUENCER_RELATIVE_SETTING_OUT_OF_RANGE</b> The sequencer tries to execute a command (trigger command or inside a sequence) with relative parameters (i.e. MOVE_GRATING_RELATIVE). The relative parameter sets the absolute parameter out of the accepted range.
0x0307	<b>ERR_SEQUENCER_COULD_NOT_EXECUTE_COMMAND</b> An error occurred while executing the command. Or, it was not possible to start the execution of this command in the current status of the OBS.
0x0310	<b>ERR_SEQUENCER_UNKNOWN_MESSAGE_TYPE</b> Internal error : Sequencer received an unknown message type on its FIFO.



0x0400	<b>ERR_DPU_RECEIVER_UNKNOWN_MSG_TYPE</b> The DPU receiver has received a unknown message format. Note that a NACK will be generated also.
0x0401	<b>ERR_DPU_RECEIVER_INVALID_ADDRESS</b> Invalid address in a memory load/dump/check command Note that a NACK will be generated also.
0x0402	<b>ERR_DPU_RECEIVER_INVALID_PARAM_ID</b> Invalid parameter ID in a write command. Note that a NACK will be generated also.
0x0403	<b>ERR_DPU_RECEIVER_INVALID_LENGTH</b> Invalid length in a memory load/dump/check/write command. Note that a NACK will be generated also.
0x0404	<b>ERR_DPU_RECEIVER_INVALID_MEM_ID</b> Received a load command trying to access memory outside DRAM Note that a NACK will be generated also.
0x0410	<b>ERR_DPU_RECEIVER_TIME_OUT_ON_DUMP_BUFFER</b> Internal Error : time-out while waiting that the DPU sender sends the last Dump packet
0x0510	<b>ERR_DPU_SENDER_UNKNOWN_FIFO_MSG</b> Internal error : DPU Sender received an unknown message type on its FIFO.
0x0511	<b>ERR_DPU_SENDER_UNRECOGNISED_ERROR_CODE</b> Internal error : DPU Sender received an unknown error code for the type of message it is supposed to send.
0x0600	<b>ERR_DEC_RECEIVER_INVALID_READOUT_INTERVAL</b> The Dec Receiver has received a readout at a rate that was not expected.
0x0601	<b>ERR_DEC_RECEIVER_INVALID_READOUT_COUNTER</b> The readout counter received from DEC is bigger than the number of readout in a ramp.
0x0710	<b>ERR_DET_SIMULATOR_COULD_NOT_CREATE_TIMER</b> Internal error : could not create the timer for the detector simulator
0x0800	<b>ERR_HK_INVALID_MEASURE_ID</b> The diagnostic HK list (or very improbably the nominal HK list) contained an invalid measure ID.
0x0801	<b>ERR_HK_MEASURE_NOT_AVAILABLE_IN_DIAG_MODE</b>



	<p>The diagnostic HK list contains the ID of a measure that is not available in diagnostic mode.</p> <p>Note that, in this case, the acquisition will be performed anyway but the measure will not be included at all in the Hk diagnostic packet.</p> <p>Note also that, the error will be generated at each diagnostic acquisition (it may be 256 times a second). So, this will probably fill the Last Error Buffer very fast.</p>
0x0810	<p><b>ERR_HK_COULD_NOT_CREATE_HK_TIMER</b> Internal error : Could not create the timer for the nominal HK.</p>
0x0811	<p><b>ERR_HK_DIAG_COULD_NOT_CREATE_HK_DIAG_TIMER</b> Internal error : Could not create the timer for the diagnostic HK.</p>
0x0900	<p><b>ERR_DEC_CONTROLLER_LINK_NOT_CONNECTED</b> Unable to send a command to DEC since its link is not connected</p>
0x0901	<p><b>ERR_DEC_CONTROLLER_NO_RAMP_AFTER_RESET</b> After a reset (write parameters), no ramp has been received (time-out reached)</p>
0x0902	<p><b>ERR_DEC_CONTROLLER_OTHER_CRE_ON</b> Trying to switch-on a DEC while the other CREs are already powered ON</p>
0x0910	<p><b>ERR_DEC_CONTROLLER_UNKNOWN_FIFO_MSG</b> Internal error : DEC Controller received an unknown message type on its FIFO.</p>
0x0A00	<p><b>ERR_BOL_CONTROLLER_LINK_NOT_CONNECTED</b> Unable to send a command to DEC since its link is not connected</p>
0x0A10	<p><b>ERR_BOL_CONTROLLER_UNKNOWN_FIFO_MSG</b> Internal error : DEC Controller received an unknown message type on its FIFO.</p>
0x0B13	<p><b>ERR_CHOPPER_CONTROLLER_FOLLOWING_ERROR</b> The current chopper error is bigger than the error limit</p>
0x0B15	<p><b>ERR_CHOPPER_CONTROLLER_POSITION_ERROR</b> The current chopper position is bigger than the position limit</p>
0x0B23	<p><b>ERR_GRATING_CONTROLLER_FOLLOWING_ERROR</b> The current grating error is bigger than the error limit</p>
0x0B24	<p><b>ERR_GRATING_CONTROLLER_POWER_LIMIT_ERROR</b> The grating output was equal to the output limit during 5 seconds</p>
0x0C00	<p><b>ERR_PACKET_ENCODER_INVALID_READOUT_COUNTER</b> The readout counter received from DEC is bigger than the number of readout in a ramp.</p>





## 5.5 Packet Content description

### 5.5.1 Nominal Housekeeping

- Nominal housekeeping packets are sent to DPU at regular interval.
- Measures are not compressed (every measure is aligned on a 32bits words).
- Measures are stored in the order defined by the Ids (note that the custom entries are available only in diagnostic mode and are therefore not included in the nominal hk packet).
- Each measure is included in each packet.
- Packets always have the same structure

### 5.5.2 Diagnostic Housekeeping

- Diagnostic housekeeping packets are sent at regular interval (definable by command)
- Their content is definable in the Housekeeping Diagnostic List.
- Measure are “compressed”; they are not aligned on 32bits words.
- The packet structure is defined below :

Consider that the Housekeeping Diagnostic List contains the following Ids :

Sequence Pointer	Sequencer Options	Sequencer Status	End Of Hk List
2 bytes	1 byte	4 bytes	

The Housekeeping Diagnostic Packet will be organised as follow :

Byte	Content
0.	Packet ID = 0x00880000
1.	
2.	
3.	
4.	Length of Data (in words). This is the total length of the packet without the first 2 words (Packet ID + length).
5.	
6.	
7.	



8.	OBSID
9.	
10.	
11.	BBID
12.	
13.	
14.	Time
15.	
16.	
17.	
18.	
19.	
20.	
21.	Number of measures in the list
22.	Number of samples in the packet
23.	DMC_B_SPEC_READ
24.	
25.	
26.	DMC_R_SPEC_READ
27.	
28.	
29.	
30.	
31.	DMC_OBT_COUNT
32.	
33.	
34.	
35.	HK Diag Period: If the value is >0, it is the period in ms between two samples. If the value is <0, it is the detector on which the samples are synchronized (-1=BLUE DEC, -2 = RED DEC, -4 = BOLC)
36.	
37.	
38.	
39.	Housekeeping Diagnostic List ID 0 MSB (=0 in our example)
40.	
41.	
42.	
43.	
44.	Housekeeping Diagnostic List ID 2 MSB (=0 in our example)



45.	Housekeeping Diagnostic List ID 2 LSB (=0 in our example)
46.	Housekeeping Diagnostic List ID 3 MSB (=0xFF in our example)
47.	Housekeeping Diagnostic List ID 3 LSB (=0xFF in our example)
48.	...
49.	
50.	
51.	
52.	
53.	
54.	
55.	
56.	
57.	
58.	
59.	
60.	
61.	
62.	
63.	
64.	
65.	
66.	
67.	
68.	
69.	
70.	
71.	Housekeeping Diagnostic List ID 15 LSB
72.	1 <sup>st</sup> byte of 1 <sup>st</sup> measure of 1 <sup>st</sup> sample (=MSB of Sequence Pointer in our example)
73.	2 <sup>nd</sup> byte of 1 <sup>st</sup> measure of 1 <sup>st</sup> sample (=LSB of Sequence Pointer in our example)
74.	1 <sup>st</sup> byte of 2 <sup>nd</sup> measure of 1 <sup>st</sup> sample (=Sequencer Options in our example)
75.	1 <sup>st</sup> byte of 3 <sup>rd</sup> measure of 1 <sup>st</sup> sample (=MSB of Sequencer Status in our example)
76.	2 <sup>nd</sup> byte of 3 <sup>rd</sup> measure of 1 <sup>st</sup> sample (=2 <sup>nd</sup> byte of Sequencer Status in our example)
77.	3 <sup>rd</sup> byte of 3 <sup>rd</sup> measure of 1 <sup>st</sup> sample (=3 <sup>rd</sup> byte of Sequencer Status in our example)
78.	4 <sup>th</sup> byte of 3 <sup>rd</sup> measure of 1 <sup>st</sup> sample (=LSB of Sequencer Status in our example)
79.	1 <sup>st</sup> byte of 1 <sup>st</sup> measure of 2 <sup>nd</sup> sample (=MSB of Sequence Pointer in our example)
80.	2 <sup>nd</sup> byte of 1 <sup>st</sup> measure of 2 <sup>nd</sup> sample (=LSB of Sequence Pointer in our example)
81.	1 <sup>st</sup> byte of 2 <sup>nd</sup> measure of 2 <sup>nd</sup> sample (=Sequencer Options in our example)
...	...
...	...



## 6 Other information

### 6.1 Time-stamping

This section will contain a description of the various ways to time-stamp various information like science data and housekeeping.

The commands related to time-stamping are:

- DMC\_WRT\_TIME is used to transfer the time from DPU to DMC. It has no direct effect until the DMC\_SET\_TIME has been sent.
- DMC\_SET\_TIME copies the last time that has been written through the DMC\_WRT\_TIME command and resets:
  - DMC\_OBT\_COUNT
  - DMC\_BOL\_READ\_CNT
  - DMC\_B\_SPEC\_READ
  - DMC\_R\_SPEC\_READ

#### 6.1.1 Photometry science packet

The combination of the Time (TMP) and the OBTC counter (CRDC).  
OBTC counter is a 131072 KHz counter provided by the spacecraft.

#### 6.1.2 Spectroscopy science packet

The combination of the Time (TMP) and the number of readouts since last set-time (CRDC)  
The readout counter frequency is derived from the OBTC by error free divisions. Its frequency is function of the timing parameters that have been sent to the DEC.

#### 6.1.3 Nominal housekeeping

The combination of the TIME (DMC\_TIME\_1 and DMC\_TIME\_2) and the OBTC counter.

#### 6.1.4 Diagnostic housekeeping

The combination of the Time (TMP) and the OBTC counter (DMC\_OBT\_COUNT). If the diagnostic housekeeping is synchronised on one of the DEC readout, it is probably more interesting to use the Time and the readout counter for this DEC.

Note : all these values are snapshot taken at the same time as the first sample of the packet.

When synchronized with a detector readout, the hk diag is sampled when the 1355 packet has been received by DMC. Then, all the measures are taken sequentially (in the order defined in the DMC\_WRT\_DIAG\_HK\_LIST)



## 6.1.5 Involved commands

### 6.1.5.1 SetTime

- Sets the time
- Resets the DMC\_OBT\_COUNT counter (also known as CRDC in photometry packet header).
- Resets the DMC\_B\_SPEC\_READ, DMC\_R\_SPEC\_READ, DMC\_BOL\_READ\_CNT
- Does not change OBSID and BBID

### 6.1.5.2 Set OBSID

- Modify OBSID only

### 6.1.5.3 Set BBID

- Modify BBID only

## 6.1.6 Summary of commands and telemetry

### Trigger Commands:

- 7 DMC\_SET\_TIME
- 8 DMC\_SET\_OBSID
- 9 DMC\_SET\_BBID
- 10 DMC\_SYNCHRONIZE\_ON\_DET
- 11 DMC\_SET\_TIMING\_FPGA\_PAR

### Write Commands:

- 157 DMC\_WRT\_TIMING\_FPGA\_PAR

### HK nominal:

- 224 DMC\_OBSID
- 225 DMC\_BBID
- 226 DMC\_TIME\_1
- 227 DMC\_TIME\_2
- 242 DMC\_IRS\_CNT
- 453 DMC\_OBT\_COUNT

### HK diag:

- none



## 6.2 Synchronization of DMC science header and science data

The array below shows, for each entry of the DMC spectroscopy header, at what time the field is sampled with respect to the science data.

<i>Parameter</i>	<i>Description / use</i>	<i>Sampled</i>
OBSID	Observation Identification	When the 1355 packet has been completely received from DEC
BBID	Building Block Identification	When the 1355 packet has been completely received from DEC
LBL	Label	When the 1355 packet has been completely received from DEC
TMP	Timing Parameters	When the 1355 packet has been completely received from DEC
VLD	Notifies if the science data is valid (0xff) or invalid (0x00)	When the 1355 packet has been completely received from DEC
CPR	Chopper position as encoded by MEC	When the 1355 packet has been completely received from DEC
WPR	Wheel position as encoded by MEC	When the 1355 packet has been completely received from DEC
GPR	Grating position as encoded by MEC	When the 1355 packet has been completely received from DEC
CRCRMP	Current Readout Count : Current value of the readouts counter, starts from Nr and decrements, value of 0 signals a destructive readout and the end of an integration interval	This field is extracted from the DEC packet
RRR	Readouts in ramp ( Nr ) Readback : Number of readouts within the same integration ramp ( i.e. between successive capacitor resets )	This field is extracted from the DEC packet
CRDC	number of readouts since the last SET_TIME command to DMC	When the 1355 packet has been completely received from DEC
CRECR	CRE Control Readback	This field is extracted from the DEC packet

The array below shows, for each entry of the DMC photometry header, at what time the field is sampled with respect to the science data.

<i>Parameter</i>	<i>Description / use</i>	<i>Sampled</i>
OBSID	Observation Identification	When the first 1355 packet has been completely received from DEC



BBID	Building Block Identification	When the first 1355 packet has been completely received from DEC
LBL	Label	When the first 1355 packet has been completely received from DEC
TMP	Time	When the first 1355 packet has been completely received from DEC
VLD	Notifies if the science data is valid (0x000000FF) or invalid (0x00000000)	When the first 1355 packet has been completely received from DEC
CPR	Chopper position as encoded by MEC	When the first 1355 packet has been completely received from DEC
WPR	Wheel position as encoded by MEC	When the first 1355 packet has been completely received from DEC
BOLST	BOLC status word as described in [RD24]	This field is extracted from the first BOLC packet for this readout
CRDC	the number of OBT clock ticks since the last SET_TIME command to DMC	This field is sampled when the synchro signal from BOLC is received by the timing FPGA (no software -> no jitter).
CRDCCP	Current ReadOut Count in Chopper Position. This counter is reset each time the chopper start moving.	This field is incremented and sampled when the synchro signal from BOLC is received (this is done in the 8KHz interrupt routine).
DBID	Data Block ID. Contains the ID of the block of detector arrays whose data are included in this packet. 1 = Array 1 and 2 2 = Array 3 and 4 3 = Array 5 and 6 4 = Array 7 and 8 5 = Array 9 and 10	This field is generated by DMC OBSW. For this, DMC assumes the packets are received in the right order.

### 6.3 Science data sampling


For deriving the science data sampling, the MIM1 FPGA receives the OBT (131072 Hz) and the DSP clock (18 MHz). From these frequencies, the PLL block produces a reference clock at 655360 Hz. If the OBT is missing, the PLL block will automatically produce the same reference clock from the DSP clock. Note that in this case, if the DSP clock is not exactly 18 MHz, the reference clock will not be exactly 655360 Hz.

Then, this reference clock is divided many times and all internal DMC timings are derived from there. One of this signal, the IRQ3 is triggering the interrupt routine, another one is the CRE clock that is provided to the DEC Base FPGA.



The DEC Base FPGA then provides the CRE clock directly to the CREs and counts the number of CRE clock to produce the readout SYNCH based on the programmed value in NbCreClockPerReadout.

The DEC Base FPGA also counts the NbReadoutPerRamp to produce the Destructive readout SYNCH.

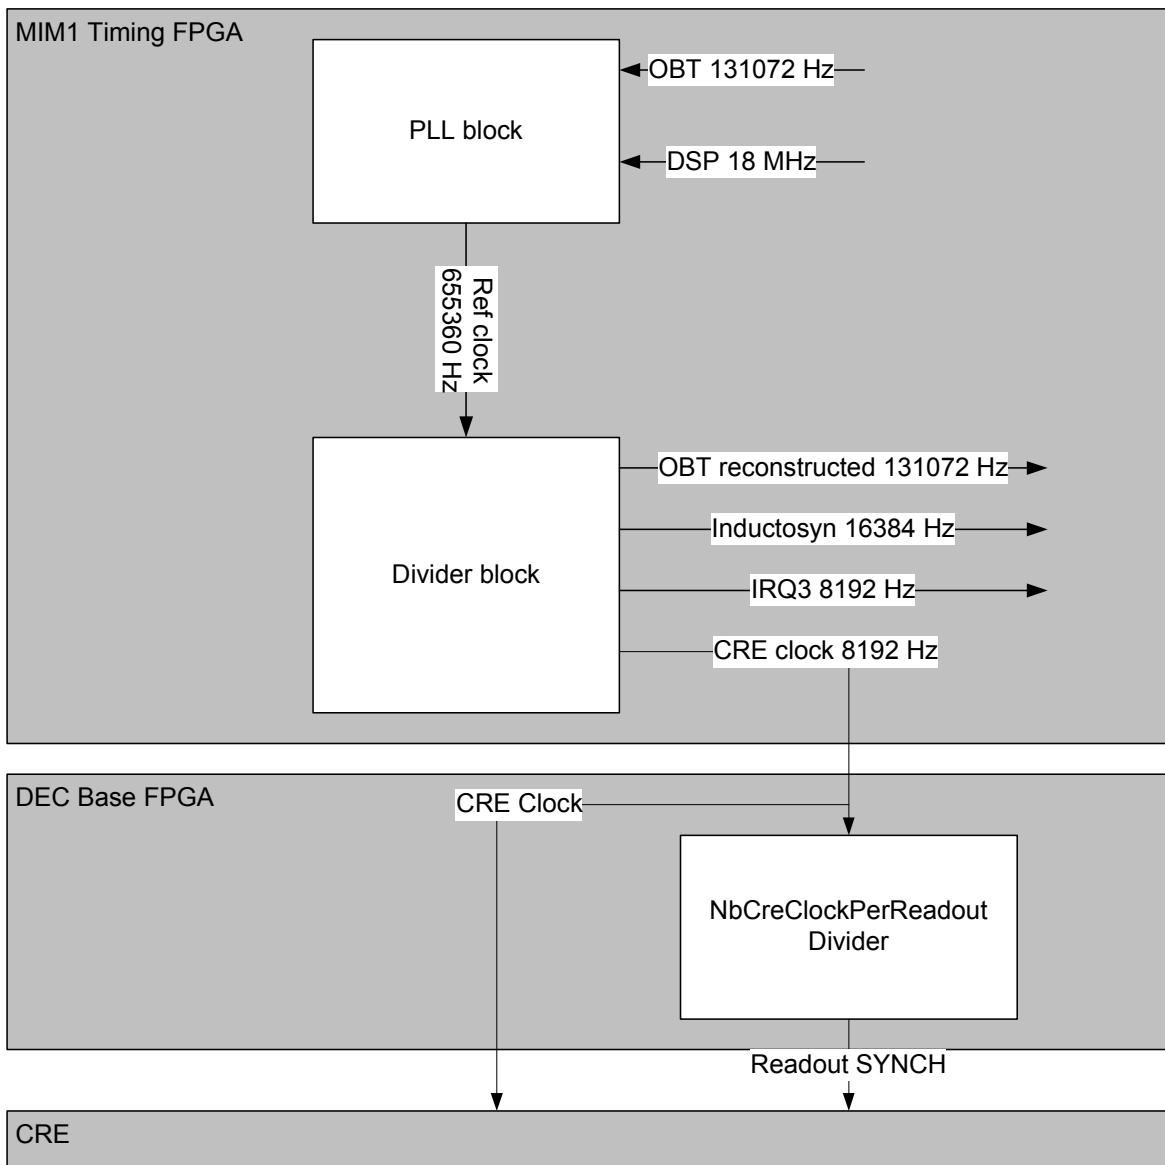





## 6.4 Detecting Memory Errors

The DSP board contains 2 EDAC chips that can detect memory failure in both DM and PM (including EEPROM). In the case of single bit failures, the EDAC signals the error and correct it. In the case of double bit failures, the EDAC signals the error but it can not be corrected.

The DMC OBS regularly access each memory cell in order to detect errors and to correct the single failures. This piece of code is called 'memory scrubbing'. It is included in the HK nominal task and checks 32 words in DM and 32 words in PM every 2 seconds. It means that DM is completely checked every 9 hours and PM every 14 hours.

4 kinds of errors can be detected:

- Single failure in DM
- Single failure in PM
- Double failure in DM
- Double failure in PM

For each of these errors, the last 256 failing addresses are stored in arrays that are accessible through a dump command. Furthermore, 4 values in the nominal HK identifies where the next failing address will be stored in these arrays.

### 6.4.1 Example

At start-up of the software, all 4 arrays are empty and the 4 indexes are zero. Let's consider the single failure in DM only.

At start-up:

DM\_SF\_FAILING\_ADDRESSES:

0x00000000	0x00000000	0x00000000	0x00000000	...
------------	------------	------------	------------	-----

DMC\_DM\_SF\_IND = 0

After a few seconds of execution, the memory scrubbing function accesses the memory cell 0x00000105 and the EDAC signals an error, the array and index will then be:

DM\_SF\_FAILING\_ADDRESSES:

0x00000105	0x00000000	0x00000000	0x00000000	...
------------	------------	------------	------------	-----

DMC\_DM\_SF\_IND = 1

A few seconds later, another task access the memory cell 0x0000F102 and the EDAC signals an error, the array and index will then be:

DM\_SF\_FAILING\_ADDRESSES:



0x00000105	0x0000F102	0x00000000	0x00000000	...
------------	------------	------------	------------	-----

DMC\_DM\_SF\_IND = 2

A few hours later, the memory scrubbing function accesses the same memory cell 0x0000F102 and the EDAC signals an error again, the array and index will then be:

DM\_SF\_FAILING\_ADDRESSES:

0x00000105	0x0000F102	0x0000F102	0x00000000	...
------------	------------	------------	------------	-----

DMC\_DM\_SF\_IND = 3

...

The array is actually a circular buffer so once it is full, it will overwrite the first elements again and the index will start counting at zero again.

Note: the memory error detection process is a low level process that can not access the DMC\_SW\_GLOBAL\_ST variable. Therefore, it can not signal any error in this variable. The only way to know that a memory error has been detected is to check if the indexes have been modified since the last HK packet.

#### 6.4.2 How to react ?

Every time the ground software (or DPU ?) detects that one of the index has incremented, it shall request a dump of the failing address array to know which cell has produced the error. If the same address is repeated many times in the array, it means that it has a permanent error.

Single failures are not critical since the EDAC can correct them. However, if a memory cell has a permanent single failure, it means that double failures are more probable to occur on this cell.

Any permanent failing memory cell (single or double failure) shall be avoided. This is not an easy task to do since it requires the software to be modified such that it does not use the memory cell anymore and such that the memory scrubbing does not test it anymore.

A procedure shall be provided to be able to re-compile a new version of the DMC OBS very fast. Temporary solution shall be to switch to redundant DMC while the new version is being prepared.

#### 6.4.3 Related dump commands

Here are the information needed to be able to dump the arrays of failing address. Note that these addresses are subject to change for every new version of the DMC software.

Name	Memory ID	Start address	length
DM_SF_FAILING_ADDRESSES	DRAM		256 words



PM_SF_FAILING_ADDRESSES	DRAM		256 words
DM_DF_FAILING_ADDRESSES	DRAM		256 words
PM_DF_FAILING_ADDRESSES	DRAM		256 words

#### 6.4.4 Summary of commands and telemetry

##### Trigger Commands:

- none

##### Write Commands:

- none

##### HK nominal:

- 455 DMC\_DM\_SF\_IND
- 456 DMC\_PM\_SF\_IND
- 457 DMC\_DM\_DF\_IND
- 458 DMC\_PM\_DF\_IND

##### HK diag:

- none

### 6.5 Update 6.033: new implementation of the DMC\_SET\_PAR\_BOTH\_SPEC command

This command is used to reconfigure both DEC's at the same time by writing new sets of parameters that have been uploaded previously thanks to the DMC\_WRT\_R\_SPEC\_PAR and DMC\_WRT\_R\_SPEC\_PAR. It is quite important to set the parameters at the same time to ensure that both DEC's stay synchronized all way long.

DEC's are synchronized at DEC switch-on. The synchronization is performed by resetting of the DEC FPGAs. When their clock is interrupted, they enter a reset state and they start again to work when they recover their clock.

#### 6.5.1 Old implementation

Up to version 6.029, DEC FPGAs were reset only at DEC switch-on. The DMC\_SET\_PAR\_BOTH\_SPEC command was pretty simple since it simply gave an order to the BlueDecController and the RedDecController to send the set of parameters to their DEC's. There was no kind of synchronization there.



## 6.5.2 New implementation

DEC FPGAs are still reset at DEC switch-on but they are also reset in the DMC\_SET\_PAR\_BOTH\_SPEC command.

Since version 6.033, here is the pseudo-code of the new implementation:

Repeat max 3 times  
  Reset DEC's FPGAs  
  Wait 100ms to let the FPGA restart and restore its 1355 link  
  During 150ms, Test 1355 connection recovery  
Until 1355 connection has been recovered  
If connection not recovered, set error ERR\_DEC\_CONTROLLER\_NO\_RAMP\_AFTER\_RESET and exit  
Wait for the beginning of a new ramp  
Request BlueDecController to write the new set of parameters  
Request RedDecController to write the new set of parameters