

SUBJECT:	Test Fac	ility FTS Data IC	D	
PREPARED BY:	Ian Schofiel	d		
DOCUMENT No:	SPIRE-UoL	-PRJ-001452		
ISSUE:	Draft 0.1 Draft 0.2 Draft 0.3 Draft 0.4 Version 1.0 Version 1.1		Date:	10 October 2002 13 November 2002 14 November 2002 11 December 2002 17 December 2002 28 January 2003
APPROVED BY:			Date:	
Canadian Space Agency		Victor Zilinskas		
SPIRE TFTS Principal Ir	ivestigator	David Naylor		
SPIRE TFTS Uleth Mgr:		Peter Davis-Imhof		
SPIRE TFTS Uleth Eng:		Ian Schofield		
RAL AIV Mgr:		Dave Smith		
RAL AIV Data Eng:		Ken King		



SPIRE Test Facility FTS Data ICD

 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 1 of 2

# Page: 1

# **Distribution**

Victor Zilinskas		CSA
Steve Torchinsky		CSA
David Naylor	SPIRE	ULETH
Peter Davis-Imhof	SPIRE	ULETH
Ken King	SPIRE	RAL
Bruce Swinyard	SPIRE	RAL
Dave Smith	SPIRE	RAL
Jeff Payne	SPIRE	RAL
Sunil Sidher	SPIRE	RAL



SPIRE Test Facility FTS Data ICD

 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 2 of 3

# **Change Record**

ISSUE	DATE	
Draft 0.1	8 October 2002	Original Draft
Draft 0.2	13 November 2002	
Draft 0.3	14 November 2002	For distribution and review at the University of Lethbridge
Draft 0.4	9 December 2002	Final draft
Version 1.0	17 December 2002	First public version
Version 1.1	28 January 2003	Revision of Version 1.0



SPIRE Test Facility FTS Data ICD

Ref:SPIRE-UoL-PRJ-<br/>001452Issue:Version 1.1Date:January 28, 2003Page:3 of 4

# TABLE OF CONTENTS

1	INT	RODUCTION	.6
	1.1	SCOPE	.6
	1.2	CHANGES	.6
	1.3	STRUCTURE OF THE DOCUMENT	.6
	1.4	DOCUMENTS	.7
	1.4.	I Applicable Documents	. 7
	1.4.		
2	TH	PACKET INTERFACE	.8
	2.1	PACKET STRUCTURES	.8
	2.1.	I Fields	.8
	2.1.	2 Telecommand Packets	.8
	2.1.	3 Telemetry Packets	.9
	2.1.	4 Telecommands and Telemetry Responses	10
	2.1.	5 Telecommand Behavioural Description	11
	2.2	APIDs1	6
	2.3	PACKET TRANSFER PROTOCOL1	6
3	TEI	ECOMMAND PACKETS1	6
	3.1	TELECOMMAND PACKET TYPES	6
	3.2	TELECOMMAND PACKET DEFINITION	17
	3.2.	I Telecommand Verification Service	17
	3.2.	2 Device Command Distribution	17
	3.2.	3 Housekeeping and Diagnostic Data Reporting	17
	3.2.		
	3.2.	5 Event Reporting	17
	3.2.	6 Memory Management	17
	3.2.	7 TBD	17
	3.2.	8 Function Management	17
	3.2.	9 Time Management	23
	3.2.	10 TBD	23
	3.2.	11 On-Board Scheduling	23
	3.2.	12 On-Board Monitoring	24
	3.2.	13 TBD	24
	3.2.	14 Packet Transmission Control	24
	3.2.	15 On-Board Storage and Retrieval	24
	3.2.	16 On-Board Traffic Management	24
	3.2.	17 Test Service	24
	3.2.	18 On-Board Control Procedures	24
	3.2.		
	3.2.	20 Information Distribution Service2	24
	3.2.		
	3.2.		
4	TEI	emetry Packets	
	4.1	TELEMETRY PACKET TYPES	25
	4.1.	1 TC Verification Service	26
	4.1.		
	4.1.		
	4.1.		
	4.1.	5 Event Reporting	30



SPIRE Test Facility FTS Data ICD

 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 4 of 5

	4.1.6	Memory Management	32
	4.1.7	TBD	
	4.1.8	Function Management	
	4.1.9	Time Management	
	4.1.10	TBD	
	4.1.11	On-Board Scheduling	33
	4.1.12	On-Board Monitoring	
	4.1.13	TBD	
	4.1.14	Packet Transmission Control	33
	4.1.15	On-Board Storage and Retrieval	33
	4.1.16	TBD	
	4.1.17	Test Service	
	4.1.18	On-Board Control Procedures	34
	4.1.19	Action/Event Service	34
	4.1.20	Information Distribution Service	
	4.1.21	Science Data	35
	4.1.22	Context Saving Service	41
5	PARAM	ETERS	42
	5.1 TC	PARAMETERS	42
	5.1.1	Parameter Definition	42
	5.2 TM	PARAMETERS	43
	5.2.1	Parameter Definition	43
	5.2.2	Conversion Curve	45
	5.2.3	Constraints	45

# **FIGURES**

Figure 1: Execution of Short Duration Function (no data TM packets returned)	12
Figure 2: Execution of Short Duration Function (data TM packets returned)	
Figure 3: Execution of Long Duration Function (no data TM packets returned)	
Figure 4: Execution of Long Duration Function (data TM packets returned)	15

# TABLES

Table 1: Telecommands and their Responses	
Table 2: Telecommand Behavioural Description	
Table 3: Long Duration Function Execution Stages	
Table 4: Table of APIDs	
Table 5: Telecommand Packet Definitions	
Table 6: Telemetry Packet Definitions	
Table 7: Nominal Housekeeping Report Fields	
Table 8: Unidex 500 Hardware Status Word	
Table 9: Unidex 500 Software Errors	



SPIRE Test Facility FTS Data ICD

Ref:SPIRE-UoL-PRJ-<br/>001452Issue:Version 1.1Date:January 28, 2003

Page: 5 of 6

# <u>Glossary</u>

APID	Application ID
EGSE	Electrical Ground Support Equipment
SID	Structure ID
SPIRE	Spectral and Photometric Imaging Receiver
TBD	To Be Determined
TBW	To Be Written
TFTS	Test Fourier Transform Spectrometer
TC	Telecommand Packet
TM	Telemetry Packet
U500	Unidex 500
ULONG	Unsigned 32 bit integer
USHORT	Unsigned 16 bit integer
UINT	Unsigned integer (generic term)
UU	Unidex units (10 nm units)



 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 6 of 7

## **1** INTRODUCTION

The Test Facility FTS (TFTS) is a Fourier Transform Spectrometer, which will be used for instrument-level testing of the SPIRE FTS. The Unidex 500 (U500), a motion controller card that plugs into the TFTS PC's PCI bus, controls the Aerotech linear translation stage on which the spectrometer's scanning mirror is attached. The TFTS PC, running under Windows 2000, hosts the TFTS control software. The control software listens for instructions from the SPIRE EGSE to initialize the TFTS and take interferogram scans. The resulting data sets are packetized and sent back to the SPIRE EGSE. Commands are formatted and sent as telecommand (TC) packets, while data is returned to the EGSE as telemetry packets (TM). Both TM and TC packets are carried over an Ethernet-based local area network.

All telemetry data produced by the SPIRE EGSE systems will follow the same standards used in the Herschel Spacecraft and Ground Segment systems. This will ease transition from testing to the operational environments. TM and TC packets conform to the ESA Packet Utilisation Standards (RD01, RD02, and RD03), and the Herschel Packet Structure ICD (AD01) subset. The TFTS reduced set of telemetry packet types are detailed herein.

# 1.1 Scope

This document defines the packet types and contents that will be accepted and generated by the Test Facility FTS (TFTS). These packets conform to the formats given in the <u>Herschel/Planck Packet Structure Interface Control</u> <u>Document</u> (AD01) and the <u>Herschel Science Ground Segment to Instruments Interface Control Document</u> (AD03).

# 1.2 Changes

This version, a subsequent revision of the first released draft, contains a numerous changes designed to rectify ambiguities and errors with the TFTS TM/TC packet structure and behaviour. In particular, this new document features:

- BBID and OBSID are now present in selected telemetry packets (erroneously omitted in last version).
- New telecommands to accept new BBID and OBSID values.
- State diagram of all telecommands.
- Description of the Telecommand Acceptance Report packets that follow each telecommand .
- Clarification of the Nominal Science Report telemetry packet (21,1).
- Telecommands that read the DPU counter, TFTS status, and Unidex 500 status now report their values in <u>Diagnostic Science Report</u> telemetry packets (21,3).
- <u>Event Report</u> telemetry packets (5,2) have been reduced to 2 reports: one for DPU clock errors, and the other for Unidex 500 errors.
- Unidex 500 hardware and software status words have now been described. All errors that can be reported by the Unidex are listed.
- Conversion and constraint values have now been added to the TM and TC parameter tables.

# **1.3** Structure of the Document

Section 2 describes the packet interface used between the SPIRE instrument and the SPIRE EGSE, including the Test Facility Control System and test equipment. This includes the general format of the packets used by the SPIRE instrument for telecommanding and telemetry (from AD01), the allocation of Application IDs used by the instrument, and the functionality of the packet transfer protocol of the instrument/spacecraft interface (from AD01, appendix 9) that is used by the instrument.



Section 3 defines the format and content of each of the telecommand packets accepted by the TFTS. Section 4 defines the corresponding information for the telemetry packets generated by the TFTS. A description of how these packets are handled by the TFTS is given in RD04. Section 5 defines in detail the parameters used within the telecommand and telemetry packets.

# **1.4 Documents**

#### 1.4.1 Applicable Documents

AD01	Herschel/Planck Packet Structure Interface Control Document
	(SPIRE-ESA-DOC-000433), Issue 2.0 (draft2)
AD02	Herschel/Planck Operations Interface Requirements Document
	(SPIRE-ESA-DOC-000188), Issue 2.0 (draft3)
AD03	Herschel Science Ground Segment to Instruments Interface Control Document
	(FIRST-FSC-DOC-0200), Issue 1.0
AD04	Packet Router ICD
	(SRON-G/HIFI/ICD/2001-001), Issue 1.1

AD05 (SRON-G/HIFI/ICD/2001-001), Issue 1.1 (SRON-U/HIFI/SP/2000-004), Issue 1.1

#### 1.4.2 Reference Documents

RD01	Packet Telemetry Standard
	(ESA PSS-04-106), Issue 1, 1998
RD02	Packet Telecommand Standard
	(ESA PSS-04-107), Issue 2, 1992
RD03	Telemetry and Telecommand Packet Utilisation Standard
	(ECSS-E-70/41), Draft 04, April 1999
RD04	Test Facility FTS User's Manual
	TBW
RD05	UNIDEX 500 Motion Controller and Windows Software Operation & Technical Manual
	(SPIRE-UOL-DOC-001519), February 3, 2003



 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 8 of 9

# **2** THE PACKET INTERFACE

# 2.1 Packet Structures

The following packet structures are shown as a set of 16 bit words, contained in two consecutive bytes in the packet structure (all packets are composed of an even number of bytes). The most significant byte of each word comes before the least significant in the packet. The least significant bit of each word is on right of each field:

### 2.1.1 Fields

Within a field (of any length) the most significant bit is designated bit (0); the least significant bit is bit (length-1).

#### 2.1.2 Telecommand Packets

The following figure gives the general structure of a TC Packet (after AD01)

Packet	Packet ID	0 0 0 1 1 APID
Header	Sequence Control	1 1 Src Count
	Length	Length
	Data Field	0 0 0 0 0 0 1 Type
	Header	Sub-Type 00000000
Data Field	Source Data	
	Error Control	Checksum

• Src, Count, Length, and Checksum are defined in AD01

- Ack (in white letters) is defined in AD01. When the LSB of the 4-bit ACK field (in Data Field Header; dark background with white letters) is set, it is mandatory to acknowledge this telecommand with <u>Telecommand</u> <u>Acceptance Report</u> telemetry (service 1,x). All telecommands to the TFTS have this bit set.
- Type and Sub-Type define the packet type and are also defined in AD01



#### 2.1.3 Telemetry Packets

The following figure gives the general structure of a TM Packet (after AD01)

Packet	Packet ID	0 0 0 0 1 APID
Header	Sequence Control	1 1 Count
	Length	Length
		0000000 Type
		Sub-Type 00000000
	Data Field	
	Header	TIME
Data		
Field		
	Source Data	
	Error Control	Checksum

- Count, Length, TIME and Checksum are defined in AD01. TIME refers to the time the TM packet was created. In the <u>Nominal Science Report</u>, each data sample is associated with its own timestamp.
- Type and Sub-Type define the packet type and are also defined in AD01



 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 10 of 11

#### 2.1.4 Telecommands and Telemetry Responses

Below is the mapping between telecommands and telemetry packets. FID=FUNCTIONID, AID=ACTIONID.

Telecommand	Service	FID	AID	Telemetry	Service	FID	AID
Set OBSID	(8, 4)	0xC1	0x01				
Set BBID	(8, 4)	0xC1	0x02				
Reset TFTS	(8, 4)	0xF1	0x01				
Home TFTS	(8, 4)	0xF1	0x02				
Reset Limit	(8, 4)	0xF1	0x04				
Move Table	(8, 4)	0xF2	0x01				
Read U500 Parameter	(8, 4)	0xF4	0x01	Diagnostic Science Report	(21, 3)	N/A	N/A
Write U500 Parameter	(8, 4)	0xF4	0x02				
Read U500 Status	(8, 4)	0xF4	0x04	Diagnostic Science Report	(21, 3)	N/A	N/A
Perform Scan	(8, 4)	0xF8	0x01	Nominal Science Report	(21, 1)	N/A	N/A
Run U500 Program	(8,4)	0xF8	0x02				
Abort Scan	(8, 4)	0xF8	0x04				
Truncate Scan	(8, 4)	0xF8	0x08				
Get TFTS Time	(8, 4)	0xF4	0x08	Diagnostic Science Report	(21, 3)	N/A	N/A
Perform Connect Test	(17, 1)	N/A	N/A	Link Connection Report	(17, 2)	N/A	N/A
				Telecommand Acceptance Report	(1, X)*	Sent aft received tel * x = 1, 2 See Teleo Behav Descri	, 3, 5, 7, 8. command vioural
				Housekeeping Report	(3, 25)		uring scans
				Exception Report	(5, 2)	Can be ser TC, if ne	nt after any ecessary.

**Table 1: Telecommands and their Responses** 



#### 2.1.5 Telecommand Behavioural Description

Telecommands used to control the TFTS can be categorized into four distinct behavioural groups.

Function Type	Applicable Function
Short Duration Function - No Data Returned	Set_OBSID
	Set_BBID
	Reset_Limit
	Write_U500_Parameter
	Abort_Scan
	Truncate_Scan
Short Duration Function – Data Returned	Read_U500_Parameter
	Read_U500_Status
	Get_TFTS_Time
	Perform_Connection_Test
Long Duration Function – No Data Returned	Reset_TFTS
	Home_TFTS
	Move_Table
	Run_U500_Program
Long Duration Function – Data Returned	Perform_Scan

#### **Table 2: Telecommand Behavioural Description**

The execution of long duration functions (those that run for more than 10 seconds) can be broken up into multiple stages. Transitions from stage to stage, which marks the progress of the function, is reported by the TFTS by sending <u>Telecommand Verification Report</u> "progress" packets (service 1,5). The following table shows the stages for each long duration function. Short duration functions are not listed because they don't transmit progress reports.

Function	Stage Number	Stage Description					
Reset_TFTS	1	Resetting U500 hardware					
	2	Homing Aerotech stage					
	3	Resetting network connection					
	4	Resetting TFTS server state					
Home_TFTS	1	Moving stage to centre marker					
	2	Centre marker found					
	3	Moving to starting position					
Move_Table	1	Moving Aerotech stage					
Run_U500_Program	TBD	TBD					
		Note: this function used for debugging, configuring and troubleshooting the TFTS, and won't be used during normal usage of the TFTS.					
Perform_Scan	1	Moving from top to bottom					
	2	Feeding data (nominal science report) to receiver					
	3	Moving from bottom to top					

**Table 3: Long Duration Function Execution Stages** 



#### 2.1.5.1 Short Duration Function – No Data Returned

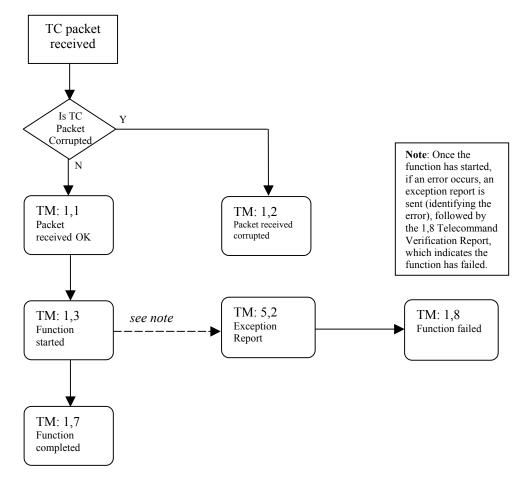


Figure 1: Execution of Short Duration Function (no data TM packets returned)



#### 2.1.5.2 Short Duration Function – Data Returned

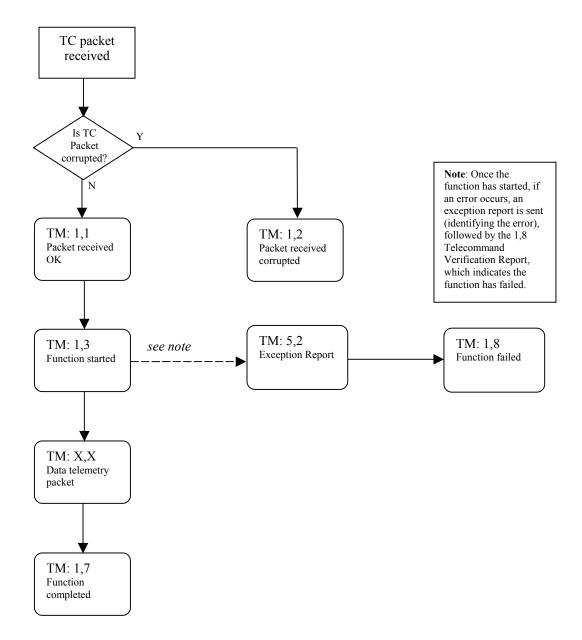


Figure 2: Execution of Short Duration Function (data TM packets returned)




 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 14 of 15

#### 2.1.5.3 Long Duration Function – No Data Returned

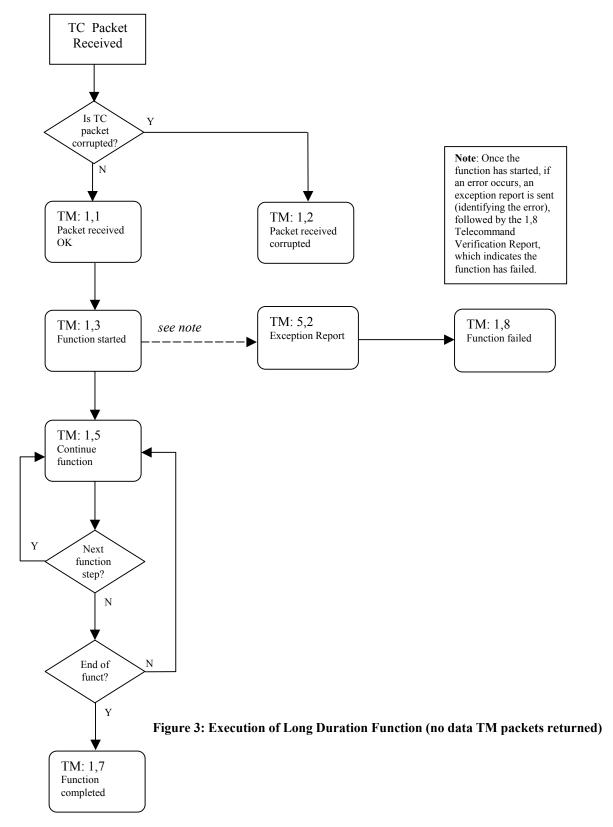




 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 15 of 16

## 2.1.5.4 Long Duration Function – Data Returned

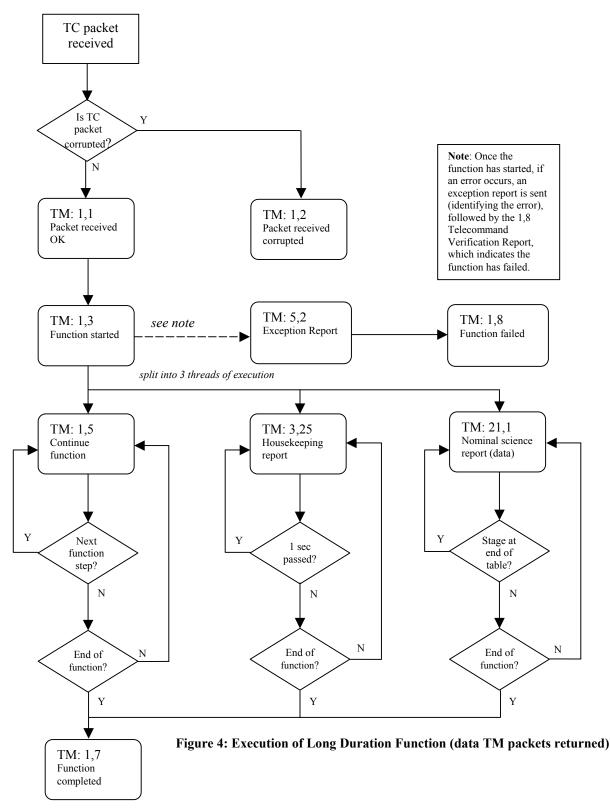



# 2.2 APIDs

The Application ID is used to identify the source or destination of a telemetry packet. SPIRE has been allocated APIDs for different types of packets (see AD1) as well as for EGSE equipment. The APID to be used by the TFTS is given in the following table:

ID	Telemetry types	APID (hex)
APID	Telecommands, Telecommand Verification, Events, housekeeping,	7F5
	and science data.	

Table 4: Table of APIDs

## 2.3 Packet Transfer Protocol

The packets are transferred between the TFTS and the EGSE following the Packet Router ICD (AD04).

# **3 TELECOMMAND PACKETS**

This section defines all the telecommand packets accepted by the TFTS Simulator.

# 3.1 Telecommand Packet Types

The Packet Structure ICD (AD1) defines many types of service that can be provided by an application. The following table shows the telecommand packet types that will be accepted by the TFTS.

Description	Service Type	Service Sub- Type	Comments
<b>Telecommand Verification Service</b>	1		N/A
Device Command Distribution	2		Not Used
Housekeeping and Diagnostic Data Reporting	3		Not Used
Event Reporting	5		N/A
Memory Management	6		Not Used
Function Management			
Start Function	8	1	Not Used
Stop Function	8	2	Not Used
Perform Activity of Function	8	4	
Report Function Status	8	5	Not Used
Time Management	9		Not Used
On-Board Scheduling	11		Not Used
On-Board Monitoring	12		Not Used
Packet Transmission Control	14		Not Used
On-Board Storage and Retrieval	15		Not Used
On-Board Traffic Management	16		Not Used
Test Service			
Perform Connection Test	17	1	
On-Board Control procedures	18		Not Used
Action/Event Service	19		Not Used
Information Distribution Service	20		Not Used
Science Data	21		N/A
Context Saving Service	22		Not Used

**Table 5: Telecommand Packet Definitions** 



# 3.2 Telecommand Packet Definition

### 3.2.1 Telecommand Verification Service

Not Applicable

### 3.2.2 Device Command Distribution

Not Used.

### 3.2.3 Housekeeping and Diagnostic Data Reporting

Not Used.

## 3.2.4 TBD

Not Available.

### 3.2.5 Event Reporting

Not Applicable.

### 3.2.6 Memory Management

Not Used.

### 3.2.7 TBD

Not Available.

### 3.2.8 Function Management

### 3.2.8.1 Start Function (Service 8,1)

Not Used.

# 3.2.8.2 Stop Function (Service 8,2)

Not Used.

3.2.8.3 (Service 8,3)

Not Available.



### 3.2.8.4 Perform an Activity of a Function (Service 8,4)

Only one telecommand can be processed by the TFTS at a time. If the TFTS receives a telecommand while processing another telecommand, it will respond with the Telecommand Verification Service (1,2) telemetry packet and the ERROR\_CODE = 16, which means TFTS is currently busy executing another telecommand. The only exceptions are the abort\_scan and truncate\_scan telecommands. To avoid this problem, one should wait until the currently running telecommand completes, which is indicated by the Telecommand Verification Service telemetry packet (1,7).

All command packets of this type and subtype may give rise to the following Errors:

Error	TM Service	Error Code	Description
Illegal_Function_ID	(1, 2)	0x0801	Function ID not known
Illegal_Activity_ID	(1, 2)	0x0802	Activity ID not known

#### 3.2.8.4.1 Function: Set Observation ID

This command sets the value for the Observation ID, which is included in all telemetry packets to allow them to be ingested into the HCSS database.

0	0	0	1	1	APID										
1	1	<b>U</b> 1	Sro	С				Count							
	Length $= 11$														
0	0	0	0	0	0	00100001000									0
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0
F	UI	N(	CT	<u> </u>	IC	NI.	D	A	C	ΓI	V	IT	Ϋ́	Π	)
	OBSID														
						(	CF	20	r /						

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xC1	1
ACTIVITYID	0x01	1
OBSID	Observation ID	4
CRC	Cyclic Redundancy Check	2

#### 3.2.8.4.2 Function: Set Building Block ID

This command sets the value for the Building Block ID, which is included in all telemetry packets to allow them to be ingested into the HCSS database.

00	0	1	1	APID										
1 1	<b>U</b> 1	Sro	с	Count										
	Length $= 11$													
00	0	0	0	0	00100001000									
00	0	0	0	1	0	0	0	0	0	0	0	0	0	0
FUl	N(	CT	<u> </u>	IC	N	D	A	Ċ	ΤI	V	IT	Ϋ́	Π	)
BBID														
					(	CF	R	2						

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xC1	1
ACTIVITYID	0x02	1
BBID	Building Block ID	4
CRC	Cyclic Redundancy Check	2



#### 3.2.8.4.3 Function: Reset TFTS

This command performs the selected type of reset on the TFTS. Type 0x0001 resets the TFTS system: the U500, DPU counter, network communications, and TFTS software state (listen for new TC commands). Type 0x0002 performs a hardware-level reset on the U500 software only, while type 0x0004 performs a software-level reset on the Undex 500 only. Typically, only the type 0x0001 reset will needed to be performed; the other two types are available for system troubleshooting.

0	0	0	1	1		APID										
1	1	<b>U</b> 1	Sro	С		Count										
Length = 9																
0	0	0	0	0	0	00100001000										
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	
F١	UI	N(	CT	<u>]</u> [	IC	NI.	D	A	C	ΓI	V	IΊ	Ϋ́	Π	)	
RESET_MODE																
CRC																

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xF1	1
ACTIVITYID	0x01	1
RESET_MODE	Type of reset to perform RESET_TFTS: 0x0001 RESET_U500_HARD: 0x0002 RESET_U500_SOFT: 0x0004	2
CRC	Cyclic Redundancy Check	2

#### 3.2.8.4.4 Function: Home TFTS Stage

This command instructs the TFTS to send the stage on a "homing cycle" (where the stage finds the centre calibration marker), then moves the stage to a default starting position – a position from which all scans start from. This point can be any position on the table, and is defined by setting a Unidex 500 parameter.

0	0	0	1	1					A	ΡI	D				
1	1	<b>U</b> 1	Sro	с		Count									
	Length $= 7$														
0	0	0	0	0	0	0	1	0	0	0	0	1	0	0	0
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0
F	FUNCTIONID ACTIVITYID														
	CRC														

Parameters	Value and Comments	Size (bytes)
FUNCTIONID	0xF1	1
ACTIVITYID	0x02	1
CRC	Cyclic Redundancy Check	2

#### 3.2.8.4.5 Function: Reset Table After Limit Fault

If stage has moved beyond the acceptable CW (top of table) and CCW (bottom of table) limits of the table (which is triggered by optical switches in the table), the U500 signals this error and halts the table, disallowing any further motion commands until the stage is moved back into the safe region of the table (between the optical limit switches). This command calls the U500 command to move the stage into the safe region, reset the U500 card, and perform a homing cycle, which moves the stage back into starting position.

0	0	0	1	1		APID									
1	1	0	0	0		Count									
					L	er	ıg	th	=	7					
0	0	0	0	0	0	0	1	0	0	0	0	1	0	0	0
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0
F	UNCTIONID ACTIVITYID														
	CRC														

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xF1	1
ACTIVITYID	0x04	1
CRC	Cyclic Redundancy Check	2



#### 3.2.8.4.6 Function: Move Table

Move the Aerotech stage a defined distance, direction, velocity and acceleration.

0 0 0 1 1 APID													
1 1 0 0 0 Count													
Length = 21													
00000010001000													
00000100000000000													
FUNCTIONID ACTIVITYID													
DISTANCE													
DIRECTION													
VELOCITY													
ACCELERATION													
CRC													

Parameter	Value and	Comments	Size (bytes)
FUNCTIONID	0xF2		1
ACTIVITYID	0x01		1
DISTANCE	Table travel dis	tance (uu)	4
DIRECTION	Move stage in t towards TOP or TOP BOTTOM		2
VELOCITY	Velocity of tabl	$e (uu s^{-1})$	4
ACCELERATION	Acceleration of	4	
CRC	Cyclic Redunda	ncy Check	2

#### 3.2.8.4.7 Function: Read Unidex 500 Parameter

Return the value of a specified Unidex 500 parameter or variable. The response to this telecommand is the <u>Unidex</u> 500 Parameter Report.

0	0	0	1	1		APID										
1	1	0	0	0		Count										
					L	Length = 9										
0	0	0	0	0	0	0010001000										
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	
F۱	UI	N(	CT	TI(	IC	١I	D	A	۱C	T	IV	Ί	ΓY	Ί	D	
	PARAM_NUM															
						(	CF	20	2							

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xF4	1
ACTIVITYID	0x01	1
PARAM_NUM	Parameter number	2
CRC	Cyclic Redundancy Check	2

#### **Parameter Number Summary**

Parameter	Comments	Value
		(decimal integer)
Unidex 500	ID number of U500	1 thru 501
Parameter Numbers	parameter	
Current position	Current position of	600
	Aerotech table	
	(read only)	
Current table speed	Parameter number	601
	(read only)	



#### 3.2.8.4.8 Function: Write Parameter to Unidex 500

Write a value to a specified Undex 500 Parameter. Consult the Unidex 500 Manual (RD05) to specify the correct datatype of the parameter.

0	0	0	1	1					A	ΡI	D				
1	1 1 0 0 0 Count														
	Length = 67														
0	00000010001000														
0	00001000000000000														
F	FUNCTIONID ACTIVITYID														D
				P/	٩I	RA	١N	1_	N	U	М				
				I	DA	٩T	ΓA	Т	Y	PF	Ð				
	PARAM_VALUE														
						(	CF	20	2						

Parameter	Value	e and Comments	Size (bytes)					
FUNCTIONID	0xF4		1					
ACTIVITYID	0x02		1					
PARAM_NUM	Parameter nu	umber*	2					
DATATYPE	Datatype of 0x0001 0x0002 0x0004	value to write to U500 Char string 32 bit integer Double Float	2					
PARAM_ VALUE	Value to pop (null termina	48						
CRC	Cyclic Redu	Cyclic Redundancy Check						

\*note: Do not use PARAM\_NUM values 601 or 602 (for accessing current position or velocity) as these are read-only parameters.

#### 3.2.8.4.9 Function: Read TFTS Status

Returns values from Unidex 500, time counter, network communication stats, scan details, etc. which describes status of the entire TFTS system. The response to this telecommand is the <u>Diagnostic Science Report - Return Test</u> <u>Facility FTS Status</u>.

0	0	0	1	1					A	ΡI	D				
1	1	0	0	0		Count									
	Length $= 7$														
0	0	0	0	0	0	0	1	0	0	0	0	1	0	0	0
0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0
F	FUNCTIONID ACTIVITYID														
	CRC														

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xF4	1
ACTIVITYID	0x04	1
CRC	Cyclic Redundancy Check	2



#### 3.2.8.4.10 Function: Acquire Single-Sided Interferogram "Scan"

The response to this telecommand (besides the associated Telecommand Verification Service telemetry) is the Nominal Science Report.

0 0 0 1 1 APID	Parameter	Value and Comments	Size (bytes)
11000 Count	FUNCTIONID	0xF8	1
Length = 345	ACTIVITYID	0x01	1
0000000100010001000	DISTANCE	Distance stage is to travel (uu)	4
0 0 0 0 1 0 0 0 0 0 0 0 0 0 FUNCTIONID ACTIVITYID DISTANCE	ITERATIONS	Number of single-sided interferograms to acquire in a scan sequence	2
ITERATIONS SAMPLING_INTERVAL	SAMPLING INTERVAL	Repeatedly sample the DPU counter every n units (uu) of distance along the stage's path of travel	4
VELOCITY	VELOCITY	Stage velocity (uu s <sup>-1</sup> )	4
	ACCELERATION	Stage acceleration (uu s <sup>-2</sup> )	4
ACCELERATION	COMMENTS	Comments describing this scan. This field is optional, and is	320
COMMENTS		zero-filled if not populated. If populated, the slack space in this field is also zero-filled.	
CRC	CRC	Cyclic Redundancy Check	2

#### 3.2.8.4.11 Function: Run Unidex 500 Script

Execute a sequence of events on the Unidex 500. Is analogous to running a script. Only one script can run at a time. It is used for TFTS configuration and troubleshooting (particularly during setup of the TFTS system), and likely will not be used during normal operation of the TFTS.

0	0	0	1	1					A	ΡI	D				
1	1	0	0	0		Count									
	Length = 9														
0	0	0	0	0	0	0	1	0	0	0	0	1	0	0	0
0	0	0	0	0	1	100000000000									
F	FUNCTIONID ACTIVITYID														
	SCRIPT_ID														
	CRC														

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xF8	1
ACTIVITYID	0x02	1
SCRIPT_ID	ID number of script to run on U500 (TBD)	2
CRC	Cyclic Redundancy Check	2



#### 3.2.8.4.12 Function: Abort Scan

Halt the Aerotech stage and close any open data files.

0	0	0	1	1					APID								
1	1	0	0	0		Count											
	Length = 7																
0	0	0	0	0	0	00100001000											
0	0	0	0	0	1	100000000000											
F	FUNCTIONID ACTIVITYID																
	CRC																

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xF8	1
ACTIVITYID	0x04	1
CRC	Cyclic Redundancy Check	2

#### 3.2.8.4.13 Function: Truncate Scan

While performing a batch of multiple scans, do not perform any further scans after the currently running one. In other words, truncate the current multiple-scan session.

0	0	0	1	1					A	ΡI	D				
1	1	0	0	0		Count									
	Length = 7														
0	0	0	0	0	0	00100001000									
0	0	0	0	0	100000000000										
F	FUNCTIONID ACTIVITYID														
	CRC														

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xF8	1
ACTIVITYID	0x08	1
CRC	Cyclic Redundancy Check	2

#### 3.2.8.4.14 Get TFTS Time

Request the Test FTS's system time and DPS counter time. The TM packet <u>Diagnostic Science Report – TFTS</u> <u>Time Report</u> is the response to this command.

0	0	0	1	1				1	AI	PI	D	l			
1	1	0	0	0		Count									
	Length = 7														
0	0	0	0	0	0	0	1	0	0	0	0	1	0	0	0
0	0	0	0	0	1	10000000000									
F	FUNCTIONID ACTIVITYID														
	CRC														

Parameter	Value and Comments	Size (bytes)
FUNCTIONID	0xF4	1
ACTIVITYID	0x08	1
CRC	Cyclic Redundancy Check	2

#### **3.2.9** Time Management

#### 3.2.10 TBD

Not Available.

#### 3.2.11 On-Board Scheduling

Not Used.



#### 3.2.12 On-Board Monitoring

Not Used.

#### 3.2.13 TBD

Not Available.

#### 3.2.14 Packet Transmission Control

Not Used.

#### 3.2.15 On-Board Storage and Retrieval

Not Used.

#### 3.2.16 On-Board Traffic Management

Not Used

#### 3.2.17 Test Service

#### 3.2.17.1 Perform Connection Test (Service 17,1)

This telecommand requests the TFTS to echo back the <u>Link Connection Report</u> packet. This test is used to determine if the EGSE network connection is up.

0	0	0	1	1					A	ΡI	D				
1	1	0	0	0		Count									
	Length $= 5$														
0	0	0	0	0	0	0	1	0	0	0	1	0	0	0	1
0	0000001000000000														
	CRC														

Parameter	Value and Comments	Size (bytes)
CRC	Cyclic Redundancy Check	2

#### 3.2.18 On-Board Control Procedures

Not Used.

#### 3.2.19 Action/Event Service

Not Used.

#### 3.2.20 Information Distribution Service

Not Used.

#### 3.2.21 Science Data

Not Applicable.

#### 3.2.22 Context Saving Service

Not Used.



 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 25 of 26

## 4 **TELEMETRY PACKETS**

This section defines all the TM packets that will be produced by the TFTS.

# 4.1 Telemetry Packet Types

The Packet Structure ICD (AD1) defines many types of service that can be provided by an Application. The following table shows the telemetry packet types that will be produced by the TFTS.

Description	Service Type	Service Sub-Type	Comments
Telecommand Verification Service			
Telecommand Acceptance Report - Success	1	1	
Telecommand Acceptance Report - Failure	1	2	
Telecommand Execution Report - Started	1	3	
Telecommand Execution Report - Progress	1	5	
Telecommand Execution Report - Completed	1	7	
Telecommand Execution Report - Failure	1	8	
Telecommand Contents Report	1	9	Not Used
Device Command Distribution	2		N/A
Housekeeping and Diagnostic Data Reporting			
HK Parameter Report Definitions Report	3	10	Not Used
Diagnostic Parameter Definitions Report	3	12	Not Used
Housekeeping Parameter Report	3	25	
Diagnostic Parameter Report	3	26	Not Used
Event Reporting			
Event Report	5	1	Not Used
Exception Report	5	2	
Error/Alarm Report	5	4	Not Used
Memory Management	6		Not Used
Function Management	8	4	
Time Management			
Central Time Reference	9	8	Not Used
Time Verification Report	9	9	Not Used
On-Board Scheduling	11		Not Used
On-Board Monitoring	12		Not Used
Packet Transmission Control	14		Not Used
<b>On-Board Storage and Retrieval</b>	15		Not Used
Test Service			
Link Connection Report	17	2	
On-Board Control procedures	18		Not Used
Action/Event Service	19		Not Used
Information Distribution Service	20		Not Used
Science Data			
Nominal Science Data Report	21	1	
Science Type B Data Report	21	2	Not Used
Diagnostic Science Data Report	21	3	
Auxiliary Science Data Report	21	4	Not Used
Context Saving Service	22		Not Used

**Table 6: Telemetry Packet Definitions** 



#### **Telemetry Packet Definitions**

#### 4.1.1 TC Verification Service

#### 4.1.1.1 Telecommand Acceptance Report - Success (1,1)

Upon receipt of a telecommand, the TFTS will send to the EGSE (the TC sender) a <u>Telecommand Acceptance</u> <u>Report – Success</u> packet if there are no errors detected. The errors are listed in the packet control error table shown below.

0	0	0	0 0 1 APID												
1	1	Count													
	Length = 15														
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0
						Τ	II	M]	E						
				Т	С	P	a	ck	et	Ι	D				
Т	TC_Packet_Sequence_Control														
						(	CF	R	2						

Parameter	Value and Comments	Size (bytes)
TIME	Time of TM creation	6
TC_Packet_ID	Telecommand Packet ID from TC	2
TC_Packet_Sequence_ Control	Copy of the TC's packet header sequence control bytes	2
CRC	Cyclic Redundancy Check	2

#### 4.1.1.2 Telecommand Acceptance Report - Failure (1,2)

If errors are detected in the telecommand (sent by the EGSE to the TFTS), the TFTS will respond with a (1,2) Telecommand Acceptance report. Two additional data fields, the Failure Code and Parameter fields, describe the type of error experienced. The structure of this packet depends on the type of error found in the telecommand.

#### 4.1.1.2.1 Packet Control Errors

The following TM packet is returned if FAILURE\_CODE 0 through 4 is encountered.

0	0	0	0	1					A	ΡI	D				
1	1 1 Count														
						en									
0	0000000000000001														
0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0
	TIME														
				Т	С	P	Pac	ck	et	Ι	D				
Т	C	F	Pac	ck	et	_S	sec	qu	en	ice	e	Co	on	tr	ol
	FAILURE_CODE														
	Parameter														
	_	_		_	_	(	CF	20	2	_	_		_	_	

Error	FAILURE_CODE Size=2 bytes	Parameter
Illegal APID	0	TC_PACKET_APID
Incomplete Packet or	1	TC_PACKET_
invalid Length		LENGTH
Incorrect Checksum	2	TC_PACKET_CRC
Illegal Packet Type	3	TC_PACKET_TYPE
Illegal Packet	4	TC_PACKET_
Sub-Type		SUBTYPE

Note: The parameter is placed in the least significant bits of the 16 bit 'parameter' field and the most significant bits are padded with zeros



#### **Packet Content Error (continued)**

A TM packet in the form shown below is what would be returned if FAILURE\_CODE = 5, or codes 16 through 255 are encountered.

	APID									
1 1	Count									
Le	ength = 57									
000000	000000000000000000									
000000	10000000000									
TIME										
TC	_Packet_ID									
TC Packet	Sequence Control									
FAIL	URE CODE									
TC Source Data Field										
	CRC									

Error	FAILURE_ CODE	Parameters
Illegal or inconsistent Application Data	5	See Note
TFTS busy	16	
Other TBD errors	17-255	See Note

Note: The **TC Source Data Field** contains the first 40 bytes from the 'source data' field of the received telecommand packet. If this field is less than 40 bytes in length, all bytes from the 'source data' field will be included, and the rest will be filled with zeros (0x00).

### 4.1.1.3 Telecommand Acceptance Report – Function Started (1, 3)

This telemetry packet is sent to alert the EGSE that the TFTS function (such as a multiple scan job) has started.

															_
0	0	0	0	1					A	ΡI	D				
1	1	Count													
Length = 15															
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
0	0	0	0	0	0	1	1	0	0	0	0	0	0	0	0
						Γ	TI	M	E						
				Т	С	P	a	ck	et	I	D				
Т	TC_Packet_Sequence_Control														
	_	_	_	_	_	(	CI	20	2	_	_	_	_	_	

Parameter	Value and Comments	Size (bytes)
TIME	Time of TM packet creation	6
TC_Packet_ID	Telecommand Packet ID	2
	from TC	
TC_Packet_Sequence_	Copy of the TC's packet	2
Control	header sequence control	
	bytes	
CRC	Cyclic Redundancy Check	2



## 4.1.1.4 Telecommand Acceptance Report – Progress (1, 5)

This telemetry packet is sent to the EGSE to indicate that some long-running function (taking approximately ten seconds or more) is currently running.

0	0	0	0	1					A	ΡI	D				
1	1		Count												
	Length = 17														
0	0	000000000000001													
0	0	0	0	0	1	0	1	0	0	0	0	0	0	0	0
						Τ	TI.	M	E						
				Т	С	P	a	ck	et	Ι	D				
Т	С	F	Pac	ck	et	S	leo	qu	en	ice	e	С	on	tre	ol
	STEP_NUMBER														
						(	CF	20	2						

Parameter	Value and Comments	Size (bytes)
TIME	Time of TM packet creation	6
TC_Packet_ID	Telecommand Packet ID from TC	2
TC_Packet_Sequence_ Control	Copy of the TC's packet header sequence control bytes	2
STEP_NUMBER	Stage of execution in a currently running function	2
CRC	Cyclic Redundancy Check	2

### 4.1.1.5 Telecommand Acceptance Report – Function Completed (1,7)

This telemetry packet is sent to alert the EGSE that the TFTS function (such as a multiple scan job) has completed.

0 0 0 0 1 APID	Parameter	Value and Comments	Size (bytes)
11Count	TIME	Time of TM packet creation	(
Length = 15		1 <b>1</b>	6
000000000000000000	TC_Packet_ID	Telecommand Packet ID	2
		from TC	
	TC_Packet_Sequence_	Copy of the TC's packet	2
	Control	header sequence control	
TIME		bytes	
TC Packet ID	CRC	Cyclic Redundancy Check	2
TC_Packet_Sequence_Control			
CRC			



## 4.1.1.6 Telecommand Acceptance Report – Function Failed (1,8)

This telemetry packet is sent to alert the EGSE that the TFTS function has failed or was aborted during execution.

0	0	001 APID													
1	1 1 Count														
	Length = 55														
0	000000000000000000000000000000000000000														
0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0
	TIME														
				_	÷.,	_P		_	· · ·	_	_				
Т	TC_Packet_Sequence_Control														
	TC Source Data Field														
						(	CF	R	2						

Parameter	Value and Comments	Size (bytes)
TIME	Time of TM packet creation	6
TC_Packet_ID	Telecommand Packet ID from TC	2
TC_Packet_Sequence_ Control	Copy of the TC's packet header sequence control bytes	2
TC Source Data Field	This field contains the first 40 bytes from the 'source data' field of the received telecommand packet. If this field is less than 40 bytes in length, all bytes from the 'source data' field will be included, and the rest will be filled with zeros (0x00)	40
CRC	Cyclic Redundancy Check	2

### 4.1.2 Device Command Distribution

Not Applicable.

#### 4.1.3 Housekeeping and Diagnostic Data Reporting

### 4.1.3.1 Housekeeping Parameter Report (Service 3,25)

The general packet structure is shown below. The Structure ID identifies the housekeeping packet type. Housekeeping telemetry packets are only sent during data acquisition scans.

0	0	0	0 0 1 APID												
1	1	Count													
	Length = 65 000000000000000111														
0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1
0	0	0	1	1	0	0	1	0	0	0	0	0	0	0	0
	TIME														
	SID														
	Parameters														
						(	CF	20	2						

Parameter	Value and Comments	Size (bytes)
TIME	Nominal Housekeeping Report	6
SID	Structure ID (see below)	2
Parameters	(see table on next page)	52
CRC	Cyclic Redundancy Check	2

SID (Structure ID)	Packet type	Default Frequency (msec)			
0x0301	Nominal Housekeeping Report	1000			



#### 4.1.3.2 Nominal Housekeeping Report (SID=0x0301)

The following table lists the fields that comprise the housekeeping packet's parameters block.

Parameter Name		Size (bytes)					
OBSID	Observation ID		4				
BBID	Building Block ID		4				
ITERATIONS	Number of scans to	perform in a scan sequen	ce	2			
CURR_ITERATION	Current scan iteration	on being executed		2			
CURR_VELOCITY	Requested velocity	of current scan iteration		4			
CURR_ACCELERATION	Requested accelerat	ion of current scan iteration	on	4			
CURR_SAMP_INTERVAL		g interval of current scan i		4			
CURR_DISTANCE	Requested scan dist	tion	4				
CURR_POSITION	Position of stage in		4				
DPU_COUNTER_TIME	315 KHz (DPU) tin	sition	4				
NUM_TC	Number of telecom		4				
NUM_TM		Number of telemetry packets sent by TFTS					
DIRECTION	Stage movement dir	rection		2			
	ТОР	0x0000					
	BOTTOM	0x0001					
TASK STATUS	TFTS software state		2				
_	IDLE	0x0000					
	SCANNING						
	ERROR 0x0002						
U500_HW_STATUS	State of Unidex 500	hardware		4			

#### **Table 7: Nominal Housekeeping Report Fields**

#### 4.1.4 TBD

Not Available.

## 4.1.5 Event Reporting

#### 4.1.5.1 Event Report (5,1)

Not Used.



## 4.1.5.2 Exception Report (5,2)

#### 4.1.5.2.1 DPU Counter Error

This packet is generated in the event of the TFTS control software receiving an error from the DPU counter hardware.

0 0 0 0 1 APID												
1 Count												
Length = 35												
0000000000000101												
000001000000000000												
TIME												
EVENTID = 0x0002												
OBSID												
BBID												
ITERATIONS												
CURR_ITERATION												
NUM_TC												
—												
NUM_TM												
_												
DPU_COUNTER_ERR												
CRC												

Parameter	Comment	Size (bytes)
TIME	Time of TM packet creation	6
EVENTID	Type of event $= 0x0002$	2
OBSID	Observation ID	4
BBID	Building Block ID	4
ITERATIONS	Number of scans to perform in a scan sequence	2
CURR_ITERATION	Current scan iteration being executed	2
NUM_TC	Number of telecommands received	4
NUM_TM	Number of telemetry packets sent	4
DPU_COUNTER_ERR	Identity of DPU counter error: 0x0001 = Cannot read clock 0x0002 = Clock not incrementing 0x0004 = counter overflow 0x0008 = TBD	2
CRC	Cyclic Redundancy Check.	2



**SPIRE Test Facility FTS Data ICD** 

#### 4.1.5.2.2 Unidex 500 Error

This packet is generated in the event of the TFTS control software receiving an error from the Unidex 500 motion control card.

0 0 0 0 1 APID												
1 1 Count												
Length = 37												
0000000000000101												
0000010000000000												
TIME												
EVENTID = 0x0003												
OBSID												
BBID												
ITERATIONS												
CURR ITERATION												
NUM TC												
—												
NUM_TM												
U500_HW_STATUS												
U500_SW_STATUS												
CDC												
CRC												

Parameter	Comment	Size (bytes)
TIME	Time of TM packet creation	6
EVENTID	Type of event (0x0003)	2
OBSID	Observation ID	4
BBID	Building Block ID	4
ITERATIONS	Number of scans to perform in a scan	4
	sequence	
CURR_ITERATION	Current scan iteration being executed	2
NUM_TC	Number of telecommands received	2
NUM_TM	Number of Telemetry packets sent	4
U500_HW_STATUS	State of Unidex 500 hardware	4
U500_SW_STATUS	Reports Unidex 500 device driver error	4
CRC	Cyclic Redundancy Check.	2

#### 4.1.6 Memory Management

Not Used.

#### 4.1.7 TBD

Not Available.

#### 4.1.8 Function Management

Not used.

### 4.1.9 Time Management

#### 4.1.9.1 Central Time Reference (Service 9,8)

Not used.

#### 4.1.10 TBD

Not Available.



 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 33 of 34

### 4.1.11 On-Board Scheduling

Not Used.

### 4.1.12 On-Board Monitoring

Not Used.

### 4.1.13 TBD

Not Available.

## 4.1.14 Packet Transmission Control

Not Used.

## 4.1.15 On-Board Storage and Retrieval

Not Used.

### 4.1.16 TBD

Not Available.



#### 4.1.17 Test Service

# 4.1.17.1 Link Connection Report (Service 17,2)

0	0	001 APID													
1	1	Count													
Length = 11															
0	0	0	00000000010001												
0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0
TIME															
						(	CF	20	2						

Parameter	Value and Comments	Size (bytes)
TIME	Time of TM packet creation	6
CRC	Cyclic Redundancy Check	2

This function is analogous to a "ping" command used to test TCP/IP connections. When the TFTS receives a <u>Perform Connection Test</u> telecommand, it responds by sending this telemetry packet.

#### 4.1.18 On-Board Control Procedures

Not Used.

#### 4.1.19 Action/Event Service

Not Used.

#### 4.1.20 Information Distribution Service

Not Used.



**SPIRE Test Facility FTS Data ICD** 

#### 4.1.21 Science Data

## 4.1.21.1 Nominal Science Report (Service 21, 1)

This telemetry represents the data returned from a scan, and can consist of one or more Nominal Science Report packets.

0	0	0	0	1					A	PI	D				
х	х						(	Co	ur	nt					
				L	er	ıg	th	=	1	01	7				
0	0	0	0	0	0	0	0	0	0	0	1	0	1	0	1
0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0
						Τ	Ĩ	M]	Е						
							SI	D							
						0	В	SI	D						
						F	BB	BII	)						
				ľ	ΓF	ER	A	T	[0]	N	S				
		(	CU	JR	R	_]	[T	EI	R	١	][	١C	I		
						-				E					
			(	Ľ	JR	R	I	PA	C	K	E	Г			
						_				١P					
	Ι	DF	U	_(	C	JU	JN	JT	Έ	R_	_T	'IN	Лł	Ξ	
				S	A.	M	ΡI	JE	[_]	PC	DS	•			
						(	CF	20	2						

The data fields DPU\_COUNTER\_TIME and SAMPLE\_POS (in grey) represent a single sample tuple. It repeats the number of times defined in NUM\_DATAPTS

Parameter	Comment	Size (bytes)
TIME	Time of TM packet creation	6
SID	Structure ID. Value = TBD	2
OBSID	Observation ID	4
BBID	Building Block ID	4
ITERATIONS	Number of scans to perform in a scan sequence	2
CURR_ITERATION	Current scan iteration being executed	2
TOT_PACKETS	Number of packets in a scan	2
CURR_PACKET	Current packet number (out of a total of <b>n</b> packets)	2
NUM_DATAPTS	Number of data points in this packet	2
DPU_COUNTER_TIME	Time of sample (taken from DPU Counter in $3.17 \ \mu s$ increments)	4
SAMPLE_POS	Table Position (in uu)	4
CRC	Cyclic Redundancy Check.	2

**NOTE**: This report returns multiple (segmented) fixed-size data packets to the EGSE, and is the response to the <u>Acquire Single-Sided</u> <u>Interferogram Scan</u> function. The segmentation flag is set to 11. Since telemetry packet cannot be larger than 1024 bytes, and the nondata portion of this packet is 38 bytes large, there are 986 bytes available for data (8 byte time-position pairs). Up to 123 time-position pairs can be stored. If the data set contains more than 123 data samples, the data set will be spanned across multiple Nominal Science Report packets. Since these packets are fixed size, containing 123 'slots' for data samples, the final packet may contain less than 123 samples (if the number of data samples is not a multiple of 123). In this case, the remaining slots are filled with zeros.



#### 4.1.21.2 Diagnostic Science Report (Service 21, 3)

#### 4.1.21.2.1 Return Test Facility FTS Status (SID = 0x0001)

This type of telemetry packet contains the current status of the TFTS system and Unidex 500 motion control card. It is the response to the <u>Read TFTS Status</u> telecommand.

0 0 0 0 1 APID	
1 1 Count	
Length = 41	
0000000000010101	1
0000001100000000	C
TIME	
SID	
OBSID	1
BBID	
ITERATIONS	
CURR_ITERATION	
NUM_TC	
NUM_TM	
U500_HW_STATUS	
U500_SW_STATUS	
CRC	

Parameter	Comment	Size (bytes)
TIME	Time of TM packet creation	6
SID	Structure ID: Value = $0x0001$	2
OBSID	Observation ID	4
BBID	Building Block ID	4
ITERATIONS	Number of scans to perform in a scan	2
	sequence	
CURR_ITERATION	Current iteration in scan being executed	2
NUM_TC	Number of telecommands received	4
NUM_TM	Number of Telemetry packets sent	4
U500_HW_STATUS	State of Unidex 500 hardware	4
U500_SW_STATUS	Reports Unidex 500 device driver error	4
CRC	Cyclic Redundancy Check	2



# SPIRE Test Facility FTS Data ICD

 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 37 of 38

The U500_HW_STATUS word is a 32-bit word of bit flag	s, representing the internal state of the Unidex 500.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	$0_{LSB}$
31 <sub>MSB</sub>	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16

Bit	Set (1)	Clear (0)
0	Axis 1 enabled	Axis 1 disabled
1	Axis 1 not in position	Axis 1 in position
2	Command in plane 1 executing <sup>b</sup>	No commands executing in plane 1
3	Plane 1 command queue is not empty <sup>c</sup>	Plane 1 command queue is empty
4	Plane 1 halted	Plane 1 running
5	Global abort active	Global abort not active
6	Feedhold active	Not active
7	PC bus interrupt high	PC bus interrupt not high
8	Not ready for next command, as the command is in the internal receive buffer and has not yet been moved to the appropriate plane. Software should wait for this bit to be cleared when checking for command completion.	Command has been completed (due to no command in internal receive buffer); ready for next command.
9-15	Not Used	
16	Position error	No fault
17	RMS current error	No fault
18	Integral error	No fault
19	+ hardware limit error (top of stage)	No fault
20	- hardware limit error (bottom of stage)	No fault
21	+ software limit error (top of stage)	No fault
22	- software limit error (bottom of stage)	No fault
23	Driver fault	No fault
24	Feedback device error	No fault
25	Global abort active	Global abort inactive
25	Federate > max setting error	No fault
26	Velocity error	No fault
27	Emergency stop	No fault
28	Driver interlock open	No fault
29-31	Not Used	
<sup>b</sup> A plan manual	00 Users Manual, chapter 13: Troubleshooting, for descr e is analogous to a thread of program execution. S for a full explanation. The TFTS software runs un pty queue means that there are no unprocessed con	ee section 5.4.1 (pp 5-14) of the Unidex 500 Users der a single plane of execution.
	ng commands.	initialities. If the queue is marked not empty, it is

Table 8: Unidex 500 Hardware Status Word



# SPIRE Test Facility FTS Data ICD

 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 38 of 39

The following table lists all possible Unidex 500 software errors that can be generated. Only some errors listed below will be generated during operation of the TFTS. This table is provided for reference.

Error Code	Description
0x00000000	Command OK
0xE0021000	(DRV) Function no longer supported
0xE0021001	(DRV) Timeout waiting to read data from U500
0xE0021002	(DRV) Timeout waiting to write data to U500
0xE0021003	(DRV) Timeout waiting for command vector acknowledge
0xE0021004	(DRV) Board Checksum Feedback Error
0xE0021005	(DRV) System download communication error
0xE0021006	(DRV) Command not taken out of buffer (HF2 = 1)
0xE0021007	(DRV) DSP Read Timeout1
0xE0021008	(DRV) DSP Read Timeout2
0xE002100A	(DRV) QuickStat: Timeout waiting for previous command vector to clear
0xE002100B	(DRV) QuickStat: Timeout waiting for this command vector to clear
0xE002100C	(DRV) QuickStat: Timeout waiting for response to this command vector
0xE0021010	(DRV) PSO Initialize Error
0xE0021011	(DRV) PSO Not Initialized
0xE0022001	Out of Memory
0xE0022003	Invalid Firmware file
0xE0022004	Invalid Parameter file
0xE0022005	Invalid Plane
0xE0022006	Invalid Axis
0xE0022007	Invalid Parameter
0xE0022008	Invalid K value
0xE0022009	Invalid Scale value
0xE002200A	Invalid N/D value
0xE002200B	Invalid Notch value
0xE002200C	Invalid Deadband value
0xE002200D	Invalid Clamp value
0xE002200E	Invalid Flag
0xE002200F	Axis not enabled
0xE0022010	Circle Format Error
0xE0022011	Voltage Out of Range
0xE0022012	U500 Plus required
0xE0022014	PSO not initialized
0xE0022015	Axis not defined in this Plane
0xE0022016	CRC radius not defined
0xE0022017	CRC Axes not defined
0xE0022018	CRC Buffer full
0xE0022019	U500 Ultra required
0xE002201B	PSO Mailbox full
0xE002201C	Invalid Calibration file
0xE002201D	Feedrate is ZERO
0xE002201E	Invalid parameter number
0xE0022020	Calibration file format error
0xE0022021	Argument too large
0xE0022022	Incorrect gate array configuration
0xE0022023	PSO command not supported
0xE0022024	Invalid argument
0xE0022028	Invalid axis specified



# SPIRE Test Facility FTS Data ICD

Ref:SPIRE-UoL-PRJ-<br/>001452Issue:Version 1.1Date:January 28, 2003

**Page:** 39 of 40

0xE0022029Power value less than zero0xE002202AThreshold value not found0xE002202BToo many low threshold samples0xE002202CPeak value not found0xE002202DNo horizontal edge found0xE002202ENo vertical edge found0xE002202FMaximum allowed iterations exceeded	
0xE002202BToo many low threshold samples0xE002202CPeak value not found0xE002202DNo horizontal edge found0xE002202ENo vertical edge found	
0xE002202C     Peak value not found       0xE002202D     No horizontal edge found       0xE002202E     No vertical edge found	
0xE002202D         No horizontal edge found           0xE002202E         No vertical edge found	
0xE002202E No vertical edge found	
0xE002202F Maximum allowed iterations exceeded	
0xE0022030 Invalid A/D channel specified	
0xE0022031 Argument outside allowed range	
0xE0022033 Could not open board	
0xE0022034 Device Driver not running	
0xE0022035 File Error	
0xE0022036 Could not calculate Gains	
0xE0022037 Could not open registry Key	
0xE0022038 Could not create Thread	
0xE0022039 Fast Align Positive Limit Axis 1	
0xE002203A Fast Align Negative Limit Axis 1	
0xE002203B Fast Align Positive Limit Axis 2	
0xE002203C Fast Align Negative Limit Axis 2	
0xE002203D Fast Align Positive Limit Axis 3	
0xE002203E Fast Align Negative Limit Axis 3	
0xE002203F Fast Align Positive Limit Axis 4	
0xE0022040 Fast Align Negative Limit Axis 4	
0xE0022041 Power Reading Saturated	
0xE0022042 No Z edge found	
0xE0022050 VPP: Duplicated Axis Map	
0xE0022051 VPP: Invalid Axis Type	
0xE0022052 VPP: Invalid Motion Matrix	
0xE0022053 VPP: Invalid Fiber Tip Matrix	
0xE0022054 VPP: Invalid Virtual Motion Matrix	
0xE0022055 VPP: Invalid Property	
0xE0022056 VPP: Invalid Axis	
0xE0022057 VPP: Invalid Config File	
0xE0022058 VPP: Axis Off Limit	
0xE0022059 VPP: Channel Width CW Limit	
0xE002205A VPP: Channel Width CCW Limit	
0xE002205B VPP: Channel Height CW Limit	
0xE002205C VPP: Channel Height CCW Limit	
0xE0022100 Obsolete Error Code	
0xE0022101 Function no longer supported	

Table 9: Unidex 500 Software Errors



#### 4.1.21.2.2 Diagnostic Science Report – Unidex 500 Parameter Report (SID=0x0002)

This telemetry packet contains a Unidex 500 parameter, as requested by the telecommand <u>Read Unidex 500</u> <u>Parameter</u> telecommand.

0	0	0	0	1					A	PI	D				
1	1	1 Count													
							gt								
0	0	0	0	0	0	0	0	0	0	0	1	0	1	0	1
0	0	0	0	0	0	1	1	0	0	0	0	0	0	0	0
						T	II	<b>M</b> ]	Е						
							SI	D							
						0	B	SI	D						
						F	BB	II	)						
		l	J5	00	)	P/	٩F	RA	M	1E	T	EI	2		
				Ι	DA	١	Ά	Т	Y	PE	3				
						(	CF	RC	2						

Parameter	Com	ment	Size (bytes)
TIME	Time of TM packet	6	
SID	Structure ID: Value	2	
OBSID	Observation ID	4	
BBID	Building Block ID	4	
U500_PARAMETER	The returned parame an ASCII string, nul field is fixed length, are filled with zeros.	48	
DATATYPE	The datatype of the r parameter. 0x0001 0x0002 0x0004	2	
CRC	Cyclic Redundancy	Check.	2

#### 4.1.21.2.3 Diagnostic Science Report – TFTS Time Report (SID=0x0004)

This packet contains the TFTS PC's system time and the count on the DPU counter, and is the response to the <u>Get</u> <u>TFTS Time</u> telecommand.

0 0 0 0 1 APID 1 1 Count							
Length = 33							
00000000000010101							
000001100000000000000							
TIME							
I IIVIL							
SID							
SID							
OBSID							
BBID							
PC_SYSTEM_TIME							
DPU COUNTER TIME							
TIME SINCE DPU							
COUNTER RESET							
CRC							

Parameter	Comment	Size (bytes)
TIME	Time of TM packet creation	6
SID	Structure ID: Value = $0x0004$	2
OBSID	Observation ID	4
BBID	Building Block ID	4
PC_SYSTEM_TIME	PC System time on TFTS	4
DPU_COUNTER_TIME	Count on DPU counter	4
TIME_SINCE_DPU_	Elapsed time since the last DPU	4
COUNTER_RESET	counter reset	
CRC	Cyclic Redundancy Check.	2



SPIRE Test Facility FTS Data ICD

 
 Ref:
 SPIRE-UoL-PRJ-001452

 Issue:
 Version 1.1

 Date:
 January 28, 2003

 Page:
 41 of 42

## 4.1.22 Context Saving Service

Not Used.



# **5 PARAMETERS**

# 5.1 TC Parameters

## 5.1.1 Parameter Definition

Parameter Name	Service	Туре	Size	Conversion	Constraint	Comments
	Reference		(bits)	Curve	Table	
ACTIVITYID	(8,4)	UINT	8	None	0 to $2^8$ -1	Defines activity to perform.
APID	ALL	UINT	11	None	0x7F5	Application ID.
CRC	ALL	UINT	16	None	0 to $2^{16}$ -1	Cyclic Redundancy Check.
OBSID	(8,4)	UINT	32	None	0 to $2^{32}$ -1	Observation ID
BBID	(8,4)	UINT	32	None		Building Block ID: Field is split into 3 parts
BBINTR		constant	2		0 to 3	Location: Bits 0-1 Value:2
BBTYPE		UINT	14		0 to $2^{14}$ -1	Location: Bits 2-15
BBCOUNT		UINT	16		0 to $2^{16}$ -1	Location: Bits 16-31
FUNCTIONID	(8,4)	UINT	8	None	0 to $2^8$ -1	Defines activity to perform.
Length	ALL	UINT	16	None	0 to $2^{16}$ -1	Number of bytes contained in packet data field.
DISTANCE	(8,4)	UINT	32	10 nm = 1	0 to	Distance the Aerotech stage travels.
				unidex unit (uu)	20,000,000	
DIRECTION	(8,4)	UINT	16	None	0, 1	Direction that Aerotech stage travels.
VELOCITY	(8,4)	UINT	32	uu/s	1 to 5,500,000	Velocity at which Aerotech stage travels.
ACCELERATION	(8,4)	UINT	32	$uu/s^2$	1 to 100,000	Acceleration at which Aerotech stage performs movement.
ITERATIONS	(8,4)	UINT	16	None	0 to $2^{16}$ -1	Number of scans to perform in a scan sequence.
SAMPLING_INTERVAL	(8,4)	UINT	32	uu	1 to	Distance interval in which to repeatedly take DPU time
_					8,388,607	samples.
PARAM_NUM	(8,4)	UINT	16	None	1 to 501,	Unidex 500 parameter ID number to read/modify
_					600, 601	
COMMENTS	(8,4)	char	320*8	None	max 320 ASCII	Comments that describe a particular scan – contains ASCII
					characters	text. Unused space is zero-filled.
DATATYPE	(8,4)	UINT	16	None	1, 2, 4	The datatype that the Unidex 500 expects the parameter (to
						be written) to be. See Unidex 500 manual for details.



# SPIRE Test Facility FTS Data ICD

Ref:	SPIRE-UoL-PRJ-
	001452
Issue:	Version 1.1
Date:	January 28, 2003
Page:	43 of 44

SCRIPT_ID	(8,4)	UINT	16	None	TBD	ID number of script to be executed on the Unidex 500.
Count	ALL	UINT	11	None	0 to $2^{11}$ -1	Telecommand packet sequence number.
RESET_MODE	(8,4)	UINT	16	None	1, 2, 4	Type of TFTS reset to perform.
PARAM_VALUE	(8,4)	Char	48 * 8	None	Max 48	The value to populate a Unidex 500 parameter with.
_					ASCII chars	

# 5.2 TM Parameters

#### 5.2.1 Parameter Definition

Name	Length (bits)	Conversion	Limits	Description	
NUM_TC	32	None	0 to $2^{32}$ -1	Number of telecommand packets received by the TFTS.	
NUM_TM	32	None	0 to $2^{32}$ -1	Number of telemetry packets sent by the TFTS.	
DIRECTION	16	None	0, 1	Direction of travel of the Aerotech table.	
TASK_STATUS	16	None	0, 1, 2	State of TFTS software – running a scan / initialization, waiting for commands,	
				or error.	
U500_HW_STATUS	32	None	0 to $2^{32}$ -1	Status word of Unidex 500. This value describes the state of the hardware of	
				the Unidex 500.	
U500_SW_STATUS	32	None	0 to $2^{32}$ -1	Reports device driver errors and state of the Unidex 500 control software.	
CURR_VELOCITY	32	uu/s	1 to 5,500,000	Requested velocity of the current scan iteration.	
CURR_ACCELERATION	32	uu/s <sup>2</sup>	1 to 100,000	Requested acceleration of current scan iteration.	
CURR_SAMP_INTERVAL	32	uu	1 to 8,388,607	Requested sampling interval of current scan iteration.	
CURR_DISTANCE	32	uu	0 to	Requested scan distance of current scan iteration.	
			20,000,000		
CURR_POSITION	32	uu	0 to	The position of the stage in the current scan iteration.	
			20,000,000		
EVENTID	16	None	0 to $2^{32}$ -1	Type of exception raised by TFTS.	
PC_SYSTEM_TIME	32	Seconds	0 to $2^{32}$ -1	TFTS's PC clock time (time in 1980 epoch time)	
DPU_COUNTER_TIME	32	Counter	0 to $2^{32}$ -1	DPU counter value – driven by 315 kHz DPU clock signal	
		increments			
U500_PARAMETER	8 * 48	None	Max 48 ASCII	Value of requested Unidex 500 parameter – returned as a NULL terminated	
			characters	ASCII string.	




SPIRE Test Facility FTS Data ICD

# Ref:SPIRE-UoL-PRJ-<br/>001452Issue:Version 1.1Date:January 28, 2003

 Date:
 standary 20, 2003

 Page:
 44 of 45

DATATYPE	16	None	1, 2, 4	Datatype of requested Unidex parameter – defines how the parameter should be interpreted.
APID	11	None	0x7F5	Application ID.
CRC	16	None	0 to $2^{16}$ -1	Cyclic Redundancy Check.
Length	16	None	0 to $2^{16}$ -1	Number of bytes in telemetry packet's data field.
Count	14	None	0 to $2^{14}$ -1	Telemetry packet sequence number.
TIME	48	Seconds	0 to $2^{32}$ -1	Time that the telemetry packet was created.
FAILURE_CODE	16	None	TBD	Reasons for failure of acceptance of a telecommand.
TC_PACKET_APID	16	None	0x7F5	A failure code: APID of TM's corresponding TC.
TC_PACKET_LENGTH	16	Number of	5 to 1017	A failure code: Length data field of TM's corresponding TC.
		bytes	(no packet greater than 1024 bytes)	
TC_PACKET_CRC	16	None	0 to $2^{16}$ -1	A failure code: CRC value of TM's corresponding TC.
TC_PACKET_TYPE	8	None	0 to $2^{8}$ -1	A failure code: TC packet type of TM's corresponding TC.
TC_PACKET_SUBTYPE	8	None	0 to $2^{8}$ -1	A failure code: TC packet sub-type of TM's corresponding TC.
TC_Packet_Sequence_	16	None	0 to $2^{16}$ -1	A copy of the TC packet header sequence control bytes (17 <sup>th</sup> thru 32 <sup>nd</sup> bit) to
Control				which this TM replies.
TC_Packet_ID	16	None	0 to $2^{16}$ -1	Telecommand Packet ID: copy of the corresponding field from the packet
				header of the TC to which this TM replies.
SID	16	None	0 to $2^{16}$ -1	Structure ID
OBSID	32	None	0 to $2^{32}$ -1	Observation ID (facilitates telemetry to be ingested into HCSS database).
BBID	32	None	0 to $2^{32}$ -1	Building Block ID (facilitates telemetry to be ingested into HCSS database).
ITERATIONS	16	None	0 to $2^{16}$ -1	Number of scans to perform in a scan sequence.
CURR_ITERATION	16	None	0 to $2^{16}$ -1	Current iteration in scan being executed.
TIME_SINCE_DPU_	32	Seconds	0 to $2^{32}$ -1	Elapsed time since the last DPU counter reset.
COUNTER_RESET				
DPU_COUNTER_ERR	16	None	1,2,4,8	Identity of DPU counter error.
TOT_PACKETS	16	None	0 to $2^{16}$ -1	Number of packets in a scan.
CURR_PACKET	16	None	0 to $2^{16}$ -1	Current packet number (out of a total of n packets).
NUM_DATAPOINTS	16	None	0 to $2^{16}$ -1	Number of data points in the current Nominal Science Report TM packet.
SAMPLE_POS	32	None	0 to $2^{32}$ -1	Position of the Aerotech stage at a given time.
STEP_NUMBER	16	None	0 to $2^{16}$ -1	The stage of execution in a currently running scan.
TC Source Data Field	40 * 8	None	Max 40 ASCII	The first 40 bytes of the TC's source data field.
			chars	

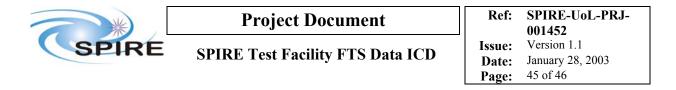

#### 5.2.2 Conversion Curve

Name	Туре	Raw Value	Converted Value	Units	Comments
TBD					

#### 5.2.3 Constraints

TBD