Doc No. :PT-HMOC-OPS-FOP-6001-OPS-OAH

Fop Issue : 3.0
Issue Date: 13/04/10

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: Liviu Stefanov





Procedure Summary

Objectives

This Herschel OBSM nominal procedure is used to perform the dump monitoring of one or several HIFI DPU PRAM memory areas. The memory dump is commanded using TC(6,5) and the memory locations content is received on ground in TM(6,6) packets. The procedure assumes that the command stack has already been generated using the OBSM system and is ready for loading on the Manual Stack. The command stack generation activity is not covered by this procedure.

Summary of Constraints

CDMU in Operational Mode

- HIFI in Intermediate mode (ASW running)

Memory areas are dumped through TC(6,5); this TC will be delayed when there is an ongoing:

- TC(6,2) Load Memory Using Absolute Addresses
- TC(6,5) Dump Memory Using Absolute Addresses
- TC(6,9) Check Memory Using Absolute Addresses
- TC(8,4,1,1) Copy Memory

Spacecraft Configuration

Start of Procedure

CDMU in Operational Mode

- HIFI in Intermediate mode (ASW running)

End of Procedure

Same as start

Reference File(s)

Input Command Sequences

Output Command Sequences

OFCP3142

Referenced Displays

ANDS GRDS SLDS

Configuration Control Information

DATE	FOP ISSUE	VERSION	MODIFICATION DESCRIPTION	AUTHOR	SPR REF
30/01/08	1	1	Created	Istefanov-hp	
27/08/08			added current steps 3.1 and 3.2 to separate dump stack load for HIFI Nom and Red current step 3.3 updated: TC HC004289 replaced by ESOC HIFI mem. dump TC XC005998 added steps 4.2.1 and 4.2.2 to separate image selection for HIFI Nom and Red added steps 8.2.1 and 8.2.2 to separate image selection for HIFI Nom and Red	Istefanov-hp	

Status : Version 4 - Unchanged

Last Checkin: 13/04/09 Page 1 of 10

Doc No. :PT-HMOC-OPS-FOP-6001-OPS-OAH
Fop Issue : 3.0 Issue Date: 13/04/10

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: Liviu Stefanov





27/08/08	2	steps 3.1 and 3.2 updated: corrected typos in file name examples in 3rd comment - PI replaced by DI step 3.3 updated: changed 2nd comment to reflect the 16 bit length of the Mem ID param. of TC XC005998	Istefanov-hp	
13/04/09	2.3	corrected typo in steps 3.1, 3.2: 'pmcsops' replaced by 'hmcsops' step 3.3 updated: added comment to indicate the size of the whole memory area	Istefanov-hp	

Status : Version 4 - Unchanged

Page 2 of 10 Last Checkin: 13/04/09

Doc No. :PT-HMOC-OPS-FOP-6001-OPS-OAH Fop Issue : 3.0

Issue Date: 13/04/10


Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls
Author: lstefanov-hp





Procedure Flowchart Overview

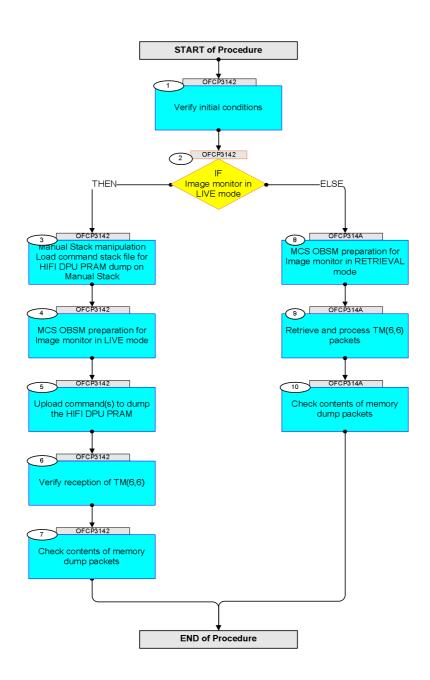

Status : Version 4 - Unchanged

Last Checkin: 13/04/09

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: lstefanov-hp





Step					
No.	Time	Activity/Remarks Beginning of Procedure	TC/TLM	Display/ Branch	AIT Comment
		TC Seq. Name : OFCP3142 ()			
	OFCP3142	HIFI DPU PRAM dump monitoring in Live mode			
		TimeTag Type: B Sub Schedule ID:			
1		Verify initial conditions		Next Step:	
				_	
		Check HIFI instrument in Intermediate mode (ASW			
		running)			
		Instrument SOE to confirm HIFI instrument mode			
2		IF		Next Step: THEN 3	
		Image monitor in LIVE mode		ELSE 8	
		type: [If]			
3		Manual Charle manipulation		Next Step:	
3		Manual Stack manipulation Load command stack file for HIFI DPU PRAM dump on Manual Stack		4	
		Manual Stack			
		NOTE:			
		The current procedure assumes that the memory dump in Live mode is performed using commands with immediate			
		execution.			
		Select the File -> LoadStack option from the main			
		menu of the Manual Stack window			
3.1		IF			
		HIFI Nominal			
		Select file			
		HIDPRMPG_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss.			
		machine			
		from directory			
		/home/hmcsops/HPMCS/SESSION/current/data/CMD/STACKS/OB			
		SM/HIDPRMPG			
		as indicated by the OBSM engineer			
		IMPORTANT:			
		XXXXYYYY = Image ID(X) and Version(Y) - depend on			
		image used for stack generation			
		YYYY_DDD hhmmss - depend on stack generation time			
		machine - depends on the name of the machine used for stack generation			

Status : Version 4 - Unchanged Last Checkin: 13/04/09

Doc No. :PT-HMOC-OPS-FOP-6001-OPS-OAH
Fop Issue: 3.0
Issue Date: 13/04/10

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: lstefanov-hp





Page 5 of 10

Step No.	Time	Agtivity/Poposity	TC/TLM	Display/ Branch	AIT Comment
NO.	Time	Activity/Remarks File name examples	1С/11И	Dispiny/ Branch	AII Comment
		- No model associated to the memory image:			
		HIDPRMPG_DI_0002001_N_NoModel_NoModel_2007_254T123300.sun043			
		- CT HIDPRMPG1, ID 0003, Version 001 associated to the memory image:			
		HIDPRMPG_DI_0002001_C_HIDPRMPG1_0003001_2007_337T09332 0.sun043			
3.2		ELSE HIFI Redundant			
		Select file			
		HIDPRMPR_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss.machine			
		from directory			
		/home/hmcsops/HPMCS/SESSION/current/data/CMD/STACKS/OB SM/HIDPRMPR			
		as indicated by the OBSM engineer			
		IMPORTANT:			
		XXXXYYYY = Image ID(X) and Version(Y) - depend on image used for stack generation			
		YYYY_DDD hhmmss - depend on stack generation time			
		machine - depends on the name of the machine used for stack generation			
		File name examples			
		- No model associated to the memory image:			
		HIDPRMPR_DI_0002001_N_NoModel_NoModel_2007_254T123300.sun043			
		- CT HIDPRMPR1, ID 0003, Version 001 associated to the memory image:			
		HIDPRMPR_DI_0002001_C_HIDPRMPR1_0003001_2007_337T09332 0.sun043			
3.3		Check memory dump command stack loaded			
		Note:			
		for the whole HIFI DPU PRAM dump:			
		MemID = 00 hex Start Address = 00.0000 hex End Address = 07.FFFF hex			
		Length = 80000 hex			
		Check that loaded stack contains one or several TCs xC005998			

Status : Version 4 - Unchanged Last Checkin: 13/04/09

Last Checkin: 13/04/09

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: lstefanov-hp





No. Time Display the Name Artivity/Newarths To To To To To To To T	ep Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
Note: The Memory ID of the target memory device is stored in the MSB of the 16-bit long Mem ID TC parameter. The LOB of the Same parameter carries the most significant 8 bits of the Start Address. Execute Telecommand **RIFI Memory Dump** **Command Farameter(s): **Memory ID Memory Dump** **Command Farameter(s): **Memory ID Memory Dump** **Command Farameter(s): **Memory ID Memory ID MEMORY ID Memory Dump** **Command Farameter(s): **Memory ID Memory	D: tl	Display the Manual Stack in 'Full mode' and check that the Memory ID parameter in the XC005998 command(s) is		propray/ branch	ATT Comment
The Memory ID of the target memory device is stored in the MSB of the 16-bit long Mem ID To parameter. The LSB of the same parameter carries the most significant 8 bits of the Start Address. Recute Telecommand	M	memory ID = 00 hex			
Command Parameter(s): Memory ID XH008998 NH009998 NH008998 NH009998 NH0099998 NH00999998 NH00999998 NH0099999999999999999999999999999999999	Ti tl Ti	The Memory ID of the target memory device is stored in the MSB of the 16-bit long Mem ID TC parameter. The LSB of the same parameter carries the most			
Command Parameter(s): **Memory ID** Start Address XH009998 Length XH010998 **Chex> (Def) **Chex (Def) **C	E:		wa005000	TC	
Note: It is assumed that the OBSM application is already running and the OBSM pepilication is not covered by the current procedure. Select 'Image Monitor' from the menu	G		XC005996		
Subsch. ID: 70 Det. descr.: Dump HIFI Memory Using Absolute Addresses This Telecommand will not be included in the export MCS OBSM preparation for Image monitor in LIVE mode Next Step: Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. 4.2 Select image to be monitored		Memory ID XH008998 Start Address XH009998	<hex> (Def)</hex>		
Subsch. ID: 70 Det. descr.: Dump HIFI Memory Using Absolute Addresses This Telecommand will not be included in the export MCS OBSM preparation for Image monitor in LIVE mode Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. 4.1 Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. 4.2 Select image to be monitored	T				
Addresses This Telecommand will not be included in the export Most	S				
MCS OBSM preparation for Image monitor in LIVE mode Note:	Ac	Addresses			
MCS OBSM preparation for Image monitor in LIVE mode Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. 4.1 Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. 4.2 Select image to be monitored	Ti	his Telecommand will not be included in the export			
Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. 4.1 Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. 4.2 Select image to be monitored				Next Step:	
It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. 4.1 Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. 4.2 Select image to be monitored	1	MCS OBSM preparation for Image monitor in LIVE mode		5	
4.1 Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. 4.2 Select image to be monitored	It ro c: St	It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the			
From the Image menu, select Monitor. The 'Image Catalog' window opens. 4.2 Select image to be monitored 4.2.1 IF					
From the Image menu, select Monitor. The 'Image Catalog' window opens. 4.2 Select image to be monitored 4.2.1 IF					
The 'Image Catalog' window opens. 4.2 Select image to be monitored 4.2.1 IF	Se	select the Image menu of the <i>OBSM Desktop</i> .			
4.2.1 IF					
	2 :	Select image to be monitored			
Select the image to be monitored for the memory device HIDPRMPG.					
The 'Image MONITOR' window opens.	T	he 'Image MONITOR' window opens.			

Status : Version 4 - Unchanged Last Checkin: 13/04/09

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: lstefanov-hp





Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
4.2.2		ELSE HIFI Redundant			
		Select the image to be monitored for the memory device HIDPRMPR. The 'Image MONITOR' window opens.			
4.3		Start dump TM processing			
		In LIVE mode, processing of incoming real-time telemetry starts automatically after the image selection.			
5		Upload command(s) to dump the HIFI DPU PRAM		Next Step: 6	
		Uplink the XC005998 memory dump command(s) with ARM-GO			
		For each command, one or more $TM(6,6)$ packets must be received on ground.			
6		Verify reception of TM(6,6)		Next Step:	
		Note: One or more TM(6,6) packets will be received for each memory dump command uplinked.			
6.1		IF HIFI Prime			
		Verify Packet Reception HIFI_memory_dump Packet Mnemonic: H_mem_dump APID: 1024 Type: 6 Subtype: 6 PI1: PI2:			
6.2		ELSE HIFI Redundant			

Status : Version 4 - Unchanged Last Checkin: 13/04/09

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: lstefanov-hp





Step	mi	Against the Parameter	TIC /TIT M	Dignlar / Ducy -	ATT Comment
No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
		Verify Packet Reception			
		HIFI_R_memory_dump Packet Mnemonic: H_mem_dump			
		APID: 1025 Type: 6			
		Subtype: 6			
		PI1 : PI2 :			
6.3		Check OBSM dump packet processing			
		Check that the OBSM is processing the incoming memory dump packets.			
				Next Step:	
7		Check contents of memory dump packets		END	
		Verify that there are NO OBSM reported differences between the memory dump data and the ground image used			
		for monitoring.			
		IF there are differences reported by OBSM between the			
		dump data and the ground image, the merged image shall be saved for offline analysis.			
7.1		Save merged image			
		IF there are mismatches reported by OBSM, save merged			
		image with new ID .			
		Conduct off-line analysis of the reported mismatches.			
		End of Sequence			
	OFCP314A	TC Seq. Name : OFCP314A () HIFI DPU PRAM dump monitoring in Retrieval mode			
	OI OF ST4A				
		TimeTag Type: Sub Schedule ID:			
8		MCS OBSM preparation for Image monitor in RETRIEVAL		Next Step: 9	
		mode			
		Note: It is assumed that the OBSM application is already			
		running and the OBSM Desktop is displayed on the MCS			
		client. Starting the OBSM application is not covered by the			
		current procedure.			
8.1		Select 'Image MONITOR' from the menu			
				l	

Status : Version 4 - Unchanged Last Checkin: 13/04/09

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: lstefanov-hp





Step					
No.	Time	Activity/Remarks Select the Image menu of the OBSM Desktop.	TC/TLM	Display/ Branch	AIT Comment
		From the Image menu, select Monitor.			
		The 'Image Catalog' window opens.			
		ine image cacarog window opens.			
8.2		Select image to be monitored			
8.2.1		IF HIFI Nominal			
		HIFI NOMINGI			
		Select the image to be monitored for the memory device			
		HIDPRMPG.			
		The 'Image MONITOR' window opens.			
8.2.2		ELSE			
		HIFI Redundant			
		Select the image to be monitored for the memory device HIDPRMPR.			
		The 'Image MONITOR' window opens.			
8.3		Start dump TM packets processing			
		Set retrieval start and stop time and start retrieval of TM packets using the PLAY buttons.			
9		Retrieve and process TM(6,6) packets		Next Step: 10	
		neerieve and process in(0,0) passess			
		Use the STEP button to retrieve and process the			
		TM(6,6) packets, packet by packet and starting from the time shown in the packet time field.			
		OR			
		Use the PLAY button to retrieve and process the TM(6,6) packets in automated mode.			
		Pressing the PLAY button, the display will start to			
		retrieve and process packets, starting from the time shown in the packet time field. This processing will			
		stop automatically when a packet is received which creation time is greater than the one contained in the			
		end time field.			
10		Check contents of memory dump packets		Next Step: END	
		contents of memory dump packets			

Status : Version 4 - Unchanged Last Checkin: 13/04/09

Doc No. :PT-HMOC-OPS-FOP-6001-OPS-OAH
Fop Issue : 3.0
Issue Date: 13/04/10

Monitor dump of HIFI DPU PRAM memory area

File: H_FCP_OBS_3142.xls Author: lstefanov-hp





Step							
No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment		
		Verify that there are NO OBSM reported differences					
		between the memory dump data and the ground image used					
		for monitoring.					
		IF there are differences reported by OBSM between the					
		dump data and the ground image, the merged image shall					
		be saved for further analysis.					
10.1		Save merged image					
10.1		Save merged image					
		IF there are mismatches reported by OBSM, save merged					
		image with new ID.					
		Conduct off-line analysis of the reported mismatches.					
	1	End of Sequence	1				
	End of Procedure						

Status : Version 4 - Unchanged Last Checkin: 13/04/09

Last Checkin: 13/04/09 Page 10 of 10