

Procedure Summary

Objectives

This Herschel OBSM nominal procedure is used to perform the dump monitoring of one or several PACS DPU RAM Data 1553 memory areas. The memory dump is commanded using TC(6,5) and the memory locations content is received on ground in TM(6,6) packets.

The procedure assumes that the command stack has already been generated using the OBSM system and is ready for loading on the Manual Stack. The command stack generation activity is not covered by this procedure.

Summary of Constraints

CDMU in Operational Mode - PACS DPU ASW running

Memory areas are dumped through TC(6,5); this TC will be delayed when there is an ongoing:

- TC(6,2) Load Memory Using Absolute Addresses

- TC(6,5) Dump Memory Using Absolute Addresses

- TC(6,9) Check Memory Using Absolute Addresses

- TC(8,4,1,1) Copy Memory

Spacecraft Configuration

Start of Procedure

CDMU in Operational Mode - PACS DPU ASW running

End of Procedure

Same as start

Reference File(s)

Input Command Sequences

Output Command Sequences

OFCP4148

Referenced Displays

ANDS GRDS SLDS


Configuration Control Information

DATE	FOP ISSUE	VERSION	MODIFICATION DESCRIPTION	AUTHOR	SPR REF
02/09/08	. 2	. 1	Created	lstefanov-hp	· · · · ·

Doc No. :PT-HMOC-OPS-FOP-6001-OPS-OAH Fop Issue : 3.0 Issue Date: 13/04/10



Procedure Flowchart Overview

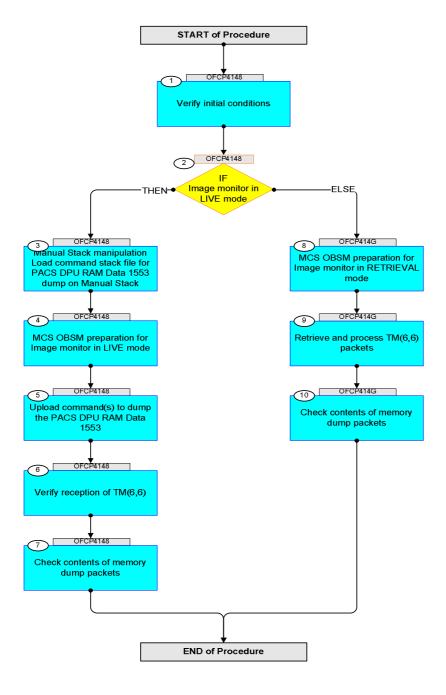



Step	min.				DTT Gammank
No.	Time	Activity/Remarks Beginning of Procedure	TC/TLM	Display/ Branch	AIT Comment
	05054440	TC Seq. Name : OFCP4148 () PACS DPU RAM Data 1553 dump monitoring in Live mode			
	OFCP4148	TimeTag Type: B			
		Sub Schedule ID:			
	1			Next Step:	
1		Verify initial conditions		2	
		Check PACS DPU ASW running			
		Instrument SOE to confirm PACS instrument mode			
				Next Step:	
2		IF Image monitor in LIVE mode		THEN 3 ELSE 8	
		type: [If]			
				Next Step:	
3		Manual Stack manipulation Load command stack file for PACS DPU RAM Data 1553		4	
		dump on Manual Stack			
		NOTE:			
		The current procedure assumes that the memory dump in Live mode is performed using commands with immediate			
		execution.			
		Select the File -> LoadStack option from the main menu of the Manual Stack window			
3.1		IF PACS Nominal			
		Select file			
		PADPRD15_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss. machine			
		from directory			
		/home/pmcsops/HPMCS/SESSION/current/data/CMD/STACKS/OB SM/PADPRD15			
		as indicated by the OBSM engineer			
		IMPORTANT:			
		XXXXYYYY = Image ID(X) and Version(Y) - depend on image used for stack generation			
		YYYY_DDD hhmmss - depend on stack generation time			
		machine - depends on the name of the machine used for			
		stack generation			
l		1	l		



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
2101	1 7 10 2	File name examples	20/1241	- server / branch	Comment
		- No model associated to the memory image:			
		PADPRD15_DI_0002001_N_NoModel_NoModel_2007_254T123300. sun043			
		- CT PADPRD151, ID 0003, Version 001 associated to the memory image:			
		PADPRD15_DI_0002001_C_PADPRD151_0003001_2007_337T09332 0.sun043			
3.2		ELSE PACS Redundant			
		Select file			
		<pre>Select file PADPRDIR_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss.</pre>			
		machine			
		<pre>from directory /home/pmcsops/HPMCS/SESSION/current/data/CMD/STACKS/OB // DADDDDDD</pre>			
		SM/PADPRD1R as indicated by the OBSM engineer			
		IMPORTANT:			
		XXXXYYYY = Image ID(X) and Version(Y) - depend on image used for stack generation			
		YYYY_DDD hhmmss - depend on stack generation time			
		machine - depends on the name of the machine used for stack generation			
		File name examples			
		- No model associated to the memory image: PADPRDIR_DI_0002001_N_NoModel_NoModel_2007_254T123300.			
		sun043			
		- CT PADPRDIR1, ID 0003, Version 001 associated to the memory image:			
		PADPRD1R_D1_0002001_C_PADPRD1R1_0003001_2007_337T09332 0.sun043			
3.3		Check command stack loaded			
		Check that loaded stack contains one or several TCs			
		Check that loaded stack contains one or several TCs PC028380			
		Display the Manual Stack in 'Full mode' and check that the Memory ID parameter in the PC028380 command(s) is set to 15 hex :			
		Memory ID = 15 hex			
		Note: The Memory ID of the target memory device is stored in the MSB of the 16-bit long Mem ID TC parameter. The LSB of the same parameter carries the most cignificant 0 bits of the Start Address			
		significant 8 bits of the Start Address.			



Step	m i		ma /		
No.	Time	Activity/Remarks Execute Telecommand	TC/TLM	Display/ Branch TC	AIT Comment
		DPU_MEMORY_DUMP	PC028380		
		Command Parameter(s) :			
		DPU_MEMORY_BLOCK_ID PP009380 DPU_MEMORY_ADDR PP003380	15xx hex <hex> (Def)</hex>		
		DPU_DATA_LENGTH PP008380	<dec> (Def)</dec>		
		TC Control Flags :			
		GBM IL DSE Y			
		Subsch. ID : 90			
		Det. descr. : DUMP OF A DPU MEMORY AREA This Telecommand will not be included in the export			
		-			
4		MCS OBSM preparation for Image monitor in LIVE mode		Next Step: 5	
-		···· ··· ··· ··· ··· ··· ··· ··· ··· ·		-	
		Note: It is assumed that the OBSM application is already			
		running and the OBSM Desktop is displayed on the MCS			
		client. Starting the OBSM application is not covered by the			
		current procedure.			
4.1		Select 'Image MONITOR' from the menu			
		Select the Image menu of the OBSM Desktop.			
		From the Image menu, select Monitor.			
		The 'Image Catalog' window opens.			
		The Image Catalog window opens.			
4.2		Select image to be monitored			
4.2.1		IF PACS Nominal			
		PACS NOUTHAL			
		Select the image to be monitored for the memory device PADPRD15.			
		The 'Image MONITOR' window opens.			
4.2.2		ELSE			
		PACS Redundant			
		Select the image to be monitored for the memory device			
		PADPRDIR.			
		The 'Image MONITOR' window opens.			



Step					
No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
4.3		Start dump TM processing			
		In LIVE mode, processing of incoming real-time telemetry starts automatically after the image			
		selection.			
5		Upload command(s) to dump the PACS DPU RAM Data 1553		Next Step: 6	
		Uplink the PC028380 memory dump command(s) with ARM-GO			
		For each command, one or more TM(6,6) packets must be received on ground.			
				Next Step:	
6		Verify reception of TM(6,6)		7	
		Note: One or more TM(6,6) packets will be received for each			
		memory dump command uplinked.			
6.1		IF			
		PACS Nominal			
		Verify Packet Reception			
		MEMORY_DUMP			
		Packet Mnemonic : MEMORY_DUMP APID : 1152			
		Type: 6 Subtype: 6			
		PI1 : PI2 :			
6.2		ELSE			
		PACS Redundant			
		Verify Packet Reception			
		MEMORY_DUMP			
		Packet Mnemonic : MEMORY_DUMP APID : 1153			
		Type: 6 Subtype: 6			
		PI1 : PI2 :			
6.3		Check OBSM dump packet processing			
		Check that the OBSM is processing the incoming memory			
		dump packets.			



No	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
No.	IIme	Activity/Remarks	IC/ILM	Next Step:	All Comment
7		Check contents of memory dump packets		END	
		Verify that there are NO OBSM reported differences			
		between the memory dump data and the ground image used			
		for monitoring.			
		IF there are differences reported by OBSM between the			
		dump data and the ground image, the merged image shall			
		be saved for offline analysis.			
7.1		Save merged image			
		The these are mismatches reported by ODGM save merced			
		IF there are mismatches reported by OBSM, save merged image with new ID.			
		Conduct off-line analysis of the reported mismatches.			
		End of Sequence			
	OFCP414G	TC Seq. Name :OFCP414G () PACS DPU RAM Data 1553 dump monitoring in Retrieval			
		mode			
		TimeTag Type:			
		Sub Schedule ID:			
				Next Step:	
8		MCS OBSM preparation for Image monitor in RETRIEVAL		9	
		mode			
		mode			
		mode			
		node Note:			
		Note: It is assumed that the OBSM application is already			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client.			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop.			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor.			
8.1		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor.			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens.			
8.2		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor.			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens.			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens.			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens.			
8.2		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. Select image to be monitored			
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens.			
8.2		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. Select image to be monitored			
8.2		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure. Select 'Image MONITOR' from the menu Select the Image menu of the OBSM Desktop. From the Image menu, select Monitor. The 'Image Catalog' window opens. Select image to be monitored			



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
		Select the image to be monitored for the memory device			
		PADPRD15. The 'Image MONITOR' window opens.			
8.2.2		ELSE PACS Redundant			
		Select the image to be monitored for the memory device PADPRD1R.			
		The 'Image MONITOR' window opens.			
8.3		Start dump TM packets processing			
		Set retrieval start time and start retrieval of TM packets using the PLAY buttons.			
9		Retrieve and process TM(6,6) packets		Next Step: 10	
		Use the STEP button to retrieve and process the $TM(6,6)$ packets, packet by packet and starting from the time shown in the packet time field.			
		OR			
		Use the PLAY button to retrieve and process the TM(6,6) packets in automated mode. Pressing the PLAY button, the display will start to retrieve and process packets, starting from the time shown in the packet time field. This processing will stop automatically when a packet is received which creation time is greater than the one contained in the end time field.			
10		Check contents of memory dump packets		Next Step: END	
		Verify that there are NO OBSM reported differences between the memory dump data and the ground image used for monitoring.			
		IF there are differences reported by OBSM between the dump data and the ground image, the merged image shall be saved for further analysis.			
10.1		Save merged image			
		<pre>IF there are mismatches reported by OBSM, save merged image with new ID.</pre>			
		Conduct off-line analysis of the reported mismatches.			

			Doc No Fop Is Issue	sue :	S-FOP-6001-OPS-OAH 3.0 13/04/10
Monitor dump of PACS DPU RAM Data 1553 memory area File: H_FCP_OBS_4148.xls Author: lstefanov-hp			A State		esa
Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
	-	End of Sequence			
		End of Procedure			