

Update PACS SPU RAM Ext ground image via memory dump
File: H_FCP_OBS_4247.xls
Author: lstefanov-hp



Procedure Summary

Objectives

This Herschel OBSM nominal procedure is used to perform a PACS SPU RAM Ext ground image update from memory dump of one or several PACS SPU RAM Ext memory areas. It is used for both SPU SWL and SPU LWL subsystems.
The memory dump is commanded using TC(6,5) and the memory locations content is received on ground in TM(6,6) packets.

The procedure assumes that the command stack has already been generated using the OBSM system and is ready for loading on the Manual Stack. The command stack generation activity is not covered by this procedure.

Summary of Constraints

CDMU in Operational Mode

- PACS instrument in INIT mode (DPU ASW running)
- SPU ON
- DPU-SPU connection established

Memory areas are Dumped through TC(6,5); this TC will be delayed when there is an ongoing:

- TC(6,2) Load Memory Using Absolute Addresses
- TC(6,5) Dump Memory Using Absolute Addresses
- TC(6,9) Check Memory Using Absolute Addresses
- TC(8,4,1,1) Copy Memory

Spacecraft Configuration

Start of Procedure

CDMU in Operational Mode

- PACS instrument in INIT mode (DPU ASW running)
- SPU ON
- DPU-SPU connection established

End of Procedure

Same as start

Reference File(s)

Input Command Sequences

Output Command Sequences

OFCP424e
OFCP424g

Referenced Displays

ANDs GRDs SLDs

Configuration Control Information

Update PACS SPU RAM Ext ground image via memory dump
File: H_FCP_OBS_4247.xls
Author: lstefanov-hp




DATE	FOP ISSUE	VERSION	MODIFICATION DESCRIPTION	AUTHOR	SPR REF
04/09/08	2	1	Created	lstefanov-hp	

Update PACS SPU RAM Ext ground image via memory dump
 File: H_FCP_OBS_4247.xls
 Author: lstefanov-hp



Procedure Flowchart Overview

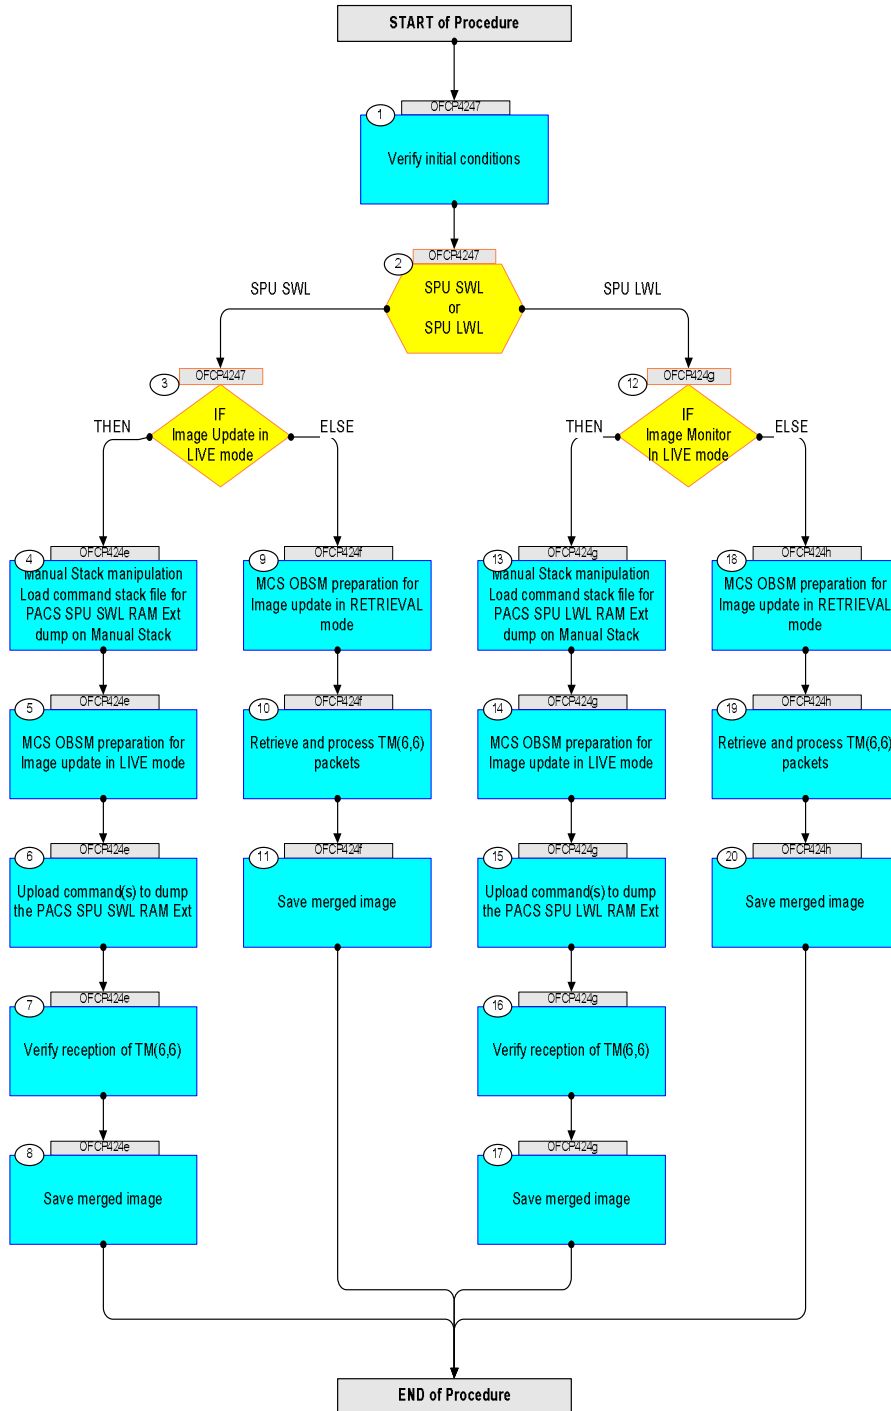

Update PACS SPU RAM Ext ground image via memory dump File: H_FCP_OBS_4247.xls Author: lstefanov-hp	
--	--

Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
Beginning of Procedure					
OFCP4247		TC Seq. Name : OFCP4247 () PACS SPU RAM Ext ground image update TimeTag Type: B Sub Schedule ID: <input type="checkbox"/>			
1		Verify initial conditions		Next Step: 2	
		Check: - PACS instrument in INIT mode (DPU ASW running) - SPU ON - DPU-SPU connection established			
		Instrument SOE to confirm PACS instrument mode and SPU status.			
2		SPU SWL or SPU LWL type: [Switch]		Next Step: SPU SWL 3 SPU LWL 12	
3		IF Image Update in LIVE mode type: [If]		Next Step: THEN 4 ELSE 9	
End of Sequence					
OFCP424e		TC Seq. Name : OFCP424e () PACS SPU SWL RAM Ext image update in Live mode TimeTag Type: B Sub Schedule ID: <input type="checkbox"/>			
4		Manual Stack manipulation Load command stack file for PACS SPU SWL RAM Ext dump on Manual Stack		Next Step: 5	
		NOTE: The current procedure assumes that the memory dump in Live mode is performed using commands with immediate execution.			
		Select the File -> LoadStack option from the main menu of the Manual Stack window			
4.1		IF PACS Nominal			

Update PACS SPU RAM Ext ground image via memory dump
 File: H_FCP_OBS_4247.xls
 Author: lstefanov-hp



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
		Select file PASPRESW_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss.machine from directory /home/pmcsopts/HPMCS/SESSION/current/data/CMD/STACKS/OBSM/PASPRESW as indicated by the OBSM engineer			
		IMPORTANT: XXXXYYY = Image ID(X) and Version(Y) - depend on image used for stack generation YYYY_DDD hhmmss - depend on stack generation time machine - depends on the name of the machine used for stack generation			
		File name examples - No model associated to the memory image: PASPRESW_DI_0002001_N_NoModel_NoModel_2007_254T123300.sun043 - CT PASPRESW1, ID 0003, Version 001 associated to the memory image: PASPRESW_DI_0002001_C_PASPRESW1_0003001_2007_337T093320.sun043			
4.2		ELSE PACS Redundant			
		Select file PASRESWR_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss.machine from directory /home/pmcsopts/HPMCS/SESSION/current/data/CMD/STACKS/OBSM/PASRESWR as indicated by the OBSM engineer			
		IMPORTANT: XXXXYYY = Image ID(X) and Version(Y) - depend on image used for stack generation YYYY_DDD hhmmss - depend on stack generation time machine - depends on the name of the machine used for stack generation			
		File name examples - No model associated to the memory image: PASRESWR_DI_0002001_N_NoModel_NoModel_2007_254T123300.sun043 - CT PASRESWR1, ID 0003, Version 001 associated to the memory image: PASRESWR_DI_0002001_C_PASRESWR1_0003001_2007_337T093320.sun043			

Update PACS SPU RAM Ext ground image via memory dump
 File: H_FCP_OBS_4247.xls
 Author: lstefanov-hp



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
4.3		Check command stack loaded			
		Check that loaded stack contains one or several TCs PC028380			
		Display the Manual Stack in 'Full mode' and check that the Memory ID parameter in the PC028380 command(s) is set to 52 hex : Memory ID = 52 hex Note: The Memory ID of the target memory device is stored in the MSB of the 16-bit long Mem ID TC parameter. The LSB of the same parameter carries the most significant 8 bits of the Start Address.			
		Execute Telecommand DPU_MEMORY_DUMP Command Parameter(s) : DPU_MEMORY_BLOCK_ID PP009380 DPU_MEMORY_ADDR PP003380 DPU_DATA_LENGTH PP008380 TC Control Flags : GBM IL DSE --Y -- --- Subsch. ID : 90 Det. descr. : DUMP OF A DPU MEMORY AREA This Telecommand will not be included in the export	PC028380	TC	
5		MCS OBSM preparation for Image update in LIVE mode		Next Step: 6	
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.			
5.1		Select 'Image UPDATE' from the menu			
		Select the Image menu of the OBSM Desktop . From the Image menu, select Update . The 'Image Catalog' window opens.			
5.2		Select image to be updated			
5.2.1		IF PACS Nominal			

Update PACS SPU RAM Ext ground image via memory dump File: H_FCP_OBS_4247.xls Author: lstefanov-hp	
--	--

Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
		Select the image to be updated for the memory device PASPRESW . The 'Image UPDATE' window opens.			
5.2.2		ELSE PACS Redundant			
		Select the image to be updated for the memory device PASRESWR . The 'Image UPDATE' window opens.			
5.3		Start dump TM processing			
		In LIVE mode, processing of incoming real-time telemetry starts automatically after the image selection.			
6		Upload command(s) to dump the PACS SPU SWL RAM Ext		Next Step: 7	
		Uplink the PC028380 memory dump command(s) with ARM-GO			
		For each command, one or more TM(6,6) packets must be received on ground.			
7		Verify reception of TM(6,6)		Next Step: 8	
		Note: One or more TM(6,6) packets will be received for each memory dump command uplinked.			
7.1		IF PACS Prime			
		Verify Packet Reception MEMORY_DUMP Packet Mnemonic : MEMORY_DUMP APID : 1152 Type : 6 Subtype : 6 PI1 : PI2 :			
7.2		ELSE PACS Redundant			

Update PACS SPU RAM Ext ground image via memory dump
 File: H_FCP_OBS_4247.xls
 Author: lstefanov-hp



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
		Verify Packet Reception MEMORY_DUMP Packet Mnemonic : MEMORY_DUMP APID : 1153 Type : 6 Subtype : 6 PI1 : PI2 :			
7.3		Check OBSM dump packet processing			
		Check that the OBSM is processing the incoming memory dump packets.			
8		Save merged image		Next Step: END	
		Save merged image with new ID .			
End of Sequence					
OFCP424f TC Seq. Name : OFCP424f () PACS SPU SWL RAM Ext image update in Retrieval mode TimeTag Type: Sub Schedule ID: <input type="checkbox"/>					
9		MCS OBSM preparation for Image update in RETRIEVAL mode		Next Step: 10	
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.			
9.1		Select 'Image UPDATE' from the menu			
		Select the Image menu of the OBSM Desktop . From the Image menu, select Update . The 'Image Catalog' window opens.			
9.2		Select image to be updated			
9.2.1		IF PACS Nominal			

Update PACS SPU RAM Ext ground image via memory dump File: H_FCP_OBS_4247.xls Author: lstefanov-hp	
--	--

Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
		Select the image to be updated for the memory device PASPRESW . The 'Image UPDATE' window opens.			
9.2.2		ELSE PACS Redundant			
		Select the image to be updated for the memory device PASRESWR . The 'Image UPDATE' window opens.			
9.3		Start dump TM packets processing			
		Set retrieval start time and start retrieval of TM packets using the PLAY buttons.			
10		Retrieve and process TM(6,6) packets		Next Step: 11	
		Use the STEP button to retrieve and process the TM(6,6) packets, packet by packet and starting from the time shown in the packet time field.			
		OR			
		Use the PLAY button to retrieve and process the TM(6,6) packets in automated mode. Pressing the PLAY button, the display will start to retrieve and process packets, starting from the time shown in the packet time field. This processing will stop automatically when a packet is received which creation time is greater than the one contained in the end time field.			
11		Save merged image		Next Step: END	
		Save merged image with new ID .			
End of Sequence OFCP424g TC Seq. Name :OFCP424g () PACS SPU LWL RAM Ext image update in Live mode TimeTag Type: B Sub Schedule ID: <input type="checkbox"/>					
12		IF Image Monitor In LIVE mode type: [If]		Next Step: THEN 13 ELSE 18	

Update PACS SPU RAM Ext ground image via memory dump
 File: H_FCP_OBS_4247.xls
 Author: lstefanov-hp




Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
13		Manual Stack manipulation Load command stack file for PACS SPU LWL RAM Ext dump on Manual Stack		Next Step: 14	
		NOTE: The current procedure assumes that the memory dump in Live mode is performed using commands with immediate execution.			
		Select the File -> LoadStack option from the main menu of the Manual Stack window			
13.1		IF PACS Nominal			
		Select file PASPRELW_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss.machine from directory /home/pmcops/HPMCS/SESSION/current/data/CMD/STACKS/OBSM/PASPRELW as indicated by the OBSM engineer			
		IMPORTANT: XXXXYYY = Image ID(X) and Version(Y) - depend on image used for stack generation YYYY_DDD hhmmss - depend on stack generation time machine - depends on the name of the machine used for stack generation			
		File name examples - No model associated to the memory image: PASPRELW_DI_0002001_N_NoModel_NoModel_2007_254T123300.sun043 - CT PASPRELW1, ID 0003, Version 001 associated to the memory image: PASPRELW_DI_0002001_C_PASPRELW1_0003001_2007_337T093320.sun043			
13.2		ELSE PACS Redundant			
		Select file PASRELWR_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss.machine from directory /home/pmcops/HPMCS/SESSION/current/data/CMD/STACKS/OBSM/PASRELWR as indicated by the OBSM engineer			

Update PACS SPU RAM Ext ground image via memory dump File: H_FCP_OBS_4247.xls Author: lstefanov-hp	
--	--

Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment									
		IMPORTANT: XXXXYYYY = Image ID(X) and Version(Y) - depend on image used for stack generation YYYY_DDD hhmmss - depend on stack generation time machine - depends on the name of the machine used for stack generation												
		File name examples - No model associated to the memory image: PASRELWR_DI_0002001_N_NoModel_NoModel_2007_254T123300.sun043 - CT PASRELWR1, ID 0003, Version 001 associated to the memory image: PASRELWR_DI_0002001_C_PASRELWR1_0003001_2007_337T093320.sun043												
13.3		Check command stack loaded												
		Check that loaded stack contains one or several TCs PC028380												
		Display the Manual Stack in 'Full mode' and check that the Memory ID parameter in the PC028380 command(s) is set to 72 hex : Memory ID = 72 hex Note: The Memory ID of the target memory device is stored in the MSB of the 16-bit long Mem ID TC parameter. The LSB of the same parameter carries the most significant 8 bits of the Start Address.												
		Execute Telecommand <div style="text-align: center;">DPU_MEMORY_DUMP</div> <div style="text-align: center;">PC028380</div> Command Parameter(s) : <table style="margin-left: 40px; border: none;"> <tr> <td style="padding-right: 20px;">DPU_MEMORY_BLOCK_ID</td> <td style="padding-right: 20px;">PP009380</td> <td style="padding-right: 20px;">72xx</td> </tr> <tr> <td>DPU_MEMORY_ADDR</td> <td>PP003380</td> <td><hex> (Def)</td> </tr> <tr> <td>DPU_DATA_LENGTH</td> <td>PP008380</td> <td><dec> (Def)</td> </tr> </table> TC Control Flags : <div style="text-align: center;">GBM IL DSE</div> <div style="text-align: center;">--Y -- ---</div> Subsch. ID : 90 Det. descr. : DUMP OF A DPU MEMORY AREA This Telecommand will not be included in the export	DPU_MEMORY_BLOCK_ID	PP009380	72xx	DPU_MEMORY_ADDR	PP003380	<hex> (Def)	DPU_DATA_LENGTH	PP008380	<dec> (Def)		TC	
DPU_MEMORY_BLOCK_ID	PP009380	72xx												
DPU_MEMORY_ADDR	PP003380	<hex> (Def)												
DPU_DATA_LENGTH	PP008380	<dec> (Def)												
14		MCS OBSM preparation for Image update in LIVE mode		Next Step: 15										
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.												

Update PACS SPU RAM Ext ground image via memory dump File: H_FCP_OBS_4247.xls Author: lstefanov-hp	
--	--

Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
14.1		Select 'Image UPDATE' from the menu			
		Select the Image menu of the <i>OBSM Desktop</i> . From the Image menu, select Update . The 'Image Catalog' window opens.			
14.2		Select image to be updated			
14.2.1		IF PACS Nominal			
		Select the image to be updated for the memory device PASPRELW . The 'Image UPDATE' window opens.			
14.2.2		ELSE PACS Redundant			
		Select the image to be updated for the memory device PASRELWR . The 'Image UPDATE' window opens.			
14.3		Start dump TM processing			
		In LIVE mode, processing of incoming real-time telemetry starts automatically after the image selection.			
15		Upload command(s) to dump the PACS SPU LWL RAM Ext		Next Step: 16	
		Uplink the PC028380 memory dump command(s) with ARM-GO			
		For each command, one or more TM(6,6) packets must be received on ground.			
16		Verify reception of TM(6,6)		Next Step: 17	
		Note: One or more TM(6,6) packets will be received for each memory dump command uplinked.			

Update PACS SPU RAM Ext ground image via memory dump
 File: H_FCP_OBS_4247.xls
 Author: lstefanov-hp




Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
16.1		IF PACS Prime			
		Verify Packet Reception MEMORY_DUMP Packet Mnemonic : MEMORY_DUMP APID : 1152 Type : 6 Subtype : 6 PI1 : PI2 :			
16.2		ELSE PACS Redundant			
		Verify Packet Reception MEMORY_DUMP Packet Mnemonic : MEMORY_DUMP APID : 1153 Type : 6 Subtype : 6 PI1 : PI2 :			
16.3		Check OBSM dump packet processing			
		Check that the OBSM is processing the incoming memory dump packets.			
17		Save merged image		Next Step: END	
		Save merged image with new ID .			
End of Sequence					
OFCP424h TC Seq. Name : OFCP424h () PACS SPU LWL RAM Ext image update in Retrieval mode TimeTag Type: Sub Schedule ID: <input type="checkbox"/>					
18		MCS OBSM preparation for Image update in RETRIEVAL mode		Next Step: 19	
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.			

Update PACS SPU RAM Ext ground image via memory dump
 File: H_FCP_OBS_4247.xls
 Author: lstefanov-hp




Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
18.1		Select 'Image UPDATE' from the menu			
		Select the Image menu of the <i>OBSM Desktop</i> . From the Image menu, select Update . The 'Image Catalog' window opens.			
18.2		Select image to be updated			
18.2.1		IF PACS Nominal			
		Select the image to be updated for the memory device PASPRELW . The 'Image UPDATE' window opens.			
18.2.2		ELSE PACS Redundant			
		Select the image to be updated for the memory device PASRELWR . The 'Image UPDATE' window opens.			
18.3		Start dump TM packets processing			
		Set retrieval start time and start retrieval of TM packets using the PLAY buttons.			
19		Retrieve and process TM(6,6) packets		Next Step: 20	
		Use the STEP button to retrieve and process the TM(6,6) packets, packet by packet and starting from the time shown in the packet time field.			
		OR			
		Use the PLAY button to retrieve and process the TM(6,6) packets in automated mode. Pressing the PLAY button, the display will start to retrieve and process packets, starting from the time shown in the packet time field. This processing will stop automatically when a packet is received which creation time is greater than the one contained in the end time field.			

Update PACS SPU RAM Ext ground image via memory dump File: H_FCP_OBS_4247.xls Author: lstefanov-hp	 
--	--

Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
20		Save merged image		Next Step: END	
		Save merged image with new ID .			
End of Sequence					
End of Procedure					