

Monitor dump of DMC PRAM memory area
 File: H_FCP_OBS_4342.xls
 Author: Liviu Stefanov



Procedure Summary

Objectives

This Herschel OBSM nominal procedure is used to perform the dump monitoring of one or several PACS DMC PRAM memory areas. The memory dump is commanded using TC(6,5) and the memory locations content is received on ground in TM(6,6) packets. The procedure assumes that the command stack has already been generated using the OBSM system and is ready for loading on the Manual Stack. The command stack generation activity is not covered by this procedure.

Summary of Constraints

CDMU in Operational Mode
 - PACS in INIT mode (DPU ASW running)

Memory areas are dumped through TC(6,5); this TC will be delayed when there is an ongoing:

- TC(6,2) Load Memory Using Absolute Addresses
- TC(6,5) Dump Memory Using Absolute Addresses
- TC(6,9) Check Memory Using Absolute Addresses
- TC(8,4,1,1) Copy Memory

Spacecraft Configuration

Start of Procedure

CDMU in Operational Mode
 - PACS in INIT mode (DPU ASW running)

End of Procedure

Same as start

Reference File(s)

Input Command Sequences

Output Command Sequences

OFCP4342

Referenced Displays

ANDs GRDs SLDs


Configuration Control Information

DATE	FOP ISSUE	VERSION	MODIFICATION DESCRIPTION	AUTHOR	SPR REF
30/01/08	1	1	Created	lstefanov-hp	

Monitor dump of DMC PRAM memory area
 File: H_FCP_OBS_4342.xls
 Author: lstefanov-hp



Procedure Flowchart Overview

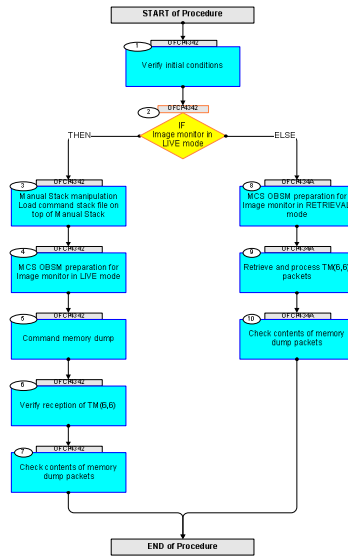

Monitor dump of DMC PRAM memory area
 File: H_FCP_OBS_4342.xls
 Author: lstefanov-hp



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
Beginning of Procedure					
OFCP4342 TC Seq. Name : OFCP4342 () PACS DMC PRAM dump monitoring in Live mode TimeTag Type: B Sub Schedule ID: <input type="checkbox"/>					
1		Verify initial conditions		Next Step: 2	
		Check PACS instrument in INIT mode (DPU ASW running)			
		Instrument SOE to confirm PACS instrument mode			
2		IF Image monitor in LIVE mode type: [If]		Next Step: THEN 3 ELSE 8	
3		Manual Stack manipulation Load command stack file on top of Manual Stack		Next Step: 4	
		NOTE: The current procedure assumes that the memory dump in Live mode is performed using commands with immediate execution.			
		Select the File -> LoadStack option from the main menu of the Manual Stack window			
		Select file PADMRPRG_DI_XXXXYYY_N_NoModel_NoModel_YYYY_DDDThhmmss.machine from directory /home/pmcops/HPMCS/SESSION/current/data/CMD/STACKS/OBSM/PADMRPRG as indicated by the OBSM engineer			
		IMPORTANT: XXXXYYY = Image ID(X) and Version(Y) - depend on image used for stack generation YYYY_DDD hhmmss - depend on stack generation time machine - depends on the name of the machine used for stack generation			
		File name examples - No model associated to the memory image: PADMRPRG_DI_0002001_N_NoModel_NoModel_2007_254T123300.sun043 - CT PADMRPRG1, ID 0003, Version 001 associated to the memory image: PADMRPRG_DI_0002001_C_PADMRPRG1_0003001_2007_337T093320.sun043			

Monitor dump of DMC PRAM memory area
 File: H_FCP_OBS_4342.xls
 Author: lstefanov-hp



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment															
3.1		Check command stack loaded																		
		Check that loaded stack contains one or several TCs PC028380																		
		Display the Manual Stack in 'Full mode' and check that the Memory ID parameter in the PC028380 command(s) is set to 21 hex : Memory ID = 21 hex Note: The Memory ID of the target memory device is stored in the MSB of the 16-bit long Mem ID TM parameter. The LSB of the same parameter carries the most significant 8 bits of the Start Address.																		
		Execute Telecommand DPU_MEMORY_DUMP <i>Command Parameter(s) :</i> <table border="0" style="width: 100%;"> <tr> <td style="width: 40%;">DPU_MEMORY_BLOCK_ID</td> <td style="width: 20%;">PP009380</td> <td style="width: 40%;">21xx hex</td> </tr> <tr> <td>DPU_MEMORY_ADDR</td> <td>PP003380</td> <td><hex> (Def)</td> </tr> <tr> <td>DPU_DATA_LENGTH</td> <td>PP008380</td> <td><dec> (Def)</td> </tr> </table> <i>TC Control Flags :</i> <table border="0" style="width: 100%;"> <tr> <td style="width: 40%;"></td> <td style="width: 20%;">GBM IL DSE</td> <td style="width: 40%;"></td> </tr> <tr> <td></td> <td>--Y -- ---</td> <td></td> </tr> </table> <i>Subsch. ID : 90</i> <i>Det. descr. : DUMP OF A DPU MEMORY AREA</i> This Telecommand will not be included in the export	DPU_MEMORY_BLOCK_ID	PP009380	21xx hex	DPU_MEMORY_ADDR	PP003380	<hex> (Def)	DPU_DATA_LENGTH	PP008380	<dec> (Def)		GBM IL DSE			--Y -- ---		PC028380	TC	
DPU_MEMORY_BLOCK_ID	PP009380	21xx hex																		
DPU_MEMORY_ADDR	PP003380	<hex> (Def)																		
DPU_DATA_LENGTH	PP008380	<dec> (Def)																		
	GBM IL DSE																			
	--Y -- ---																			
4		MCS OBSM preparation for Image monitor in LIVE mode		Next Step: 5																
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.																		
4.1		Select 'Image MONITOR' from the menu																		
		Select the Image menu of the OBSM Desktop . From the Image menu, select Monitor . The 'Image Catalog' window opens.																		
4.2		Select image to be monitored																		
		Select the image to be monitored for the memory device PADMRPRG . The 'Image MONITOR' window opens.																		

Monitor dump of DMC PRAM memory area
 File: H_FCP_OBS_4342.xls
 Author: lstefanov-hp



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
4.3		Start dump TM processing			
		Press the LIVE button to start processing of incoming live telemetry.			
5		Command memory dump		Next Step: 6	
		Uplink the PC028380 memory dump command(s) with ARM-GO			
		For each command, one or more TM(6,6) packets must be received on ground.			
6		Verify reception of TM(6,6)		Next Step: 7	
		Note: One or more TM(6,6) packets will be received for each memory dump command uplinked.			
6.1		IF PACS Prime			
		Verify Packet Reception MEMORY_DUMP Packet Mnemonic : MEMORY_DUMP APID : 1152 Type : 6 Subtype : 6 PI1 : PI2 :			
6.2		ELSE PACS Redundant			
		Verify Packet Reception MEMORY_DUMP Packet Mnemonic : MEMORY_DUMP APID : 1153 Type : 6 Subtype : 6 PI1 : PI2 :			
6.3		Check OBSM dump packet processing			
		Check that the OBSM is processing the incoming memory dump packets.			

Monitor dump of DMC PRAM memory area File: H_FCP_OBS_4342.xls Author: lstefanov-hp	
--	--

Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
7		Check contents of memory dump packets		Next Step: END	
		Verify that there are NO OBSM reported differences between the memory dump data and the ground image used for monitoring.			
		IF there are differences reported by OBSM between the dump data and the ground image, the merged image shall be saved for offline analysis.			
7.1		Save merged image			
		IF there are mismatches reported by OBSM, save merged image with current ID or with new ID .			
End of Sequence					
OFCP434A TC Seq. Name : OFCP434A () PACS DMC PRAM dump monitoring in Retrieval mode TimeTag Type: Sub Schedule ID: <input type="checkbox"/>					
8		MCS OBSM preparation for Image monitor in RETRIEVAL mode		Next Step: 9	
		Note: It is assumed that the OBSM application is already running and the OBSM Desktop is displayed on the MCS client. Starting the OBSM application is not covered by the current procedure.			
8.1		Select 'Image MONITOR' from the menu			
		Select the Image menu of the OBSM Desktop . From the Image menu, select Monitor . The 'Image Catalog' window opens.			
8.2		Select image to be monitored			
		Select the image to be monitored for the memory device PADMRPRG . The 'Image MONITOR' window opens.			

Monitor dump of DMC PRAM memory area
 File: H_FCP_OBS_4342.xls
 Author: lstefanov-hp



Step No.	Time	Activity/Remarks	TC/TLM	Display/ Branch	AIT Comment
8.3		Start dump TM packets processing			
		Set retrieval start time and start retrieval of TM packets using the PLAY buttons.			
9		Retrieve and process TM(6,6) packets		Next Step: 10	
		Use the STEP button to retrieve and process the TM(6,6) packets, packet by packet and starting from the time shown in the packet time field.			
		OR			
		Use the PLAY button to retrieve and process the TM(6,6) packets in automated mode. Pressing the PLAY button, the display will start to retrieve and process packets, starting from the time shown in the packet time field. This processing will stop automatically when a packet is received which creation time is greater than the one contained in the end time field.			
10		Check contents of memory dump packets		Next Step: END	
		Verify that there are NO OBSM reported differences between the memory dump data and the ground image used for monitoring.			
		IF there are differences reported by OBSM between the dump data and the ground image, the merged image shall be saved for further analysis.			
10.1		Save merged image			
		IF there are mismatches reported by OBSM, save merged image with current ID or with new ID .			
End of Sequence					
End of Procedure					